



EN User manual

ZH-CN 用户手册

## PHILIPS

产品 : 飞利浦Pro电吹风  
 型号 : BHD276  
 额定电压 : 220V~  
 额定频率 : 50Hz  
 额定输入功率 : 2200 W  
 生产日期 : 请见产品本体  
 产地 : 中国浙江慈溪

飞利浦（中国）投资有限公司  
 上海市静安区灵石路718号A1幢  
 全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,  
 GB4706.15-2008, GB4343.1-2018  
 及GB17625.1-2012制造



© 2021 Koninklijke Philips N.V.  
 保留所有权利

3000.041.8194.2 (25/08/2021)



100% 循环再造纸

## English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## 1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- WARNING: Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- If the main cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.



- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the main cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.
- Do not operate the appliance with wet hands.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

## Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

## Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.



## 2 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at [www.philips.com/support](http://www.philips.com/support) or contact the Philips Consumer Care Center in your country. The phone number is in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

## 3 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.
There is bad smell for the first-time of use.	The smell may come from the new appliance.	The smell will gradually disappear after a few uses. Please try to dry/style your hair in a well-ventilated room.
There is burning smell when drying/styling my hair.	If there is some dust or residue left in the appliance, it may be burnt due to the high temperature and produce odor.	Turn off the appliance and wait until it cools down. Check if any residues left. Remove the dirty stuffs from the appliance and keep it clean.

## 简体中文

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 [www.philips.com.cn/welcome](http://www.philips.com.cn/welcome) 上注册您的产品。

## 1 重要事项

使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。

- 警告：请勿在靠近水的地方使用本产品。
- 本产品在浴室内使用时，使用后拔下插头，因为即使本产品开关断开后，接近水仍存在危险。
- 警告符号注释：禁止在洗澡或淋浴时使用。
- 警告：不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本产品。
- 使用后务必拔下产品的插头。
- 如果产品过热，它将自动关闭电源。拔掉产品插头，让其冷却几分钟。再次启动产品之前，请检查出风口，确保其未被绒毛、头发等杂物堵塞。
- 如果电源线损坏，为避免危险，必须由飞利浦、飞利浦授权的服务中心或类似的专业技术人员进行更换。



- 本产品适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有所障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。不得让儿童玩耍本产品。不要让儿童在无人监督的情况下进行清洁和保养。

- 为了增加保护，建议在浴室供电的电气回路中安装一个额定剩余动作电流不超过 30mA 的剩余电流装置 (RCD)。详情请向 RCD 安装商咨询。

- 切勿将金属物体插入风口，以免触电。
- 切勿阻塞电吹风风口。
- 连接产品之前，请确保产品上标示的电压与当地电源电压相符。
- 请勿将本产品用于本手册中说明以外的任何其它用途。
- 请勿对假发使用本产品。
- 电源接通期间，使用者不得离开。
- 切勿使用由其他制造商生产或未经飞利浦特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。
- 切勿将电源线缠绕在产品上。
- 待产品完全冷却后再存放。
- 使用后请勿拉扯电源线。拔下产品插头时，请握紧插头。
- 切勿用湿手操作本产品。
- 本产品应送往由飞利浦授权的服务中心检查或修理。由不合格人员进行修理可能将用户置于极度危险的境地。

## 电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

## 回收

弃置产品时，请不要将其与一般生活垃圾堆放在一起，应将其交给官方指定的回收中心。这样做有利于环保。



请遵循您所在国家/地区的电器及电子产品分类回收规定。正确弃置产品有助于避免对环境和人类健康造成负面影响。

## 2 保修与服务


如果您需要了解有关信息（如更换附件的相关信息）或有任何疑问，请访问飞利浦网站 [www.philips.com.cn/support](http://www.philips.com.cn/support) 或与您所在国家/地区的飞利浦客户服务中心联系。电话号码可以在全球保修卡中找到。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。

## 3 故障排除

问题	原因	解决方法
产品完全无法工作。	产品所连接的电源插座可能已损坏。	检查设备已正确插入。 检查您家中电源插座的保险丝。
	产品可能过热，因此自动断电。	拔掉产品插头，让其冷却几分钟。再次打开产品电源之前，请检查出风口，确保没有被绒毛、头发等杂物堵塞。
	产品连接的电源电压可能与产品电压不符。	确保产品型号铭牌上标示的电压与当地电源电压相符。
首次使用时有异味。	气味可能来自新产品。	使用几次后，气味将逐渐消失。请尝试在通风良好的房间内吹干头发/造型。
吹干头发/造型时有烧焦的气味。	如果产品中残留了一些灰尘或残留物，则可能会因高温而燃烧，并产生气味。	关闭产品电源，等待其冷却。检查是否有残留物。 从产品中取出脏物，并保持清洁。

保留备用

出版日期：2021-08-25

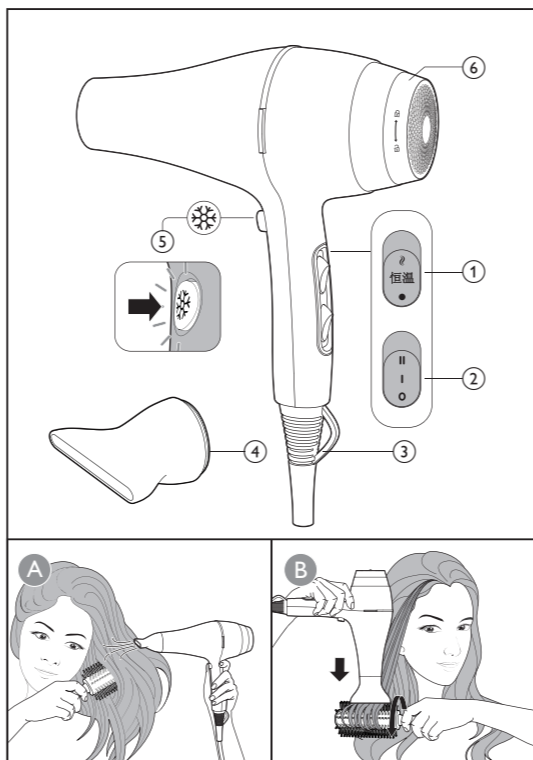

### English

#### Dry your hair

- Attach the nozzle (4) onto the hairdryer.
- Adjust the temperature switch (1) and airflow switch (2) to the desired position. Press and hold the cool shot button (5) for cool airflow to fix your style after drying or styling.

Switch	Setting	Function
Temperature	🔥 Hot	Dry shower-wet hair quickly
	恒温 Thermoprotect	Dry your hair at a constant caring temperature
	●	Gently dry your hair, when it is almost dry to seal in the shine
Airflow		Strong airflow for fast drying thick hair
	I	Gentle airflow for styling thin hair
	○	Switch off

When the appliance is powered on, ions are automatically and continuously dispensed, reducing frizz and providing additional shine.

#### After use:

- Place it on a heat-resistant surface until it cools down.
- Take the air inlet grille (6) off the appliance to remove hair or dust.
- Clean the appliance by damp cloth.
- You can also hang it with the hanging loop (3).

### 简体中文

#### 吹干头发

- 将造型集风嘴 (4) 安装至电吹风。
- 调节温度开关 (1) 和风速开关 (2) 至所需设置。在吹干或造型后，按住冷风喷出按钮 (5) 可获得冷风用于定型。

开关	设置	功能
温度	🔥 热风	快速吹干湿透的头发
	恒温 恒温护发	在恒定护理温度下吹干头发
	●	在头发即将吹干时用柔和的风速和温度锁住发丝水分
气流		强风，快速吹干浓密的头发
	I	柔风，为较薄的头发造型
	○	关闭

产品接通电源后，可自动且持续地释放负离子，令秀发更加顺滑、亮泽。

#### 使用后：

- 将产品置于隔热表面上，直至其冷却。
- 将进风口 (6) 从产品上卸下，清除头发或灰尘。
- 用湿布清洁本产品。
- 您也可以使用挂环 (3) 将产品挂起存放。

部件名称	产品中有害物质的名称及含量					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电源线	X	○	○	○	○	○
风叶铜轴	X	○	○	○	○	○
电源线	X	○	○	○	○	○
电机	X	○	○	○	○	○
负离子	X	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

\*该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。

\*该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。