

**ENGLISH**

# **IMPORTANT SAFETY INSTRUCTIONS**

When using an electrical appliance, basic safety precautions should always be followed, including the following:

**Read all instructions before using this appliance.**

## **DANGER**

**To reduce the risk of electric shock:**

1. Do not reach for a clipper that has fallen into water. Unplug immediately.
2. Use clipper only in dry condition. Do not use while bathing or in a shower.
3. Do not submerge clipper in water.
4. Do not place or store clipper where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
5. Always unplug this clipper from the electrical outlet immediately after using, except when clipper is (re)charging.
6. Unplug clipper before cleaning.
7. When discarding clipper, unplug clipper to remove rechargeable battery. See Battery Removal instructions.
8. The batteries used in this device may present a fire or chemical burn hazard if misreated. Do not disassemble, heat above 100°F (212°F) or incinerate.

 
## **WARNING**

**To reduce the risk of burns, fire, electric shock or injury to persons:**


1. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
2. Use this clipper for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this clipper if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. For assistance visit our website [www.philips.com/norelco](http://www.philips.com/norelco) or call 1-800-243-3050.
4. Do not rinse or immerse the clipper handle in water or any other liquid.
5. Keep the clipper, cord and any attachments away from heated surfaces.
6. Never drop or insert any object into any opening.
7. Do not operate, charge or plug in clipper outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
8. Always check cutters, cutting unit and comb before using the clipper. Do not use the clipper if cutters, cutting unit or comb are damaged, as injury may occur.
9. Always attach plug to clipper first, then to outlet. To disconnect, switch Clipper OFF, then remove plug from outlet.
10. To prevent possible damage to the cord, do not wrap cord around the clipper.
11. Use only the cord provided to charge and (re)charge clipper.
12. Never put clipper in direct sunlight or store at a temperature above 140°F.
13. This clipper is for use on human hair only. Do not use this clipper for any other purpose.
14. Only use the power plug and other accessories supplied with the clipper.

# **SAVE THESE INSTRUCTIONS**

## Features

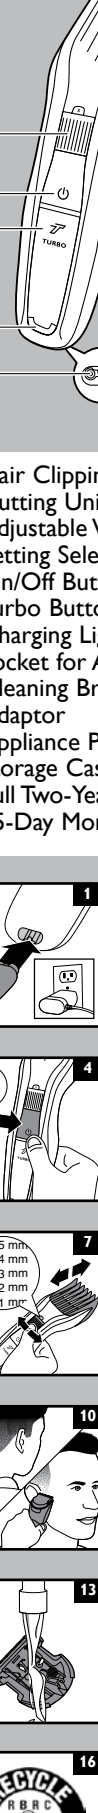

A Hair Clipping Comb  
B Cutting Unit  
C Adjustable Wheel Hair Length  
D Setting Selector  
E On/Off Button  
F Turbo Button  
G Charging Light  
H Socket for Appliance Plug  
I Cleaning Brush  
J Adaptor  
K Appliance Plug  
L Storage Case  
M Full Two-Year Warranty  
N 45-Day Money-Back Guarantee

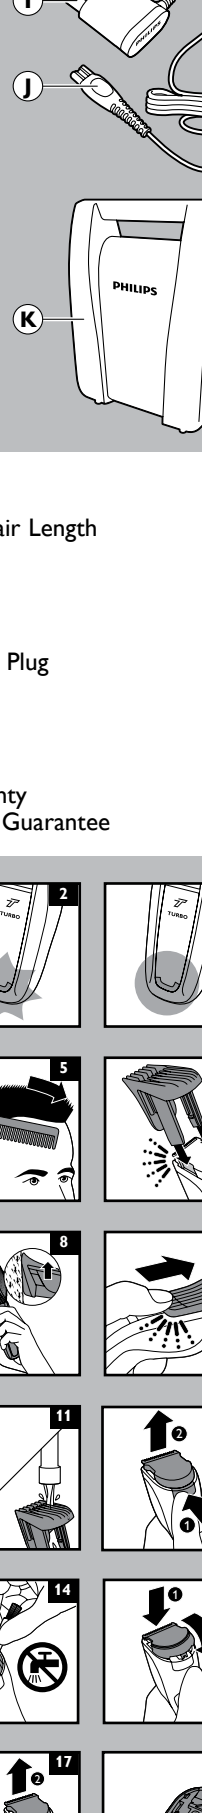

1. Attaching the cleaning brush to the bottom of the clipper.
2. The clipper with the cleaning brush attached.
3. The clipper with the cleaning brush attached, showing the brush's position.
4. The clipper with the cleaning brush attached, showing the brush's position.
5. The clipper with the cleaning brush attached, showing the brush's position.
6. The clipper with the cleaning brush attached, showing the brush's position.
7. The clipper with the cleaning brush attached, showing the brush's position.
8. The clipper with the cleaning brush attached, showing the brush's position.
9. The clipper with the cleaning brush attached, showing the brush's position.
10. The clipper with the cleaning brush attached, showing the brush's position.
11. The clipper with the cleaning brush attached, showing the brush's position.
12. The clipper with the cleaning brush attached, showing the brush's position.
13. The clipper with the cleaning brush attached, showing the brush's position.
14. The clipper with the cleaning brush attached, showing the brush's position.
15. The clipper with the cleaning brush attached, showing the brush's position.
16. The clipper with the cleaning brush attached, showing the brush's position.
17. The clipper with the cleaning brush attached, showing the brush's position.
18. The clipper with the cleaning brush attached, showing the brush's position.
19. The clipper with the cleaning brush attached, showing the brush's position.
20. The clipper with the cleaning brush attached, showing the brush's position.
21. The clipper with the cleaning brush attached, showing the brush's position.

## Put It To The Test

Like many new products, your Philips Norelco Hair Clipper may take a little getting used to. If you are using an electric Clipper for the first time, or if you've been using a different brand, take the time to acquaint yourself with your new Hair Clipper:

Your Hair Clipper features a double-sharpened cutting element with reduced friction as well as Turbo power to boost cutting speed for a perfect cut even on the thickest hair.

Throw your scissors away and put your new Hair Clipper to the test. We guarantee precise results or Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

## To Charge/Recharge

- 1 Fully charge Clipper before using for the first time or after non-use for a long period of time.
- 2 Charging, recharging or using Clipper at temperatures below 40°F or higher than 95°F adversely affects lifespan of the battery.

### 1 Be certain Clipper is OFF.

### 2 Insert the appliance plug directly into the Clipper (fig. 1) and plug the adapter into any 120VAC outlet. Use only the cord provided.

### 3 The Charging Light on the appliance will blink green to indicate the Clipper is charging (fig. 2).

- 4 It will take approximately 1 hour to fully charge the Clipper for a cordless clipping time of up to 120 minutes.

### 4 When the battery is fully charged, the charging light lights up green continuously for 30 minutes and then turns off (fig. 3).

### 5 Disconnect the cord and unplug from electrical outlet.

## Turbo Power

- 1 Simply press the Turbo Button for a turbo power boost for fast results, even on the thickest hair. The memory function will remember the last used setting.

## Corded Hair Clipping

- 1 Clipper does not recharge during corded clipping.

### 1 Connect cord provided to Clipper (fig. 1) and plug Clipper into electrical outlet.

### 2 If battery is completely empty, wait a few minutes before switching clipper ON.

### 3 Turn Clipper ON to begin clipping (fig. 4).

### 4 When finished clipping, switch Clipper OFF and unplug.

## Cordless Hair Clipping

### 1 Charge according to directions. Unplug Clipper from outlet and remove cord.

### 2 Turn Clipper ON to begin clipping (fig. 4).

### 3 If the charge runs low while clipping, the charging light will blink orange (fig. 2).

### 4 If the charge runs out while clipping, simply connect cord provided to Clipper and outlet

**4** The remaining hair length is indicated in millimeters on the adjustable wheel. When you are clipping for the first time, start at the maximum clipping length setting (23mm/7/8 in.) to familiarize yourself with the appliance and prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust the Hair Length Selector to desired trimming length.

1mm – 3/64 in.	13mm – 1/2 in.
2mm – 5/64 in.	14mm – 9/16 in.
3mm – 1/8 in.	15mm – 5/8 in.
4mm – 5/32 in.	16mm – 21/32 in.
5mm – 3/16 in.	17mm – 11/16 in.
6mm – 1/4 in.	18mm – 23/32 in.
7mm – 9/32 in.	19mm – 3/4 in.
8mm – 5/16 in.	20mm – 25/32 in.
9mm – 3/8 in.	21mm – 13/16 in.
10mm – 13/32 in.	22mm – 55/64 in.
11mm – 7/16 in.	23mm – 7/8 in.
12mm – 15/32 in.	

*TIP: Write down the settings you have used to create a certain hairstyle as a reminder for future clipping sessions.*

- 1** Make sure the Clipper is switched OFF and disconnected from the electrical outlet.
- 2** Remove the hair clipping comb by pressing and sliding the comb off the Clipper (fig. 9).
- 3** Clean the comb with the brush supplied or rinse under warm water (fig. 11).
- 4** Press the release button (1) and remove the cutting unit (2) (fig. 12).
- 5** Clean the cutting unit with the brush supplied or rinse under warm water (fig. 13).
- 6** Clean the inside of the Clipper with the brush supplied (fig. 14).
- 7** Shake off any excess water and allow to air dry.
- 8** Reattach cutting unit by inserting the notch of the cutting unit into the guiding slot.
- 9** Push the cutting unit back onto the Clipper.

**9** Cut the wires to separate the rechargeable batteries from the appliance (fig. 21).

© 2013 Philips Electronics North America Corporation. All Rights Reserved

Delivery of refund check will occur 6–8 weeks AFTER receipt of returned product.

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at [www.norelco.com/register](http://www.norelco.com/register)

To fully benefit from the support that Philips  
Norelco offers, register your product at  
[www.norelco.com/register](http://www.norelco.com/register)

# SAVE THESE INSTRUCTIONS