

在以下网站注册并获得支持
www.philips.com.cn/welcome

HP8230
HP8233



EN User manual ZH-CN 用户手册

PHILIPS



© 2016 Koninklijke Philips N.V.
保留所有权利



3140 035 35802

	HP8230	HP8233
(14mm)	✓	✗
(11mm)	✗	✓
	✗	✓
(7)	✓	✓
(6)	✗	✓
(3)	✗	✓

English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com.cn/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.



- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of

- experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
 - Do not insert metal objects into the air grilles to avoid electric shock.
 - Never block the air grilles.
 - Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
 - Do not use the appliance for any other purpose than described in this manual.
 - Do not use the appliance on artificial hair.
 - When the appliance is connected to the power, never leave it unattended.
 - Never use any accessories or parts from other manufacturers or that Philips does not

- specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
 - Wait until the appliance has cooled down before you store it.
 - Do not pull on the power cord after using. Always unplug the appliance by holding the plug.
 - Do not operate the appliance with wet hands.
 - Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.



2 Dry your hair

- 1 Connect the plug to a power supply socket.
 - 2 Adjust the airflow switch (④) to I for gentle airflow and styling, or II for strong airflow and fast drying.
Tip: You can also use the turbo button (⑥ , HP8233 only) for an extra powerful airflow.
You can use the speed setting I for a more convenient quiet drying.
 - 3 Adjust the temperature switch (⑤) to 1 for hot airflow, 2 for warm airflow, or 3 for efficiently drying your hair at a constant caring temperature. Press the Cool shot button (⑦) for cool airflow to fix your style.
- HP8233 only: The appliance with ionic function provides additional shine and reduces frizz. To turn the ionic function on or off, adjust the ionic slide switch (③) to I or O.
→ The ionic function may produce a special odor. It is normal and caused by the ions which are generated.

Nozzle (HP8233 only)

With the ultra slim styling nozzle, air is more concentrated while you are drying your hair. It is easier to style straight hair.

Volume diffuser (HP8233 only):

The volume diffuser is specially developed to gently dry both straight and curly or wavy hair.

- 1 To enhance your natural volume and maintain your curls, hold the dryer vertically to dry your hair.
- 2 To add volume at the roots, insert the pins into your hair in such a way that they touch your scalp.
- 3 Make rotating movements with the appliance to distribute the warm air through your hair.

Tips (HP8233 only) : You can enjoy a massaging function with diffuser thanks to its caring soft pins.

After use:

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down.
- 3 Take the air inlet grille (①) off the appliance to remove hair and dust.
→ Rotate the air inlet grille anti-clockwise to take it off the appliance.
→ Rotate the air inlet grille clockwise to reattach it to the appliance.
- 4 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (②).

3 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com.cn/support or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

4 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.

简体中文

感谢您的惠顾，欢迎光临 Philips！为了您能充分享受 Philips 提供的支持，请在 www.philips.com.cn/welcome 注册您的产品。

1 重要信息

- 使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。
- 警告：请勿在靠近水的地方使用本产品。
 - 本产品在浴室内使用时，使用后拔下插头，因为即使本产品开关断开后，接近水仍存在危险。
 - 警告：不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
 - 警告符号注释：禁止在洗澡或淋浴时使用。
 - 使用后务必拔下产品的插头。
 - 如果产品过热，它将自动关闭电源。拔掉产品插头，让其冷却几分钟。再次启动产品之前，请检查出风口，确保其未被绒毛、头发等杂物堵塞。
 - 如果电源线损坏，为避免危险，必须由飞利浦、飞利浦授权的服务中心或类似的专职人员来更换。
 - 本产品适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。不得让儿童玩耍本产品。不要让儿童在无人监督的情况下进行清洁和保养。



- 为了增加保护，建议在浴室供电的电气回路中安装一个 额定剩余电流不超过 30mA 的剩余电流装置 (RCD)。向 RCD 安装商咨询。
- 切勿将金属物体插入风口，以免触电。
- 切勿阻塞电吹风风口。
- 连接产品之前，请确保产品上标示的电压与当地电源电压相符。
- 请勿将本产品用于本手册中说明以外的任何其它用途。
- 请勿对假发使用本产品。
- 当产品连接了电源时，切勿让其无人看管。
- 切勿使用由其它制造商生产的，或未经飞利浦特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。
- 切勿将电源线缠绕在产品上。
- 待产品完全冷却后再存放。

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

环境

弃置产品时，请不要将其与一般生活垃圾堆放在一起，应将其交给政府指定的回收中心。这样做有利于环保。



2 吹干头发

- 将插头连接至电源插座。
- 将风速开关 (④) 调至 I 可获得暖风用于造型，调至 II 可获得强风用于快速吹干。

提示：您也可以使用强风按钮 (⑥)，仅限于 HP8233) 以获得额外的强力气流。

您可以使用速度设置 I 来更加方便安静地吹干头发。

- 将温度开关 (⑤) 调至 Ⅱ 可获得热风，调至 I 可获得暖风，或调至 Ⅲ 可让您以恒定的护发温度高效地吹干头发。按冷风喷出钮 (⑦) 可获得冷风用于定型。
- 仅限于HP8233：**该产品具有负离子功能，可令秀发更加闪亮、顺滑。要打开或关闭负离子功能，请将负离子滑动开关 (③) 调节至 I 或 O。
 - 负离子功能可能会发出一种特殊气味。这是正常情况，是由所产生的负离子导致的。

集风嘴 (仅限于 HP8233)

有了超薄造型集风嘴，在您吹干头发时，空气更为集中。打造直发发型更为轻松。

梳形扩散风嘴 (仅限于 HP8233)：梳形扩散风嘴专为轻柔地吹干直发、卷发或波浪形头发而设计。

- 要增强您头发自然丰盈的效果，并保留您的卷发，请垂直握住电吹风以吹干头发。
- 要增加发根的丰盈程度，可将梳齿插入头发并触碰到头皮。
- 握住本产品作旋转运动，让暖风吹过头发。

提示 (仅限于 HP8233)：借助其柔软的呵护梳齿，您可以享受扩散风嘴带来的按摩功能。

使用后：

- 关闭产品并拔下电源插头。
- 将产品置于隔热表面上，直至其冷却。
- 将进风口 (①) 从产品上卸下，清除毛发和灰尘。

↶ 逆时针旋转进风口，可将其从产品上卸下。

↷ 顺时针旋转进风口，可将其重新安装到产品上。

- 将产品存放在安全、干燥、清洁的位置。您也可以使用挂环 (②) 将产品挂起存放。

3 保修与服务

如果您需要了解信息或有任何疑问，请访问飞利浦网站 www.philips.com.cn/support。您也可以与您所在地的飞利浦客户服务中心联系 (可从保修卡中找到其电话号码)。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。

4 故障排除

问题	原因	解决方法
产品完全无法工作。	电源可能存在故障，或产品所连接的电源插座可能不通电。	检查是否存在电源故障，电源插座是否有电。
	产品可能过热，因此自动断电。	拔掉产品插头，让其冷却几分钟。再次打开产品电源之前，请检查出风口，确保没有被绒毛、头发等杂物堵塞。
	产品连接的电源电压可能与产品电压不符。	确保产品型号铭牌上标示的电压与当地电源电压相符。

保留备用

出版日期：2016-06-08

PHILIPS

产品：飞利浦电吹风
型号：HP8230
额定电压：220V~
额定频率：50Hz
额定输入功率：2100 W
生产日期：请见产品本体
产地：中国广东东莞



珠海经济特区飞利浦家庭电器有限公司
中国珠海市三灶镇琴石工业区
全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.15-2008, GB4343.1-2009 及GB17625.1-2012制造

PHILIPS

产品：飞利浦电吹风
型号：HP8233
额定电压：220V~
额定频率：50Hz
额定输入功率：2200 W
生产日期：请见产品本体
产地：中国广东东莞



珠海经济特区飞利浦家庭电器有限公司
中国珠海市三灶镇琴石工业区
全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.15-2008, GB4343.1-2009 及GB17625.1-2012制造

产品中有害物质的名称及含量 (仅限HP8230)					
部件名称	有害物质				
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)
					多溴二苯醚 (PBDE)
电源线插头脚	X	O	O	O	O
直流电马达 (铜件)	X	O	O	O	O
本表格依据SJ/T 11364的规定编制。					
O：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。					
X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。					

本表格依据SJ/T 11364的规定编制。