



S1150

*corded
Tripleheader Shaver*

Always here to help you

Register your product and get support at
www.norelco.com/register

BC

Question?
Contact
Philips
Norelco

ENGLISH 4

Congratulations on your purchase and
welcome to Philips Norelco!

To fully benefit from the support that Philips
Norelco offers, register your product at
www.norelco.com/register

\$1150

IMPORTANT SAFETY INSTRUCTIONS

When using an electric appliance, basic precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a corded shaver that has fallen into water. Unplug immediately.
2. Use shaver only in dry condition. Do not use a shaver while bathing or in a shower.
3. Do not submerge shaver in water.
4. Do not place or store a shaver where it can fall or be pulled into a tub or sink. Do not place or drop a shaver into water or other liquid.
5. Always unplug this shaver from the electrical outlet immediately after using.
6. Unplug and remove power supply cord from shaver before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this shaver is used by, on, or near children or invalids.
2. Use this shaver for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this shaver if it has a damaged cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. For assistance call 1-800-243-3050.

4. Keep the shaver and cord away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the adapter.
7. Do not plug in shaver outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not use this shaver with a damaged or broken comb, as facial injury may occur.
9. Always attach plug to shaver first, then to outlet. Be certain plug is inserted firmly into shaver up to mark indicated on plug. To disconnect, turn shaver off then remove plug from outlet.
10. Never put the shaver in direct sunlight or store at a temperature above 140°F (60°C).
11. Shaver can be rinsed under running tap water. Never use water hotter than 175°F (80°C). Do not operate shaver until fully dried.
12. To prevent possible damage to the cord, do not wrap cord around the shaver.
13. An appliance should never be left unattended while plugged in.
14. Only use the power plug supplied with the shaver.

SAVE THESE INSTRUCTIONS

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug, as this will cause a hazardous condition.



45 - DAY MONEY-BACK GUARANTEE

To enjoy the closest and most comfortable shave from your new Philips Norelco Men's Shaver, the shaver should be used exclusively for 3 weeks. This allows your hair and skin enough time to adapt to the Philips Norelco Shaving System. If, after that period of time, you are not fully satisfied with your Philips Norelco Men's Shaver, send the product back along with dated sales receipt and we'll refund you the full purchase price. **The shaver must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price, the date of purchase, and the money-back guarantee return authorization form enclosed. We cannot be responsible for lost mail.**

The shaver must be postmarked no later than 45 days from the date of purchase. Philips Norelco reserves the right to verify the purchase price of the shaver and limit refunds not to exceed suggested retail price.

To obtain money-back guarantee return authorization form, call 1-800-243-3050 for assistance. Delivery of refund check will occur 6-8 weeks AFTER receipt of refund product.

Table of Contents

Features	8-9
Put It To The Test & Shaving Tips	10
How to Shave	
With An Electric Shaver	10-11
Cleaning	12-15
Replacing the Shaver Heads	16-17
Storage	17
Assistance	18
Accessories	18
Warranty	19

Features

CloseCut Blade System

Shaving Unit


Protective Cap

Individually
Floating
Heads

Shaving Unit
Release Button
• Hair Chamber
captures shaven
hair

Electronic
On/Off Button


Corded –
Shaves with a Cord

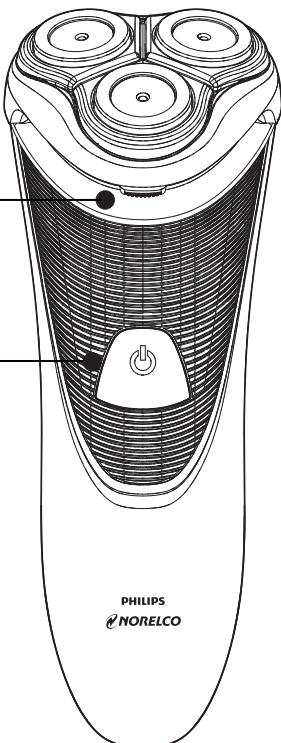

Automatic
Worldwide Voltage
100V to 240V AC

Full 2-Year Warranty

45-Day Money-Back
Guarantee

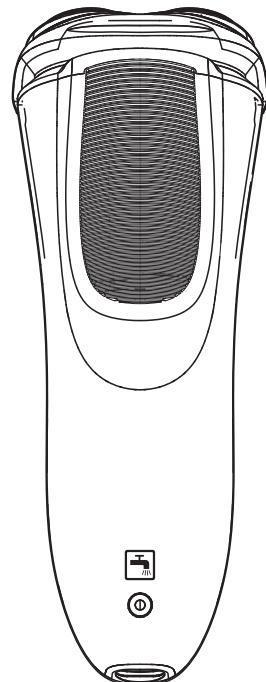


Put It To The Test & Shaving Tips

- 21 Day Trial and Conversion Process. It is a fact that your skin and beard need time to adjust to a new shaving system.
- Use your new shaver exclusively for 3 weeks to fully enjoy the closeness of a Philips Norelco shave.
- At first you may not get as close a shave as you expect, or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new shaver.
- Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Philips Norelco shaving system.
- If you are still not convinced after 21 days, Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.



How To Shave With An Electric Shaver

- This symbol indicates that the shaver can be rinsed under running tap water.
- For hygienic reasons, the shaver should only be used by one person.
- Use this shaver for its intended household use as described in this manual.
- Shaving with a clean face gives the best results.

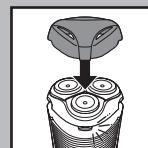

- 1 Connect power cord to shaver.
- 2 Plug into any 120V to 240V AC electrical outlet. Use only the power cord provided.
- An adapter plug may be necessary for cord usage in some foreign countries. Use an attachment plug adapter of the proper configuration for power outlet.
Your new shaver will automatically convert internally to work on 100V to 240V AC systems.
- 3 Turn shaver ON by pressing the on/off button once. Shave against the direction of beard growth using circular movements.
- 4 Stretch your skin with your free hand so blades can lift and cut whiskers. Gently press shaver to skin so the floating heads can follow the contours of your face. DO NOT press too hard. Too much pressure can pinch the skin into the combs.
- 5 Turn shaver OFF by pressing the on/off button once.
- 6 Clean the shaver after each use (see chapter 'Cleaning').
- 7 Put the Protective Cap on the shaver to protect shaver heads.

Cleaning



- Always clean your shaver after each use.
- Always switch shaver OFF, unplug and remove power cord before cleaning.
- Never clean, remove or replace head assembly while motor is on.
- Do not apply pressure to combs. Do not touch shaver heads with hard objects as this may dent or damage precision-made slotted combs.
- Do not use shaver if combs are damaged or broken. Facial injury may occur.
- Do not use compressed air, abrasives, scourers or aggressive liquids such as gasoline or acetone to clean the shaver.

Cleaning the Shaving Unit

The shaver heads may be quickly cleaned after each use by rinsing with hot water: Water from the tap should be on a hot setting, BUT BE CAREFUL TO TEST WATER FIRST SO AS NOT TO BURN OR SCALD HANDS.

- Regular cleaning guarantees better shaving results.
- Do not immerse shaver in water.
- While rinsing shaver heads, water may drip out of the base of shaver. This is a normal occurrence.

- 1** Always turn shaver OFF, unplug from outlet and remove power cord from shaver.

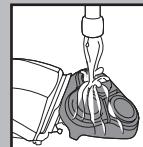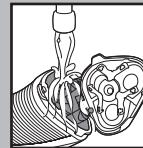

- 2** Press the Release Button to open the shaving unit.

- 3** Clean inside shaver heads and hair chamber by running under hot water.

- 4** Clean outside of shaving unit by running under hot water.

- 5** Close the shaving unit and shake off excess water.

Be careful not to hit the shaving unit against anything while shaking off excess water.

- 6** Open shaving unit again and leave open to air dry.

NOTE: Do not wipe or dry the shaving heads with a towel or tissue. This could damage the shaving heads.

- If the shaving unit becomes detached from the shaver, you can easily reattach it.**


Extra-thorough Cleaning Method

Do not mix up the cutters and combs as the shaving performance may be adversely affected for several weeks before optimal shaving performance is restored.


- 1 Turn shaver OFF, remove the plug from the outlet and power cord from the shaver.



- 2 Press the Shaving Unit Release Button to open the Shaving Unit.

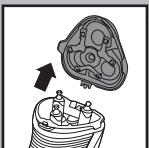


- 3 Pull the shaving unit off the shaver.

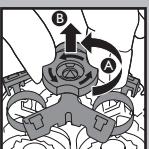

- 4 Turn the lock counterclockwise to unlock (A) and remove the retaining frame (B).




- 5 Remove and clean one set of cutters and combs at a time.

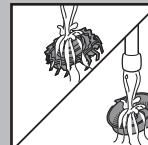


- 6 Separate the cutter from the comb and clean both parts under warm tap water.

Do not clean more than one cutter and comb at a time, since they are all matching sets. If you accidentally interchange the cutters and combs, it could take several weeks before optimal shaving performance is restored.

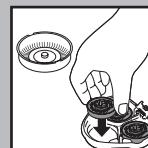


- 7 Put the shaving head back into the shaving unit.

Make sure the notches on both sides of the shaving head fits exactly onto the projections in the shaving head holder.

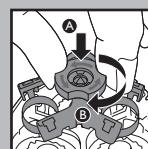

- 8 Repeat the process for the other two sets of cutters and combs.

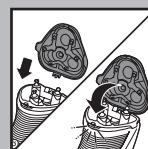

- 9 Replace the retaining frame (A) and turn the lock clockwise until it locks into place (B).

- 10 Insert the notch of the shaving unit into the slot in the top of the shaver and then close the shaving unit.

NOTE: If the shaving unit does not close smoothly, make sure you inserted the shaving heads properly and that the retaining frame is locked.

- 11 Put the Protective Cap on shaver to protect heads.


Replacing the Shaver Heads

- Replace the shaver heads once a year for optimal shaving results.
- Replace damaged or worn shaver heads with model SH30 Philips Norelco shaver heads only.


1 Turn shaver OFF, remove the plug from the outlet and power cord from the shaver.




2 Press the Shaver Head Release Button to open the shaving unit.

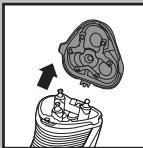


3 Pull the shaving unit off the shaver.

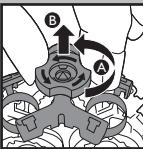


4 Turn the lock counterclockwise to unlock (A) and remove the retaining frame (B).

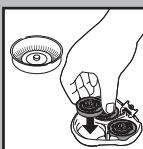

5 Remove the shaver heads and place the new shaver heads in the shaving unit.
Make sure the notches on both sides of the shaving heads fit exactly onto the projections in the shaving head holder.

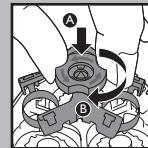

6 Replace the retaining frame (A) and turn the lock clockwise until it locks into place (B).

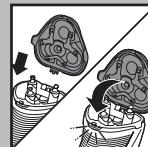


7 Insert the notch of the shaving unit into the slot in the top of the shaver and then close the shaving unit.

NOTE: If the shaving unit does not close smoothly, make sure you inserted the shaving heads properly and that the retaining frame is locked.

This shaver has no other user-serviceable parts. For assistance call 1-800-243-3050.

Storage

- Be sure shaver is turned off. Remove cord from outlet and shaver before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap power cord around shaver when storing.
- Store cord in a safe location where it will not be cut or damaged.
- Do not place or store shaver where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.
- Put the Protective Cap on shaver to protect heads.

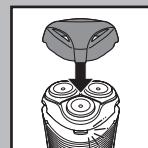


Assistance

- ▶ For assistance, visit our website:
www.philips.com/support or
call toll free **1-800-243-3050**
- ▶ Online information is available 24 hours a day,
7 days a week.

Accessories

- ▶ Replacement Heads
Model SH30 - For maximum shaver performance, replace your Philips Norelco shaver heads once a year.
- ▶ Philips Norelco Shaver Accessories may be purchased at a store near you, or on our website www.philips.com/store

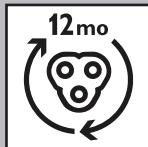

FULL TWO YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Philips Norelco Product, Models S1150 (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.*

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com/norelco or call 1-800-243-3050 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips Electronics North America Corporation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

* Read enclosed instructions carefully.

Manufactured for:

Philips Consumer Lifestyle
A Division of Philips Electronics North America Corporation
P.O.Box 10313, Stamford, CT 06904



This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco and Tripleheader are Registered Trademarks of Philips Electronics North America Corporation.



is a Trademark of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips N.V.