 








PHILIPS

SBG315



      © & ™ Lucasfilm Ltd.
© Disney

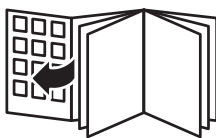

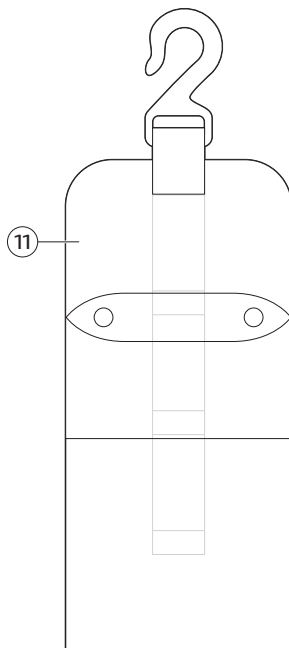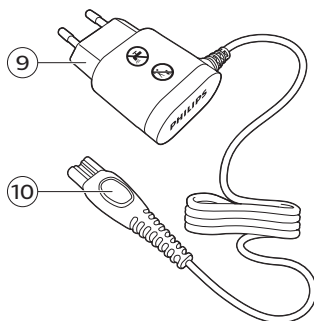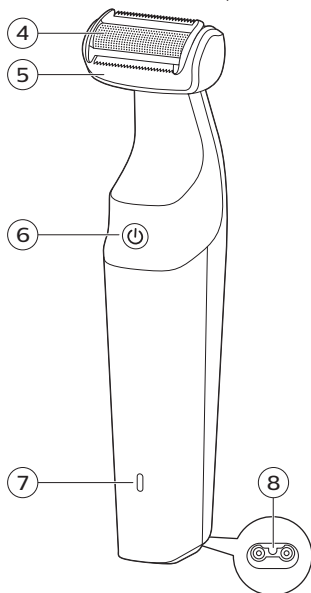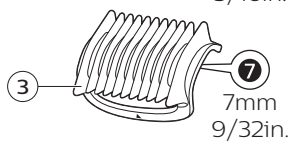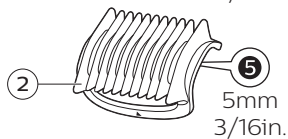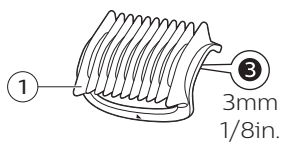

English 6

简体中文 **19**

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- 1 Trimming comb (3mm/ 1/8in.)
- 2 Trimming comb (5mm/ 3/16in.)
- 3 Trimming comb (7mm/ 9/32in.)
- 4 Shaving foil
- 5 Shaving unit
- 6 On/off button
- 7 Battery status indicator
- 8 Socket for small plug
- 9 Supply unit
- 10 Small plug
- 11 Pouch

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger



- Keep the supply unit dry.

Warning

- To charge the battery, only use the detachable supply unit (HQ8505) provided with the appliance.

- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the appliance before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

Caution

- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use water hotter than 60°C to rinse the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

 
General



- This appliance is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.


The display

Charging indications

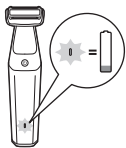


Battery low

 When the battery is almost empty, the battery status indicator flashes orange.

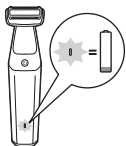

Battery charging

 When the appliance is charging, the battery status indicator flashes green.

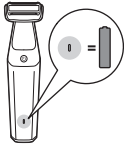

Battery fully charged

When the battery is fully charged, the battery status indicator light up green continuously.

 
Note: The battery status indicator goes out automatically after 30 minutes.

Charging

Charge the appliance before you use it for the first time and when the battery status indicator indicates that the battery is almost empty.

Charging takes approx. 1 hour. A fully charged appliance has a cordless operating time of up to 50 minutes.

Charging with the supply unit

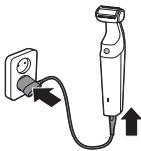

- 1 Make sure the appliance is switched off.
- 2 Put the small plug in the appliance and put the supply unit in the wall socket.

The battery status indicator indicates that the appliance is charging.

- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Using the appliance

Always check the appliance and all accessories before use. Do not use the appliance or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Note: This appliance is for cordless use only.

- Use this appliance for its intended household use as described in this user manual.

- For hygienic reasons, the appliance should only be used by one person.

You can use the appliance wet or dry to shave hair on all parts of your body below the neckline. Trimming is easier when the skin and hairs are dry.

Note: Switch off and clean the appliance after each use.

This symbol indicates that the shaver can be used in the bath or shower.

 


Switching the appliance on and off



- 1 To switch the appliance on or off, press the on/off button once.

Removing or attaching trimming combs

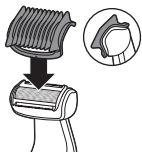

- 1 Make sure the appliance is switched off.
- 2 To attach a comb, snap the front part of the comb onto the teeth of the shaving unit and push the projection at the back of the comb into the appliance ('click').



- 3 To detach a comb, carefully push it upwards off the appliance and then remove the comb from the shaving unit.

Trimming

Trimming tips

- If you are trimming for the first time, be careful. Do not move the appliance too fast. Make smooth and gentle movements.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.
- Always make smooth and gentle movements and make sure that the surface of the comb always stays in contact with your skin.
- Body hair can be trimmed wet or dry. However, trimming dry hair is preferable because wet hair tends to stick to the body.
- When you trim sensitive areas, always use a trimming comb.



Trimming with comb

Note: When you trim for the first time, start with the longest comb to familiarize yourself with the appliance.

Use a trimming comb attached to the shaving unit to trim parts of your body below the neckline. The appliance comes with 3 trimming combs. The hair length settings are indicated on the combs. The settings correspond to the remaining hair length after trimming.

Comb	mm	inch
Trimming comb	3mm	1/8in.
Trimming comb	5mm	3/16in.
Trimming comb	7mm	9/32in.

  12 English

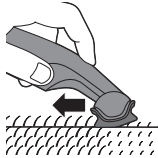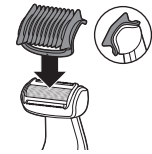

- 1 Attach a comb onto the shaving unit (see 'Removing or attaching trimming combs').
- 2 Switch on the appliance (see 'Switching the appliance on and off').

- 3 Move the appliance against the direction of hair growth,.

Note: Make sure that the flat part of the trimming comb is always fully in contact with the skin.

- 4 Switch off and clean the appliance after each use.

Shaving

 
Shaving tips

This product is only intended for shaving and trimming body parts below the neckline. Do not use it to shave or trim facial or scalp hair.

- When shaving sensitive areas for the first time, you may experience some discomfort, irritation or reddening of the skin. This is normal as your skin needs time to adjust to shaving.
- If your hair is longer than 10mm, trim hair to a length of 3mm first for optimum shaving results.
- For dry use, make sure that your skin is clean and dry before you use the shaving unit.
- For wet use, prepare your skin with lathered soap or shaving foam before you use the appliance.

Shaving with shaving unit

Use the shaving unit without comb to shave body hair.

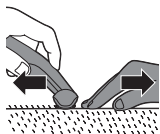

- 1 Remove any trimming comb from the appliance (see 'Removing or attaching trimming combs').
- 2 Switch on the appliance (see 'Switching the appliance on and off').
- 3 Stretch your skin taut with your free hand. Gently press the shaving unit onto the skin and move it slowly and smoothly against the direction of hair growth.
 - Do not press too hard. Too much pressure can distort the foil and cause skin irritation.
 - Make sure that the shaving unit is always in full contact with your skin.
 - The shaver is bi-directional, which means that you can shave by moving the appliance up and down. Shave against the direction of hair growth for optimal performance.
- 4 Switch off and clean the appliance after each use.

Cleaning and maintenance

Regular cleaning guarantees better shaving results.

Never clean, remove or replace a shaving or cutting unit while the appliance is switched on.

Always check if the water is too hot, to prevent burning your hands.

 
Never dry cutting units or shaving foils with a towel or tissue, as this may cause damage.

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Cleaning the appliance

Clean the appliance after every use (see 'Cleaning and maintenance').

- 1 Switch off the appliance and disconnect it from the wall socket.
- 2 Remove the trimming comb from the appliance and rinse it under the tap.
- 3 Remove the shaving foil from the shaving unit.
Hold the shaving foil by the plastic housing only.

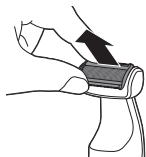

Note: The foil is delicate. Handle the shaving foil with care.

- 4 Rinse the shaving foil under a warm running tap.

 


- 5 Rinse the hair chamber under a warm running tap to remove any residue.
- 6 Carefully shake off excess water and let all parts air dry completely.




Never dry cutting units or shaving foils with a towel or tissue, as this may cause damage.

- 7 After cleaning, snap the shaving foil back into the shaving unit.

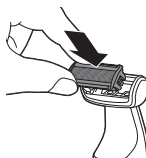

Replacement

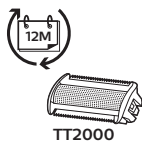 

For maximum shaving performance, we advise you to replace the shaving foil every year. Replace a damaged shaving foil immediately. Always replace the shaving foil with original Philips TT2000 shaving unit.

 
- 1 Switch off the appliance and disconnect it from the wall socket.
- 2 Pull the shaving foil out of the shaving unit.




- 3 Snap the new shaving foil into the shaving unit ('click').

Note: The foil is delicate. Handle the shaving foil with care.

- 4 Make sure the shaving foil is firmly attached before you use the appliance.

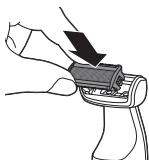

Storage

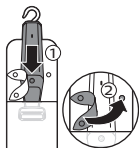 


- 1 Undo the strap, put the appliance in the pouch and fasten the strap.

- 2 Put the combs in the pouch.

Note: Make sure that the appliance and its attachments are dry before you store them.

 - 3 Hang or put the pouch in a safe place.



Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Available accessories

The following accessories and spare parts are available:

- TT2000 Philips replacement shaving foil.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

- 1 Check if there are screws in the back or front of the appliance. If so, remove them.
- 2 Remove the back and/or front panel of the appliance with a screwdriver. If necessary, also remove additional screws and/or parts until you see the printed circuit board with the rechargeable battery.
- 3 Remove the rechargeable battery.

Warranty and support

If you need information or support, please visit **www.philips.com/support** or read the international warranty leaflet.

Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the product. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The appliance does not work.	The rechargeable battery is empty.	Charge the battery (see 'Charging').

18 English

Problem	Possible cause	Solution
	The appliance is still attached to the wall socket.	For safety reasons, the appliance can only be used without cord. Unplug the appliance and switch the appliance on.
The appliance does not work as well as it used to.	The shaving foil is damaged or worn.	Replace the shaving foil (see 'Replacement').
	Hair or dirt obstruct the shaving foil.	Clean the shaving foil (see 'Cleaning and maintenance').
The operating time on a full charge decreases.	Hair or dirt obstruct the shaving foil.	Clean the shaving foil (see 'Cleaning and maintenance').
Reduced trimming and/or shaving performance.	The appliance is used in the wrong way.	Use this appliance for its intended purpose as shown in the user manual (see 'Using the appliance').
	The shaving foil is dirty.	Clean the shaving foil (see 'Cleaning and maintenance').
	The battery is running low.	Charge the battery (see 'Charging').
	The trimming comb is not attached properly.	Reattach the trimming comb (see 'Removing or attaching trimming combs').
	You are trimming very curly hair.	The trimming comb may not be able to straighten the hairs properly. Try straightening the hair with your hands during trimming.

简介

感谢您的惠顾，欢迎光临飞利浦！为了让您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。

基本说明（图 1）

- 1 修剪梳（3 毫米/1/8 英寸）
- 2 修剪梳（5 毫米/3/16 英寸）
- 3 修剪梳（7 毫米/9/32 英寸）
- 4 剃毛刀网
- 5 剃须刀头部件
- 6 开/关按钮
- 7 电池状态指示灯
- 8 小插头插口
- 9 电源部件
- 10 小插头
- 11 存储袋

重要安全信息

使用本产品及其附件之前，请仔细阅读本重要信息，并妥善保管以供日后参考。随附的附件可能因产品而异。

危险



- 保持电源部件干燥。
- 警告符号注释：禁止在打开的水龙头下进行清洗。

警告

- 要给电池充电，请仅使用产品随附的可拆卸电源部件（HQ8505）。
- 电源部件中包含一个变压器。请勿自行更换电源部件的插头，否则将导致严重后果。

- 本产品也可以由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。切勿让儿童玩弄本产品。不要让儿童在无人监督的情况下对本产品进行清洁和保养。
- 手持部分与电源软线分开后，才能在水中清洗手持部分。
- 使用前，请务必检查产品。请勿使用损坏的产品，否则可能对人体造成伤害。请务必用原装型号更换损坏的部件。
- 切勿拆开本产品更换充电电池。

警告

- 请勿在包含电动空气清新器的墙壁插座上或其周围使用电源部件，以免电源部件受到不可修复的损坏。
- 只能将本产品用于用户手册中所示的原定用途。
- 出于卫生的目的，本产品只能供一个人使用。
- 切勿使用温度高于 60°C 的热水冲洗本产品。
- 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液体（例如汽油或丙酮）来清洁产品。

电磁场 (EMF)

本 Philips 产品符合所有有关暴露于电磁场的适用标准和法规。

 
概述



- 符号注释：适合于在洗澡或淋浴时使用。允许在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- 该产品具有防水性能。适合在沐浴或淋浴时使用，也可以放在水龙头下清洗。出于安全原因，该产品在使用时不能连接电线。
- 电源部件适合在 100 - 240 伏的电源电压下工作。
- 该电源部件可将 100-240 伏的电压转换为 24 伏以下的安全低电压。


显示屏

充电指示

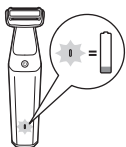


电池电量不足

 当电池的电量几乎耗尽时，电池电量状态指示灯会呈橙色闪烁。

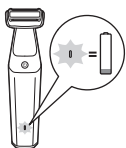

电池正在充电

 当产品充电时，电池状态指示灯呈绿色闪烁。

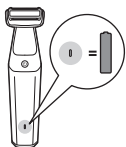

电池已完全充满

电池完全充满后，电池状态指示灯会呈绿色持续亮起。

注意： 30 分钟后电池状态指示灯会自动熄灭。

 
充电

第一次使用本产品之前，以及当电池状态指示灯指示电池电量快要耗尽时，请为本产品充电。

充电约需 1 小时。完全充电的产品在不连接电源的情况下最长可使用达 50 分钟。

使用电源部件充电

- 1 确保产品电源已关闭。

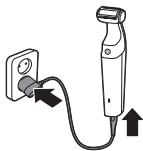

- 2 将小插头插入本产品，然后将电源部件插入电源插座。
电池状态指示灯指示产品正在充电。
- 3 充电之后，从电源插座上拔下电源部件，并从本产品上拔下小插头。

使用本产品

使用前务必检查产品和所有配件。如果产品或任何配件损坏，请勿继续使用，否则可能会造成人身伤害。请务必用原装型号更换损坏的部件。

注意： 本产品仅限在不接电源的情况下使用。

- 按照本用户手册中所述的原定家用用途使用本产品。
- 出于卫生的目的，本产品只能供一个人使用。

您可以使用本产品（干湿皆可）剃除颈部以下任何部位的体毛。皮肤和毛发干燥时更容易修剪。

注意： 每次使用后，请关闭并清洁产品。

此标志表示该剃须刀可在沐浴或淋浴时使用。



打开或关闭产品



- 1 要打开或关闭本产品，请按一下开/关按钮。

拆卸或安装修剪梳

- 1 确保产品电源已关闭。



- 若要安装修剪梳，请先将修剪梳的前端移动到剃毛刀头部件的啮合部位，然后推动修剪梳背部的凸起部分，将其安装到产品上（听到“咔哒”一声）。



- 若要拆卸修剪梳，请小心地将修剪梳向上推离产品，然后从剃毛刀头部件上取下。

修发

修剪提示

- 如果这是您第一次修剪，请格外小心。移动本产品时速度不要太快。应确保动作轻柔流畅。
- 由于并非所有的须发均按相同的方向生长，因此您可能需要尝试不同的修剪位置（即向上、向下或交叉）。不断实践才能获得最佳效果。
- 始终轻柔平稳地移动，确保修剪梳表面始终与皮肤相接触。
- 可修剪体毛（干湿皆可）。但是最好修剪干燥的体毛，因为湿的体毛容易粘在身上。
- 修剪敏感部位的毛发时，请务必使用修剪梳。



使用修剪梳修剪

注意：第一次进行修剪时，请使用最长的修剪梳，以熟悉产品的使用。

将修剪梳安装到剃毛刀头部件，剃除颈部以下任何部位的体毛。本产品随附 3 款修剪梳。修剪梳上显示有毛发长度设置。设定值对应修剪后毛发剩余的长度。

修剪梳	毫米	英寸
修剪梳	3 毫米	1/8 英寸
修剪梳	5 毫米	3/16 英寸

修剪梳	毫米	英寸
修剪梳	7 毫米	9/32 英寸

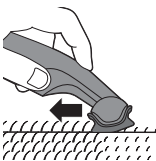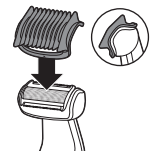  

1 将修剪梳安装到剃毛刀头部件 (请参见 '拆卸或安装修剪梳') 上。

2 启动产品 (请参见 '打开或关闭产品')。

3 逆着毛发生长的方向移动本产品。

注意： 确保修剪梳的扁平部分与皮肤保持完全接触。

4 每次使用后，请关闭并清洁本产品。

剃毛

剃毛提示

本产品仅可用于剃除和修剪颈部以下身体部位的体毛。请勿使用本产品剃除或修剪脸部胡须或头发。

 
- 第一次剔除敏感部位的毛发时，您可能会有些不适、刺激或皮肤发红。这是正常现象，因为您的皮肤需要适应剔除过程。
- 如果您的毛发长度超过 10 毫米，请先将其修剪成 3 毫米长，以确保最佳的剔除效果。
- 若要进行干用，请确保皮肤清洁且干燥，然后再使用剃毛刀头部件。
- 若要进行湿用，先在皮肤上使用起泡沫的肥皂或剃须泡沫，然后再使用本产品。

使用剃毛刀头部件剃毛

使用不带修剪梳的剃毛刀头部件剃除体毛。



- 1 取下产品 (请参见 '拆卸或安装修剪梳')上的任何修剪梳。
- 2 启动产品 (请参见 '打开或关闭产品')。

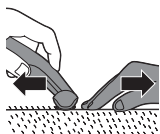

- 3 使用另一支手拉紧您的皮肤。慢慢将剃毛刀头部件放到皮肤上，逆着毛发生长的方向缓慢平滑地移动。
 - 切勿用力按压。压力过大可能会导致刀网变形并引起皮肤刺激。
 - 确保剃毛刀头部件始终紧贴皮肤。
 - 剃毛刀可以双向使用，意味着您可以上下移动产品进行剃毛。逆着毛发生长的方向剃毛，以获取最佳效果。
- 4 每次使用后，请关闭并清洁本产品。

清洁和保养

为保证更好的剃须效果，请定期清洗剃须刀。

切勿在产品开启时清洗、拆卸或更换剃须或修剪部件。

切记先检查水温是否太高，以防烫手。

 
切勿使用毛巾或纸巾擦干修剪部件或剃毛刀网，因为有可能造成损坏。

切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液体（例如汽油或丙酮）清洁本产品。

清洁产品

每次使用 (请参见 '清洁和保养')后均应清洁产品。

- 1 关闭产品并与电源插座断开连接。
- 2 将修剪梳从产品上取下，并在水龙头下冲洗。

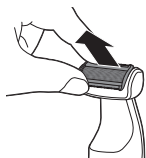


- 3 取下剃毛刀头部件上的剃毛刀网。

只握住剃毛刀网的塑料外壳。

注意：刀网比较精密。触摸剃毛刀网时需特别小心。



 
- 4 在温水水龙头下冲洗剃毛刀网。

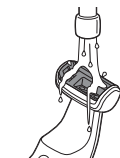

- 5 在温水水龙头下冲洗毛发储藏室以清除所有残留物。

- 6 小心地甩掉多余水分并彻底晾干所有部件。

 切勿使用毛巾或纸巾擦干修剪部件或剃毛刀网，因为有可能造成损坏。

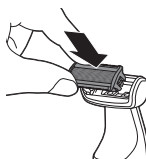

- 7 清洁之后，将剃毛刀网按回剃毛刀头部件。


更换




TT2000

为获得最佳剔除效果，我们建议您每年更换一次剃毛刀网。如果剃毛刀网出现损坏，请立即更换。务必使用原装飞利浦 TT2000 剃毛刀头部件更换剃毛刀网。

 - 1 关闭产品并与电源插座断开连接。

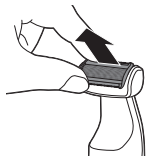

2 将剃毛刀网拉出剃毛刀头部件。

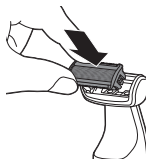 


3 将新剃毛刀网按入剃毛刀头部件（听到“咔哒”一声）。


注意：刀网比较精密。触摸剃毛刀网时需特别小心。

4 请确保使用本产品之前已稳固安装剃毛刀网。

 存放

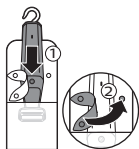

1 松开绑带，将产品放入存储袋中，然后拉紧绑带。

 

2 将修剪梳放入存储袋中。

注意：存储之前，请确保产品和附件已晾干。

3 将存储袋挂到一个安全的位置。

订购配件

要购买附件或备件，请访问 www.shop.philips.com/service 或联系您的飞利浦经销商。您还可以联系所在国家/地区的飞利浦客户服务中心（请参阅全球保修卡了解详细联系信息）。

可用的附件

可选配以下附件和备件：

- TT2000 飞利浦替换剃毛刀网。

回收

- 弃置本产品时，请不要将其与一般生活垃圾放在一起，应将其交给政府指定的回收中心。这样做将有利于环保。
- 此产品包含内置充电电池；请勿将充电电池与一般生活垃圾一起弃置。请您将产品送到官方收集中心或飞利浦服务中心，请专业人士移除充电电池。
- 遵循您的国家/地区有关分类回收电子电气产品和充电电池的规定。正确弃置产品有助于避免对环境和人类健康造成不良后果。

拆下充电电池

必须在丢弃本产品前取出充电电池。卸下电池之前，请确保本产品与电源断开连接并且电池电量已耗尽。

当您使用工具打开本产品时以及在您弃置充电电池时，请采取必要的安全保护措施。

- 1 检查产品的前面和后面是否有螺丝。如果有，请将其拆下。
- 2 用螺丝刀卸下产品的前面板和/或后面板。必要时还需要拆下更多的螺丝和/或部件，直到您看见装有充电电池的印刷电路板为止。
- 3 拆下充电电池。

部件名称	产品中有害物质的名称及含量					
	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB's 集成电路板	X	o	o	o	o	o
Electrical contact pins 电接触片	X	o	o	o	o	o
Power plug 电源插头	X	o	o	o	o	o
本表格依据SJ/T 11364的规定编制。						
O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。						
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。						

- 该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。

- 该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

保修和支持

如需信息或支持，请访问 www.philips.com/support 或阅读国际保修卡。

保修条款

修剪部件不在国际保修条款的涵盖范围之内，因为修剪部件属于易磨损物品。

故障处理方法

本章归纳了使用本产品最常遇到的问题。如果您无法根据以下信息解决问题，请访问 www.philips.com/support 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

问题	可能的原因	解决方法
产品不能工作。	充电电池的电量已耗尽。	给电池 (请参见 '充电') 充电。
	本产品仍然连接着电源插座。	出于安全原因，本产品在使用时不能连接电线。拔下产品电源后再打开产品。
产品的剃毛效果没有以前好。	剃毛刀网已损坏或磨损。	更换剃毛刀网 (请参见 '更换')。
	毛发或污垢堵塞了剃毛刀网。	清洁剃毛刀网 (请参见 '清洁和保养')。
满电情况下运行时间缩短。	毛发或污垢堵塞了剃毛刀网。	清洁剃毛刀网 (请参见 '清洁和保养')。

问题	可能的原因	解决方法
修剪和/或剃毛性能下降。	产品使用方式不当。	将本产品用于用户手册 (请参见 '使用本产品') 中所示的原定用途。
	剃毛刀网脏了。	清洁剃毛刀网 (请参见 '清洁和保养')。
	电池电量不足。	给电池 (请参见 '充电') 充电。
	未正确安装修剪梳。	重新安装修剪梳 (请参见 '拆卸或安装修剪梳')。
	要修剪非常卷曲的毛发。	修剪梳可能无法正确拉直毛发。请在修剪过程中用手尝试拉直毛发。

PHILIPS

产品：飞利浦剃毛器
 型号：SBG315
 额定电压：220V~
 额定频率：50Hz
 额定输入功率：9W
 生产日期：请见产品本体
 产地：中国广东珠海



珠海经济特区飞利浦家庭电器有限公司
 中国珠海市三灶镇琴石工业区
 全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005,
 GB4706.9-2008制造

保留备用

发行日期：27/12/2017



© 2017 Koninklijke Philips N.V.

All rights reserved

保留所有权利

4222.002.9005.1 (27/12/2017)

> 75% 循环再造纸



>75% recycled paper

>75% papier recyclé