



 
 
 
## English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com.cn/welcome](http://www.philips.com.cn/welcome).

### 1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

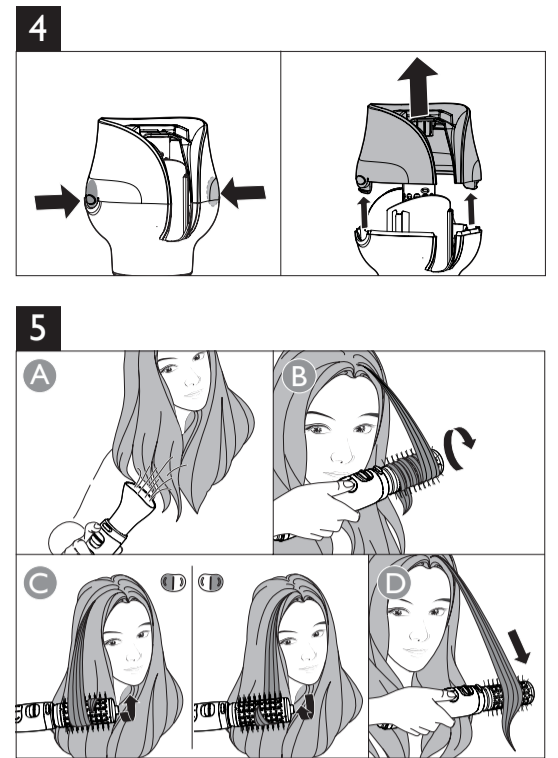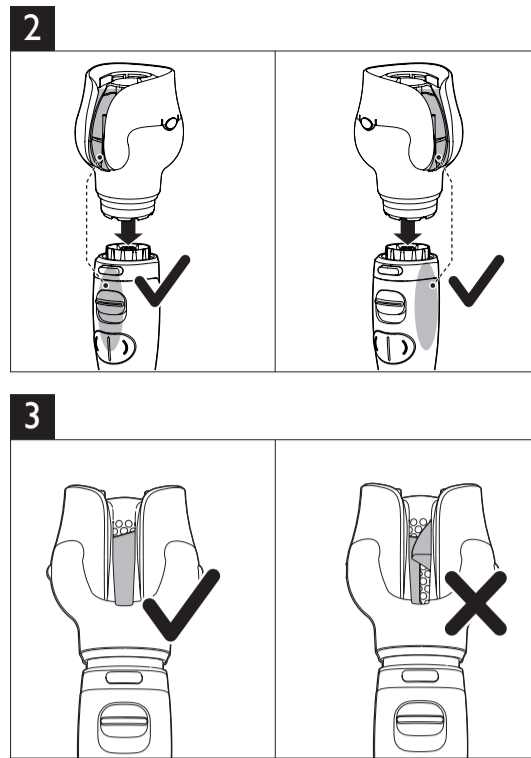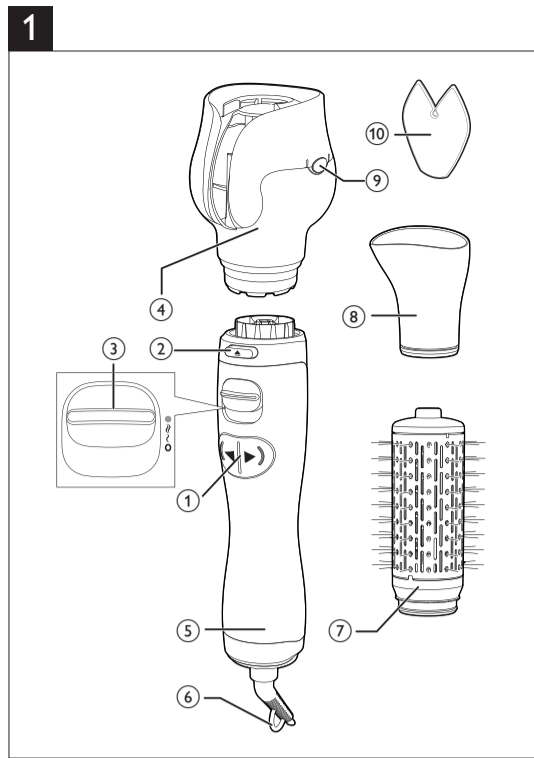

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Never block the air grilles.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.
- Avoid the mains cord from coming into contact with the hot parts of the appliance.
- Do not use the appliance on artificial hair.

- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Do not operate the appliance with wet hands.
- Keep the metal barrel clean and free of dust and styling products such as mousse, spray and gel.
- The metal barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on color-treated hair, the metal barrel may be stained.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.
- Do not insert metal objects into openings to avoid electric shock.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.



### 2 Before styling your hair

**Note:** Always let the appliance and attachments cool down before you connect or disconnect the attachments.

**Remarks:** Depending on the dampness of the hair, the duration for each strand would differ. A longer duration is needed if hair is damper than recommended.

- 1 Select your desired attachment (4, 7, 8) and fix it onto the handle (5) of the styler.
- Press the release button (2) to remove the attachment when it cools down.
- 2 Connect the plug to a power supply socket.
- 3 Slide the airflow switch (3) to strong and warm airflow for fast drying, warm airflow for gentle drying and styling to prevent your hair from overheating, and cool airflow for fixing your style.

### 3 How to style your hair

We recommend that you practice using the appliance two or three times so you can get used to how it works.

#### (A) Nozzle attachment (8)

- 1 Select the nozzle (8) and fix it onto the handle (5).
- 2 (Fig. 5-A) Dry your hair with suitable settings (3).

#### (B) Air curl attachment (4)

##### Tips and Tricks

Refer to the Quick Start Guide for detailed usage instructions.

- (Fig. 2) There are different points where the curling attachment can be fixed. For your convenience, you can change the position according to the way you hold the appliance.
- Pre-dry your hair, including the roots, before using the product. For optimal results, hair should be 80%–90% dry.
- Comb hair thoroughly and ensure that there are no tangles.
- Separate hair into sections. Keep all unused hair away from the opening. Make sure that there are no stray or loose strands near the opening.
- Start curling from the back of the head.
- Turn on the device by selecting hot airflow setting (3). (Fig. 3) Check the opening is clear before inserting the hair. Press the rotating button to make sure there is nothing blocking the opening.
- Twist the hair once to make it easier to put into the opening.
- Place the opening on your hair where you want the curls to start. Do not place too close to the roots.
- Hold the hair strands taut when putting into the opening.
- Do not immediately release the rotation button when the hair can no longer be seen at the opening. Allow the rotation to continue for another 10 seconds to ensure that the hair is completely inside the chamber.
- Check that the ends of the hair strands remain enclosed within the chamber and no stray hair is sticking out.
- (Fig. 4) If hair becomes trapped, switch off the device. Gently remove any trapped hair in thin strands, section by section, until all of the hair is freed. Alternatively, you can press the side buttons (9) of the air curl attachment to remove the top cover of the attachment and release trapped hair.

#### (C) Brush attachment (7)

- Make waves/volume in the hair (Fig. 5-B)

- 1 Place the brush (7) at the hair tips, and use the rotational button (1) to roll up the strand from the ends to the roots.
- 2 Keep the brush at the hair roots until the hair is completely dry.
- 3 Remove the brush from the hair by using the opposite rotation direction. To avoid tangles, remember to move the brush away from your hair as you do so.
- 4 To style the rest of your hair, repeat steps 1-3.

#### • Style the hair tips (Fig. 5-C)

- 1 Insert the brush (7) at the hair tips.
- 2 Choose the rotation direction for the desired results (inwards flicks or outwards flicks).
- 3 Activate the rotation, allowing the brush to rotate at the hair tips until the hair is completely dry and properly shaped.
- 4 To style the rest of your hair, repeat steps 1-3.

#### • Straighten the hair (Fig. 5-D)

- 1 Insert the brush under your hair at the roots.
- 2 Pull the brush down the length of the hair from the roots to the ends, without using the rotation.

### 4 After use

- Remarks: Only apply hair spray and other fixation styling products after styling.**
- 1 Switch off the appliance and unplug it.
  - 2 Place it on a heat-resistant surface until it cools down.
  - 3 Clean the appliance and attachments by damp cloth.
  - 4 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (6).

### 5 Guarantee & service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at [www.philips.com.cn/support](http://www.philips.com.cn/support) or contact the Philips Customer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.



## 6 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the attachment to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.

### 简体中文

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 [www.philips.com.cn/welcome](http://www.philips.com.cn/welcome) 上注册您的产品。

### 1 重要事项

- 使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。
- 警告：**请勿在靠近水的地方使用本产品。
- 本产品在浴室使用时，使用后拔下插头，因为即使本产品开关断开后，接近水仍存在危险。
- 警告：**不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- 警告符号注释：**禁止在洗澡或淋浴时使用。
- 使用后务必拔下产品的插头。
- 如果产品过热，它将自动关闭电源。拔掉产品插头，让其冷却几分钟。再次启动产品之前，请检查出风口，确保其未被绒毛、头发等杂物堵塞。
- 如果电源线损坏，为避免危险，必须由飞利浦、飞利浦授权的服务中心或类似的专职人员来更换。
- 在有人指导如何安全使用本产品，监督掌握安全使用方法的情况下，本产品适合8岁或以上的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用。但同时他们需要意识到相关的危险。不得让儿童玩耍本产品。不要让儿童在无人监督的情况下进行清洁和保养。
- 为了增加保护，建议在浴室供电的电气回路中安装一个额定剩余工作电流不超过 30mA 的剩余电流装置 (RCD)。详情请向 RCD 安装商咨询。
- 连接产品之前，请确保产品上标示的电压与当地电源电压相符。
- 请勿将本产品用于本手册中说明以外的任何其它用途。
- 切勿阻塞出风口。
- 当产品连接了电源时，切勿让其无人看管。
- 切勿使用由其它制造商生产的，或未经飞利浦特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。
- 切勿将电源线缠绕在产品上。
- 待产品完全冷却后再存放。
- 由于产品会很烫，请在使用时多加注意。只能握住手柄，因为其他部位会很烫，并且避免与皮肤接触。

- 不要使电源线接触到产品的灼热部分。
- 请勿对假发使用本产品。
- 当产品变热时切勿在其表面覆盖任何物品（如毛巾或衣服）。
- 切勿用湿手操作本产品。
- 保持金属棒洁净无尘且未粘上定型产品（如摩丝、定型喷剂和发胶）。
- 金属棒具有涂层。此涂层可能会随着时间的推移慢慢磨损。但是，这并不影响产品的性能。
- 将产品用于染过色的头发时，金属棒可能会染上颜色。
- 产品只能送到飞利浦授权的服务中心检修。由不合格人员进行修理可能将用户置于极度危险的境地。
- 切勿将金属物体插入开口中，以免触电。
- 使用后请勿拉扯电源线。拔下产品插头时，请握紧插头。

### 电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

### 环境

弃置产品时，请不要将其与一般生活垃圾堆放在一起；应将其交给官方指定的回收中心。这样做有利于环保。

### 2 造型前

**注意：**在连接或拆开附件之前，请务必先让产品及其附件冷却。

**备注：**因头发湿度而异，每缕头发的造型时间可能有差异。若头发比建议的湿度更大，则造型需要更长的时间。

- 选择您所需的配件（④、⑦、⑧）并将其固定在美发造型器的（⑤）手柄上。
- 当配件冷却后，按下释放按钮（②）可取下配件。
- 将插头连接至电源插座。
- 将风速开关（③）滑动至强劲暖风，可快速吹干；暖风，可柔和干发与定型，防止头发过热；冷风，可为您的秀发定型。

### 3 如何造型

尝试使用本产品两至三次，就可熟悉操作方式。

#### (A) 集风嘴配件（⑧）

- 选择集风嘴（⑧）并将其固定于手柄上（⑤）。
- （图 5-A）选择合适的设置吹干头发（③）。

#### (B) 空气卷发配件（④）

**提示和诀窍：**

**如需获取详细的使用说明，请参阅随附的快速入门指南。**

- （图 2）卷发配件可从不同角度固定在手柄上。为了方便您的使用，您可以根据自己手持产品的习惯来调整位置。
- 使用产品之前，请预先吹干头发（包括发根）。为获得最佳的效果，头发应处于 80% - 90% 的干燥状态。
- 彻底梳理头发，并确保没有缠结。
- 将头发分成几撮。将无需造型的头发放置于远离开口的位置。
- 从后脑处开始卷发。
- 选择强劲暖风设置，开启产品。
- （图 3）在放入头发前，检查开口处是否有堵塞。按下旋转按钮前确保没有杂物堵塞开口。
- 将所选发缕绕卷几圈，可更轻松将其放入开口。
- 将开口对着要开始卷发处的位置放置。请勿放置在过于靠近发根的位置。
- 将头发放入开口时，拉紧发缕。

- 头发完全卷入时，请勿立即松开旋转按钮。请继续旋转 10 秒钟，以便确保头发完全进入卷发仓内。
- 检查发缕末端是否已进入卷发仓。确保没有多余散落的头发。
- （图 4）如有头发被夹住，请关闭产品。轻轻地将夹住的头发分撮慢慢拉出，直到松开所有的头发。或者，在关闭产品的情况下按住空气卷发配件的侧面按钮（⑨），取下配件顶盖并松开夹住的头发。

### (C) 发梳配件（⑦）

- 打造波浪卷发/增强头发丰盈度（Fig.5-B）

  - 将发梳（⑦）放置在发梢，并使用旋转按钮（①），将发缕从末端卷向发根。
  - 让发梳停留在发根位置，直到头发完全变干。
  - 为防止缠结，请务必将发梳朝远离头发的方向使用反向旋转的方式，将发梳从头发上取下。
  - 要为其余头发造型，请重复步骤 1-3。

- 为发梢造型（图 5-C）**

  - 将发梳（⑦）插入发梢。
  - 为所需效果（内卷或外翻卷发）选择旋转方向。
  - 启动旋转，可让发梳在发梢处旋转，直至头发完全变干并适当定型。
  - 要为其余头发造型，请重复步骤 1-3。

- 拉直头发（图 5-D）**

  - 将发梳插入发根位置。
  - 将发梳从发根一直向下拉至发梢，无需使用旋转。

### 4 使用后

**备注：**造型后，仅能使用头发定型剂和其他固定造型产品。

- 关闭产品并拔下电源插头。
- 将产品置于隔热表面上，直至其冷却。
- 用湿布清洁本产品和附件。
- 将产品存放在安全、干燥、清洁的位置。您也可以使用挂环（⑥）将产品挂起存放。

### 5 保修与服务

如果您需要了解信息（如更换附件的相关信息）或有任何疑问，请访问飞利浦网站 [www.philips.com.cn/support](http://www.philips.com.cn/support)。您也可以与您所在国家/地区的飞利浦客户服务中心联系（可从保修卡中找到其电话号码）。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。

### 6 故障排除

问题	原因	解决方法
产品完全无法工作。	产品所连接的电源插座可能已损坏。	检查设备已正确插入。 检查您家中电源插座的保险丝。
	产品可能因此自动断电。	拔掉产品插头，让其冷却几分钟。再次打开产品电源之前，请检查附件出风口，确保没有被绒毛、头发等杂物堵塞。
	产品连接的电源电压可能与产品电压不符。	确保产品型号铭牌上标示的电压与当地电源电压相符。

保留备用  
出版日期：2017-04-06

## PHILIPS

产品：飞利浦美发造型器  
型号：HP8668  
额定电压：220V~  
额定频率：50Hz  
额定输入功率：750 W  
生产日期：请见产品本体  
产地：中国广东东莞

飞利浦（中国）投资有限公司  
上海市天目西路218号1602-1605  
全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.15-2008, GB4343.1-2009 及GB17625.1-2012制造

部件名称	有害物质的名称及含量				
	多溴二苯醚 (PBDE)	多溴联苯 (PBB)	六价铬 (Cr6+)	镉 (Cd)	汞 (Hg)
电源线	○	○	○	○	○
马达	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。  
○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。  
×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。