



**To fully enjoy your new Beard and Head Trimmer, a body comb for trimming hair below the neckline is included as well as a pouch for convenient storage.**

### **Body Trimming with Body Comb**

- Make sure that the Groomer is fully charged before you start trimming.
- Make sure hair is clean and dry as wet hair tends to stick to the body. Take your time and do not move the Groomer too fast. Make smooth and gentle movements.
- Always use the body comb when trimming sensitive areas.

- 1 Press trimming head on Groomer making sure the projection on the back of the trimming head fits exactly onto the notch in the hair chamber (fig. 1).
- 2 Slide the body comb into the guiding grooves on both sides of the handle (fig. 2).
- 3 Turn the Zoom Wheel to the desired hair length setting.

The body comb cuts hair to a length of 3/64-23/32in / 1-18mm.

Norelco is a registered trademark of  
Philips Electronics North America Corporation

PHILIPS is a registered trademark of  
Koninklijke Philips N.V.

© 2016 Philips Electronics North America  
Corporation. All rights reserved.

[www.philips.com](http://www.philips.com)

4222.002.8747.1

4 The setting selected is shown on the front of the appliance. (fig. 3).

- If you are trimming for the first time, start by using the comb at the maximum trimming length setting (23/32 in/18mm) to prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust Hair Length Setting Selector to desired trimming length. Selector will 'click' into position at each setting.

5 Turn the Groomer ON (fig. 4).

6 To trim in the most effective way, move the Groomer slowly against the direction of hair growth (fig. 5). Make sure the surface of the comb always stays in contact with the skin.

**NOTE:** Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

- If a lot of hair has accumulated in the comb, remove the comb and blow and/or shake the hair out of the comb.
- REMEMBER: You must reset the hair length setting selector back to your desired setting every time you replace the comb on the appliance.
- The length setting is equal to the hair length that will remain after trimming.

7 Turn off Groomer (fig. 4). Rinse the comb clean after each use.

