


在以下网站注册并获得支持  
www.philips.com.cn/welcome

BHS378

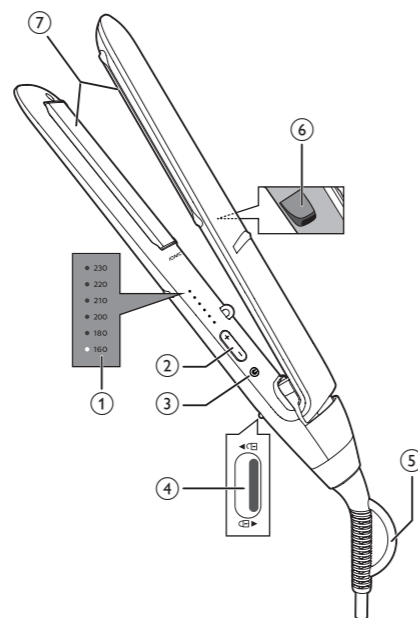

EN User manual      ZH-CN 用户手册

**PHILIPS**

**PHILIPS**

产品 : 飞利浦直发器  
型号 : BHS378  
额定电压 : 220V~  
额定频率 : 50Hz  
额定输入功率 : 55 W  
生产日期 : 请见产品本体  
产地 : 中国广东中山



飞利浦（中国）投资有限公司  
上海市静安区灵石路718号A1幢  
全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005,  
GB4706.15-2008, GB4343.1-2018  
及GB17625.1-2012制造

© 2019 Koninklijke Philips N.V.  
保留所有权利

3000 026 57421



**English**

Congratulations on your purchase, and welcome to Philips!  
To fully benefit from the support that Philips offers, register  
your product at www.philips.com/welcome.

**1 Important**

Read this user manual carefully before you use the  
appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



- Always unplug the appliance after use.
- If the main cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the main cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.
- Avoid the main cord from coming into contact with the hot parts of the appliance.

- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair.
- Do not operate the appliance with wet hands.
- Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- The heating plates have coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.
- Do not insert metal objects into the ionizer outlet to avoid electric shock.

**Electromagnetic fields (EMF)**

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

**Recycling**

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in an official collection point for recycling. By doing this, you help to preserve the environment.



Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

**2 Preparation for use**

- Wash hair with shampoo and conditioner and blow dry it.
- Use heat protection product and comb your hair with large-toothed comb.
- Use the straightener only when your hair is dry.
- Frequent users are recommended to use heat protection products when straightening.
- Ensure that you select a temperature setting that is suitable for your hair. Please refer to the below table. Always select a lower setting when you use the straightener for the first time.

Hair Type	Temperature Setting
Thick	210° - 230°
Normal	180° - 200°
Fine	160°

**3 Straighten your hair**

- 1 Connect the plug to a power supply socket.
- 2 Slide the closing lock (④) to unlock the appliance.
- 3 Press and hold the ⏻ (③) button until the LED light (①) lights up and starts blinking.
  - ↳ The ion function activates when the appliance is switched on. The function provides additional shine and reduces frizz. When the function is on, a special odor may be smelt and a sizzling sound may be heard, which is normal and caused by the ions that are generated (⑥).
- 4 Press + or - (②) to select a suitable temperature setting for your hair.
  - ↳ When the appliance is heating up to the selected temperature, the LED light next to the temperature setting will continue to blink until it is ready for use.
  - ↳ After about 30 seconds, the appliance is heated up and ready for use.
- 5 Comb your hair and take a section that is not wider than 5cm for straightening.
 

**Note:** For thicker hair, it is suggested to create more sections.
- 6 Place it between the straightening plates (⑦) and press the handles firmly together.
- 7 Slide the straightener down the length of the hair slowly in a single motion (max. 5 seconds) from root to end, without stopping to prevent overheating.
  - To create flicks, turn the straightener half-circle inwards (or outwards) when it reaches the hair ends and let the hair glide off the plates.
- 8 To straighten the rest of your hair, repeat steps 5 to 7.
 

**Note:** The appliance is equipped with an auto-shut off function. After 60 minutes, the appliance switches off automatically.

#### After use:

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down.
- 3 Clean the appliance and straightening plates by damp cloth.
- 4 Lock the straightening plates (④).
- 5 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (⑤).

## 4 Guarantee and service


If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at [www.philips.com/support](http://www.philips.com/support) or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

### 简体中文

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 [www.philips.com.cn/welcome](http://www.philips.com.cn/welcome) 上注册您的产品。

## 1 重要事项

使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。

- **警告：**请勿在靠近水的地方使用本产品。
- 本产品在内浴室使用时，使用后拔下插头，因为即使本产品开关断开后，接近水仍存在危险。
- **警告：**不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- **警告符号注释：**禁止在洗澡或淋浴时使用 
- 使用后务必拔下产品的插头。
- 如果电源线损坏，为避免危险，必须由飞利浦、飞利浦授权的服务中心或类似的专业技术人员进行更换。
- 本产品适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神

上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。不得让儿童玩耍本产品。不要让儿童在无人监督的情况下进行清洁和保养。

- 为了增加保护，建议在浴室供电的电气回路中安装一个额定剩余工作电流不超过 30mA 的剩余电流装置 (RCD)。详情请向 RCD 安装商咨询。
- 使用后请勿拉扯电源线。拔下产品插头时，请握紧插头。
- 注意烫伤。请勿让儿童在产品使用中，或冷却时接触产品。
- 连接产品之前，请确保产品上标示的电压与当地电源电压相符。
- 请勿将本产品用于本手册中说明以外的任何其它用途。
- 请勿对假发使用本产品。
- 当产品连接了电源时，切勿让其无人看管。
- 切勿使用由其他制造商生产的，或未经飞利浦特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。
- 切勿将电源线缠绕在产品上。
- 待产品完全冷却后再存放。
- 由于产品会很烫，请在使用时多加注意。只能握住手柄，因为其他部位会很烫，并且避免与皮肤接触。
- 始终将本产品放置在隔热的平稳表面上。热加热板不得接触表面或其他可燃材料。
- 不要让电源线接触到产品的灼热部分。
- 如果产品已打开，请使产品远离易燃物体和材料。

- 当产品变热时切勿在其表面覆盖任何物品（如毛巾或衣服）。
- 产品只能用于干的头发。
- 切勿用湿手操作本产品。
- 保持加热板洁净无尘且未粘上定型产品（如摩丝、定型喷剂和发胶）。切勿将本产品与定型产品结合使用。
- 加热板上涂有涂层。此涂层可能会随着时间的推移慢慢磨损。但是，这并不影响产品的性能。
- 产品只能送到飞利浦授权的服务中心检修。由不合格人员进行修理可能将用户置于极度危险的境地。
- 切勿将金属物体插入离子发生器出风口，以免触电。

## 电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

## 回收

- 弃置产品时，请不要将它与一般生活垃圾一同丢弃，应将其交给官方指定的回收中心。这样做有利于环保。
- 请遵循您所在国家/地区的电器及电子产品分类回收规定。正确弃置产品有助于避免对环境和人类健康造成负面影响。

## 2 使用准备

- 用洗发水和护发素洗净头发并将其吹干。
- 使用防热护发产品，并用大齿梳梳理您的头发。
- 仅在干发上使用直发器。
- 建议频繁使用者在拉直头发前使用防热护发产品。

- 确保选择适合您发质的温度设定。请参阅下表。首次使用直发器时应始终选择较低的温度设定。

发质类型	温度设定
粗硬	210° - 230°
普通	180° - 200°
细软	160°

## 3 拉直头发

- 1 将插头连接至电源插座。
- 2 滑动锁扣 (④) 将产品解锁。
- 3 按住 ⏻ (③) 按钮，直到 LED 指示灯 (①) 亮起且开始闪烁。
  - ↳ 负离子功能将在产品启动之时激活。此功能可令秀发更加闪亮、顺滑。该功能打开时，可能会发出一种特殊的气味和滋滋的声音，这是正常现象，由所产生的负离子导致 (⑥)。
- 4 按 + 或 - (②) 选择适合您发质的温度设定。
  - ↳ 当产品加热到选定温度时，温度设定旁边的 LED 指示灯将继续闪烁，直到可以使用。
  - ↳ 大约 30 秒后，产品加热完成且可以使用。
- 5 梳理头发，取一绺宽度不超过 5 厘米的头发进行拉直。
  - **注意：对于较浓密的头发，建议将头发分为更多发绺。**
- 6 将头发置于直发夹板之间 (⑦)，然后用力将手柄按拢。
- 7 从发根至发梢，将直发器顺着头发缓慢往下拉（不要超过 5 秒钟），动作要流畅，不要停顿，以免过热灼伤头发。
  - 要打造发梢造型，当直发器接触到发梢时，向内侧（或外侧）卷半圈，以让头发从夹板上滑落。

- 8 要拉直头发的其余部分，重复步骤 5 至 7 即可。

**注意：**产品配备自动关熄功能。60 分钟后，产品将自动关闭。

### 使用后：

- 1 关闭产品并拔下电源插头。
- 2 将产品置于隔热表面上，直至其冷却。
- 3 用湿布清洁本产品和直发夹板。
- 4 锁定直发夹板 (④)。
- 5 将产品存放在安全、干燥、清洁的位置。您也可以使用挂环 (⑤) 将产品挂起存放。

## 4 保修与服务

如果您需要了解信息（如更换附件的相关信息）或有任何疑问，请访问飞利浦网站 [www.philips.com.cn/support](http://www.philips.com.cn/support)。您也可以与您所在地的飞利浦客户服务中心联系（可从保修卡中找到其电话号码）。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。

## 5 故障排除

问题	原因	解决方法
产品完全无法工作。	产品所连接的电源插座可能已损坏。	检查设备已正确插入。 检查您家中电源插座的保险丝。

保留备用

出版日期：2019-06-28

部件名称		有毒有害物质或元素			
		铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)
发热组合 电源线	多溴二苯醚 (PBDE)	○	○	○	○
	多溴联苯 (PBB)	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。  
X：表示该有害物质在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

\*该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。

\*该表格中所显示的“有害物质”及其存在的“有害物质”及回收处理从业者在回收处理过程中提供的相关信息，有助于产品废弃时的妥善处理。