


Register your product and get support at www.philips.com/welcome

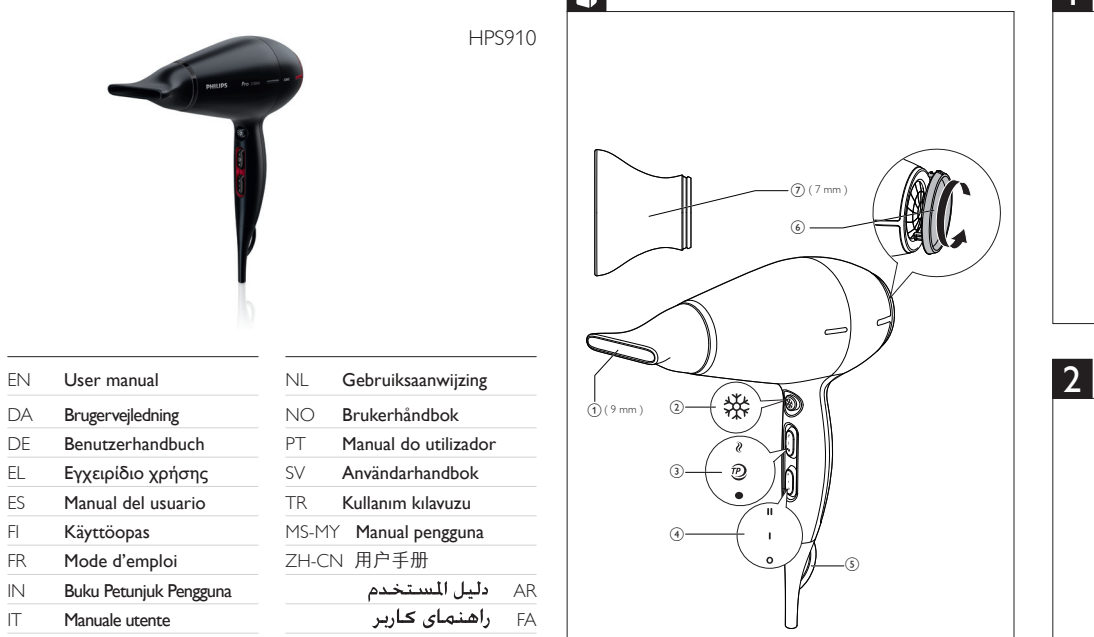

PHILIPS

Specifications are subject to change without notice
© 2014 Koninklijke Philips N.V.
All rights reserved.
3140 035 36003

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important
Read this user manual carefully before you use the appliance and keep it for future reference.
WARNING: Do not use this appliance near water.
When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
Always unplug the appliance after use. If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc. If the mains cord is damaged, it must be replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
Inserting metal objects into the grilles is a hazard and may cause electric shock.
Never connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
Do not use the appliance for any other purpose than described in this manual.
Do not use the appliance on artificial hair.
When the appliance is connected to a power supply, never leave it unattended.
Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your warranty is invalidated.
Do not wind the power cord round the appliance.
Wait until the appliance cooled down completely before you store it.

Electromagnetic fields (EMF)
This Philips appliance complies with applicable standards and regulations regarding exposure to electromagnetic fields.
Environment
Your product is designed and manufactured with high quality materials and components, which are recycled and reused. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.
Please inform yourself about the local separation collection facilities for electrical and electronic products.
Please act according to your local rules and do not dispose of your old product with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

2 Introduction
The Philips Pro range has been developed to offer you the best performance, whilst still taking care of your hair. We have worked together with the world's leading stylists to learn what makes a product professional for consumers and to develop products accordingly. The Philips Pro dryer with 2100W is a 45% faster. The ThermoProtect temperature setting ensures that you care for your hair by using a constant caring temperature when drying your hair. We hope you will enjoy using the Pro dryer for a long time. Via Philips HiPP977

3 Overview
1 Concentrator (3mm)
2 Cold shot button
3 Temperature switch
4 Airflow switch
5 Hanging loop
6 Air inlet grille
7 Concentrator (7mm)
8 Dry your hair

Preparation for your hair:
Wash your hair with shampoo and conditioner, rinse it thoroughly.
Gently towel dry your hair to remove excess moisture.
Blow dry your hair with a wide-toothed comb. Ensure your hair is almost dry and tangle-free.

1 Connect the plug to a power supply socket.
For precise drying, use the concentrator (C) or (D) onto the hair dryer.
2 Adjust the temperature switch (3) and airflow switch (4) to the desired position. Press and hold the Cold Shot button (C) for cold airflow to your style.

Switch Setting Function
Temperature Hot Dryer-shove wet hair quickly
Thermoprotect Gently dry your hair at a constant caring temperature
Cool Care Gently dry your hair with cool air to seal in shine
Airflow Strong airflow for fast drying touch
Concentrator 1 Gently airflow for styling thin hair
Switch off

When the appliance is powered on, ions are automatically and continuously dispersed, reducing frizz and providing additional shine.
To straighten your hair (Fig. 1)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result.
3 When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.


To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

To enjoy lasting results, press and hold the Cold Shot button (C) to style your hair.
To dry the hair, the bigger the section of hair you can reach with the faster you will be able to blow-dry your hair.
To create flicks (Fig. 2)
1 section your hair and clip the hair away. Begin from the bottom of your hair and dry one section at a time.
2 Using a round brush, move the concentrator along the hair from the ends to the roots with full tension for the best result. When the roots are dry, start drying in the middle portion. Twist the brush and brush away from the roots to maintain tension. Tips: The hair dryer should always point down while drying your hair. You may lean forward when brushing your hair to prevent fatigue. Repeat steps 1-3 to straighten the rest of your hair until it is completely dry.

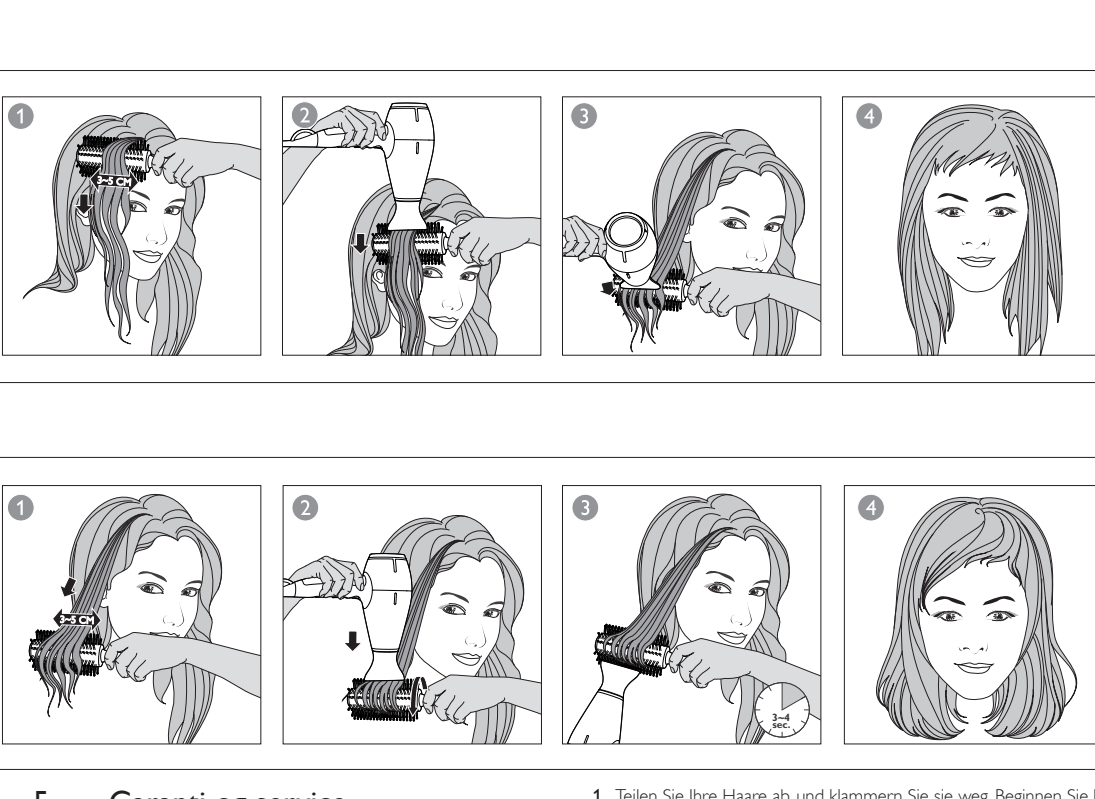

5 Garantie et service
Hvis du har behov for oplysninger f.eks. om udskiftning af tilbehør, eller har et problem, kan du besøge Philips' websted på www.philips.com eller kontakte Philips Customer Centre i dit land (se telefonnumre i afsnittet "Hvad skal jeg gøre, hvis der opstår et problem?"). Hvis du har købt din Philips-produkt i et andet land, bedes du kontakte din lokale Philips-forhandler.
Deutsch
Herzlichen Glückwunsch zu Ihrem Kauf und willkommen bei Philips! Um das Kundendienstangebot von Philips vollständig nutzen zu können, sollten Sie bei Problemen das Philips-Kundendienst-Webseite registrieren.
Dansk
Tillykke med dit køb, og velkommen til Philips! Hvis du vil have fuld udbytte af det support, som Philips tilbyder, kan du registrere dit produkt på www.philips.com/welcome.

1 Vigtigt
Læs denne brugsvejledning grundigt, før du tager apparat i brug, og behold den til senere reference.
ADVARSEL: Anvend ikke dette apparat i nærheden af vand.
Hvis du anvender apparatet i badeværelset, skal du trække stikket ud efter brug, da vand udgør en risiko, selvom apparatet er slukket.
ADVARSEL: Brug ikke dette apparat i nærheden af badekar, brusekabine, kummer eller andre kar, der indeholder vand.
Tag altid stikket ud, efter du har brugt apparatet.
Hvis apparatet bliver overophedet, slukker det automatisk. Tag stikket ud af stikkontakten, og lad apparatet afkøle i et par minutter. Før du tænder apparatet igen, skal du kontrollere gitterne for at sikre, at de ikke er blokeret af frug, hår osv.
Hvis ledningen beskadiges, må den kun udskiftes af Philips, et autoriseret Philips-serviceværksted eller af en kvalificeret fagmand for at undgå enhver risiko ved efterfølgende brug.
Dette apparat kan bruges af børn fra 8 år og opfejer og personer med reducerede fysiske, sensoriske eller mentale evner eller manglende erfaring og/eller viden, hvis de er blevet instrueret i sikker brug af apparatet og forstår de medfølgende risici. Lad ikke børn lege med apparatet. Rengøring og vedligeholdelse må ikke foretages af børn uden opsyn.
Som en ekstra sikkerhedsforanstaltning anbefales det, at installationen til badeværelset er forsynet med et HFI-leads, der ikke overstiger 30mA. Kontakt eventuelt en el-installatør.
Indføring af metalgenstande i luftgitterne er farligt og kan forårsage elektrisk stød.
Blokér aldrig luftgitterne.
Før du tilsætter apparatet, skal du sikre dig, at den spænding, der er angivet på apparatet, svarer til den lokale spænding.
Brug aldrig apparatet til andre formål end dem, der er beskrevet i vejledningen.
Brug ikke apparatet på kunstigt hår.
Hold konstant opsyn med apparatet, når det er sluttet til en strømkilde.
Brug aldrig tilbehør eller dele fra andre fabrikater eller tilbehør/dele, som ikke specifikt er anbefalet af Philips. Hvis du anvender en sådan type tilbehør eller dele, annulleres garantien.
Undgå at vikle strømledningen rundt om apparatet.
Læg aldrig apparatet væk, før det er helt afkølet.

Guarantee and service
If you need information or advice replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Centre in your country (you find its phone number in the worldwide guarantee list). If there is no Consumer Care Centre in your country go to your local Philips dealer.
Dansk
Tillykke med dit køb, og velkommen til Philips! Hvis du vil have fuld udbytte af det support, som Philips tilbyder, kan du registrere dit produkt på www.philips.com/welcome.

1 Vigtigt
Læs denne brugsvejledning grundigt, før du tager apparat i brug, og behold den til senere reference.
ADVARSEL: Anvend ikke dette apparat i nærheden af vand.
Hvis du anvender apparatet i badeværelset, skal du trække stikket ud efter brug, da vand udgør en risiko, selvom apparatet er slukket.
ADVARSEL: Brug ikke dette apparat i nærheden af badekar, brusekabine, kummer eller andre kar, der indeholder vand.
Tag altid stikket ud, efter du har brugt apparatet.
Hvis apparatet bliver overophedet, slukker det automatisk. Tag stikket ud af stikkontakten, og lad apparatet afkøle i et par minutter. Før du tænder apparatet igen, skal du kontrollere gitterne for at sikre, at de ikke er blokeret af frug, hår osv.
Hvis ledningen beskadiges, må den kun udskiftes af Philips, et autoriseret Philips-serviceværksted eller af en kvalificeret fagmand for at undgå enhver risiko ved efterfølgende brug.
Dette apparat kan bruges af børn fra 8 år og opfejer og personer med reducerede fysiske, sensoriske eller mentale evner eller manglende erfaring og/eller viden, hvis de er blevet instrueret i sikker brug af apparatet og forstår de medfølgende risici. Lad ikke børn lege med apparatet. Rengøring og vedligeholdelse må ikke foretages af børn uden opsyn.
Som en ekstra sikkerhedsforanstaltning anbefales det, at installationen til badeværelset er forsynet med et HFI-leads, der ikke overstiger 30mA. Kontakt eventuelt en el-installatør.
Indføring af metalgenstande i luftgitterne er farligt og kan forårsage elektrisk stød.
Blokér aldrig luftgitterne.
Før du tilsætter apparatet, skal du sikre dig, at den spænding, der er angivet på apparatet, svarer til den lokale spænding.
Brug aldrig apparatet til andre formål end dem, der er beskrevet i vejledningen.
Brug ikke apparatet på kunstigt hår.
Hold konstant opsyn med apparatet, når det er sluttet til en strømkilde.
Brug aldrig tilbehør eller dele fra andre fabrikater eller tilbehør/dele, som ikke specifikt er anbefalet af Philips. Hvis du anvender en sådan type tilbehør eller dele, annulleres garantien.
Undgå at vikle strømledningen rundt om apparatet.
Læg aldrig apparatet væk, før det er helt afkølet.

Guarantee and service
If you need information or advice replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Centre in your country (you find its phone number in the worldwide guarantee list). If there is no Consumer Care Centre in your country go to your local Philips dealer.
Dansk
Tillykke med dit køb, og velkommen til Philips! Hvis du vil have fuld udbytte af det support, som Philips tilbyder, kan du registrere dit produkt på www.philips.com/welcome.

1 Vigtigt
Læs denne brugsvejledning grundigt, før du tager apparat i brug, og behold den til senere reference.
ADVARSEL: Anvend ikke dette apparat i nærheden af vand.
Hvis du anvender apparatet i badeværelset, skal du trække stikket ud efter brug, da vand udgør en risiko, selvom apparatet er slukket.
ADVARSEL: Brug ikke dette apparat i nærheden af badekar, brusekabine, kummer eller andre kar, der indeholder vand.
Tag altid stikket ud, efter du har brugt apparatet.
Hvis apparatet bliver overophedet, slukker det automatisk. Tag stikket ud af stikkontakten, og lad apparatet afkøle i et par minutter. Før du tænder apparatet igen, skal du kontrollere gitterne for at sikre, at de ikke er blokeret af frug, hår osv.
Hvis ledningen beskadiges, må den kun udskiftes af Philips, et autoriseret Philips-serviceværksted eller af en kvalificeret fagmand for at undgå enhver risiko ved efterfølgende brug.
Dette apparat kan bruges af børn fra 8 år og opfejer og personer med reducerede fysiske, sensoriske eller mentale evner eller manglende erfaring og/eller viden, hvis de er blevet instrueret i sikker brug af apparatet og forstår de medfølgende risici. Lad ikke børn lege med apparatet. Rengøring og vedligeholdelse må ikke foretages af børn uden opsyn.
Som en ekstra sikkerhedsforanstaltning anbefales det, at installationen til badeværelset er forsynet med et HFI-leads, der ikke overstiger 30mA. Kontakt eventuelt en el-installatør.
Indføring af metalgenstande i luftgitterne er farligt og kan forårsage elektrisk stød.
Blokér aldrig luftgitterne.
Før du tilsætter apparatet, skal du sikre dig, at den spænding, der er angivet på apparatet, svarer til den lokale spænding.
Brug aldrig apparatet til andre formål end dem, der er beskrevet i vejledningen.
Brug ikke apparatet på kunstigt hår.
Hold konstant opsyn med apparatet, når det er sluttet til en strømkilde.
Brug aldrig tilbehør eller dele fra andre fabrikater eller tilbehør/dele, som ikke specifikt er anbefalet af Philips. Hvis du anvender en sådan type tilbehør eller dele, annulleres garantien.
Undgå at vikle strømledningen rundt om apparatet.
Læg aldrig apparatet væk, før det er helt afkølet.

Guarantee and service
If you need information or advice replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Centre in your country (you find its phone number in the worldwide guarantee list). If there is no Consumer Care Centre in your country go to your local Philips dealer.
Dansk
Tillykke med dit køb, og velkommen til Philips! Hvis du vil have fuld udbytte af det support, som Philips tilbyder, kan du registrere dit produkt på www.philips.com/welcome.

1 Vigtigt
Læs denne brugsvejledning grundigt, før du tager apparat i brug, og behold den til senere reference.
ADVARSEL: Anvend ikke dette apparat i nærheden af vand.
Hvis du anvender apparatet i badeværelset, skal du trække stikket ud efter brug, da vand udgør en risiko, selvom apparatet er slukket.
ADVARSEL: Brug ikke dette apparat i nærheden af badekar, brusekabine, kummer eller andre kar, der indeholder vand.
Tag altid stikket ud, efter du har brugt apparatet.
Hvis apparatet bliver overophedet, slukker det automatisk. Tag stikket ud af stikkontakten, og lad apparatet afkøle i et par minutter. Før du tænder apparatet igen, skal du kontrollere gitterne for at sikre, at de ikke er blokeret af frug, hår osv.
Hvis ledningen beskadiges, må den kun udskiftes af Philips, et autoriseret Philips-serviceværksted eller af en kvalificeret fagmand for at undgå enhver risiko ved efterfølgende brug.
Dette apparat kan bruges af børn fra 8 år og opfejer og personer med reducerede fysiske, sensoriske eller mentale evner eller manglende erfaring og/eller viden, hvis de er blevet instrueret i sikker brug af apparatet og forstår de medfølgende risici. Lad ikke børn lege med apparatet. Rengøring og vedligeholdelse må ikke foretages af børn uden opsyn.
Som en ekstra sikkerhedsforanstaltning anbefales det, at installationen til badeværelset er forsynet med et HFI-leads, der ikke overstiger 30mA. Kontakt eventuelt en el-installatør.
Indføring af metalgenstande i luftgitterne er farligt og kan forårsage elektrisk stød.
Blokér aldrig luftgitterne.
Før du tilsætter apparatet, skal du sikre dig, at den spænding, der er angivet på apparatet, svarer til den lokale spænding.
Brug aldrig apparatet til andre formål end dem, der er beskrevet i vejledningen.
Brug ikke apparatet på kunstigt hår.
Hold konstant opsyn med apparatet, når det er sluttet til en strømkilde.
Brug aldrig tilbehør eller dele fra andre fabrikater eller tilbehør/dele, som ikke specifikt er anbefalet af Philips. Hvis du anvender en sådan type tilbehør eller dele, annulleres garantien.
Undgå at vikle strømledningen rundt om apparatet.
Læg aldrig apparatet væk, før det er helt afkølet.

Guarantee and service
If you need information or advice replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Centre in your country (you find its phone number in the worldwide guarantee list). If there is no Consumer Care Centre in your country go to your local Philips dealer.
Dansk
Tillykke med dit køb, og velkommen til Philips! Hvis du vil have fuld udbytte af det support, som Philips tilbyder, kan du registrere dit produkt på www.philips.com/welcome.

1 Vigtigt
Læs denne brugsvejledning grundigt, før du tager apparat i brug, og behold den til senere reference.
ADVARSEL: Anvend ikke dette apparat i nærheden af vand.
Hvis du anvender apparatet i badeværelset, skal du trække stikket ud efter brug, da vand udgør en risiko, selvom apparatet er slukket.
ADVARSEL: Brug ikke dette apparat i nærheden af badekar, brusekabine, kummer eller andre kar, der indeholder vand.
Tag altid stikket ud, efter du har brugt apparatet.
Hvis apparatet bliver overophedet, slukker det automatisk. Tag stikket ud af stikkontakten, og lad apparatet afkøle i et par minutter. Før du tænder apparatet igen, skal du kontrollere gitterne for at sikre, at de ikke er blokeret af frug, hår osv.
Hvis ledningen beskadiges, må den kun udskiftes af Philips, et autoriseret Philips-serviceværksted eller af en kvalificeret fagmand for at undgå enhver risiko ved efterfølgende brug.
Dette apparat kan bruges af børn fra 8 år og opfejer og personer med reducerede fysiske, sensoriske eller mentale evner eller manglende erfaring og/eller viden, hvis de er blevet instrueret i sikker brug af apparatet og forstår de medfølgende risici. Lad ikke børn lege med apparatet. Rengøring og vedligeholdelse må ikke foretages af børn uden opsyn.
Som en ekstra sikkerhedsforanstaltning anbefales det, at installationen til badeværelset er forsynet med et HFI-leads, der ikke overstiger 30mA. Kontakt eventuelt en el-installatør.
Indføring af metalgenstande i luftgitterne er farligt og kan forårsage elektrisk stød.
Blokér aldrig luftgitterne.
Før du tilsætter apparatet, skal du sikre dig, at den spænding, der er angivet på apparatet, svarer til den lokale spænding.
Brug aldrig apparatet til andre formål end dem, der er beskrevet i vejledningen.
Brug ikke apparatet på kunstigt hår.
Hold konstant opsyn med apparatet, når det er sluttet til en strømkilde.
Brug aldrig tilbehør eller dele fra andre fabrikater eller tilbehør/dele, som ikke specifikt er anbefalet af Philips. Hvis du anvender en sådan type tilbehør eller dele, annulleres garantien.
Undgå at vikle strømledningen rundt om apparatet.
Læg aldrig apparatet væk, før det er helt afkølet.

Guarantee and service
If you need information or advice replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Centre in your country (you find its phone number in the worldwide guarantee list). If there is no Consumer Care Centre in your country go to your local Philips dealer.
Dansk
Tillykke med dit køb, og velkommen til Philips! Hvis du vil have fuld udbytte af det support, som Philips tilbyder, kan du registrere dit produkt på www.philips.com/welcome.

1 Vigtigt
Læs denne brugsvejledning grundigt, før du tager apparat i brug, og behold den til senere reference.
ADVARSEL: Anvend ikke dette apparat i nærheden af vand.
Hvis du anvender apparatet i badeværelset, skal du trække stikket ud efter brug, da vand udgør en risiko, selvom apparatet er slukket.
ADVARSEL: Brug ikke dette apparat i nærheden af badekar, brusekabine, kummer eller andre kar, der indeholder vand.
Tag altid stikket ud, efter du har brugt apparatet.
Hvis apparatet bliver overophedet, slukker det automatisk. Tag stikket ud af stikkontakten, og lad apparatet afkøle i et par minutter. Før du tænder apparatet igen, skal du kontrollere gitterne for at sikre, at de ikke er blokeret af frug, hår osv.
Hvis ledningen beskadiges, må den kun udskiftes af Philips, et autoriseret Philips-serviceværksted eller af en kvalificeret fagmand for at undgå enhver risiko ved efterfølgende brug.
Dette apparat kan bruges af børn fra 8 år og opfejer og personer med reducerede fysiske, sensoriske eller mentale evner eller manglende erfaring og/eller viden, hvis de er blevet instrueret i sikker brug af apparatet og forstår de medfølgende risici. Lad ikke børn lege med apparatet. Rengøring og vedligeholdelse må ikke foretages af børn uden opsyn.
Som en ekstra sikkerhedsforanstaltning anbefales det, at installationen til badeværelset er forsynet med et HFI-leads, der ikke overstiger 30mA. Kontakt eventuelt en el-installatør.
Indføring af metalgenstande i luftgitterne er farligt og kan forårsage elektrisk stød.
Blokér aldrig luftgitterne.
Før du tilsætter apparatet, skal du sikre dig, at den spænding, der er angivet på apparatet, svarer til den lokale spænding.
Brug aldrig apparatet til andre formål end dem, der er beskrevet i vejledningen.
Brug ikke apparatet på kunstigt hår.
Hold konstant opsyn med apparatet, når det er sluttet til en strømkilde.
Brug aldrig tilbehør eller dele fra andre fabrikater eller tilbehør/dele, som ikke specifikt er anbefalet af Philips. Hvis du anvender en sådan type tilbehør eller dele, annulleres garantien.
Undgå at vikle strømledningen rundt om apparatet.
Læg aldrig apparatet væk, før det er helt afkølet.

Guarantee and service
If you need information or advice replacement of an attachment or if you have a problem, please visit the Philips website at [www.philips.com</](http://www.philips.com)

