

PHILIPS
NORELCO

AXE



XA525

*Rechargeable Cordless
Shave Toolkit*

BC

Always here to help you

Register your product and get support at
www.norelco.com/register

Questions?
Contact
Philips
Norelco

ENGLISH 4

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at www.norelco.com/register

XA525

IMPORTANT SAFETY INSTRUCTIONS

When using an electric appliance, basic precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a corded appliance that has fallen into water. Unplug immediately.
2. Power plug is not for immersion or for use in shower.
3. Do not use an extension cord with this appliance.
4. Always unplug this appliance from the electrical outlet immediately after use, except when appliance is (re)charging.
5. Unplug and remove power supply cord from appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
2. Use this appliance for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this appliance if it has a damaged cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. For assistance call 1-800-243-3050.
4. Keep the appliance, cord, charging plug and any attachments away from heated surfaces.

5. Never drop or insert any object into any opening.
6. Do not charge or plug in appliance outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not use this appliance with a damaged or broken comb, as facial injury may occur. Always check foil, cutters and trimmer before using. Do not use appliance if foil, cutters or trimmers are damaged as injury may occur.
8. Always attach plug to appliance first, then plug into outlet. Be certain plug is inserted firmly into appliance up to mark indicated on plug. To disconnect, remove charging plug from outlet.
9. Never put the appliance in direct sunlight or store at a temperature above 140°F (60°C).
10. Keep the cord dry at all times. Do not handle with wet hands.
11. Only use the cord provided. To prevent possible damage to the cord, do not wrap cord around the appliance.
12. Only use the power plug and other accessories supplied with the appliance.

SAVE THESE INSTRUCTIONS

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug, as this will cause a hazardous condition.