

Register your product and get support at
www.philips.com/welcome



EN	User manual	NL	Gebruiksaanwijzing
DE	Benutzeranleitung	NO	Brukeranvisning
DA	Brugterhandbùch	PT	Manual do utilizador
EL	Εγχειρίδιο χρήσης	SV	Användarhandbok
ES	Manual del usuario	TR	Kullanım kılavuzu
FI	Käyttöopas	مل	دليل المستخدم
FR	Manuel d'emploi	فارسی	راهنمای کاربر
IT	Manuale utente		

Philips

Specifications are subject to change without notice
© 2015 Koninklijke Philips N.V.
All rights reserved.

3140 035 28186

English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

• **WARNING:** Do not use this appliance near water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

• **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• Always unplug the appliance after use.

• If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

• Do not use the appliance for any other purpose than described in this manual.

• When the appliance is connected to the power, never leave it unattended.

• Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

• Do not wind the mains cord round the appliance.

• Wait until the appliance has cooled down before you store it.

• Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.

• Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot barrel should never touch the surface or other flammable material.

• Avoid the mains cord from coming into contact with the hot parts of the appliance.

• Keep the appliance away from flammable objects and material when it is switched on.

• Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

• Only use the appliance on dry hair. Do not operate the appliance with wet hands.

• Keep the barrel clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.

• The barrel has ceramic coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

• If the appliance is used on color-treated hair, the barrel may be stained. Before using it on artificial hair, always consult their distributor.

• Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

• Do not insert metal objects into openings to avoid electric shock.

• Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

 
• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

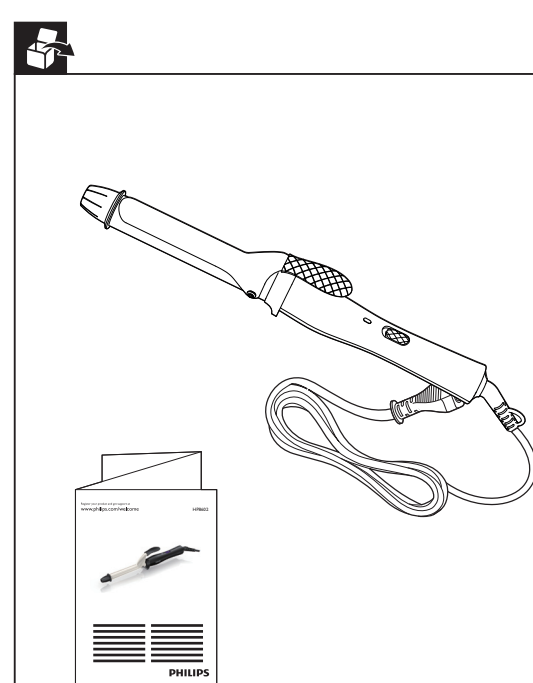

4 Close the clip (1) by releasing the lever (2) and slide the barrel (3) to the hair tip.

5 Hold the handle (4) of the curling iron, and then wind the section of hair around the barrel from tip to root by rotating the curler. You can also use the cool tip (5) as a support when you rotate the curler.

6 Hold the curling iron in the position for about 10 seconds.

7 Unwind the section of hair until you can open the clip (1) again with the lever (2).

8 Release the curled hair. To cut the rest of your hair repeat steps 3 to 8. You may curl your hair either from inside out or from outside in as you like.

9 After use:

1 Switch off the appliance and unplug it.

2 Place it on the resting stand (1) until it cools down. It is highly recommended to place it on a heat-resistant surface.

3 Remove hair and clean the barrel and clip.

4 Clean the barrel and the clip with damp cloth.

5 Keep it in a safe and dry place. Free of dust; you can also hang it with the hanging loop (6).

6 Specifications are subject to change without notice

© 2015 Koninklijke Philips N.V.
All rights reserved.

3140 035 28186

English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

• **WARNING:** Do not use this appliance near water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

• **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• Always unplug the appliance after use.

• If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

• Do not use the appliance for any other purpose than described in this manual.

• When the appliance is connected to the power, never leave it unattended.

• Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

• Do not wind the mains cord round the appliance.

• Wait until the appliance has cooled down before you store it.

• Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.

• Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot barrel should never touch the surface or other flammable material.

• Avoid the mains cord from coming into contact with the hot parts of the appliance.

• Keep the appliance away from flammable objects and material when it is switched on.

• Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

• Only use the appliance on dry hair. Do not operate the appliance with wet hands.

• Keep the barrel clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.

• The barrel has ceramic coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

• If the appliance is used on color-treated hair, the barrel may be stained. Before using it on artificial hair, always consult their distributor.

• Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

• Do not insert metal objects into openings to avoid electric shock.

• Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

 
• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

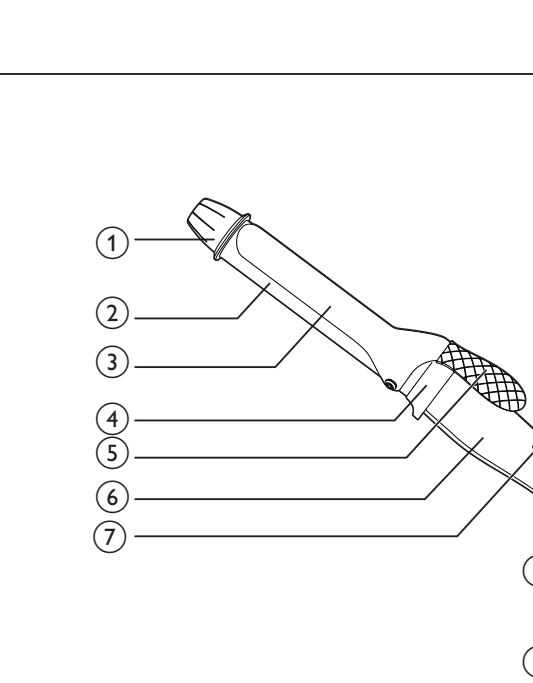

4 Close the clip (1) by releasing the lever (2) and slide the barrel (3) to the hair tip.

5 Hold the handle (4) of the curling iron, and then wind the section of hair around the barrel from tip to root by rotating the curler. You can also use the cool tip (5) as a support when you rotate the curler.

6 Hold the curling iron in the position for about 10 seconds.

7 Unwind the section of hair until you can open the clip (1) again with the lever (2).

8 Release the curled hair. To cut the rest of your hair repeat steps 3 to 8. You may curl your hair either from inside out or from outside in as you like.

9 After use:

1 Switch off the appliance and unplug it.

2 Place it on the resting stand (1) until it cools down. It is highly recommended to place it on a heat-resistant surface.

3 Remove hair and clean the barrel and clip.

4 Clean the barrel and the clip with damp cloth.

5 Keep it in a safe and dry place. Free of dust; you can also hang it with the hanging loop (6).

6 Specifications are subject to change without notice

© 2015 Koninklijke Philips N.V.
All rights reserved.

3140 035 28186

English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

• **WARNING:** Do not use this appliance near water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

• **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• Always unplug the appliance after use.

• If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

• Do not use the appliance for any other purpose than described in this manual.

• When the appliance is connected to the power, never leave it unattended.

• Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

• Do not wind the mains cord round the appliance.

• Wait until the appliance has cooled down before you store it.

• Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.

• Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot barrel should never touch the surface or other flammable material.

• Avoid the mains cord from coming into contact with the hot parts of the appliance.

• Keep the appliance away from flammable objects and material when it is switched on.

• Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

• Only use the appliance on dry hair. Do not operate the appliance with wet hands.

• Keep the barrel clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.

• The barrel has ceramic coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

• If the appliance is used on color-treated hair, the barrel may be stained. Before using it on artificial hair, always consult their distributor.

• Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

• Do not insert metal objects into openings to avoid electric shock.

• Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

 
• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

• Do not use the appliance on wet hair.

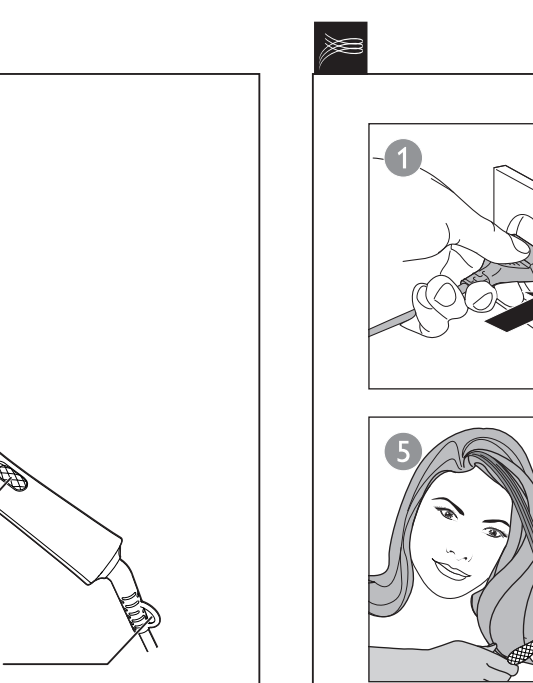

4 Close the clip (1) by releasing the lever (2) and slide the barrel (3) to the hair tip.

5 Hold the handle (4) of the curling iron, and then wind the section of hair around the barrel from tip to root by rotating the curler. You can also use the cool tip (5) as a support when you rotate the curler.

6 Hold the curling iron in the position for about 10 seconds.

7 Unwind the section of hair until you can open the clip (1) again with the lever (2).

8 Release the curled hair. To cut the rest of your hair repeat steps 3 to 8. You may curl your hair either from inside out or from outside in as you like.

9 After use:

1 Switch off the appliance and unplug it.

2 Place it on the resting stand (1) until it cools down. It is highly recommended to place it on a heat-resistant surface.

3 Remove hair and clean the barrel and clip.

4 Clean the barrel and the clip with damp cloth.

5 Keep it in a safe and dry place. Free of dust; you can also hang it with the hanging loop (6).

6 Specifications are subject

