

12) 保証とアフターサービス

保証書と修理サービスについて（必ずお読みください。）

（保証書・表面左側に付属）

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電アダプタ（別）、ツープロック用コム、ショートコム、ロングコム、スキ刈りコム、クリーニングブラシ、収納ポーチ、取扱ケーブ、カッターバリ、カッターコムを除く）

【補修用性能部品の保有期間】

- 補修用性能部品の保有期間は製造打ち切り後 6 年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

- 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって製品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。
- 製品の在庫がなくなった場合には、保有期間内でも修理できないことがあります。

【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。（同シリーズ製品の取り扱いがある国に限ります）

- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。

- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN The Netherlands Fax: +31 51 259 2781

【お客様の個人情報のお取り扱いについて】

- お受けましたお客様の個人情報、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「プライバシー」に関する通知」に基づき適切に管理いたします。

便利メモ					
お買い上げ日	年	月	日		
お買い上げ店名	TEL	()		

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感ずる。
- ごく小さい臭いがする。
- 電源コードを動かさずと通電したり、しなかつたりする。
- その他の異常、故障がある。



このような症状の時は、故障や事故防止のため、電源をOFFにし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。

仕様		
品番	HC5690/60	
ハンドル品番	HC5690	
充電アダプタ品番	HQ8505	
本体寸法（高さ×幅×奥行）	188×50×57mm	
質　量	約185g（コム含まず）	
電　源　方　式	充電・交流式（専用充電アダプタ使用）	
定　格　電　圧	AC100-240V、50/60Hz	
充　電　時　間	約1時間	
使　用　時　間	約90分	
使　用　充　電　池	リチウムイオン充電池(Li-ion)	
消　費　電　力	9W	

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン
〒108-8507 東京都港区港南2-13-37 フィリップスビル

14) 無料修理規定

（無料修理規定）

- 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
- 保証期間内に故障して無料修理をお受けになる場合には、フィリップサポートセンターにお問い合わせください。
- ご購入商品の修理に関するご相談は、フィリップサポートセンターにお問い合わせください。
- 保証期間内でも次の場合には有料修理になります。
 - 使用上の誤り及び不当な修理や改造による故障及び損傷。
 - お買い上げ後の輸送、移動、落下等による故障及び損傷。
 - 火災、地震、水害、落雷、その他の天災地災、公害や異常電圧による故障及び損傷。
 - 一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
 - 保証書の提示がない場合。
 - 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者（保証責任者）、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。

 
 
 
 
保証期間経過後の修理についてご不明の場合は、フィリップサポートセンターにお問い合わせください。

※保証期間経過後の修理-補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

※お客様にご記入いただいた個人情報（保証書の控え）は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報、株式会社フィリップスジャパンのホームページ http://www.philips.co.jp/に掲載されている「プライバシー」に関する通知」に基づき適切に管理いたします。

ENGLISH

1

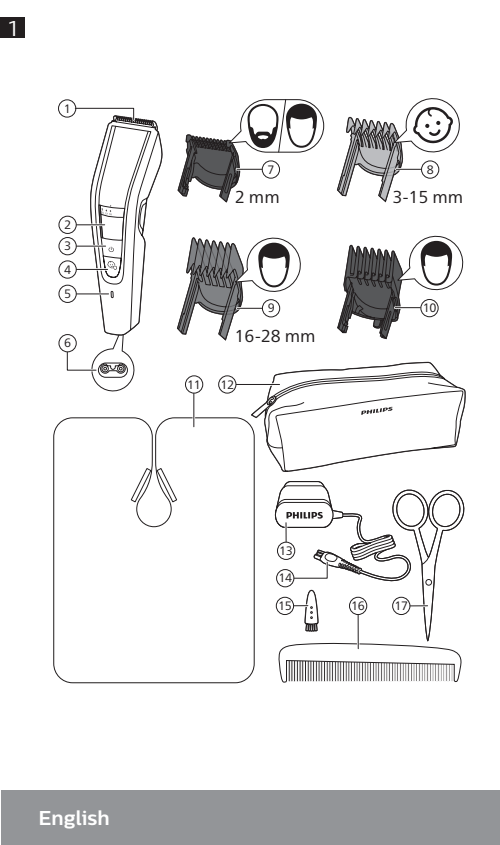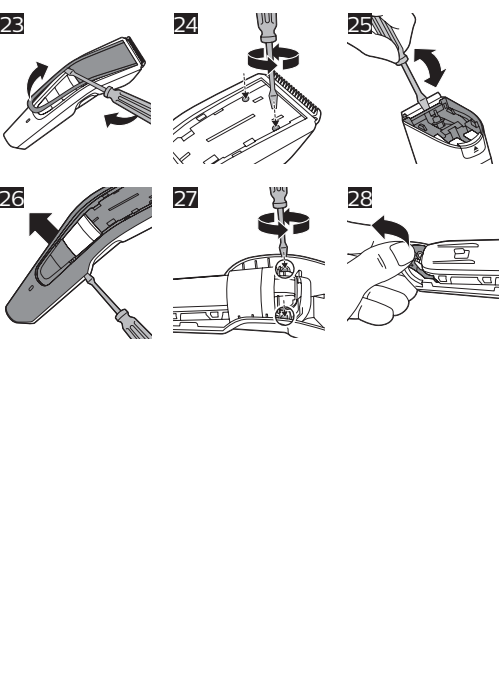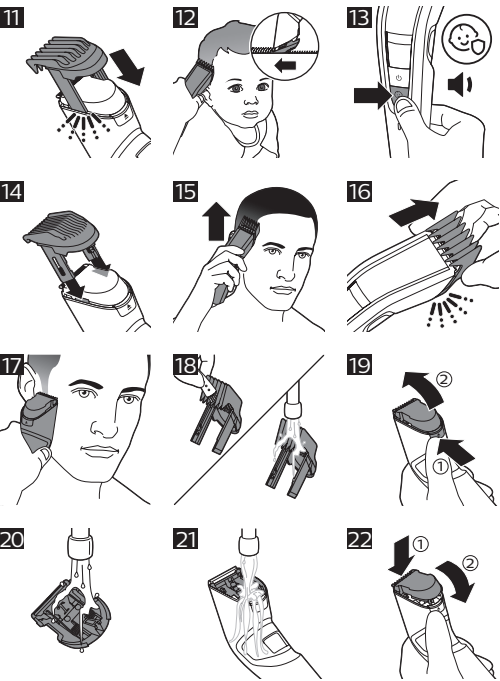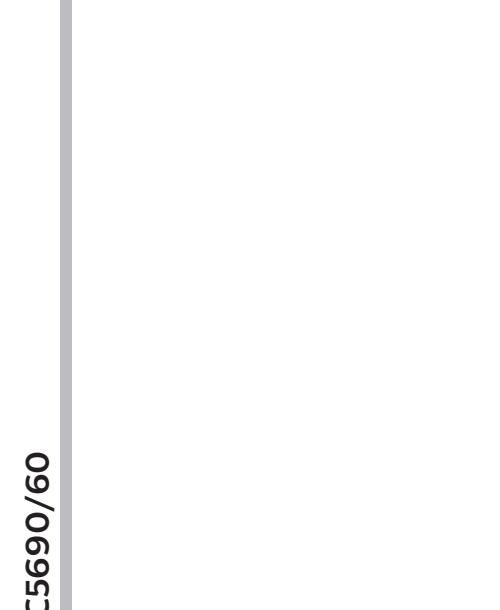

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**.

General description (Fig. 1)

- Cutting unit
- Zoom wheel
- On/off button
- Kids mode
- Charging light
- Socket for small plug
- Stubble comb (2 mm)
- Kids comb (3-15 mm)
- Long comb (16-28 mm)
- Thinning comb
- Cape
- Pouch
- Supply unit
- Small plug
- Small cleaning brush
- Combs
- Scissors

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry (Fig. 2).

Warning

- To charge the battery, only use the detachable supply unit (HQ8505) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the appliance before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- This appliance contains batteries that are non-replaceable.
- Do not open the appliance to replace the rechargeable battery.

Caution

- Do not use the appliance in the bath or shower.
- Never use water hotter than 60 °C to rinse the appliance.
- Only use this appliance for its intended purpose as shown in the user manual.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This appliance can be safely cleaned under the tap (Fig. 3)
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

Charging

Charge the appliance fully before you use it for the first time or if you have not used it for a long time. It takes approximately 1 hour to fully charge the

appliance. When the appliance is fully charged, it has a cordless operating time of up to 90 minutes.

Note: After charging the appliance once fully for the first time, you can also use the appliance directly from the wall socket. Simply connect the appliance to the wall socket.

Charging with the supply unit

- Make sure that the appliance is switched off (Fig. 4)
- Insert the small plug into the appliance and put the supply unit in the wall socket (Fig. 5). When the appliance is charging, the battery status indicator light flashes green (Fig. 6)
- After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Optimizing the lifetime of the rechargeable battery

When you have charged the appliance for the first time, we advise you to use it until the battery is completely empty. Continue to use the appliance until the motor almost stops operating during a session. Then recharge the battery. Follow this procedure at least twice a year.

Using the appliance

The hair length settings are indicated in millimeters. The settings correspond to the remaining hair length after trimming.

Note: Be careful when you trim for the first time. Do not move the trimmer too fast. Make smooth and gentle movements.

Tip: Start trimming at a high length setting and reduce the length setting gradually until you have reached the desired hair length.

The appliance comes with one beard and stubble comb, a thinning comb, a kids comb and one long hair comb.

Note: You can also use the beard and stubble comb to clip your hair.

Trimming with a comb

- Attach a comb to the appliance (Fig. 7)
- Turn the zoom wheel to the desired length setting (Fig. 8)

- Note:** The stubble comb has a fixed length of 2 mm.
- Switch on the appliance (Fig. 4).
- Move the appliance slowly and with light pressure against the direction of hair growth (Fig. 9).

Note: Make sure the flat part of the comb always stays in contact with the skin to obtain an even result (Fig. 10).

- Switch off the appliance and clean the attachment after use.

Trimming with the kids comb

- Attach the kids comb to the appliance (Fig. 11)
- Turn the zoom wheel to the desired length setting (Fig. 8).

Note: When you trim for the first time, start at the highest length setting to familiarize yourself with the appliance.

- Switch on the appliance (Fig. 4).
- Move the appliance slowly and with light pressure against the direction of hair growth (Fig. 12).

Note: Make sure that the flat part of the comb always stays in contact with the skin to obtain an even result (Fig. 10).

- Switch off the appliance and clean the attachment after use.

Kids mode

The appliance is equipped with a kids mode to provide a gentler trimming experience for children. During trimming, you can activate the kids mode to lower the rotation speed of the trimmer for a quieter trim.

- To activate the kids mode, press the kids mode button once (Fig. 13).
- To deactivate the kids mode, press the kids mode button again.

Using the thinning comb

Use the thinning comb to thin out your hair.

- Attach the thinning comb to the appliance (Fig. 14)
- Switch on the appliance (Fig. 4)
- Move the comb from the root to the hair end to create a layered effect (Fig. 15)
- Switch off the appliance and clean the attachment after use.

Trimming without comb

Use the trimmer without a comb to trim hair close to the skin (0.5 mm) or to contour the neckline and sideburns.

Be careful when you trim without a comb because the cutting unit removes every hair it touches.

- Pull the comb off the appliance (Fig. 16)
- Switch on the appliance.
- Touch the hair lightly with the cutting unit. Make well-controlled movements (Fig. 17).
- Switch off and clean the appliance after each use.

Cleaning

Warning: Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- Make sure that the appliance is switched off and disconnected from the wall socket.
- Wipe the housing of the appliance with a dry cloth.
- Remove the comb (Fig. 16) and clean it with the cleaning brush and/or rinse it under the tap (Fig. 18).
- Press the release button. The cutting unit comes off the appliance (Fig. 19).
- Clean the cutting unit with the cleaning brush and/or rinse it under the tap (Fig. 20).

- Clean the inside of the appliance with the brush and/or rinse it under the tap (Fig. 21).
- Carefully shake off excess water and let all parts air dry completely.
- Insert the lug of the cutting unit into the guiding slot and push the cutting unit back onto the appliance (Fig. 22).

Storage

Store the appliance in the pouch supplied.

Note: Make sure the appliance is dry before you store it in the pouch.

Replacement

Only replace a worn or damaged cutting unit with an original Philips cutting unit, available from authorized Philips service centers.

- Press the release button. The cutting unit comes off the appliance (Fig. 19).
- Insert the lug of the new cutting unit into the guiding slot and push the cutting unit onto the appliance (Fig. 22).

Ordering accessories

To buy accessories or spare parts, visit **www.philips.com/parts-and-accessories** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

The battery must be removed from the appliance before it is scrapped.

- Disconnect the appliance from the wall socket and let the appliance operate until the motor stops.
- Insert a flathead screwdriver between the zoom wheel and bezel. Tilt the handle of the screwdriver to remove the bezel and top panel (Fig. 23)
- Use a flathead screwdriver to remove the two screws in the front panel (Fig. 24)
- Insert a flathead screwdriver into the slots between the front and back panel. Tilt the handle of the screwdriver to separate the front and back panels (Fig. 25).
- Continue this step along the edge of the front panel to separate the front panel from the back panel (Fig. 26).
- Use a flathead screwdriver to remove the two screws next to the zoom wheel (Fig. 27).
- Release the inner body by pulling on the area around the socket for the small plug, and remove the inner body from the back panel (Fig. 28).
- Turn the zoom wheel and slide off the back of the appliance (Fig. 29).
- Break the eight snap hooks and remove the cover of the inner body (Fig. 30).
- Remove the printed circuit board with a flathead screwdriver (Fig. 31).
- Cut the wires connecting the printed circuit board to the batteries, and then remove the batteries (Fig. 32).

Danger: Do not connect the appliance to the wall socket again after you have opened the appliance.

Warranty and support

If you need information or support, please visit **www.philips.com/support** or read the international warranty leaflet.

Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The appliance produces an uneven cutting result.	The comb does not touch the skin when you move the appliance through the hair.	Make sure the comb is always fully in contact with the skin when you move the appliance through the hair.

	You only move the appliance in one direction.	Because not all hairs grow in the same direction, move the appliance in different directions (upwards, downwards and across).
--	---	---

	The setting of the comb has changed during trimming.	Check the setting of the comb. If you push the appliance too hard onto the scalp, you may accidentally change the setting of the comb.
--	--	--

	The comb is not assembled correctly.	Detach the comb and reattach it.
--	--------------------------------------	----------------------------------

	The cutting performance decreases when the cutting unit and the comb are dirty.	Clean the cutting unit and the comb (see 'Cleaning').
--	---	---

The appliance does not work when I switch it on.	The rechargeable battery is empty.	Charge the appliance. Make sure that the small plug is inserted into the appliance properly and the supply unit is connected to the wall socket properly.
--	------------------------------------	---