
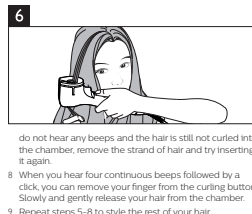
 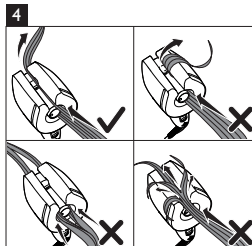



HP5940

Hair Style	Wavy curls	Loose curls	Tight curls
Temperature setting	170°C	190°C	210°C
Curling time setting	8s	10s	12s

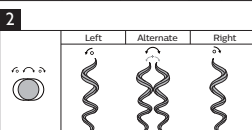

8 When you hear four continuous beeps followed by a click, you can remove your finger from the curling button. Slowly and gently release your hair from the chamber.

9 Repeat steps 5-8 to style the rest of your hair.

4 Tips and Tricks

- If hair becomes trapped, check that the appliance is turned off and gently remove the trapped hair by pulling it out of the curls, section by section, until all the hair has been freed.
- Comb hair thoroughly. Ensure there are no tangles before curling.
- Separate hair into sections. Keep all unused hair away from the opening of the curling chamber.
- To prevent tangles, use an amount of hair which fits within the opening of the hair sectioning accessory.
- Start curling from the back of the head.
- (Fig. 4) Make sure that no stray or loose strands are near the opening of the curling chamber.
- Twist the hair once to make it easier to put it into the opening of the curling chamber.
- Use the contours of the opening to guide it into the chamber.
- Place the opening against the hair where you want the curls to start. Do not touch the hair with your hand.
- Hold the strands of hair taut when inserting them into the opening of the curling chamber.
- The heating time is indicated by the blinking of the power-on indicator. The appliance is ready for use when the indicator stays stable.
- Use a smaller amount of hair for longer hair lengths and/or to get more defined curls.
- To achieve different types of curls and looks, change the temperature settings, time settings and/or the rotation direction. (Fig. 1 & Fig. 2)
- (Fig. 6) If you like your curls to start only at ear level and below, you may also choose to hold the appliance horizontally. Hold your hair taut and in parallel to the opening to ensure easy insertion.
- Note: Make sure its FRONT (same side as the button) is facing you.
- Press and hold the curling button until you hear the continuous beeps followed by a click. If you remove your fingers from the curling button before the final sound indicated, the heat may burn your hair. Remove the hair and start over.
- The appliance intelligently identifies when hair is severely stuck and alerts you with continuous beeps followed by a click. To protect your hair from heat damage, the appliance will automatically turn off.

5 After Use

- 1 Switch off the appliance and unplug it.
 - 2 Place it on a heat-resistant surface until the curling chamber cools down.
 - 3 Keep it in a safe, dry place which is free of dust. You can also hang it with the hanging loop. (Fig. 5)
- Cleaning and Maintenance:**
- 1 Clean the surface of the appliance with a damp cloth.
 - 2 (Fig. 5) Insert the barrel cleaning accessory (A) into the curling chamber. Turn it continuously to remove residues.
 - 3 To clean the cleaning accessory, wash it under running water and leave it to dry completely before using it again.

6 Guarantee & Service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com/support or contact the Philips Customer Care Centre in your country (You will find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

한국어
필립스 제품을 구입해 주셔서 감사드립니다. 제품에 문제가 되는 경우, 지원 혜택을 받으실 수 있도록, 모든 제품용 웰컴 가이드를 www.philips.com/welcome 에서 제품을 등록하십시오.

- #### 1 중요 사항
- 본 제품을 사용하기 전에 이 사용 설명서를 주의 깊게 읽고 내용에 참조할 수 있도록 잘 보관하십시오.
- 경고: 본 제품은 물이 없는 곳에서 사용하십시오.
- 욕실에서 사용할 경우 사용 후에는 반드시 전원 플러그를 뽑으십시오. 전원이 꺼져 있더라도 물에 닿으면 위험할 수 있습니다.
- 경고: 본 제품을 욕조, 샤워기, 대야 또는 기타 물이 있는 용기 근처에서 사용하지 마십시오.
- 사용 후에는 반드시 제품 코드 코드를 뽑으십시오.

- 전원 코드가 손상된 경우, 안전을 위해 서비스 센터 또는 서비스 지점점에 의뢰하여 교체하십시오.
- 8세 이상의 아이들과 신체적인 감각 및 정서적인 능력이 떨어지거나 경험과 지식이 풍부하지 않은 성인이 이 제품을 사용하려면 제품 사용과 관련하여 안전하게 사용할 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받아야 합니다. 어린이가 제품을 가지고 놀지 않도록 하십시오. 어린이가 혼자 제품 청소나 정비를 하지 않도록 하십시오.
- 추가 안전을 위하여 전역 전류 소량 장치(RCD)를 옥실 전원설 설치할 것을 권장합니다. 이 RCD의 정격 전류는 전류는 30mA 이하여야 합니다. 자세한 설치 방법은 전기 설비업체에 문의하십시오.
- 제품에 전원을 연결하기 전에 제품에 표시된 전압과 해당 사용 지역의 전압이 일치하는지 확인하십시오.
- 이 설명서에 나와있는 이외의 용도로 제품을 사용하지 마십시오.
- 제품에 전원을 연결된 상태로 외출하거나 자리를 비우지 마십시오.
- 다른 제조업체에서 만들었거나 필립스에서 판매하지 않은 제품 액세서리 또는 부품은 절대 사용하지 마십시오. 이러한 액세서리나 부품은 사용했을 경우에는 품질 보증이 무효화됩니다.
- 전원 코드를 제품에 감지하십시오.
- 제품이 충분히 식은 다음 보관하십시오.
- 이 제품은 매우 뜨거운 온도 사용 중에 주의해야 합니다. 다른 부위는 뜨거운 수 있으므로 피부에 닿지 않도록 주의하고 손잡이로만 제품을 잡으십시오.
- 항상 제품을 내열성이 높고 평평하며 인공적인 곳에 놓으십시오. 뜨거운 열기 공간이 표면 또는 기타 가열 물질에 닿아서는 안 됩니다.
- 전원 코드가 제품의 뜨거운 부분에 닿지 않도록 주의하십시오.
- 전원을 켜 상태에서 제품을 가열성 물질에 가까이 하지 마십시오.
- 가열된 상태에서 제품을 타월이나 옷 등 어떤 것으로도 덮지 마십시오.
- 모발이 건조한 상태에서만 제품을 사용하십시오. 젖은 머리로 제품을 사용하면 제품이 손상될 수 있습니다.
- 물체는 티타늄 세라믹으로 코팅되어 있습니다. 시간이 지남에 따라 코팅이 조금씩 마모될 수 있습니다. 하지만 이러한 현상은 제품의 성능에 영향을 미치지 않습니다.
- 열에 매우 민감한 제품을 사용하면 물체에 얼룩이 생길 수 있습니다.
- 제품을 건조 모발에 사용하지 마십시오.
- 검사 또는 수리가 필요한 경우에는 항상 필립스 서비스

- 지정점으로 문의하십시오. 비공인업체에서 수리하는 경우 제품 사용자에게 심각한 상황을 초래할 수 있습니다.
- 감전 사고를 막으려면 제품의 모든 어떠한 금속 물질도 삽입하지 마십시오.
- 사용 후 전원 코드를 당기십시오. 항상 플러그를 잡고 제품의 전원 코드를 뽑으십시오.
- 감전 사고가 발생할 수 있으므로 제품을 손상시키지 마십시오.


EMF(전자기장)
이 제품은 EMF(전자기장)와 관련된 모든 기준 및 규정을 준수합니다.

- #### 2 개요
- ① 필링 버튼
 - ② 필링 바
 - ③ 필링 시간 스위치
 - ④ 필링 시간 설정
 - ⑤ 필링 온도 설정
 - ⑥ 전원 표시등
 - ⑦ 전원 버튼
 - ⑧ 필로
 - ⑨ 모발 케어용 액세서리
 - ⑩ 프리이 청소 액세서리

- #### 3 모발 케어
- 사용 방법**
- 1 전원 공급 장치 콘센트에 플러그를 꽂습니다.
 - 2 전원 버튼 (②)을 눌러 제품의 전원을 켭니다.
 - 3 [예]에 있는 전원 표시등의 깜빡임을 통해 표시됩니다 (예) (④) 표시등이 커진 상태로 유지되면 제품을 사용할 준비가 된 것입니다.
 - 3 [위] 또는 [하] 버튼을 눌러 [모]를 선택하십시오 (그룹 1)

모발 스타일	필링 온도 설정	시연/시각 시간	강한 열
온도 설정	170°C	190°C	210°C
필링 시간 설정	8.0s	10.0s	12.0s

 4 [위] 또는 [하] 버튼을 눌러 [모]를 선택하십시오 (그룹 2)




- 5 모발 케어용 액세서리를 사용해 모발의 끝을 감지하십시오. 2-3cm 너비의 머리 가닥으로 감지를 시작하십시오. 이 단계는 코팅이 마모된 액세서리를 사용하지 않습니다. 코팅이 마모되면 필링 버튼이 작동하지 않습니다.
- 6 필링 온도 모달을 눌러 열기 버튼을 누릅니다. 열기가 느껴질 때까지 기다리십시오. 모발 끝이 모발 끝의 끝을 감지하십시오. 머리 가닥을 감지할 공간에 넣을 때 주주의 의도를 지킵니다.
- 7 제품을 머리 가닥을 감지할 때까지 기다리십시오. 필링 버튼 (②)을 눌러 누르면 머리 가닥이 필링 공간에 자동으로 닿아 줄 것입니다.
- 8 모발이 필링 공간에 들어와 열기 버튼을 누르면 강력한 진동이 느껴집니다. 진동을 느끼면 필링 공간에 닿아 줄 것입니다. 다시 눌러 보십시오.
- 9 끝의 소리가 계속해서 진동하는 4번 울리면 필링 버튼에서 손을 떼도록 합니다. 필링 공간에서 전원이 꺼지면 필링 공간에 닿아 줄 것입니다. 다시 눌러 보십시오.
- 10 필링 공간에 닿아 줄 때까지 기다리십시오. 필링 공간에 닿아 줄 때까지 기다리십시오. 필링 공간에 닿아 줄 때까지 기다리십시오. 필링 공간에 닿아 줄 때까지 기다리십시오.
- 11 5-8단계에 반복하여 모발의 나머지 부분을 스타일링하십시오.

4 팁과 요령

- 모발이 커진 경우 제품을 꺼져 있는지 확인하고 꺼져있을 때 모발이 커진 경우를 한 번씩 당겨서 모든 모발을 부드럽게 펴십시오.
- 머리를 건조구 및 빗질해 줄 때 열기 버튼이 작동하지 않습니다.
- 모발이 어떤 부분으로 나뉘는지, 컬링하지 않은 모발이 필링 공간에 닿지 않도록 합니다.
- 열기를 방지하려면 모발 케어용 액세서리를 주주의 의도에 맞게 사용하십시오.
- [위] 또는 [하] 버튼을 눌러 [모]를 선택하십시오. [그룹 1]에 열기 모달을 누르면 [모]가 자동으로 선택됩니다.
- 모발은 한 번 비비면 필링 공간의 주주의 의도를 부드럽게 할 수 있습니다.
- 모발은 필링 공간에 넣을 때 주주의 의도를 부드럽게 할 수 있습니다.
- 모발에서 필을 시작하려면 반대 방향으로 주주의 의도를 부드럽게 할 수 있습니다. [그룹 2]에 열기 모달을 누르면 [모]가 자동으로 선택됩니다.
- 제품을 건조 모발에 사용하지 마십시오.
- 검사 또는 수리가 필요한 경우에는 항상 필립스 서비스

EN	User manual	TH	คู่มือการใช้
KO	사용 설명서	ZH-TW	使用手冊

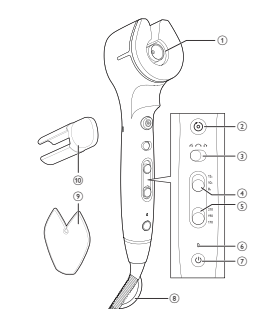

maintenance shall not be made by children without supervision.

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord around the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be hot. Only hold the handle as other parts may be hot and avoid contact with the skin.
- Always place the appliance on a heat-resistant, stable flat surface. The hot curling chamber should never touch the surface or other flammable material.
- Avoid the mains cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.
- The barrel has ceramic titanium coating. This coating

- might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on color-treated hair, the barrel may be stained.
- Do not use the appliance on artificial hair.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.
- Do not insert metal objects into any openings to avoid a electric shock.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.
- Never break the appliance to avoid electric shock.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

2 Overview

- 1 Curling chamber
- 2 Curling button
- 3 Curling time switch
- 4 Curling time setting
- 5 Curling temperature setting
- 6 Power-on indicator
- 7 Power on/off button
- 8 Hanging loop
- 9 Hair sectioning accessory
- 10 Barrel cleaning accessory

3 Curl Your Hair

- How to use:**
- 1 Connect the plug to a power supply socket.
 - 2 Press the power on/off button (⑦) to turn on the appliance.
 - 3 The heating up time is indicated by the blinking power-on indicator (⑥). The appliance is ready for use when the indicator stays stable.
 - 4 Select your desired curling time (④) and temperature setting (⑤) according to Fig. 1.
 - 4 Choose your desired curling time (④) according to Fig. 2.
 - 5 Determine the amount of hair by using the hair sectioning accessory. Start with a hair strand of 2-3 cm width.
 - 6 Note: Do not insert more hair into the curling chamber than indicated by the hair sectioning accessory.
 - 6 To easily insert the strand of hair into the curling chamber, first insert part of the hair into the opening at the back of the appliance. Use the contours of the opening to guide the section of hair into the chamber.
 - 7 Let the appliance hold the strand of hair in place. PRESS and continuously HOLD the curling button (②) and the strand of hair will be automatically curled into the chamber.
 - 8 When the hair has been successfully curled into the chamber, you will hear one beep at regular intervals. If you

Specifications are subject to change without notice
© 2017 Koninklijke Philips N.V.
All rights reserved.
3140 035/41004

English
Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

- Read this user manual carefully before you use the appliance and keep it for future reference.
- **WARNING:** Do not use this appliance near water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
 - **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - Always unplug the appliance after use.
 - If the mains cord is damaged, you must have it replaced by service centre or similarly qualified persons in order to avoid a hazard.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user



... (previous page) ...

- ข้อ 5
ข้อ 6
ข้อ 7
ข้อ 8
ข้อ 9
ข้อ 10

5. ใช้งาน

- 1. ตรวจสอบความปลอดภัยก่อนใช้งาน
2. ตรวจสอบการเชื่อมต่อสายไฟ
3. ตรวจสอบการเชื่อมต่อสายน้ำ
4. ตรวจสอบการเชื่อมต่อสายน้ำ
5. ตรวจสอบการเชื่อมต่อสายน้ำ
6. ตรวจสอบการเชื่อมต่อสายน้ำ
7. ตรวจสอบการเชื่อมต่อสายน้ำ
8. ตรวจสอบการเชื่อมต่อสายน้ำ
9. ตรวจสอบการเชื่อมต่อสายน้ำ
10. ตรวจสอบการเชื่อมต่อสายน้ำ

6. ปลอดภัย

โปรดอ่านคู่มือฉบับนี้และคู่มือที่เกี่ยวข้องก่อนการใช้งาน... (previous page) ...

- 1. ใช้ความระมัดระวังอย่างสูงในการใช้
2. ตรวจสอบการเชื่อมต่อสายไฟ
3. ตรวจสอบการเชื่อมต่อสายน้ำ
4. ตรวจสอบการเชื่อมต่อสายน้ำ
5. ตรวจสอบการเชื่อมต่อสายน้ำ
6. ตรวจสอบการเชื่อมต่อสายน้ำ
7. ตรวจสอบการเชื่อมต่อสายน้ำ
8. ตรวจสอบการเชื่อมต่อสายน้ำ
9. ตรวจสอบการเชื่อมต่อสายน้ำ
10. ตรวจสอบการเชื่อมต่อสายน้ำ

- 1. ตรวจสอบการเชื่อมต่อสายไฟ
2. ตรวจสอบการเชื่อมต่อสายน้ำ
3. ตรวจสอบการเชื่อมต่อสายน้ำ
4. ตรวจสอบการเชื่อมต่อสายน้ำ
5. ตรวจสอบการเชื่อมต่อสายน้ำ
6. ตรวจสอบการเชื่อมต่อสายน้ำ
7. ตรวจสอบการเชื่อมต่อสายน้ำ
8. ตรวจสอบการเชื่อมต่อสายน้ำ
9. ตรวจสอบการเชื่อมต่อสายน้ำ
10. ตรวจสอบการเชื่อมต่อสายน้ำ

Electromagnetic fields (EMF)

ผลิตภัณฑ์ Philips นี้เป็นไปตามมาตรฐานสากล... (previous page) ...


- 2. ภาพรวม
ข้อ 1
ข้อ 2
ข้อ 3
ข้อ 4
ข้อ 5
ข้อ 6
ข้อ 7
ข้อ 8
ข้อ 9
ข้อ 10

3. ควบคุมให้เป็นลอน

- วิธีการใช้งาน
ข้อ 1
ข้อ 2
ข้อ 3
ข้อ 4

Table with 4 columns: Temperature, Hair condition, Water temperature, Time. Includes icons for temperature settings and hair types.

 - 4. ตรวจสอบการเชื่อมต่อสายไฟ
ข้อ 1
ข้อ 2
ข้อ 3
ข้อ 4



- 1. ตรวจสอบการเชื่อมต่อสายไฟ
2. ตรวจสอบการเชื่อมต่อสายน้ำ
3. ตรวจสอบการเชื่อมต่อสายน้ำ
4. ตรวจสอบการเชื่อมต่อสายน้ำ
5. ตรวจสอบการเชื่อมต่อสายน้ำ
6. ตรวจสอบการเชื่อมต่อสายน้ำ
7. ตรวจสอบการเชื่อมต่อสายน้ำ
8. ตรวจสอบการเชื่อมต่อสายน้ำ
9. ตรวจสอบการเชื่อมต่อสายน้ำ
10. ตรวจสอบการเชื่อมต่อสายน้ำ

4. เคลือบและเทคนิพิเศษ

- หมายเหตุ
ข้อ 1
ข้อ 2
ข้อ 3
ข้อ 4
ข้อ 5
ข้อ 6
ข้อ 7
ข้อ 8
ข้อ 9
ข้อ 10

หมายเหตุ

- ข้อ 1
ข้อ 2
ข้อ 3
ข้อ 4
ข้อ 5
ข้อ 6
ข้อ 7
ข้อ 8
ข้อ 9
ข้อ 10

5. หลังการใช้

- 1. เปิดฝาและถอดปลั๊ก
2. ตรวจสอบการเชื่อมต่อสายไฟ
3. ตรวจสอบการเชื่อมต่อสายน้ำ
4. ตรวจสอบการเชื่อมต่อสายน้ำ
5. ตรวจสอบการเชื่อมต่อสายน้ำ
6. ตรวจสอบการเชื่อมต่อสายน้ำ
7. ตรวจสอบการเชื่อมต่อสายน้ำ
8. ตรวจสอบการเชื่อมต่อสายน้ำ
9. ตรวจสอบการเชื่อมต่อสายน้ำ
10. ตรวจสอบการเชื่อมต่อสายน้ำ

6. การรับประกันและบริการ

โปรดอ่านคู่มือฉบับนี้และคู่มือที่เกี่ยวข้องก่อนการใช้งาน... (previous page) ...

繁體中文

感謝您購買本產品，歡迎來到飛利浦的世界！... (previous page) ...

1. 重要事項

- 1. 重要事項
2. 警告
3. 警告
4. 警告
5. 警告
6. 警告
7. 警告
8. 警告
9. 警告
10. 警告

用本产品後，請務必將插頭拔除。... (previous page) ...

為了加強安全，建議在通向浴室的電流迴路上安裝 30 毫安培以下的漏電斷路器 (RCD)...

4. 請勿將本產品用於...

- 請勿將本產品用於本手冊所述之外的任何其他用途。
在無人看管的情況下，請將本產品的插頭拔除。
請勿使用其他製造商的任何配件或零件。
請勿將產品置於耐熱、穩固的平坦表面上。
請避免電線接觸到本產品的高溫部分。

當本產品電源處於開啟狀態時，請勿將本產品靠近易燃物質。

當本產品處於易觸電時，請勿以任何物品 (如毛巾、衣物) 覆蓋之。

僅可在乾髮上使用本產品。手潮濕時請勿使用本產品。

請勿將產品用於假髮。請務必將本產品送回飛利浦授權之服務中心進行檢查或維修。

請勿將金屬物品插入任何開孔內，以避免觸電。

使用後切勿拉扯電源線。拔除產品時請務必抓住插頭。

禁止攔開產品，以免觸電。

6. 回收

本產品之回收，請依照當地之回收規定處理。...

電磁波 (EMF)

本飛利浦產品符合所有電磁場暴露的相關國際標準和方法。

回收

本產品使用壽命結束後，請勿與一般家庭廢物一併丟棄...

2. 概觀

- 1. 電源線
2. 溫度設定
3. 調整時間設定
4. 溫度選擇設定
5. 電源開關指示燈
6. 電源開關按鈕

6. 保固與服務
若您購買相關資訊 (如配件等) 或有任何問題，請瀏覽飛利浦網站...

- 1. 溫度設定
2. 調整時間設定
3. 溫度選擇設定

Table with 4 columns: Temperature, Hair condition, Water temperature, Time.

溫度設定 170°C 190°C 210°C

調整時間設定 8 秒 10 秒 12 秒

4. 請您留意您的調整方向



5. 使用調整分區配件來決定髮型。先從 2-3 公分寬的髮束開始。

- 注意：調整分區配件的指示方向進入頭髮造型。
為方便調整進入髮束時，請先將部分頭髮放入產品背後的開口。
由產品調整髮束設定，然後插入髮束。
調整完後，將頭髮放入髮束，請取下髮束，然後試重新放入髮束。
當調整完頭髮後，請將調整器從頭髮移開，即可將手指從調整器上移開。
當完成髮型後，請將調整器從頭髮移開。

4. 秘訣和技巧

註

如果調整不佳，請檢查產品電壓設定，並逐一地拉出調整的髮束，重新調整下列的頭髮，並逐一地拉出調整的髮束。

- 1. 如果調整不佳，請檢查產品電壓設定，並逐一地拉出調整的髮束。
2. 請將調整器從頭髮移開，即可將手指從調整器上移開。
3. 當調整完頭髮後，請將調整器從頭髮移開。

備註：
1. 調整完頭髮後，請將調整器從頭髮移開。
2. 當調整完頭髮後，請將調整器從頭髮移開。

備註：
1. 調整完頭髮後，請將調整器從頭髮移開。
2. 當調整完頭髮後，請將調整器從頭髮移開。

5. 使用後

- 1. 關閉產品電源，並拔除插頭。
2. 將本產品放在耐熱的平面上，直到將頭髮冷卻為止。
3. 將產品置於安全乾燥處，避免沾染灰塵。您也可以使用保潔 (D) 排置產品。

設備名稱：飛利浦真空風筒美膚自動控溫捲髮器，型號 (型號)：HP5940

Table with 2 columns: Unit, Restricted substances and their chemical symbols.

本飛利浦產品符合所有電磁場暴露的相關國際標準和方法。
回收
本產品使用壽命結束後，請勿與一般家庭廢物一併丟棄。
電磁波 (EMF)
本飛利浦產品符合所有電磁場暴露的相關國際標準和方法。