



EN User manual      ZH-CN 用户手册

PHILIPS

产品：飞利浦多功能美发造型器  
型号：BHH822  
额定电压：220V~  
额定频率：50Hz  
额定输入功率：35 W  
生产日期：请见产品本体  
产地：中国广东中山

飞利浦（中国）投资有限公司  
上海市静安区灵石路718号A1幢  
全国顾客服务热线：4008 800 008

本产品根据国标GB4706.1-2005, GB4706.15-2008, GB4343.1-2009 及GB17625.1-2012制造

 
 
© 2018 Koninklijke Philips N.V.  
保留所有权利

English



Congratulations on your purchase, and welcome to Philips!  
To fully benefit from the support that Philips offers, register your product at [www.philips.com.cn/welcome](http://www.philips.com.cn/welcome).

1 Important



- Read this user manual carefully before you use the appliance and keep it for future reference.
- **WARNING:** Do not use this appliance near water.
  - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
  - **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
  - Always unplug the appliance after use.
  - If the main cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
  - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
  - Children shall not play with the appliance.
  - Cleaning and user maintenance shall not be made by children without supervision.

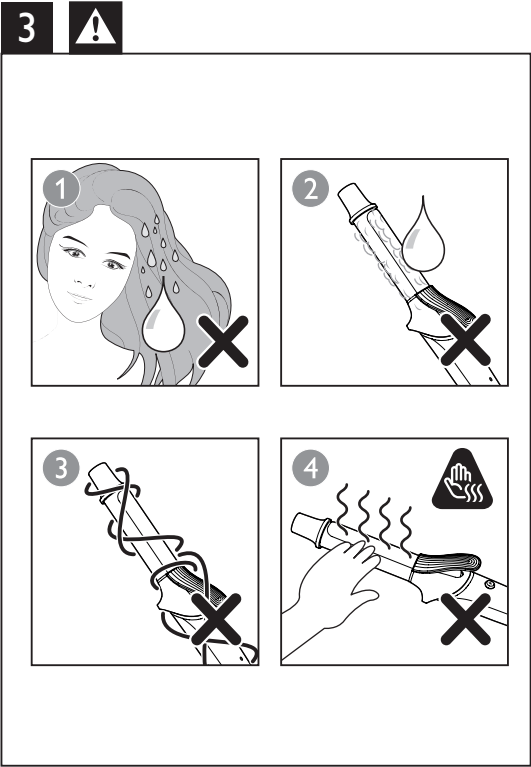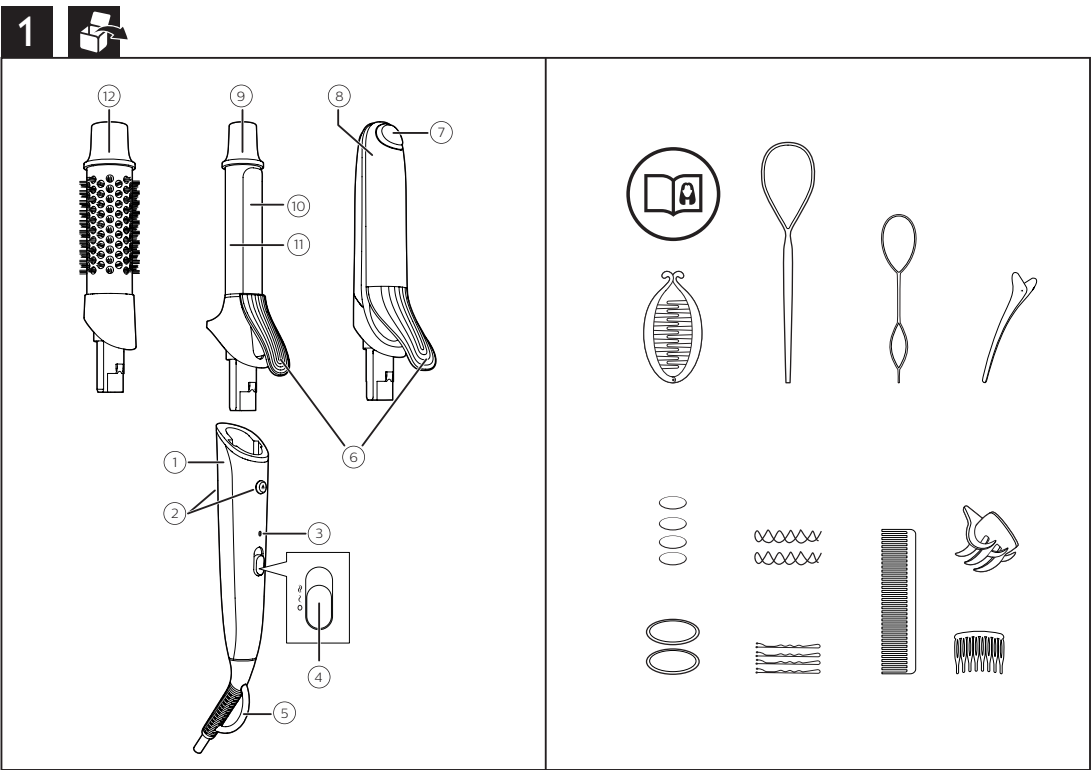

- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the main cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates/barrel should never touch the surface or other flammable material.

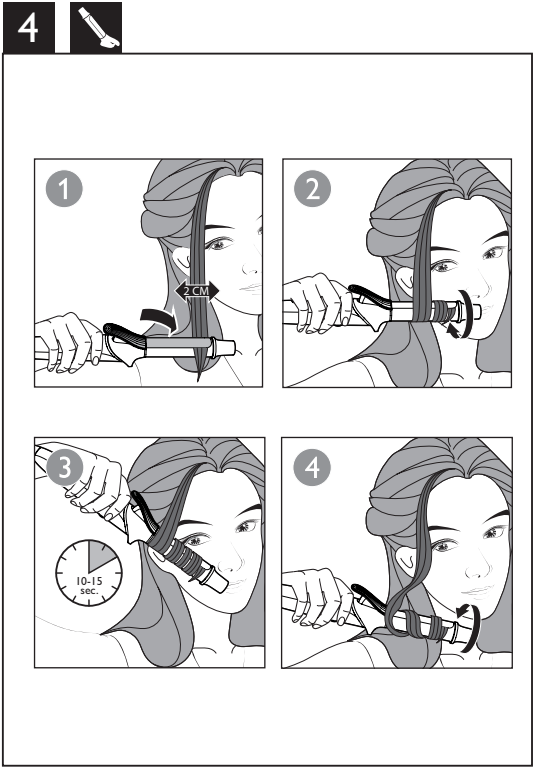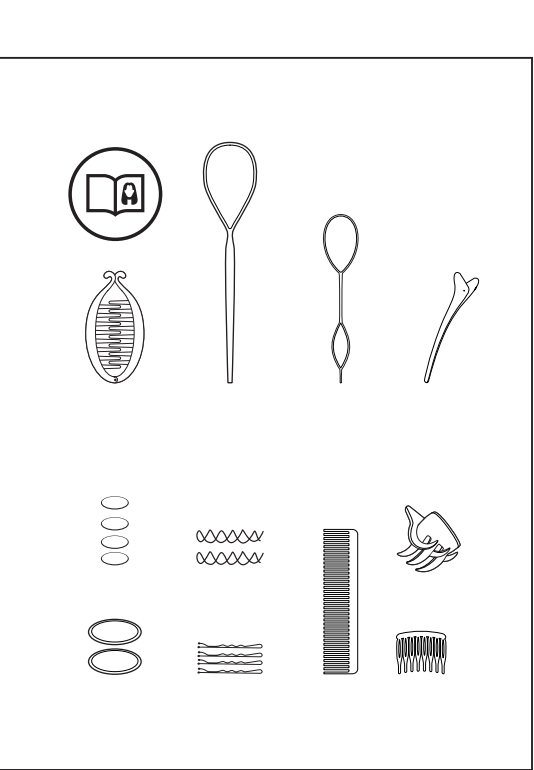  

- Avoid the main cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair.
- Do not operate the appliance with wet hands.
- Keep the heating plates/barrel clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- The heating plates/barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on color-treated hair, the heating plates/barrel may be stained.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.
- Do not insert metal objects into openings to avoid electric shock.

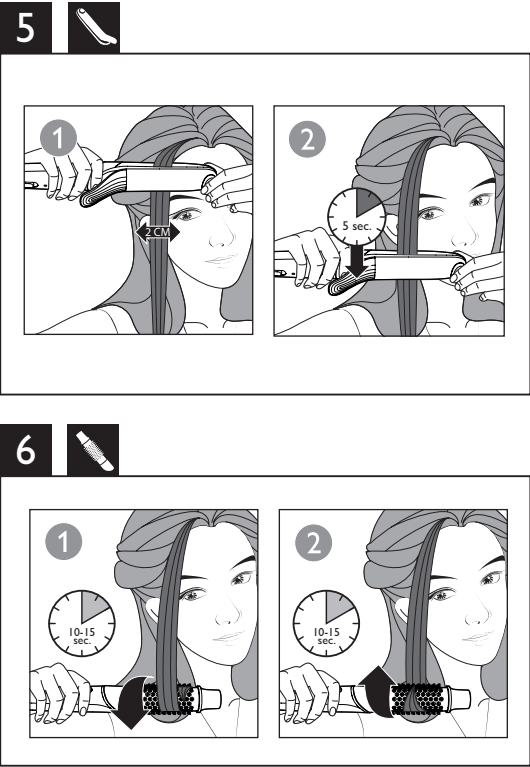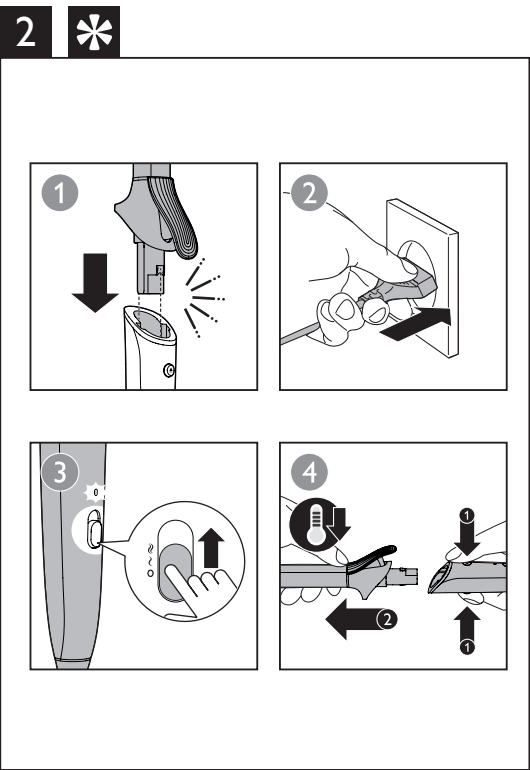  

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.

**Electromagnetic fields (EMF)**

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

**Recycling**

-Do not throw away the appliance with the normal household waste at the end of its life, but hand it in an official collection point for recycling. By doing this, you help to preserve the environment.

- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

2 Introduction

Get ready to update, perfect and try out a range of glamorous hair styles. From every day to perfectly polished, straight, volumized, curly, up-dos, down-dos and more, easily create that more than 15 styles with the new **Philips Multistyle**. This versatile look maker includes 3 attachments: straightener, curling tong and hot bristle styling brush, together with a wide range of accessories such as hair clips, pins, bands and loops.

With easy OneClick release for all attachments, professional temperature settings of up to 210 degrees, fast 45 seconds heat-up time, ready-to-use indicator with auto shut-off and premium ceramic coatings, there has never been more styling prowess in one box. There is even a style guide with step-by-step instructions so you can try and perfect a wide range of looks. Ready, set, style. It is time to experiment and impress with your styles using your new Philips Multistyle and style guide!

3 Style your hair

**Note:** Do not change the styling attachments when it is hot. Only change the styling attachments when the appliance is cooled down.

Select a suitable attachment and temperature settings for the hairstyle you want.

Hairstyle	Attachment	Temperature Settings
Tight/loose curls	Curling attachment ( 9 )	⌘ -180°C ⌘ -210°C
Straight sleek style	Straightening attachment ( 8 )	⌘ -180°C ⌘ -200°C
Luxurious volume	Hot brush attachment ( 10 )	⌘ -160°C ⌘ -180°C

- Before you style your hair ( Fig.2 )**
- 1 Ensure the lever ( 6 ) of attachment is pointing at the unlock button ( 2 ) on the top of the handle ( 1 ).
  - 2 Slide a suitable attachment onto the handle ( 1 ).
    - To remove the attachment, press both the unlock buttons ( 2 ) on both sides of the handle. Remove the attachment only when both the appliance and attachment have cooled down.
  - 3 Connect the plug to a power supply socket.
  - 4 Slide to ⌘ for low temperature setting and ⌘ for high temperature setting.
    - ↳ The power-on indicator ( 3 ) lights up and starts blinking.
    - ↳ The appliance will be ready for use after the blinking stops.
  - 5 Place the appliance on a heat-resistant surface when heating up.
  - 6 Comb your hair and divide your hair into small sections that are not wider than 2 cm.

- Create tight/loose curls ( Fig.4 )**
- 1 Select curling attachment ( 9 ) for styling natural and modern curls.
  - 2 Press the lever ( 6 ) to open the clip ( 10 ) and place a section of hair between the clip and barrel ( 11 ).
  - 3 Release the lever and slide the barrel to the hair tip.
  - 4 Hold the end of the cool tip ( 9 ) and the handle ( 1 ). Then wind the section of hair round the barrel from end to root in a continuous movement.
  - 5 Hold the barrel in the position for max.15 seconds. Then unwind the section of hair until you can open the clip again with the lever.
  - 6 To style the rest of your hair, repeat steps 2 to 5.

- Create straight sleek style ( Fig.5 )**
- 1 Select the straightening attachment ( 8 ).
  - 2 Press the lever ( 6 ) to open the attachment and place a section of hair between the straightening plates.
  - 3 Slide down slowly the length of the hair in a single motion (max. 5 seconds) from root to end, without stopping to prevent overheating and avoiding kinks.
  - 4 To style the rest of your hair, repeat steps 2-3.

- Create luxurious volume ( Fig.6 )**
- Note:** Avoid touching the barrel where there are no bristles as it is hot.
- 1 Select hot brush attachment ( 10 ).
  - 2 Brush hair through with the heated brush to create movement in the hair.
  - 3 To create flicks, take a section of hair and wrap the hair ends around the barrel. Hold the brush in that position for 10-15 seconds, and then remove it from your hair.
  - 4 Repeat steps 2 to 3 to the rest of your hair as desired.

- Note:** The appliance is equipped with an auto-shut off function. After 60 minutes, the appliance switches off automatically.
- After use:**
- 1 Switch off the appliance and unplug it.
  - 2 Place it on a heat-resistant surface until it cools down.
  - 3 Remove hairs and dust from the appliance and attachments.
  - 4 Clean the appliance and attachments by damp cloth.
  - 5 Keep the appliance in a safe and dry place, free of dust. You can also hang it with the hanging loop ( 5 ).
- Tips and Tricks:**
- For optimal results, only use the appliance on completely dry hair.
  - Use a smaller amount of hair for longer hair lengths and/or to get more defined curls.
  - For better straightening results, gently press together the ends of the straightening plates ( 7 ) during straightening.
  - Apply hair spray to your hair after styling for long-lasting results.

4 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at [www.philips.com.cn/support](http://www.philips.com.cn/support) or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

5 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.

简体中文

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在[www.philips.com.cn/welcome](http://www.philips.com.cn/welcome) 上注册您的产品。

1 重要事项

- 使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。
- **警告：**请勿在靠近水的地方使用本产品。
  - 本产品在浴室内使用时，使用后拔下插头，因为即使本产品开关断开后，接近水仍存在危险。
  - **警告：**不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。







## 保修及服务：

此产品是一件设计精良，用高品质元件制造之家用电器，在正常使用及保养下应能发挥其优越性能。在购买日期后二年内，若发生任何因制造工艺或元器件造成之损坏，飞利浦中国维修服务中心将为持证用户提供免费门市维修服务，视情况更换零件或整个产品。

无论在保期中或保期后，只要飞利浦正式行销该产品的任何国家皆可获得维修服务。

若飞利浦在当地无行销该项产品，飞利浦同样提供维修服务，但可能因未储备所需零件，维修时间可能较长，敬请见谅。请联系当地飞利浦经销商，或飞利浦服务部门。

若您需洽询相关资讯，或遇到困难事项时，请联络当地飞利浦维修服务中心，或向飞利浦服务热线咨询。

中国顾客服务热线：4008 800 008  
(用户需承担本地通话费)。  
网址：http://www.philips.com.cn

## 网上会员注册与产品注册：

- 1) 登陆 <http://www.philips.com.cn/welcome>
- 2) 点击“创建新账户”，创建您的飞利浦账号
- 3) 点击“注册产品”，通过产品名称或产品型号查找产品，完成产品注册

## 服务须知

需要此产品的售后服务，  
拨打服务热线：4008 800 008  
在维修服务过程中有任何意见，  
欢迎致函 飞利浦（中国）投资有限公司解决疑难。

## 保修条例：

- \* 在购买日期后二年内，凡经本公司特约维修站人员确认为正常使用情况下，因制造工艺或元器件造成之损坏，您都将获得免费保修服务。
- \* 此免费服务不包括需时常更换的易耗零配件（吸尘器纸袋，布袋，空气清新机滤网，滤芯，活性炭，咖啡壶过滤网）及 附件（如须刀网膜、刀头，咖啡杯，食品加工机杯/刀具等），辅助装置，运输费及维修人员上门服务费。
- \* 用户请保留此联。
- \* 此证若经涂改即作废。
- \* 此证须连同发票正本使用方为有效。

- \* 以下情况将不能获得免费服务

1. 使用不当引起的人为损坏，例如接入不当当电源、使用不当配件、不当当之安装、不依说明书使用、错误使用或疏忽而造成损坏等。因运输及其他意外而造成之损坏。非经本公司认可之维修和改装。其他因不可抗力（如自然灾害、电压异常等）造成的损坏。
2. 一般家庭以外使用（如工业、商业用）而造成的损坏。
3. 正常使用引起的产品老化、磨损等，但不影响产品的正常使用。

- \* 保修证作为在规定期限及条件之内进行免费维修的保证，并不限制消费者的法定权利。

- \* 飞利浦提供2年全球联保服务，在产品由飞利浦正式销售的所有国家中，都提供保修和保修期满的维修服务。要求保修时，您需提供发票正本，且请求保修的日期还在保修期限之内。

- 使用后务必拔下产品的插头。
- 如果电源线损坏，为避免危险，必须由飞利浦、飞利浦授权的服务中心或类似的专业技术人员进行更换。
- 本产品适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。
- 不得让儿童玩耍本产品。
- 不要让儿童在无人监督的情况下进行清洁和保养。
- 使用后请勿拉扯电源线。拔下产品插头时，请握紧插头。
- 连接产品之前，请确保产品上标示的电压与当地电源电压相符。
- 请勿将本产品用于本手册中说明以外的任何其它用途。
- 请勿对假发使用本产品。
- 当产品连接了电源时，切勿让其无人看管。
- 切勿使用由其它制造商生产的，或未经飞利浦特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。
- 切勿将电源线缠绕在产品上。
- 待产品完全冷却后再存放。
- 由于产品会很烫，请在使用时多加注意。只能握住手柄，并且避免与皮肤接触。
- 始终将本产品放置在隔热的平稳表面上。加热板/卷发棒不得接触物体表面或其他可燃材料。
- 不要让电源线接触到产品的灼热部分。

- 如果产品已开启，请使产品远离易燃物体和材料。
- 当产品变热时切勿在其表面覆盖任何物品（如毛巾或衣服）。
- 产品只能用于干的头发。
- 切勿用湿手操作本产品。
- 保持加热板/卷发棒洁净无尘且未粘上定型产品（如摩丝、定型喷剂和发胶）。切勿将本产品与定型产品结合使用。
- 加热板/卷发棒上有涂层。此涂层可能会随着时间的推移慢慢磨损。但是，这并不影响产品的性能。
- 将产品用于染过色的头发时，加热板/卷发棒可能会染上颜色。
- 产品只能送到飞利浦授权的服务中心检修。由不合格人员进行修理可能将用户置于极度危险的境地。
- 切勿将金属物体插入开口中，以免触电。
- 为了增加保护，建议在浴室供电的电气回路中安装一个额定剩余工作电流不超过 30mA 的剩余电流装置 (RCD)。详情向 RCD 安装商咨询。
- 注意烫伤。请勿让儿童在产品使用中，或冷却时接触产品。

### 电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

### 回收

-弃置产品时，请不要将其与一般生活垃圾堆放在一起，应将其交给官方指定的回收中心。这样做有利于环保。

- 请遵循您所在国家/地区的电器及电子产品分类回收规定。正确弃置产品有助于避免对环境 and 人类健康造成负面影响。

## 2 简介

随时为您打造各种迷人发型。新款飞利浦多功能美发造型器可轻松打造超过 15 种发型，直发、蓬松、卷发，高低发髻等等。这款多功能美发造型器配有 3 个附件：直发附件、卷发附件和电热梳，及发卡、发夹和发圈等。

所有的附件轻轻一按，即可取下。210 度的专业温度设置、45 秒快速加热、即用指示灯、自动关闭以及优质的陶瓷涂层，都将为您带来非凡的造型体验。此外，随附造型指南便于您尝试打造各种发型。现在就开始使用您的新款飞利浦多功能美发造型器和造型指南，打造各种造型吧！

## 3 塑造发型

注意：切勿在产品很热时更换造型附件。仅在产品冷却后更换造型附件。

为所需发型选择合适的附件和温度设置。

发型	附件	温度设置
紧致小卷/浪漫大卷	卷发附件（⑨）	↵ -180°C ↻ -210°C
顺滑直发	直发附件（⑧）	↵ -180°C ↻ -200°C
丰盈发型	电热梳附件（⑫）	↵ -160°C ↻ -180°C

#### 在塑造发型之前（图 2）

- 1 确保附件的控制杆（⑥）指向手柄（①）顶部的解锁按钮（②）。
- 2 将合适的附件安装到手柄（①）。
  - 要取下附件，按住手柄两侧的解锁按钮（②）。仅在产品和附件均冷却后取下附件。

- 3 将插头连接至电源插座。
- 4 选择↵为低温设置，选择↻为高温设置。
  - ↳电源指示灯（③）亮起并开始闪烁。
  - ↳指示灯停止闪烁后产品即可使用。
- 5 加热时，将产品放在耐热表面上。
- 6 事先梳理头发，将头发分成宽度不超过 2 厘米的数缕。

#### 打造紧致小卷/浪漫大卷（图 4）

- 1 选择卷发附件（⑨）以打造自然、时尚的卷发。
- 2 按下控制杆（⑥）打开发夹（⑩），然后将一绺头发放在发夹和卷发棒（⑪）之间。
- 3 松开控制杆，将卷发棒滑向发梢。
- 4 按住隔热把手（⑨）和手柄（①），将这绺头发从发梢至发根缠绕在卷发棒上。
- 5 将卷发棒保持在该位置最多 10 秒。然后松开发绺，直到可通过控制杆再次打开发夹。
- 6 要为其余头发造型，请重复步骤 2 至 5。

#### 打造顺滑直发造型（图 5）

- 1 选择直发附件（⑧）。
- 2 按下控制杆（⑥）打开直板夹，然后将一绺头发放在夹板之间。
- 3 从发根至发梢，缓缓地顺着头发向下滑（最多 5 秒），中间不要停顿，以防过热和打结。
- 4 要为其余头发造型，请重复步骤 2-3。

#### 打造丰盈发型（图 6）

**注意：不可触碰电热梳无梳齿的部分，以免烫伤。**

- 1 选择电热梳附件（⑫）。

- 2 用电热梳附件彻底梳理头发，以展现秀发的动感。
- 3 要打造发梢微卷造型，选取一绺头发并用造型梳缠绕发梢一圈。将电热梳保持在该位置 10 到 15 秒，然后移开。
- 4 根据需要对其余头发重复步骤 2 - 3。

**注意：产品配备自动关熄功能。60 分钟后，产品将自动关闭。**

**使用后：**

- 1 关闭产品并拔下电源插头。
- 2 将产品置于隔热表面上，直至其冷却。
- 3 清除产品和附件上的毛发和灰尘。
- 4 用湿布清洁本产品 and 附件。
- 5 将产品存放在安全、干燥、清洁的位置。您也可以使用挂环（⑤）将产品挂起存放。

#### 提示和诀窍：

- 为获得良好效果，仅对完全干燥的头发使用本产品。
- 对于较长的头发，为了获得更好的卷发效果，请选取较小的发量。
- 为获得更好的直发效果，在打造直发过程中同时轻按直板夹（⑦）的前端。
- 在造型完成后，使用头发定型喷剂固定发型以获得持久造型效果。

## 4 保修与服务

如果您需要了解信息（如更换附件的相关信息）或有任何疑问，请访问飞利浦网站 [www.philips.com.cn/support](http://www.philips.com.cn/support)。您也可以与您所在地的飞利浦客户服务中心联系（可从保修卡中找到其电话号码）。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。

## 5 故障排除

问题	原因	解决方法
产品完全无法工作。	产品所连接的电源插座可能已损坏。	检查设备已正确插入。 检查您家中电源插座的保险丝。

保留备用

出版日期：2018-06-28

产品中有害物质的名称及含量						
部件名称	有毒有害物质或元素					
	铅（Pb）	汞（Hg）	镉（Cd）	六价铬（Cr6+）	多溴联苯（PBB）	多溴二苯醚（PBDE）
发热架组合	X	○	○	○	○	○
电源线	X	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

\*该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。

\*该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。