

PHILIPS **NORELCO**



AT850

***Rechargeable Cordless/Cord
Tripleheader Shaver***

Always here to help you

Register your product and get support at
www.norelco.com/register

BC

Questions?
Contact
Philips
Norelco

ENGLISH 4

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at www.norelco.com/register

AT850

IMPORTANT SAFETY INSTRUCTIONS

When using an electric appliance, basic precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a corded shaver/charging stand that has fallen into water. Unplug immediately.
2. Power plug and the accessories connected to it are not for immersion or for use in shower.
3. Do not use an extension cord with this appliance.
4. Always unplug this shaver/charging stand from the electrical outlet immediately after use, except when shaver is (re) charging.
5. Unplug and remove power supply cord from shaver before cleaning.
6. The batteries used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this shaver is used by, on, or near children or invalids.
2. Use this shaver for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this shaver/charging stand if it has a damaged cord or charging plug, if it is not working properly, if it has

been dropped or damaged, or dropped into water while plugged in. For assistance call 1-800-243-3050.

4. Keep the shaver, cord, charging stand and charging plug away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the adapter.
7. Do not charge or plug in shaver/charging stand outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not use this shaver with a damaged or broken comb, as facial injury may occur.
9. Always attach plug to shaver first, then plug into outlet. Be certain plug is inserted firmly into shaver, up to mark indicated on plug. For stand usage, always put shaver in charging stand first, attach cord to charging stand, then plug into outlet. To disconnect, remove charging plug from outlet.
10. Never put the shaver/charging stand in direct sunlight or store at a temperature above 140°F (60°C).
11. Keep the cord/charging stand dry at all times. Do not handle with wet hands.
12. To prevent possible damage to the cord, do not wrap cord around the shaver or charging stand.
13. Do not attempt to open the appliance to replace the battery.
14. Only use the power plug supplied with the appliance.

SAVE THESE INSTRUCTIONS

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug, as this will cause a hazardous condition.

PHILIPS



45 - DAY MONEY-BACK GUARANTEE

To enjoy the closest and most comfortable shave from your new Philips Norelco Men's Shaver, the shaver should be used exclusively for 3 weeks. This allows your hair and skin enough time to adapt to the Philips Norelco Shaving System. If, after that period of time, you are not fully satisfied with your Philips Norelco Men's Shaver, send the product back along with dated sales receipt and we'll refund you the full purchase price. **The shaver must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price, the date of purchase, and the money-back guarantee return authorization form enclosed. We cannot be responsible for lost mail.**

The shaver must be postmarked no later than 45 days from the date of purchase. Philips Norelco reserves the right to verify the purchase price of the shaver and limit refunds not to exceed suggested retail price.

To obtain money-back guarantee return authorization form, call 1-800-243-3050 for assistance. Delivery of refund check will occur 6-8 weeks **AFTER** receipt of refund product.

Table of Contents

Features	8-9
LED Multi-Purpose Display	10
Before First Use	11
Charging	11-13
Recharging	14
Quick Charge	14
Put It To The Test & Shaving Tips	14-15
How to Shave	
With An Electric Shaver	15-16
Trimming	16
Cleaning	17-22
Replacing the Shaving Heads	22-24
Storage	24
Assistance	25
Disposal	25
Accessories	26
Warranty	27

Features

Shaver Head Assembly

Protective Cap

Individually Floating Heads

Shaver Head Release Button


- Hair Chamber captures shaven hair

Electronic On/Off Button

Shaver Head Replacement Indicator

LED Charge Indicators

- Battery Charge, Full, Low & Quick Charge Indicators

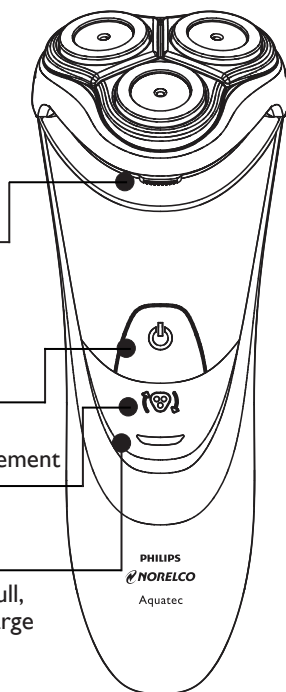

Pop-up Trimmer

Automatic Worldwide Voltage
100V to 240V AC

Charging Stand

Pouch


Cleaning Brush

Rechargeable -
8-hour Full Charge for up to
45 minutes cordless use

Corded or cord free use


Full 2-Year Warranty

45-Day Money-Back Guarantee

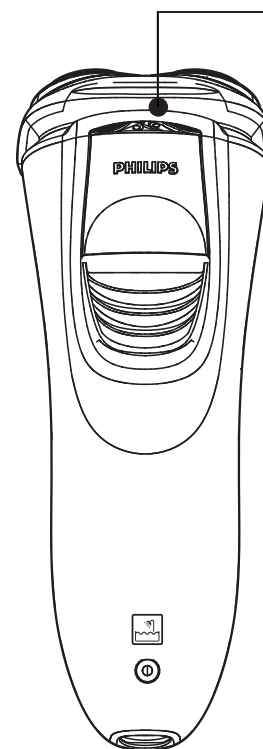


LED Multi-Purpose Display

The display provides the following information:

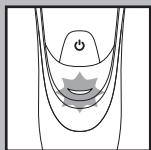


► Charging Indicator

When the shaver is charging, the charging light blinks green.

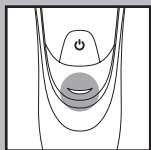

► Full Charge Indicator

When the battery is fully charged, the charging light lights up continuously. After approximately 30 minutes, the charging light goes out to save energy.

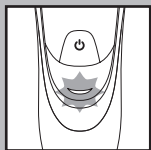


► Low Battery Indicator

When the battery is almost empty (5 or less shaving minutes left), the charging light starts to blink orange. When you turn the shaver OFF the charging light blinks orange for a few seconds.

► Quick Charge Indicator

When you charge the empty battery, the charging light alternately blinks orange and green. After approximately 3 minutes, the charging light continues to blink green.

- The shaver now contains enough energy for a 5-minute shave.

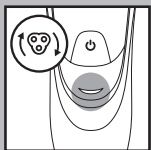

► Shaver Head Replacement Indicator

-Once a year, depending on your shaving behavior, the shaver head replacement symbol will light up orange continuously, as a reminder to replace the shaver heads.

Before First Use

- Charge the shaver before you start using it (see 'Charging'). Make sure the shaver is switched off before you start charging it.


Important

- Only use the power cord provided to charge the shaver.
- The power plug transforms 100-240V AC to less than 24V DC.

Charging

- Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects lifetime of batteries.
- Charging or recharging requires eight full hours.
- A fully charged shaver has a cordless shaving time of up to 45 minutes.
- When charging shaver for the first time or after a long period of non-use, charge until the charging light lights up continuously.
- Do not charge shaver in a pouch.
- Do not charge/recharge or use shaver until fully dried.


Charging with a Cord

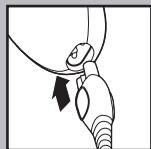

- 1** Connect cord directly to shaver and connect the charging plug into any 100V to 240V AC outlet. Use only the power cord provided.


- ▶ An adaptor plug may be necessary for charging plug usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for the power outlet.

The charging plug will automatically convert to work on 100V to 240V AC systems.

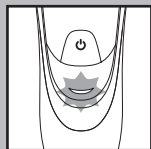


- ▶ The display on the shaver will indicate shaver is charging.

- 2** Charging and recharging requires a full 8 hours. A fully charged shaver has a cordless shaving time of up to 45 minutes.

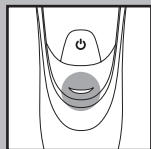

- ▶ When the battery is fully charged, the charging light lights up continuously. After approximately 30 minutes, the charging light goes out to save energy.

Charging in Charging Stand

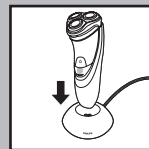


- ▶ Always place shaver in stand in an upright position making sure charging contacts in bottom of stand fit into recess in bottom of shaver.
- ▶ Always remove shaver from stand by lifting straight up. Do not tilt shaver.

- 1** Place shaver in charging stand and connect the small plug of cord to charging stand. Connect the charging plug into any 100V to 240V AC outlet. Use only the power cord provided.


- ▶ An adaptor plug may be necessary for charging plug usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for the power outlet.

The charging plug will automatically convert to work on 100V to 240V AC systems.

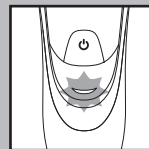

- ▶ The display on the shaver will indicate shaver is charging.

- 2** Charging and recharging requires a full 8 hours. A fully charged shaver has a cordless shaving time of up to 45 minutes.

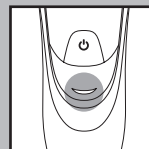

- ▶ When the battery is fully charged, the charging light lights up continuously. After approximately 30 minutes, the charging light goes out to save energy.

Recharging

1 Recharging requires 8 hours.

Recharge when the charging light on the shaver display blinks orange.

Quick Charge

When you charge the empty battery, the charging light alternately blinks orange and green. After approximately 3 minutes, the charging light continues to blink green. The shaver now contains enough energy for a 5-minute shave.

Put It To The Test & Shaving Tips

- ▶ **21 Day Trial and Conversion Process.** It is a fact that your skin and beard need time to adjust to a new shaving system.
- ▶ **Use your new shaver exclusively for 3 weeks** to fully enjoy the closeness of a Philips Norelco shave.
- ▶ **At first you may not get as close a shave as you expect,** or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new shaver.
- ▶ **Stick with it!** If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Philips Norelco shaving system.

- ▶ **If you are still not convinced after 21 days,** Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

How To Shave With An Electric Shaver

- ▶ **Use this shaver for its intended household use** as described in this manual.
- ▶ **For hygienic reasons,** the shaver should only be used by one person.
- ▶ **Shaving with a clean, dry face** gives the best results.



- 1** Turn shaver **ON** by pressing the on/off button once. Shave against the direction of beard growth using both straight and circular movements.
- 2** Stretch your skin with your free hand so blades can cut whiskers. Gently press shaver to skin so the floating heads can follow the contours of your face. **DO NOT** press too hard. Too much pressure can pinch the skin into the combs.
- 3** Turn shaver **OFF** by pressing the on/off button once.
- 4** Clean the shaver after each use (see chapter 'Cleaning').




- 5** Put the Protective Cap on the shaver to protect shaving heads.

Replace your Philips Norelco shaving heads (model #HQ8 or SH50) once a year for optimal shaving results.

Trimming

To groom sideburns and moustache:

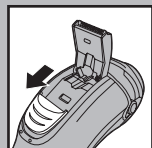

- 1** Turn shaver ON.
- 2** Push down spring-release trimmer switch. The trimmer can be activated while the shaver is running.




- 3** Hold trimmer as shown and move in downward strokes with gentle pressure.



- 4** Close trimmer by pressing trimmer down.
- 5** Turn shaver OFF.

Cleaning

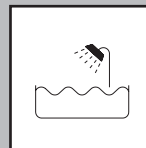


- ▶ This symbol indicates that the shaver can be used in the bath or shower.
- ▶ Always clean your shaver after each use.
- ▶ Always switch shaver OFF, unplug and remove power cord before cleaning.
- ▶ Never clean, remove or replace head assembly while motor is on.
- ▶ Do not apply pressure to combs. Do not touch shaving heads with hard objects as this may dent or damage precision-made slotted combs.
- ▶ Do not use shaver if combs are damaged or broken. Facial injury may occur.
- ▶ Do not use compressed air, abrasives, scourers or liquids such as acetone to clean the shaver.


Cleaning the Shaving Unit

The shaving heads may be quickly cleaned after each use by rinsing with hot water: Water from the tap should be on a hot setting, BUT BE CAREFUL TO TEST WATER FIRST SO AS NOT TO BURN OR SCALD HANDS.


- ▶ Regular cleaning guarantees better shaving results.
- ▶ Do not immerse shaver in water.
- ▶ While rinsing shaving heads, water may drip out of the base of shaver. This is a normal occurrence.

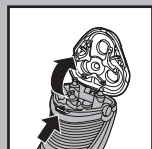

- 1** Always turn shaver OFF, unplug from outlet and remove power cord from shaver.

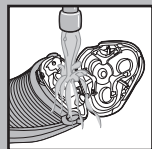

- 2** Press the Shaver Head Release Button to open the Shaver Head Assembly.

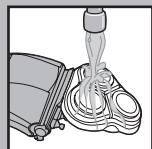

- 3** Clean inside shaving heads and hair chamber by running under hot water.

- 4** Clean outside of Shaver Head Assembly by running under hot water.

- 5** Close the Shaver Head Assembly and shake off excess water.

Be careful not to hit the shaving unit against anything while shaking off excess water.

- 6** Open Shaver Head Assembly again and leave open to air dry.

NOTE: Do not wipe or dry the shaving heads with a towel or tissue. This could damage the shaving heads.

- ▶ If the shaving unit becomes detached from the shaver, you can easily reattach it.


- ▶ You may also clean the hair chamber without water by using the supplied brush.

Extra-thorough Cleaning Method


Do not mix up the cutters and combs as the shaving performance may be adversely affected for several weeks before optimal shaving performance is restored.

- 1** Turn shaver OFF, remove the charging plug from the outlet and power cord from the shaver.


- 2** Press the Shaver Head Release Button to open the Shaver Head Assembly.

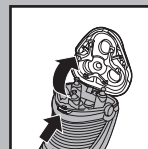


- 3** Pull the shaving unit off the shaver.

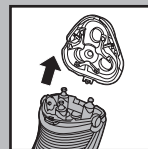


- 4** Turn the lock counterclockwise to unlock (A) and remove the retaining frame (B).

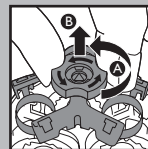

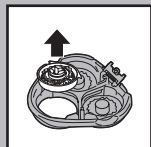


- 5** Remove and clean one set of cutters and combs at a time.

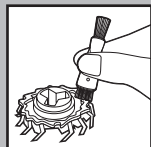


- 6** Separate the cutter from the comb and clean it with the short bristled side of the brush supplied.

Do not clean more than one cutter and comb at a time, since they are all matching sets. If you accidentally interchange the cutters and combs, it could take several weeks before optimal shaving performance is restored.

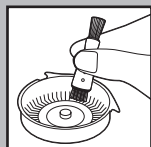


- 7** Clean the inside and outside of the comb with the brush supplied.

For optimum performance, shaver cutters and combs should be cleaned in a degreasing liquid (e.g. alcohol) and lubricated with one drop of mineral oil (in the center of the head). This helps prevent wear of the shaving heads.

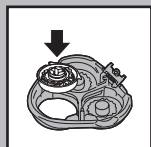


- 8** Replace the set back into the Shaver Head Assembly.

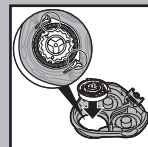

Make sure that the two pointy edges of the head fit exactly into the recesses.

- 9** Repeat the process for the other two sets of cutters and combs.

- 10** Replace the frame and turn the lock clockwise until it locks into place.

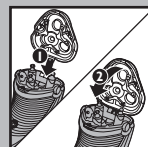


- 11** Insert the notch of the shaving unit into the slot in the top of the shaver (1) and then close the shaving unit (2).


NOTE: If the shaving unit does not close smoothly, make sure you inserted the shaving heads properly and that the retaining frame is locked.

- 12** Put the Protective Cap on shaver to protect heads.


After Each Use: Trimmer

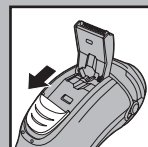

- 1** Turn shaver OFF.
- 2** Push down spring-release trimmer switch.

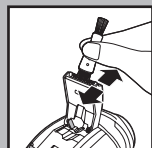

- 3** Clean trimmer with the short-bristled side of the brush every time you use it.

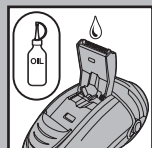


- 4** Lubricate the trimmer teeth with one drop of mineral oil every 6 months.

- 5** Close trimmer by pressing trimmer down.


Replacing the Shaving Heads

- ▶ Replace the shaving heads once a year for optimal shaving results.
- ▶ Replace damaged or worn shaving heads with model HQ8 or SH50 Philips Norelco shaving heads only.


Shaver Head Replacement Indicator

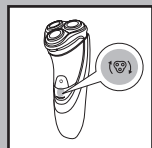


- ▶ The shaver head replacement indicator symbol will light up orange continuously to remind you to replace your shaving heads.
- 1** Turn shaver OFF, remove the charging plug from the outlet and power cord from the shaver.

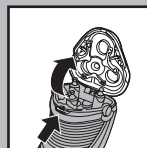

- 2** Press the Shaver Head Release Button to open the Shaver Head Assembly.

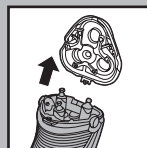

- 3** Pull the shaving unit off the shaver.

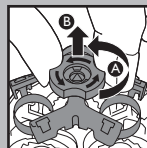


- 4** Turn the lock counterclockwise to unlock (A) and remove the retaining frame (B).


- 5** Remove the shaver heads and place the new shaving heads in the shaving unit.

Make sure that the two pointy edges of the head fit exactly into the recesses.

- 6** Replace the frame and turn the lock clockwise until it locks into place.

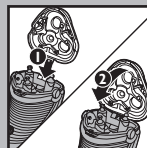

- 7** Insert the notch of the shaving unit into the slot in the top of the shaver (1) and then close the shaving unit (2).

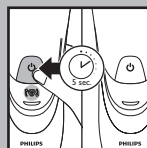

- 8** Press and hold the on/off button for at least 5 seconds to reset. The orange shaver head replacement indicator symbol will go out.

NOTE: If the shaving unit does not close smoothly, make sure you inserted the shaving heads properly and that the retaining frame is locked.

This shaver has no other user-serviceable parts.
For assistance call 1-800-243-3050.

Storage

- ▶ Be sure shaver is turned off. Remove cord from outlet and shaver before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- ▶ Do not wrap power cord around shaver when storing.
- ▶ Store cord in a safe location where it will not be cut or damaged.
- ▶ Do not place or store shaver where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.
- ▶ Put the Protective Cap on shaver to protect heads.



Assistance

- ▶ For assistance, visit our website:

**www.philips.com/support or
call toll free 1-800-243-3050**


- ▶ Online information is available 24 hours a day, 7 days a week.

Disposal



- ▶ This Philips Norelco shaver contains a rechargeable lithium-ion battery which must be disposed of properly.
- ▶ Contact your local town or city officials for battery disposal information or call 1-800-8-BATTERY or www.rbrc.com for battery drop-off locations.
- ▶ For assistance, visit our website, www.philips.com/support or call toll free: 1-800-243-3050.

Accessories

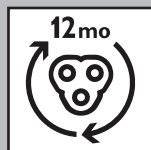

- ▶ **Replacement Heads**
Model HQ8 or SH50 - For maximum shaver performance, replace your Philips Norelco shaving heads once a year.
- ▶ **Philips Norelco Shaver Accessories** may be purchased at a store near you, or on our website www.philips.com/store

FULL TWO YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Philips Norelco Product, Model AT850 (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.*

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com/norelco or call 1-800-243-3050 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips Electronics North America Corporation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

* Read enclosed instructions carefully.

Manufactured for:

Philips Consumer Lifestyle
A Division of Philips Electronics North America Corporation
P.O.Box 10313, Stamford, CT 06904



This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco and Tripleheader are Registered Trademarks of Philips Electronics North America Corporation.



is a Trademark of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips N.V.