


Register your product and get support at
www.philips.com/welcome

HS190



PHILIPS

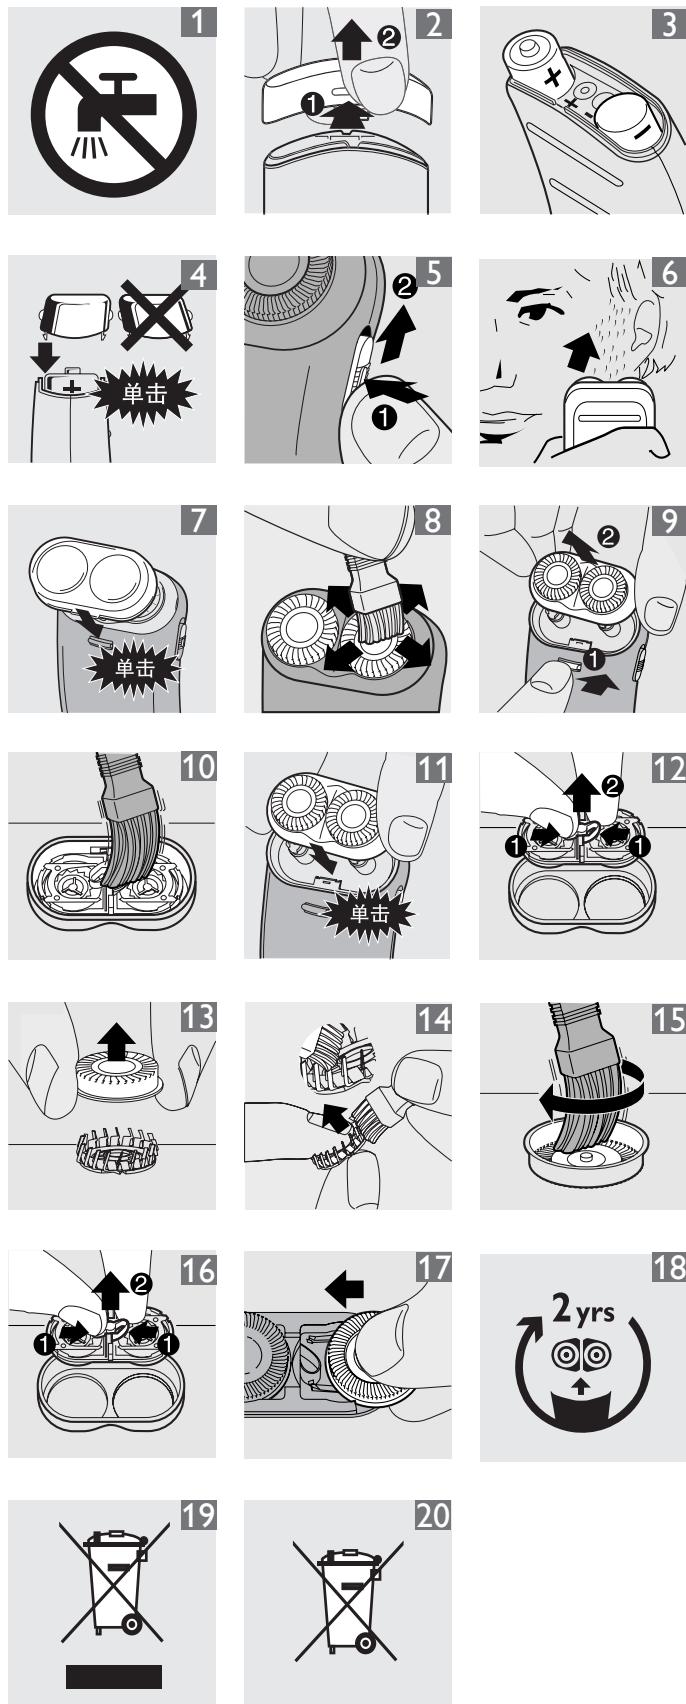

www.philips.com



100% recycled paper
100% papier recyclé
100% 循环再造纸

4222.002.5219.2



Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Warning

- Keep the appliance dry.
- This symbol means: Forbidden to clean under a running tap. (Fig. 1)
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Caution

- Use and store the appliance at a temperature between 5°C and 35°C.
- Remove the batteries if you are not going to use the appliance for a month or more.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Preparing for use**Make sure that your hands are dry when you insert the batteries.**

The appliance runs on two R6 AA 1.5-volt batteries (not included). Preferably use Philips alkaline batteries.

- 1** Push on the rib of the battery compartment cap (1) and then lift the cap off the appliance (2). (Fig. 2)

- 2** Place two batteries in the battery compartment (Fig. 3).

Make sure the + and - indications on the batteries match the indications in the battery compartment.

The shaver does not work if the batteries have been placed incorrectly.

- 3** Put the battery compartment cap back onto the appliance ('click'). (Fig. 4)

The cap only fits onto the appliance in one way.

To avoid damage due to battery leakage:

- do not expose the appliance to temperatures higher than 35°C;
- Remove the batteries if you are not going to use the appliance for a month or more.
- do not leave empty batteries in the appliance.

Cordless shaving time

Two new batteries provide a cordless shaving time of 60 minutes.

Using the appliance

- 1** Press the switch lock (1) and push the on/off slide upwards (2) to switch on the shaver (Fig. 5).

- 2** Move the shaving heads quickly over your skin. Make both straight and circular movements (Fig. 6).

Shaving on a dry face gives the best results.

Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system.

- 3** After use, push the on/off slide downwards to switch off the shaver.

- 4** Put the protection cap on the shaver every time you have used it, to prevent damage (Fig. 7).

Cleaning and maintenance

Regular cleaning guarantees better shaving performance.

- For the best cleaning results, we advise you to use the Philips Cleaning spray (HQ110). The Philips Cleaning spray is not available in China.

You can also clean the shaver in the following way:

Every week: shaving unit and hair chamber

- 1** Switch off the shaver.
- 2** First clean the top of the appliance with the cleaning brush supplied (Fig. 8).
- 3** Press the release button (1) and remove the shaving unit (2) (Fig. 9).
- 4** Clean the inside of the shaving unit and the hair chamber with the cleaning brush (Fig. 10).
- 5** Put the shaving unit back onto the shaver ('click') (Fig. 11).

Every two months: shaving heads

- 1** Switch off the shaver.
 - 2** Press the release button (1) and remove the shaving unit (2) (Fig. 9).
 - 3** Push the sides of the central spring towards each other (1) and then lift the retaining frame out of the shaving unit (2) (Fig. 12).
 - 4** Slide the shaving heads out of the retaining frame.
Hold your finger underneath the shaving head to prevent the cutter from falling out.
 - 5** Disassemble and clean the shaving heads one by one (Fig. 13).
- Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.*
- 6** Clean the cutter with the short-bristled side of the cleaning brush (Fig. 14). Brush carefully in the direction of the arrow.
 - 7** Clean the guard with the cleaning brush (Fig. 15).
 - 8** Slide the shaving heads back into the retaining frame and put the retaining frame back into the shaving unit.
 - 9** Put the shaving unit back onto the shaver (Fig. 11).

Tip: For extra thorough cleaning, clean the shaving heads by putting them in a degreasing liquid (e.g. alcohol) every six months. To remove the shaving heads, follow steps 1 to 4 described above. After cleaning, lubricate the central point on the inside of the guards with a drop of sewing machine oil to prevent wear of the shaving heads.

Storage

- Always put the protection cap on the shaver after use, to prevent damage (Fig. 7).

Replacement

Replace the shaving heads every two years for optimal shaving results. Replace damaged or worn shaving heads with HQ4 + Philips shaving heads only.

- 1** Switch off the shaver.
- 2** Press the release button (1) and remove the shaving unit (2) (Fig. 9).
- 3** Push the sides of the central spring towards each other (1) and then lift the retaining frame out of the shaving unit (2) (Fig. 16).
- 4** Slide the shaving heads out of the retaining frame.
- 5** Slide new shaving heads into the retaining frame (Fig. 17).
- 6** Put the retaining frame back into the shaving unit (Fig. 11).
- 7** Put the shaving unit back onto the shaver ('click').

Accessories

To retain the top performance of your shaver, make sure you clean it regularly and replace its shaving heads at the recommended time.

Shaving heads

- We advise you to replace your shaving heads every two years. Always replace with HQ4 + Philips shaving heads. (Fig. 18)

Cleaning

- Use Cleaning Spray (HQ110, not available in some countries) to clean the shaving heads thoroughly.

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 19).
- Batteries contain substances that may pollute the environment. Do not throw away empty batteries with the normal household waste, but dispose of them at an official collection point for batteries. Always remove the batteries before you discard and hand in the appliance at an official collection point (Fig. 20).

Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Guarantee restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international guarantee because they are subject to wear.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Centre in your country.

쉐이빙 헤드

- 쉐이빙 헤드는 2년에 한 번씩 교체하는 것이 좋습니다. 반드시 HQ4 + 필립스 쉐이빙 헤드로 교체하십시오. (그림 18)

청소

- 클리닝 스프레이(HQ110, 일부 국가에서는 사용할 수 없음)를 사용하여 쉐이빙 헤드를 세척하십시오.

환경

- 수명이 다 된 제품은 일반 가정용 쓰레기와 함께 버리지 마시고 지정된 재활용 수거 장소에 버리십시오. 이런 방법으로 환경 보호에 동참하실 수 있습니다 (그림 19).
- 배터리는 환경 오염 물질을 포함하고 있습니다. 배터리는 일반 가정용 쓰레기와 함께 버리지 마시고 지정된 배터리 분리 수거함에 버리십시오. 제품을 버리기 전에 항상 배터리를 분리하여 지정된 수거함에 버려 주십시오 (그림 20).

품질 보증 및 서비스

보다 자세한 정보가 필요하시거나, 사용상의 문제가 있을 경우에는 필립스전자 홈페이지 (www.philips.co.kr)를 방문하거나 필립스 고객 상담실로 문의하십시오. 전국 서비스센터 안내는 제품 보증서를 참조하십시오. *(주)필립스전자: (02)709-1200 *고객 상담실: (080)600-6600(수신자부담)

보증 제한

쉐이빙 헤드(안쪽 날 및 바깥날)는 소모품이므로 보증에 해당되지 않습니다.

문제 해결

이 장은 제품을 사용하면서 가장 일반적으로 경험하게 되는 문제와 그 해결 방법을 제시합니다. 발생한 문제를 아래 정보로 해결할 수 없는 경우에는 필립스 고객 상담실로 문의하십시오.

문제점	가능한 원인	해결책
면도기가 예전처럼 잘 작동하지 않습니다.	면도기가 깨끗하게 청소되지 않았습니다.	면도기를 깨끗이 청소하십시오(‘청소 및 유지관리’ 란 참조).
긴 치모가 쉐이빙 헤드에 걸렸을 수 있습니다.		안쪽 날과 바깥날을 면도기와 함께 제공된 청소용 브러시로 청소하십시오(‘청소 및 유지관리’ 란 참조).
쉐이빙 헤드가 손상 또는 마모되었습니다.		쉐이빙 헤드를 교체하십시오(‘교체’ 란 참조).
전원 슬라이드를 위로 옮려도 면도기가 켜지지 않습니다.	배터리가 방전되었습니다.	배터리를 교체하십시오(‘배터리 삽입’ 란 참조).

BAHASA MELAYU

Pengenalan

Tahniah atas pembelian anda, dan selamat datang ke Philips! Untuk mendapat manfaat sepenuhnya daripada sokongan yang ditawarkan oleh Philips, daftarkan produk anda di www.philips.com/welcome.

Penting

Baca manual pengguna ini dengan teliti sebelum anda menggunakan perkakas dan simpan ia untuk rujukan masa depan.

Amaran

- Pastikan perkakas sentiasa kering.
- Simbol ini bermakna:Tidak dibenarkan membersihkan perkakas di bawah air paip yang mengalir. (Gamb. 1)
- Perkakas ini tidak dimaksudkan untuk digunakan oleh orang (termasuk kanak-kanak) yang kurang upaya dari segi fizikal, deria atau mental, atau kurang berpengalaman dan pengetahuan, kecuali mereka telah diberi pengawasan atau arahan berkenaan penggunaan perkakas ini oleh orang yang bertanggungjawab atas keselamatan mereka.
- Kanak-kanak hendaklah diawasi untuk memastikan bahawa mereka tidak bermain dengan perkakas ini.

Awas

- Guna dan simpan perkakas pada suhu antara 5°C dan 35°C.
- Keluarkan bateri jika anda tidak akan menggunakan perkakas selama sebulan atau lebih.

Medan elektromagnet (EMF)

Perkakas Philips ini mematuhi semua standard berkenaan medan elektromagnet (EMF). Jika perkakas ini dikendalikan dengan betul dan mengikut arahan dalam manual pengguna ini, ia selamat untuk digunakan berdasarkan bukti saintifik yang terdapat pada hari ini.

Bersedia untuk menggunakan

Memasukkan bateri

Pastikan tangan anda kering semasa anda memasukkan bateri.

Perkakas ini menggunakan dua bateri jenis R6 AA 1.5 volt (tidak dibekalkan). Sebaik-baiknya gunakan bateri beralkali Philips.

- 1 Tolak rusuk tutup petak bateri (1) lalu angkat tutup daripada perkakas (2). (Gamb. 2)

- 2 Letak dua bateri di dalam petak bateri (Gamb. 3).

Pastikan penunjuk + dan - pada bateri sepadan dengan penunjuk di dalam petak bateri.

Pencukur tidak berfungsi jika bateri tidak dipasang dengan betul.

- 3 Kembalikan tutup petak bateri ke atas perkakas ('klik'). (Gamb. 4)

Tutup hanya muat pada perkakas dalam satu cara sahaja.

Untuk mengelak kerosakan yang berpunca daripada kebocoran bateri:

- jangan dedahkan perkakas pada suhu yang melebihi 35°C;
- Keluarkan bateri jika anda tidak akan menggunakan perkakas selama sebulan atau lebih.
- jangan biarkan bateri kosong di dalam perkakas.

Masa pencukuran tanpa kord

Dua bateri yang baru memberi masa pencukuran tanpa kord selama 60 minit.

Menggunakan perkakas

Pencukuran

- 1 Tekan kunci suis (1) dan tolak gelangsar hidup/mati ke atas (2) untuk menghidupkan pencukur (Gamb. 5).

- 2 Gerakkan kepala pencukur dengan cepat di atas permukaan kulit anda. Pastikan gerakan lurus dan membuat dilakukan (Gamb. 6).

Hasil pencukuran yang terbaik akan terhasil jika muka anda kering. Kulit anda mungkin memerlukan 2 atau 3 minggu sebelum biasa dengan sistem pencukuran Philips.

- 3 Tolak gelangsar hidup/mati ke bawah untuk mematikan pencukur.

- 4 Pasang semula penutup pelindung pada pencukur setelah setiap penggunaan untuk mengelakkan kerosakan (Gamb. 7).

Pembersihan dan penyelenggaraan

Pembersihan yang tetap menjamin prestasi pencukuran yang lebih baik.

- Untuk hasil pembersihan terbaik, kami menasihatkan anda agar menggunakan Semburan Pembersih Philips (HQ110). Semburan Pembersih Philips tidak boleh didapati di China.

Anda juga boleh membersihkan pencukur dengan cara yang berikut:

Setiap minggu: unit pencukur dan ruang rambut

- 1 Matikan pencukur.

- 2 Bersihkan bahagian atas perkakas dengan berus pembersih yang dibekalkan (Gamb. 8).

- 3 Tekan butang pelepas (1) dan tanggalkan unit pencukur (2) (Gamb. 9).

- 4 Bersihkan bahagian dalam unit pencukur dan ruang rambut dengan berus pembersih (Gamb. 10).

- 5 Kembalikan unit pencukur kepada pencukur ('klik') (Gamb. 11).

Setiap dua bulan: kepala pencukur

- 1 Matikan pencukur.

- 2 Tekan butang pelepas (1) dan tanggalkan unit pencukur (2) (Gamb. 9).

- 3 Tolak bahagian tepi spring tengah ke arah satu sama lain (1) lalu angkat rangka penahan keluar daripada unit pencukur (2) (Gamb. 12).

- 4 Luncur keluarkan kepala pencukur dari rangka penahan.

Pegang bahagian bawah kepala pencukur untuk mengelakkan pemotong daripada terjatuh.

- 5 Tanggalkan dan bersihkan kepala pencukur satu demi satu (Gamb. 13).

Nota: Jangan bersihkan lebih dari satu pemotong dan adangan pada sesuatu masa, kerana setiap set adalah berpadanan. Jika anda tercampur adukkan set pemotong dan adangan dengan tidak sengaja, ia mungkin mengambil masa sehingga beberapa minggu sebelum mutu pencukuran terbaik dapat dicapai semula.

3 使用后，向下推动开/关滑钮关闭剃须刀电源。

4 每次使用后，盖上剃须刀保护盖，以防损伤剃须刀头。（图 7）

■ 清洁和保养

为保证更好的剃须效果，剃须刀必须定期清洗。

- 为了获得最佳的清洁效果，建议您使用飞利浦清洁喷雾剂（HQ110）。飞利浦清洁喷雾剂未在中国提供。

您也可以用下列方式清洁剃须刀：

每周：剃须刀头组件和胡茬储藏室

1 关闭剃须刀。

2 先用随附的清洁刷清洁产品顶部。（图 8）

3 按下释放钮（1），取下剃须刀头组件（2）。（图 9）

4 使用清洁刷清洁剃须刀头组件内侧和胡茬储藏室。（图 10）

5 将剃须刀头组件重新安装到剃须刀上（可听到“咔哒”一声）。（图 11）

每两个月：清洁剃须刀头

1 关闭剃须刀。

2 按下释放钮（1），取下剃须刀头组件（2）。（图 9）

3 捏住中央弹簧的两侧（1），然后向上提起固定架，将其从剃须刀头组件中取出（2）。（图 12）

4 将剃须刀头滑离固定架。

用手指保护剃须刀头的底部，以防刀片掉出。

5 逐个拆下和清洁剃须刀头。（图 13）

注意：不要同时清洁多组刀片和网罩，因为它们都是相互匹配的。如果不小心将刀片和网罩弄混，则需要数周时间才能恢复产品的最佳剃须性能。

6 用清洁刷的短毛一侧清洁刀片。（图 14）

按箭头方向仔细刷净。

7 用清洁刷清洁网罩。（图 15）

8 滑动剃须刀头，将其重新安装到固定架上，然后将固定架重新安装到剃须刀头组件上。

9 将剃须刀头组件重新安装到剃须刀上。（图 11）

提示：如需彻底清洁，则需每六个月将剃须刀头浸入脱脂液（如酒精）清洗。按照上述步骤 1 至 4 取下剃须刀头。清洗完成后，向网罩内的中心点滴入一滴缝纫机油，以防剃须刀头磨损。

■ 存储

- 使用后请盖上剃须刀保护盖，以防受损。（图 7）

■ 更换

每两年更换一次刀头以获得最佳的剃须效果。

损坏或磨损的剃须刀头只能用 HQ4 + 飞利浦剃须刀头更换。

1 关闭剃须刀。

2 按下释放钮（1），取下剃须刀头组件（2）。（图 9）

3 捏住中央弹簧的两侧（1），然后向上提起固定架，将其从剃须刀头组件中取出（2）。（图 16）

4 将剃须刀头滑离固定架。

5 将新的剃须刀头滑入固定架。（图 17）

6 将固定架重新安装到剃须刀头组件上。（图 11）

7 将剃须刀头组件重新安装到剃须刀上（可听到“咔哒”一声）。

■ 附件

为了保持剃须刀的最佳性能，请确保定期清洁并在推荐的时间更换剃须刀头。

剃须刀头

- 建议您每两年更换一次剃须刀头。务必使用 HQ4 + 飞利浦剃须刀头进行更换。（图 18）

清洁

- 使用清洁喷雾剂（HQ110，某些国家不可用）彻底清洁剃须刀头。

■ 环保

- 弃置产品时，请不要将其与一般生活垃圾堆放在一起；应将其交给官方指定的回收中心。这样做有利于环保。（图 19）

- 电池包含可能污染环境的物质。不要将废电池和普通生活垃圾一同丢弃，而应交给正式的电池收集点处理。丢弃产品时，一定要将电池取出，并将产品送到官方指定的回收站（图 20）

■ 保修与服务

如果您需要服务或更多信息，或者有任何疑问，请访问飞利浦网站：www.philips.com。您也可与您所在地的飞利浦客户服务中心联系（可从全球保修卡中找到其电话号码）。如果您的所在地没有飞利浦客户服务中心，可与当地的飞利浦经销商联系。

保修条款

由于剃须刀头（刀片和网罩）属于易磨损物品，因此不在国际保修条款的涵盖范围之列。

■ 故障种类和处理方法

本章归纳了使用本产品时最可能遇到的问题。如果您无法根据下面的信息解决问题，请联系您所在国家/地区的飞利浦客户服务中心。

问题	可能的原因	解决方法
剃须刀的剃须效果没有以前好。	没有正确清洁剃须刀。	彻底清洁剃须刀（见“清洁和保养”一章）。
过长的胡须堵塞了剃须刀头。	用随附的清洁刷清洁刀片和网罩（见“清洁和保养”一章）。	
剃须刀头已损坏或磨损。	更换剃须刀头（见“更换”一章）。	
向上推动开/关滑钮时剃须刀不工作。	电池已耗尽。	更换电池（见“插入电池”一章）。