

PHILIPS

AVENT

SCD730, SCD731
SCD733, SCD734
SCD735



User manual

Table of Contents

Important safety information	3
IMPORTANT	3
Introduction	6
Display of the parent unit (Fig. 1).....	6
Preparing for use	7
Baby unit.....	7
Parent unit	7
Using the baby monitor.....	7
Positioning the baby monitor.....	7
Linking parent unit and baby unit.....	8
Functions and feedback on the baby unit	9
Nightlight.....	9
Lullaby function.....	9
Projector	10
Paging the parent unit.....	10
Battery status light.....	10
Functions and feedback on the parent unit	11
Soothing menu.....	11
Volume.....	13
Talk function.....	14
Night dim mode	14
Baby unit battery low alert.....	14
Battery status indications.....	14
Menu of the parent unit.....	15
Navigating the menu	15
Sensitivity	15
Eco Max mode	16
Feed timer	17
Room temperature	18
Cry alert.....	19
Clock.....	19
Language	19
Key lock.....	20
Environmental information	20
Recycling.....	20
Support	20

Important safety information

Read this important information carefully before you use the appliance, and save it for future reference.

IMPORTANT

This baby monitor is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.

Never leave your baby alone in your home. Always make sure there is someone present to look after the baby and take care of its needs.

Disclaimer

Please note that you use this baby monitor at your own risk. Koninklijke Philips N.V. and its subsidiary companies are not responsible for the operation of this baby monitor or your use of it and therefore do not accept any liability in connection with your use of this baby monitor.

Danger

- Never immerse any part of the baby monitor in water or any other liquid. Do not place the appliance where water or any other liquid can drip or splash onto it. Never use the baby monitor in moist places or close to water.
- Never put any object on top of the baby monitor and do not cover it. Do not block any ventilation openings. Install according to the manufacturer's instructions.

Warning

- Long cable. Strangulation hazard!
- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.
- Only use the adapter supplied.
 - Model: S005Bxy0600050
 - xy=NV(EU plug) or xy=NB(UK plug)
 - Rating: Input 100-240 V~ 50/60 Hz, 0.15 A
Output: 6.0 V $\overline{=}$ 0.5 A, 3 W
 - Average active efficiency: 74.38%
 - No-load power consumption (W): 0.1 W LEVEL VI
 - Off mode power consumption: Baby unit: < 0.3W. Parent unit: < 0.3W (< 1 min).
- Do not modify or cut off any part of the adapter and its cord, as this causes a hazardous situation.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Protect the mains cord from being walked on or pinched particularly at plugs, and the point where they exit from the appliance.
- Make sure that you place the baby monitor in such a way that its cord does not obstruct a doorway or passage. If you place the baby monitor on a table or low cabinet, do not let the mains cord hang over the edge of the table or cabinet. Make sure the cord does not lie on the floor where it presents a tripping hazard.
- Keep the packaging materials (plastic bags, cardboard buffers, etc.) out of the reach of children, as they are not a toy.
- To prevent electric shock, do not open the housing of the baby unit or parent unit.

Battery safety instructions

- Only use the product for its intended purpose. Read this information carefully before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. Accessories supplied may vary for different products.
- Charge, use and store the product at a temperature between 0 °C and 40 °C.
- Make sure to use the following batteries for SCD710/SCD711/SCD713/SCD720/SCD721/SCD723/SCD730/SCD731:
 - Parent Unit: use by pack batteries (Philips 130AAHC 1.2V, 1300 mAh).
 - Baby Unit: use certified batteries (1.5V AA R6 alkaline non-rechargeable batteries, or 1.2V AA HR6 Ni-HM type 1300 mAh (maximum) rechargeable batteries).
- Make sure to use the following batteries for SCD715/SCD725/SCD733/SCD734/SCD735:
 - Parent Unit: use by pack batteries (GP 180AAHC 1.2V, 1800 mAh).
 - Baby Unit: use certified batteries (1.5V AA R6 alkaline non-rechargeable batteries, or 1.2V AA HR6 Ni-HM type 1800 mAh (maximum) rechargeable batteries).
- For Parent Unit, only use the rechargeable battery provided with parent unit. Do not recharge non-rechargeable batteries in the parent unit.
- For Baby Unit, recharge the rechargeable batteries in a separate battery charger.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- Always keep coin/button cell batteries out of reach of children. Swallowing these batteries can result in serious injury or death.

- If the product becomes abnormally hot or smelly, changes colour or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eye. If this occurs, immediately rinse well with water and seek medical care.
- When you handle batteries, make sure that your hands, the product and the batteries are dry.
- Insert batteries with the + and - poles pointing in the direction indicated in the battery compartment or holder.
- Do not mix different brands and types of batteries, do not mix new and used batteries and do not use batteries with different date codes.
- Remove batteries from the product if you are not going to use it for some time.
- To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminium foil. Tape battery terminals or put batteries in a plastic bag before you discard them.
- Do not leave empty disposable batteries inside the product.
- Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.
- Replace the rechargeable battery when the battery capacity declines significantly.

Caution


- Do not install the appliance near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Make sure that your hands are dry when you handle adapters, plugs and the mains cord.
- All required markings on the baby unit, parent unit and power adapter are located on the bottom of the baby unit, parent unit and power adapter.

Declaration of conformity

Hereby, Philips Consumer Lifestyle B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the EC Declaration of Conformity (DoC) is available online at www.philips.com/support.

Compliance with EMF

This product complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

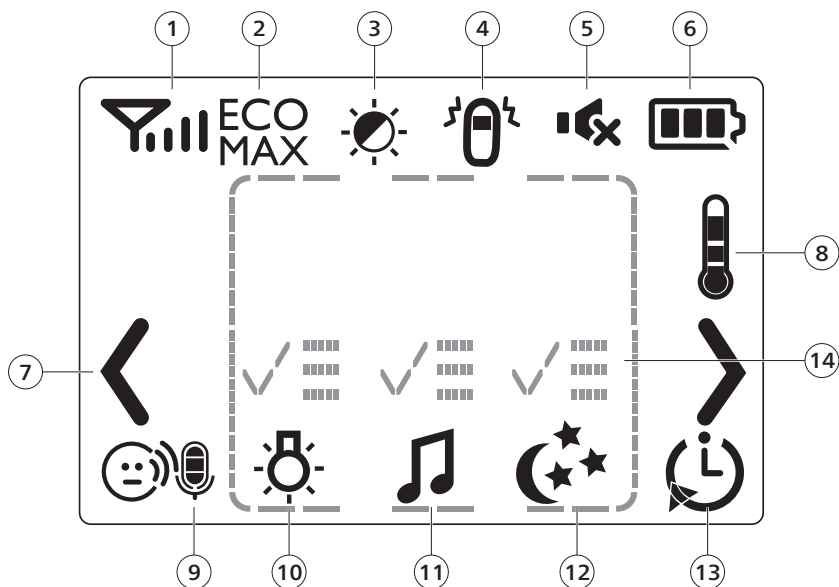

Introduction

Go to www.philips.com/welcome to register your product and to read the detailed user manual.

Display of the parent unit (Fig. 1)

- 1 Signal strength indicator
- 2 Eco Max indicator
- 3 Night dim mode symbol
- 4 Cry alert indicator
- 5 Mute symbol
- 6 Battery status indicator
- 7 Navigation arrow
- 8 Temperature symbol
- 9 Microphone sensitivity indicator
- 10 Nightlight symbol
- 11 Lullaby symbol
- 12 Projector symbol
- 13 Timer or timer repeat symbol
- 14 Soothing menu screen

Preparing for use

IMPORTANT: Read the important safety information carefully before you use the baby monitor and keep them for future reference.

Baby unit

We advise you to use the baby unit connected to the mains. To guarantee automatic power backup in case of mains failure, you can insert four 1.5V AA alkaline batteries (not included).

Recharge the rechargeable batteries in a separate battery charger. The baby unit does not have a charging function and rechargeable batteries discharge slowly when they are not in use.

Parent unit

The parent unit runs on two rechargeable batteries that are supplied with the baby monitor. Charge the parent unit before you use it for the first time and when the batteries are low.

Please note that for the SCD730 / SCD731/ SCD733/xx, you have to charge the parent unit for the full 10 hours to have a cordless operating time of 18 hours. For the SCD734 / SCD735 and SCD733/26: the charging time is 14 hours and the operating time is 25 hours.

Note: When you start using the baby monitor, it takes 4 charge and discharge cycles before the rechargeable batteries reach their full capacity.



Using the baby monitor

Positioning the baby monitor

Keep the baby unit out of the reach of the baby. Never place the baby unit inside the baby's bed or playpen.

- Because the cord of the baby unit presents a potential strangulation hazard, make sure that the baby unit and its cord are at least 1 metre/3.5 feet away from your baby.
- To prevent a high-pitched sound from one or both units, make sure that the parent unit is at least 1 metre/3.5 feet away from the baby unit.

Linking parent unit and baby unit

- 1 Press and hold the  button on the baby unit for 2 seconds until the power-on light goes on.
- 2 Press and hold the  button on the parent unit for 2 seconds until the display lights up. The ,link' light on the parent unit starts flashing red and the message ,I AM LINKING' appears on the display.
When the parent unit and baby unit are linked, the ,link' light turns solid green. The signal strength indicator and the message ,LINKED' appear on the display.
If no connection is established, the message ,NOT LINKED' is displayed and the parent unit starts and the parent unit starts to beep.

What to do if no link is established

- If the parent unit is out of range, place it closer to the baby unit, but not closer than 1 metre/3.5 feet.
- If the baby or parent unit is too close, <2 m/6.5 ft away from another DECT appliance (e.g. a cordless phone), switch off this appliance or move the unit away from this appliance.
- If the baby unit is switched off, switch it on.

Operating range


- The operating range is 330 metres/1000 feet outdoors and up to 50 metres/150 feet indoors.
- The operating range of the baby monitor varies depending on the surroundings and factors that cause interference. Wet and moist materials cause so much interference that the range loss is up to 100%. For interference from dry materials, see the table below.

Dry materials	Material thickness	Loss of range
Wood, plaster, cardboard, glass (without metal, wires or lead)	< 30 cm (12 in)	0-10 %
Brick, plywood	< 30 cm (12 in)	5-35 %
Reinforced concrete	< 30 cm (12 in)	30-100 %
Metal grilles or bars	< 1 cm (0.4 in)	90-100 %
Metal or aluminium sheets	< 1 cm (0.4 in)	100 %


Functions and feedback on the baby unit


Nightlight

The nightlight produces a soft glow that comforts your baby.


- 1 Press the  button on the baby unit to switch the nightlight on or off.

Lullaby function


- 1 Press the  button on the baby unit to play the last selected lullaby. The selected lullaby repeats for the set time.

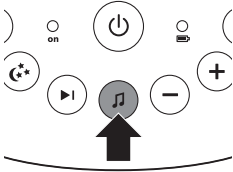


- 2 Press the  button to select another lullaby from the list.

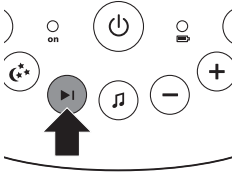

- 3 To adjust the sound level of the lullaby, press the volume + or the volume – button the baby unit.

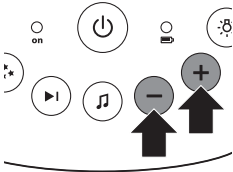



Note: You can only set the loudspeaker volume on the baby unit when a lullaby is playing. If you set the volume for the lullaby higher, the sound will also be louder when you use the talk function on the parent unit.

- 4 To stop lullaby playing, press the  button on the baby unit.

Projector

You can soothe your baby with coloured light patterns projected on the ceiling by switching on the projector.

- 1 Press the projector on/off button to switch on the projector. The projector symbol appears on the display of the parent unit.

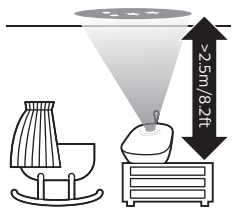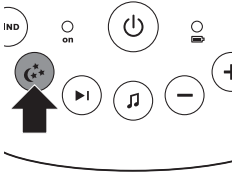


- 2 There are six different patterns. The first pattern fades in to full intensity in 2 seconds. It is projected for 8 seconds and then fades out for 2 seconds while the next pattern fades in. Each pattern is projected for 10 seconds. The patterns are repeated for the set time.
- 3 To switch off the projector, press the projector on/off button again.

Paging the parent unit

If you have lost the parent unit, you can use the FIND button on the baby unit to locate the parent unit. This function only works when the parent unit is switched on.

- 1 Press FIND on the baby unit. The parent unit produces a paging alert tone.
- 2 To stop the paging alert tone, press FIND on the baby unit again or press any button on the parent unit. The paging alert tone stops automatically after 2 minutes.

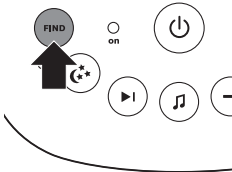

Battery status light


- 1 The battery status light is solid green when the baby unit is operating on battery power and the batteries contain enough energy.
- 2 The battery status light flashes red quickly when the batteries run low while the baby unit is operating on battery power. Replace the batteries when they run low.

Functions and feedback on the parent unit


Soothing menu

The parent unit has a separate soothing menu for all soothing features: nightlight, lullaby and projector. To open the soothing menu, press the soothing button. This screen allows you to operate the nightlight, the lullabies and the projector on the baby unit remotely.


1 To open the soothing menu, press the soothing button.

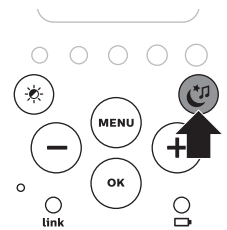


2 Use the + and - buttons to point the arrow to a soothing feature.

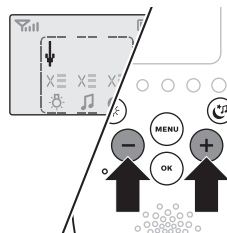

3 To switch on a soothing feature when it is off or to switch it off when it is on, press OK. When the feature is on, there is a tick above the symbol of the feature. When the feature is off, there is a cross above the symbol of the feature.

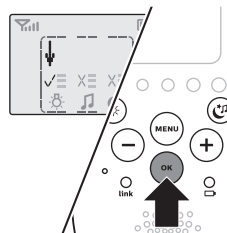

4 To open the menu with options for the feature, move the arrow over the options field and press OK. Use the - and + buttons to select items in the options field.

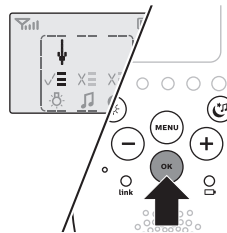

5 To leave the soothing menu, press the soothing button.

 
Nightlight


This soothing feature allows you to switch the nightlight on or off and to set the nightlight timer.

- 1 Select the nightlight feature and open the menu with nightlight options.




- 2 You can set the nightlight timer for 5 to 20 minutes or you can switch on the nightlight continuously. Press OK to confirm. The nightlight symbol appears on the display.

If you set the nightlight timer, the nightlight switches off automatically. If you switch on the nightlight continuously, switch it off in the soothing menu or by pressing the  button on the baby unit.

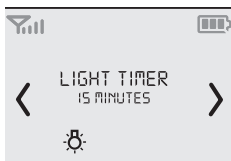

Lullaby

 This soothing feature allows you to select the lullaby playing options and set the lullaby timer.


- 1 Select the lullaby feature and open the menu with lullaby options.
- 2 In the lullaby options menu, you can select a lullaby from the list of pre-stored lullabies. You can also select 'Play all' to play all pre-stored lullabies.
- 3 You can set the lullaby timer for 5 to 20 minutes or you can choose to play lullabies continuously. Press OK to confirm the timer setting. The lullaby symbol and the lullaby played are shown on the display.
If you set the timer, the lullaby function switches off after the time set. If you choose play continuously, switch off the lullaby function in the soothing menu or by pressing the  button on the baby unit.



Projector

This soothing feature allows you to switch on the projector on the baby unit and to program the duration of projection.

- 1 Select the projector feature and open the menu with projector options.
- 2 To access the projector options, point the arrow at the options field and press OK.

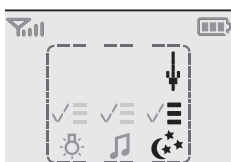



- 3 You can set the projector timer for 5 to 20 minutes or you can switch on the projector continuously. Press OK to confirm. The projector symbol appears on the display.

If you set the projector timer, the projector switches off automatically. If you switch on the projector continuously, switch off the projector in the soothing menu or by pressing the projector button on the baby unit.

Volume

The volume can be set if the menu is not active. There are seven volume levels and a 'volume off' setting.

Setting the volume level


- 1 Press the + button or the - button once.
The current volume level appears on the display.
- 2 Press the + button to increase the volume or press the - button to decrease the volume.
If no button is pressed for more than 2 seconds, the volume level indication disappears from the display and the volume setting is saved.

Volume off


Below the lowest volume setting, there is a 'volume off' setting.

- 1 Press the + button or the - button once.
The current volume level appears on the display.
- 2 Press and hold the - button for more than 2 seconds to set the volume to off.

The message 'MUTE' and the mute symbol appear on the display. Only the sound level lights show that the baby produces sounds.

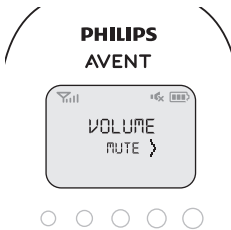

Talk function

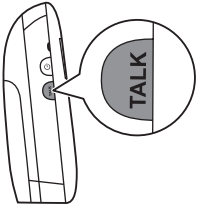


- 1 If you want to comfort your baby, press TALK on the parent unit and talk clearly into the microphone on the front from a distance of 15-30 cm (0.5-1ft).

Note: If you have set the volume of the lullaby higher on the baby unit, the sound will also be louder when you use the talk function on the parent unit.

- 2 Release TALK when you have finished talking.

Night dim mode

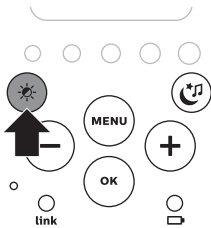

In night dim mode, the light intensity of the lights and the display is reduced and the volume of alert sounds is decreased.

- 1 Press the ☀ button to switch on the night dim mode.
- 2 Press the ☀ button again to switch back to normal operating mode.

Baby unit battery low alert

- 1 When the baby unit runs on battery power and its batteries are low, the parent unit beeps and the text 'BABY UNIT CHANGE BATTERIES' appears on the display.
- 2 If you do not replace the batteries in time, the link with the baby unit will be lost.

Battery status indications

Battery low

When the rechargeable batteries are low, 'BATTERY LOW' appears on the display, the status indicator is empty and flashes, and the parent unit beeps. The remaining operating time is at least 30 minutes.

Battery empty

- 1 If the rechargeable batteries are almost empty, the battery status light flashes red quickly.
- 2 If you do not connect the parent unit to the mains, it switches off.




Menu of the parent unit


Navigating the menu

Note: Some menu functions only work when the baby unit and the parent unit are linked.

- 1 Press the MENU button to open the menu and to make the first menu option appear.

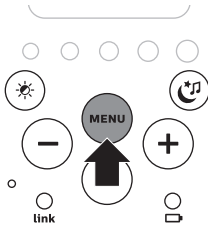


- 2 Use the + button to go to the next option or the - button to go to the previous option. The arrow on the display indicates in which direction you can navigate.

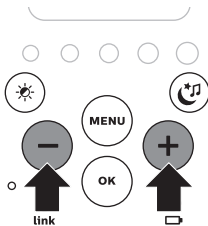

- 3 Press OK to confirm your selection.

Note: Press the MENU button if you want to leave the menu without making any changes. If there is no input in the menu for more than 20 seconds, the menu closes automatically.

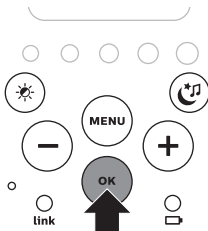





Sensitivity

This option in the parent unit menu allows you to set the microphone sensitivity of the baby unit.

The microphone sensitivity determines what noise level the baby unit picks up, e.g. you will want to hear when your baby cries, but you may be less interested in its babbling.

- 1 Select 'Sensitivity' in the menu with the + and - buttons and press OK to confirm.
- 2 Use the + and - buttons to increase or decrease the microphone sensitivity. The number of filled segments shows the sensitivity level selected. Press OK to confirm the setting.

Sensitivity levels and indications

Icon	Sensitivity	Description
	highest	Hear everything from your baby. The speaker of the parent unit is continuously on.
	high	Hear all sounds from soft babbling and louder. If your baby does not make any sound, the speaker of the parent unit is off.
	medium	Hear sounds from soft cries and louder. If your baby makes softer sounds, the speaker of the parent unit does not go on.
	low	The speaker of the parent unit only goes on if the baby makes loud sounds, for instance because it is crying.

Eco Max mode

Smart Eco is a standard feature on this baby monitor. It automatically reduces the DECT signal from the baby unit to save energy. To save even more energy, activate the Eco Max mode. In this mode, the DECT signal of the baby unit is switched off as long as the baby does not make a sound.

Caution: In Eco Max mode, the parent unit receives feedback from the baby unit with a delay. When your baby makes a sound, the baby unit first has to reactivate radio transmission before it can send feedback to the parent unit.


Please note the following:

- In Eco Max mode you do not receive feedback when the parent unit is out of range of the baby unit. You can check the link by pressing any button on the parent unit.
- The Eco Max mode cannot be activated if the microphone sensitivity is set to the highest level.

Activating Eco Max mode

- 1 Select 'Eco Max' in the menu with the + and - buttons and press OK to confirm.
- 2 When the display shows 'Turn On', press OK to switch on the Eco Max mode.
- 3 The warning message 'No alert if out of range, OK?' appears on the display. Press OK to confirm.

Note: The warning message scrolls across the display twice. If you do not press OK, the parent unit leaves the menu and the Eco Max mode remains off.

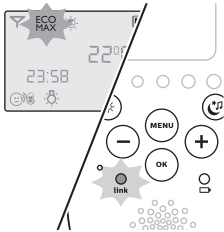

- 4 The Eco Max indication flashes on the display. The 'link' light flashes green slowly when the baby unit does not transmit any signals to the parent unit.
- 5 When the parent unit receives a signal from the baby unit because radio transmission has been reactivated, the 'link' light turns solid green.

Deactivating Eco Max mode

- 1 Press the MENU button.
- 2 Use the + and - buttons to select 'Eco Max' and press OK to confirm.
- 3 When the display shows 'Turn Off', press OK to confirm.

Feed timer

You can set the feed timer to alert you that it is time to feed your baby. The timer can be set from 1 minute to 23 hours and 59 minutes.

- 1 To open the feed timer submenu, select 'Feed Timer' in the menu. Press OK to confirm.
- 2 Select 'Set Timer' in the feed timer submenu. Press OK to start setting the timer.
- 3 Set the hour and the minutes and press OK to confirm.
- 4 To start the feed timer, select 'xx:xx Start' in the feed timer submenu. Press OK to confirm. The timer symbol appears on the display and the timer starts counting down.





- 5 When the timer has reached 00:00, the feed timer alert goes off, the timer symbol starts flashing on the display and the message ,TIMER END' scrolls across the display.
- 6 To stop the timer, select ,Stop & Reset' in the feed timer submenu and press OK to confirm.

Setting the feed timer repeat

- 1 To make the feed timer go off after the same set time, select 'Timer repeat' in the feed timer submenu after you have set the timer. Press OK to confirm.
- 2 Choose 'Repeat ON' or 'Repeat OFF' and press OK to confirm. The timer repeat symbol appears on the display.
- 3 If 'Repeat ON' is set, the feed timer starts counting down again after you stop the alert.


Setting a feed timer alert

- 1 To set an alert, select ,Timer Alert' in the feed timer submenu. Press OK to confirm.
- 2 Choose one of the alert options. The options available are sound only, sound and vibration and vibration only.
- 3 Press any key to stop the alert or the alert stops automatically after 2 minutes.
- 4 To stop the timer, select ,Stop & Reset' in the feed timer submenu and press OK to confirm.

Room temperature

A baby sleeps comfortably at a temperature between 16°C/61°F and 20°C/68°F. You can set a minimum and a maximum temperature range and an alert.

- 1 To open the temperature submenu, select ,Temperature' in the menu. Press OK to confirm.
- 2 Select ,Temp Range' in the temperature submenu and press OK to confirm.
- 3 Use the + and - buttons to set the minimum temperature range between 10°C/50°F and 19°C/66°F and the maximum temperature range between 22°C/72°F and 37°C/99°F. Press OK to confirm.
- 4 Select ,Alert' in the temperature submenu. Press OK to confirm.
- 5 Choose one of the alert options. The options available are sound only, sound and vibration, vibration only and display only. Press OK to confirm. The temperature alert symbol appears on the display.
- 6 Select ,Temp Scale' in the temperature submenu. Press OK to confirm.

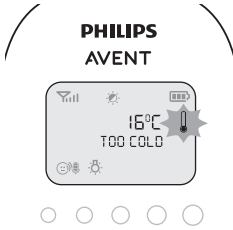

- 7 Select 'Celsius' or 'Fahrenheit' and press OK to confirm. The temperature in the set scale appears on the display.

If the temperature is within the set range, the temperature alert symbol has two segments.

If the temperature is below or above the set range, the temperature alert symbol on the display has only one segment and flashes. The message 'TOO COLD' or 'TOO HOT' appears on the display.

Cry alert



You can set a cry alert to warn you that the baby is crying.

- 1 Select 'Cry alert' in the menu with the + and - buttons. Press OK to confirm.
- 2 When the display shows 'Vibration ON', press OK to confirm. The cry alert indicator appears on the display.
The cry alert goes off when the sound in the baby room is loud enough to make the fourth sound level light go on. The parent unit vibrates and the message 'Cry alert' appears on the display for 4 seconds. The cry alert repeats every 8 seconds until the sound becomes less loud or you deactivate the cry alert.
- 3 To deactivate the cry alert, select 'Cry alert' in the menu. When the display shows 'Vibration OFF', press OK to confirm.

Clock

The default setting for the clock is hidden. You can choose to show the clock and set the clock time in the menu of the parent unit.

- 1 Select 'Set clock' in the menu with the + and - buttons. Press OK to confirm.
- 2 Select 'Show Time' and press OK to confirm.
- 3 Select 'Set the time' and press OK to confirm.
- 4 Set the hour and the minutes and press OK to confirm.
The clock time alternates with other indications in the message field of the display.

Language

You can use this menu option to change the language setting.

- 1 Select 'Set language' in the menu with the + and - buttons. Press OK to confirm.
- 2 Use the + and - buttons to select your language and press OK to confirm.

Key lock

You can activate the key lock to prevent the buttons from being pressed accidentally while you carry the parent unit around.


- 1 To activate the key lock, press OK.
- 2 Press the + button within 2 seconds.

Note: If you do not press the + button within 2 seconds, the instruction remains on the display.

- 3 After you have pressed the + button, the message 'Keys locked' appears on the display.
- 4 To deactivate the key lock, press OK. When the display shows the instruction message, press the + button within 2 seconds.

Notes:

- When you press a button other than OK while the key lock is active, the display goes on and the second line on the display tells you how to deactivate the key lock.
- When you press OK while the key lock is active, the second line on the display tells you what second step is necessary to unlock the buttons.

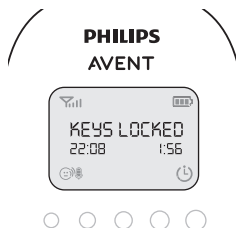

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into two materials: cardboard box and polyethylene (bags, protective foam sheet).

Recycling



This symbol means that electrical products and batteries shall not be disposed of with normal household waste.

Follow your country's rules for the separate collection of electrical products and batteries.

Support

For all product support such as frequently asked questions, please visit www.philips.com/support.

SCD730/SCD731/SCD733/SCD734/SCD735 (EN)




< Sensitivity >	OK		OK
< Eco Max >	OK	Turn On? > < Turn Off?	OK
< Cry Alert >	OK	Vibrate On? > < Vibrate Off?	OK
< Feed Timer >	OK	xx:yy Start? >	OK
		< Set Timer >	OK
		Hr 00:00	OK
		00:30 Min	OK
		< Timer Repeat >	OK
		Repeat ON > < Repeat OFF	OK
		< Timer Alert >	OK
		Sound only > < Sound & Vibe > < Vibrate only < Off	OK
< Temperature >	OK	Temp Range >	OK
		Minimum XX°C	OK
		Maximum YY°C	OK
		< Temp Alert >	OK
		Sound only > < Sound & Vibe > < Vibrate only > < Screen only > < Off	OK
		< Temp Scale >	OK
		Celsius > Fahrenheit	OK
< Set Clock >	OK	Show/Hide >	OK
		Hide Clock > < Show Clock	OK
		< Set The Time >	OK
		Hr 00:00	OK
		00:00 Min	OK
< Set Language >	OK	English > ... < Русский	OK

Press OK =

< =

> =



	Light Timer	OK	5 minutes > < 10 minutes > < 15 minutes > < 20 minutes > < Continuous	OK				
	Lullaby	OK	Play no.1 > < Play no.12 > < > < Play all >	OK	Song Timer	OK	5 minutes > < 10 minutes > < 15 minutes > < 20 minutes > < Continuous	OK
	Proj. timer	OK	5 minutes > < 10 minutes > < 15 minutes > < 20 minutes > < Continuous	OK				

Press OK = 

< = 

> = 

