

PHILIPS

S7735, S7732
S7731



English	3
简体中文	15

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products. The box shows which accessories are supplied with your product and whether your product is bluetooth enabled.

Danger



- Keep the supply unit dry.

Warning

- To charge the battery, only use the detachable supply unit (HQ8505) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the appliance before you clean it under the tap.

4 English

- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Philips Quick Clean Pod cartridge fluid

- Do not swallow.
- Keep out of reach of children.

Caution



- Never immerse the charging stand in water and do not rinse it under the tap.
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- If your shaver comes with a cleaning system, always use the original Philips Quick Clean Pod cartridge.
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.
- Always make sure the cartridge compartment is closed before you use the cleaning system. When the cleaning system is ready for use, do not move it to prevent leakage of cleaning fluid.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use the appliance on chapped skin, open wounds, healing wounds, skin recovering from surgery or if you suffer from a skin disease or skin irritation, such as severe acne, sunburn, skin infection, skin cancer, inflammation, eczema, psoriasis, nylon allergy etc.
- Do not use the cleansing brush attachment if you are taking steroid-based medication, as this may cause irritation or injury.
- If you wear piercings on your face, remove the piercings before you use the click-on attachments or make sure that you do not use the appliance on or near the piercing.
- If you wear jewelry, contact lenses or glasses, remove them before you use the click-on attachments, or make sure that you do not use the appliance on or near jewelry or glasses.
- Be careful when handling your smartphone near water and in moist environments.
- The shortwave radio frequency signals of a Bluetooth® appliance may impair the operation of other electronic and medical devices. Switch off Bluetooth where it is prohibited.
- Do not use the appliance in medical facilities, aircraft, refuelling points, close to automatic doors, automatic fire alarms or other automatically controlled devices.
- Keep this appliance at least 20 cm from pacemakers and other medical devices. Radio waves may impair the operation of pacemakers and other medical devices.

Battery safety instructions

- Only use this product for its intended purpose and follow the general and battery safety instructions as described in this user manual. Any misuse can cause electric shock, burns, fire and other hazards or injuries.
- To charge the battery, only use the detachable supply unit (HQ8505) provided with the product. Do not use an extension cord.
- Charge, use and store the product at a temperature between 5 °C and 35 °C.
- Always unplug the product when it is fully charged.
- Do not burn products and their batteries and do not expose them to direct sunlight or to high temperatures (e.g. in hot cars or near hot stoves). Batteries may explode if overheated.
- If the product becomes abnormally hot, gives off an abnormal smell, changes color or if charging takes much longer than usual, stop using and charging the product and contact your local Philips dealer.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- This product contains a rechargeable battery that is non-replaceable. Do not open the product to replace the rechargeable battery.
- When you handle batteries, make sure that your hands, the product and the batteries are dry.
- To prevent batteries from heating up or releasing toxic or hazardous substances, do not modify, pierce or damage products and batteries and do not disassemble, short-circuit, overcharge or reverse charge batteries.

- To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal object (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.
- If batteries are damaged or leaking, avoid contact with the skin or eye. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Radio Equipment Directive

- S7000 series appliances are equipped with Bluetooth class 2.
- The frequency band in which the Bluetooth on S7000 series appliances operates is 2.4 GHz.
- The maximum radio frequency power radiated in the frequency band in which the S7000 series appliances operate is less than 20 dBm.
- This equipment has been so constructed that the product complies with the requirement of Article 10(2) as it can be operated in at least one EU Member State as examined and the product is compliant with Article 10(10) as it has no restrictions on putting into service in all EU member states.
- Hereby Philips declares that S7000 series appliances are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be consulted at www.philips.com/support.

8 English

General



- This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.
- The Bluetooth® wordmark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Koninklijke Philips N.V. is under license.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the appliance. Before you remove the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

 
Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

Be careful, the battery strips are sharp.


- 1 Twist the shaving head to remove it from the handle.



- 2 Insert a flat-head screwdriver under the rim of the panel and pry off.

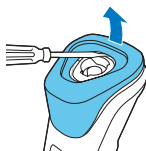

 
- 3 Remove the two screws from the top with a torx or flat-head screwdriver.

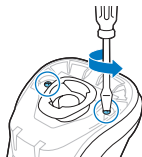


- 4 Slide the front shell off.



 
10 English

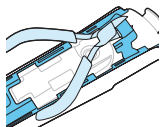

 
5 Break the bridge on top with a wire cutter.

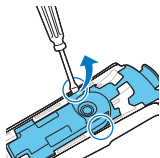

 
6 Insert a flat head screwdriver on either side of the shaver body to release the hooks.

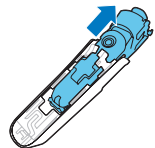


7 Slide the power unit out of the body.

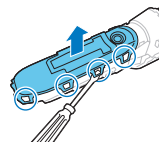 

 8 Bend the snap hooks aside and remove the transparent cover of the power unit.

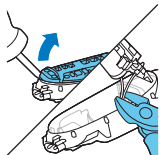

 9 Lift out the battery holder and cut the wires with a pair of cutting pliers or scissors.

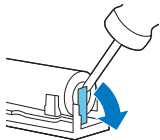

10 Bend the battery tags aside with a pair of cutting pliers or a screwdriver.

11 Remove the rechargeable battery.

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Shaver

Problem	Possible cause	Solution
I cannot connect the shaver.	You have not downloaded the app.	Download the app.
	Your shaver and smartphone are not paired yet.	Pair your shaver and smartphone following the instructions in the app.
	The first pairing attempt failed.	Unpair your shaver and smartphone and try pairing them again.
	Your smartphone cannot find your shaver.	Make sure your smartphone is equipped with Bluetooth 4.1 or higher.

12 English

Problem	Possible cause	Solution
		Make sure Bluetooth is activated on your shaver and smartphone.
		Make sure that your smartphone is within 1 meter of your shaver to enable a Bluetooth connection.
		Make sure your shaver is charged.
I want to use the shaver without the app.		You do not have to connect your shaver with your smartphone before each shave. To get personalized shaving tips, just make sure that you connect it at least once every 20 shaves to synchronize your shave data.
The appliance does not work when I press the on/off button.	The appliance is still attached to the wall socket. For safety reasons, the appliance can only be used without cord.	Unplug the appliance and press the on/off button to switch on the appliance.
	The rechargeable battery is empty.	Recharge the battery.
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.

Problem	Possible cause	Solution
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly or replace them.
The appliance does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads.
	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads thoroughly.
Water is leaking from the bottom of the appliance.	During cleaning, water may collect between the inner body and the outer shell of the appliance.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.

Philips Quick Clean Pod

Problem	Possible cause	Solution
My shaver isn't clean after using the Philips Quick Clean Pod.	You removed the shaver before the cleaning program was finished.	Leave the shaver in the Philips Quick Clean Pod for the full cleaning program. Each cleaning program takes approximately 1 minute. The cleaning icon goes out when the cleaning program is finished.
	The Philips Quick Clean Pod Cartridge needs to be replaced.	Replace the Philips Quick Clean Pod Cartridge.
	The Philips Quick Clean Pod is tilted.	Place the Philips Quick Clean Pod on a flat surface.

14 English

Problem	Possible cause	Solution
My Philips Quick Clean Pod does not switch on.	The Philips Quick Clean Pod is powered by the motor of the shaver.	Place the shaver into the Philips Quick Clean Pod. Switch on the shaver.
	The shaver is connected to the wall socket.	Disconnect the shaver from the supply unit.
	The shaver battery is empty.	Charge the shaver before using the Philips Quick Clean Pod.
My Philips Quick Clean Pod is overflowing.	You regularly use the Philips Quick Clean Pod after rinsing the shaver but not shaking off excess water.	Shake off excess water after rinsing the shaving heads each time before putting the shaver into the Philips Quick Clean Pod.
	You shaved with shaving gel or foam and did not rinse the shaver before using the Philips Quick Clean Pod.	Rinse the shaving heads thoroughly before using the Philips Quick Clean Pod.

Trademarks

Apple, the Apple logo, iPad, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android is a trademark of Google Inc. Google Play and the Google Play logo are trademarks of Google Inc.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Philips Personal Care is under license.

重要安全信息

使用本产品及其附件之前，请仔细阅读本产品重要信息，并妥善保管以供日后参考。随附的附件可能因产品而异。包装盒上会显示产品随附的附件以及产品是否支持蓝牙。

危险



- 保持电源部件干燥。
- 警告符号注释：禁止在打开的水龙头下进行清洗。

警告

- 要给电池充电，请仅使用产品随附的可拆卸电源部件 (HQ8505)。
- 电源部件中包含一个变压器。请勿自行更换电源部件的插头，否则将导致严重后果。
- 本产品也可以由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。切勿让儿童玩弄本产品。不要让儿童在无人监督的情况下对本产品进行清洁和保养。
- 手持部分与电源软线分开后，才能在水中清洗手持部分。

- 使用前，请务必检查产品。请勿使用损坏的产品，否则可能对人体造成伤害。请务必用原装型号更换损坏的部件。

飞利浦快速清洗器滤芯液

- 切勿吞食。
- 请置于儿童接触不到的地方。

注意



- 切勿将充电座浸入水中，也不要来自来水龙头下冲洗。
- 切勿使用温度高于 60° C 的热水冲洗剃须刀。
- 只能将本产品用于用户手册中所示的原定用途。
- 出于卫生的目的，本产品只能供一个人使用。
- 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液体（例如汽油或丙酮）来清洁产品。如果您的剃须刀随附清洁系统，请始终使用飞利浦原装快速清洗器滤芯。
- 清洁系统必须放在稳定、平坦的水平表面上，以防漏液。
- 使用清洁系统前，请始终确保滤芯仓已关闭。
- 清洁系统准备就绪时，切勿移动，以免清洁液漏出。

- 冲洗剃须刀时，水可能从产品底部的插口漏出。这是正常的，而且没有危险，因为所有电子元件都封闭在剃须刀内部的密封电源部件中。
- 请勿在包含电动空气清新器的墙壁插座上或其周围使用电源部件，以免电源部件受到不可修复的损坏。
- 如果皮肤出现皴裂、开放性伤口、正在愈合的伤口、皮肤处于术后恢复期或存在严重粉刺、晒伤、皮肤感染、皮肤癌、发炎、湿疹、牛皮癣、对尼龙过敏等皮肤病或皮肤过敏，请勿使用本产品。
- 如果您正在服用类固醇类药物，请勿使用洁面刷附件，因为这可能会引起过敏或损伤。
- 如果您的面部带有穿环，则需卸下穿环后再使用卡入式附件或确保不要在穿环上或附近使用产品。
- 如果您戴有首饰、隐形眼镜或眼镜，则需取下后再使用卡入式附件或确保不要在首饰或眼镜上或附近使用产品。
- 在靠近水边或在潮湿的环境中使用智能手机时请多加留意。
- 蓝牙产品的短波射频信号可能会影响其他电子和医疗设备的工作。
- 请在禁止蓝牙的场所关闭蓝牙。

- 请勿在医疗机构、飞机舱、加油站，以及靠近自动门、自动火灾报警器或其他自动控制设备的场所使用本产品。
- 请将本产品与心脏起搏器及其他医疗设备之间保持至少 20 厘米的距离。无线电波可能会影响心脏起搏器及其他医疗设备的工作。

电池安全说明

- 仅可将本产品用于原定用途，并应遵循本用户手册中的一般说明和电池安全说明。如有滥用，可能会导致电击、烧伤、火灾和其他危害或伤害。
- 要给电池充电，请仅使用本产品随附的可拆卸电源部件 (HQ8505)。请勿使用延长线。
- 充电、使用和存放本产品的温度应介于 5°C 至 35°C 之间。
- 产品充满电后务必拔下电源插头。
- 切勿燃烧产品及其电池，也不要将其暴露在阳光直射或高温的环境中（例如炎热的汽车内或热炉附近）。如果过热，电池可能会爆炸。
- 如果产品异常发热、发出异味、变色或充电时间比平时长，请停止使用并停止为其充电，并联系您当地的飞利浦经销商。
- 切勿将产品及其电池放置在微波炉中或电磁炉上。

- 本产品包含不可更换的充电电池。切勿拆开本产品更换充电电池。
- 处理电池时，请确保您的双手、产品和电池都是干燥的。
- 为防止电池发热或释放有毒有害物质，切勿改装、刺穿或损坏产品和电池，切勿拆卸电池、使电池短路、过度充电或反向充电。
- 为避免电池拆卸后发生意外短路，切勿让电池端子接触金属物体（例如硬币、发夹、戒指）。切勿用铝箔包裹电池。在丢弃之前，请用胶带将电池端子粘住或将电池放在塑料袋中。
- 如果电池损坏或出现泄漏，请避免与皮肤或眼睛接触。如果不慎接触，请立即用清水冲洗并就医。

电磁场 (EMF)

本 Philips 产品符合所有有关暴露于电磁场的适用标准和法规。

无线电设备指令

- S7000 系列产品配备蓝牙 Class 2。
- S7000 系列产品的蓝牙工作频带为 2.4 GHz。
- S7000 系列产品工作频带内发送的最大射频功率小于 20 dBm。

20 简体中文

- 该设备的构造使产品符合第 10 条第 (2) 款的要求，根据检查，其可以在至少一个欧盟成员国中使用，同时该产品符合第 10 条第 (10) 款的要求，因为其在所有欧盟成员国中使用均不受限制。
- 飞利浦特此声明，S7000 系列产品符合指令 2014/53/EU 中的基本要求和和其他相关规定。有关符合性声明的内容，请参阅 www.philips.com/support。

概述



- 该剃须刀具有防水性能。适合在沐浴或淋浴时使用，也可以放在水龙头下清洗。出于安全原因，该剃须刀在使用时不能连接电线。
- 符号注释：适合于在洗澡或淋浴时使用。允许在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- 电源部件适合在 100 - 240 伏的电源电压下工作。该电源部件可将 100-240 伏的电压转换为 24 伏以下的安全低电压。
- Bluetooth® 文字标志和徽标是归 Bluetooth SIG, Inc. 所有的注册商标，Koninklijke Philips N.V. 对此类商标的任何使用均已获得许可。

回收

- 弃置本产品时，请不要将其与一般生活垃圾放在一起，应将其交给政府指定的回收中心。这样做将有利于环保。
- 此产品包含内置充电电池；请勿将充电电池与一般生活垃圾一起弃置。请您将产品送到官方收集中心或飞利浦服务中心，请专业人士移除充电电池。
- 遵循您的国家/地区有关分类回收电子电气产品和充电电池的规定。正确弃置产品有助于避免对环境和人类健康造成不良后果。

 
拆下充电电池

在废弃器具前，必须将电池从器具中取出。卸下电池之前，请确保本产品与电源断开连接并且电池电量已耗尽。

当您使用工具打开产品时以及在您弃置充电电池时，请采取必要的安全保护措施。


注意，电池带非常锋利。

- 1 旋转剃须刀头，将其从手柄上拆下。

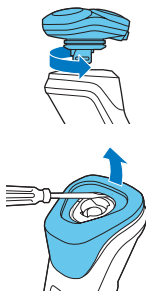

- 2 将平头螺丝刀插入面板边缘下方，然后将其撬出。

 
22 简体中文

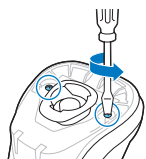


- 3 用梅花螺丝刀或平头螺丝刀卸下顶部的两颗螺丝。



 
- 4 将前壳滑下。

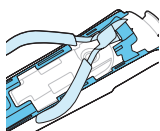


- 5 用钢丝钳剪断顶部的连接片。

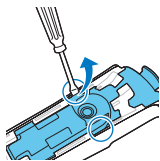 


- 6 将平头螺丝刀插入剃须刀机身一侧以松开钩子。

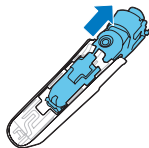 


- 7 将电源部件滑出机身。

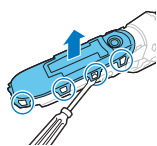 

- 8 将安全钩向外掰，取下电源部件的透明保护盖。

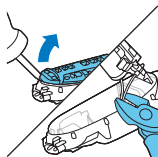 

- 9 拉出电池舱，用钢丝钳或剪刀将电线剪断。

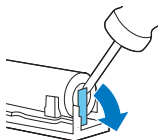 

- 10 用钢丝钳或螺丝刀将电池标签向外掰。
11 卸下充电电池。

保修和支持

如需信息或支持，请访问 www.philips.com/support 或阅读保修卡。


保修条款


由于剃须刀头（刀片和网罩）属于易磨损物品，因此不在国际保修条款的涵盖范围之列。

产品中有害物质的名称及含量						
部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB's 集成电路板	X	O	O	O	O	O
Electrical contact pins 电接触片	X	O	O	O	O	O
Power plug 电源插头	X	O	O	O	O	O
本表格依据SJ/T 11364的规定编制。						
O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。						
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。						

24 简体中文

- 该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。
- 该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。


PHILIPS	
产品：飞利浦电动剃须刀 型号：S7731 额定电压：100-240V~ 额定频率：50/60Hz 额定输入功率：9W 生产日期：请见产品本体 产地：中国广东珠海	IPX4 
CMIIT ID：2020DP2040 SRRC申请单位：飞利浦（中国） 投资有限公司	
珠海经济特区飞利浦家庭电器有限公司 中国珠海市三灶镇琴石工业区 全国顾客服务热线：4008 800 008	
本产品根据国标 GB4706.1-2005， GB4706.9-2008，信部无【2002】 353号制造	

PHILIPS	
产品：飞利浦电动剃须刀 型号：S7732 额定电压：100-240V~ 额定频率：50/60Hz 额定输入功率：9W 生产日期：请见产品本体 产地：中国广东珠海	IPX4 
CMIIT ID：2020DP2039 SRRC申请单位：飞利浦（中国） 投资有限公司	
珠海经济特区飞利浦家庭电器有限公司 中国珠海市三灶镇琴石工业区 全国顾客服务热线：4008 800 008	
本产品根据国标 GB4706.1-2005， GB4706.9-2008，信部无【2002】 353号制造	

PHILIPS

产品：飞利浦电动剃须刀
型号：S7735
额定电压：100-240V~
额定频率：50/60Hz
额定输入功率：9W
生产日期：请见产品本体
产地：中国广东珠海

IPX4



CMIIT ID：2020DP2041
SRRC申请单位：飞利浦（中国）
投资有限公司

珠海经济特区飞利浦家庭电器有限公司
中国珠海市三灶镇琴石工业区
全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005，
GB4706.9-2008，信部无【2002】
353号制造

保留备用

发行日期: 22/4/2020

故障种类和处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无法根据以下信息解决问题，请访问 www.philips.com/support 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

26 简体中文

剃须刀

问题	可能的原因	解决方法
无法连接剃须刀。	应用程序尚未下载。	下载应用程序。
	剃须刀和智能手机尚未配对。	请按照应用程序中的说明将剃须刀和智能手机配对。
	首次尝试配对失败。	请先取消剃须刀与智能手机的配对，并尝试重新配对。
	您的智能手机找不到剃须刀。	请确保您的智能手机配备了蓝牙 4.1 或更高版本。
		请确保您的剃须刀和智能手机上已激活蓝牙。
		确保智能手机与剃须刀之间的距离在 1 米以内，以便启用蓝牙连接。
		请确保剃须刀已充电。

问题	可能的原因	解决方法
我想在没有应用程序的情况下使用本剃须刀。		不必每次剃须前都连接剃须刀和智能手机。要获得个性化的剃须提示，只需确保每剃须 20 次至少连接一次，以便同步剃须数据。
按下开/关按钮时，产品不工作。	本产品仍然连接着电源插座。出于安全原因，本产品在使用时不能连接电线。	拔掉产品插头并按开/关按钮打开产品。
	充电电池的电量已耗尽。	给电池充电。
	旅行锁已被激活。	按住开/关按钮 3 秒钟以禁用旅行锁。
	剃须刀头部件被污染或损坏，导致马达无法运行。	彻底清洁剃须刀头或将其更换。
产品的剃须效果没有以前好。	剃须刀头已损坏或磨损。	更换剃须刀头。
	毛发或污垢堵塞了剃须刀头。	彻底清洁剃须刀头。

28 简体中文

问题	可能的原因	解决方法
水从产品底部漏出。	在清洁过程中，水可能聚集在产品的机身内部与外壳之间。	这是正常现象，而且没有危险，因为所有电子元件都封闭在产品内部的密封电源部件中。
飞利浦快速清洗器		
问题	可能的原因	解决方法
使用飞利浦快速清洗器后，剃须刀依旧不干净。	您在清洁程序结束前卸下剃须刀。	请将剃须刀放在飞利浦快速清洗器中以完成整个清洁程序。每个清洁程序大约需要 1 分钟。清洁程序结束后，清洁图标熄灭。
	需要更换飞利浦快速清洗器滤芯。	更换飞利浦快速清洗器滤芯。
	飞利浦快速清洗器倾斜。	将飞利浦快速清洗器置于平面上。
飞利浦快速清洗器无法启动。	飞利浦快速清洗器由剃须刀的马达驱动。	将剃须刀放入飞利浦快速清洗器中。打开剃须刀。
	剃须刀连接了电源插座。	断开剃须刀与电源部件的连接。

剃须刀电池电量耗尽。

在使用飞利浦快速清洗器前，请给剃须刀充电。

飞利浦快速清洗器溢水。

经常在冲洗剃须刀后但未甩掉多余水分时使用飞利浦快速清洗器。

每次冲洗剃须刀头后都要甩掉多余的水分，然后再将剃须刀放入飞利浦快速清洗器中。

您在用剃须啫喱或剃须泡沫剃须后，并未冲洗剃须刀，就使用飞利浦快速清洗器。

使用飞利浦快速清洗器之前，请彻底冲洗剃须刀头。

 
 
 
 
商标

Apple、Apple 徽标、iPad 和 iPhone 是 Apple Inc. 在美国和其他国家/地区注册的商标。App Store 是 Apple Inc. 的服务商标。



Android 是 Google Inc. 的商标。Google Play 和 Google Play 徽标是 Google Inc. 的商标。

Bluetooth® 文字标志和徽标是归 Bluetooth SIG, Inc. 所有的注册商标，Philips Personal Care 对此类标志的任何使用均已获得许可。





包装盒内有什么？



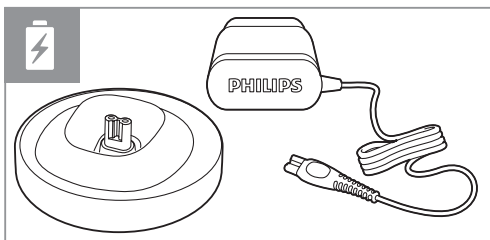
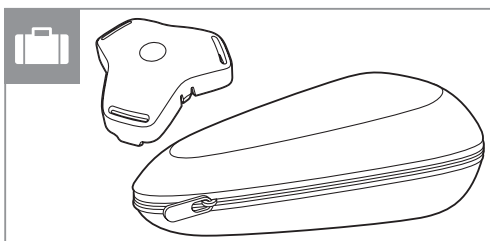
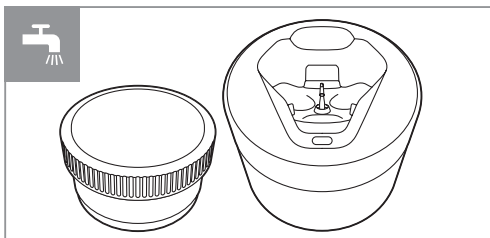
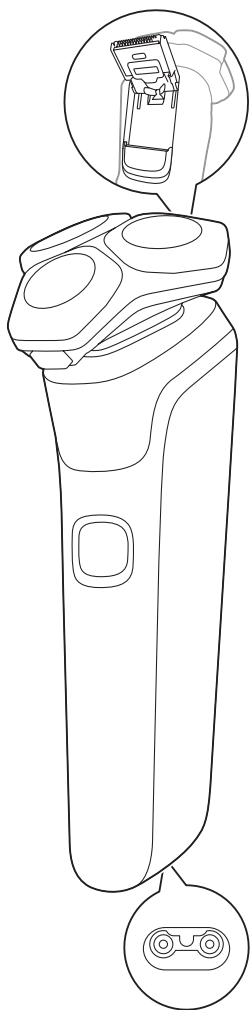









如何将剃须刀和智能手机连接？

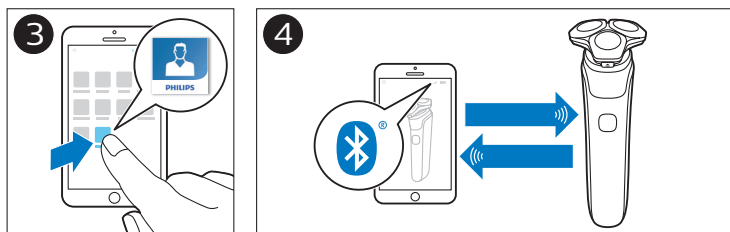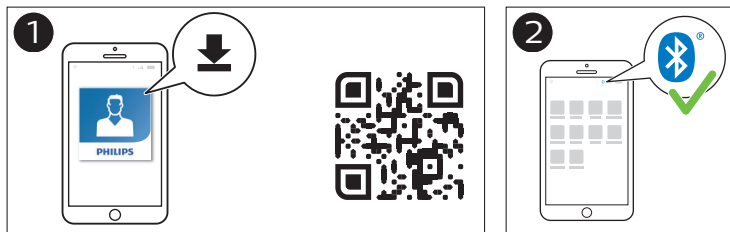  









产品手柄上的图标是什么意思？




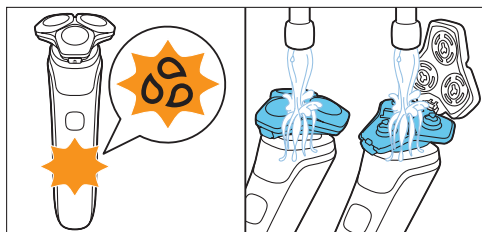 
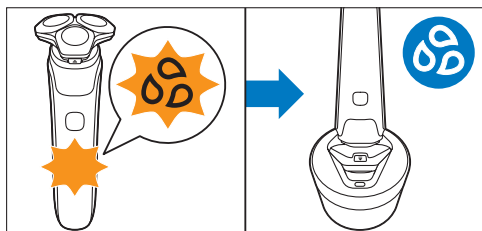 
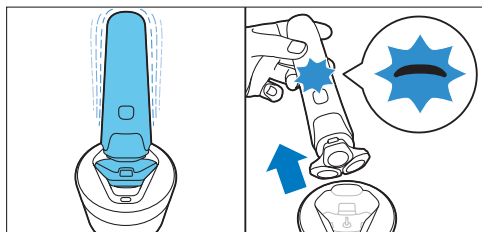 
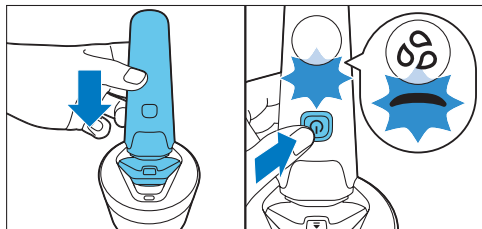 


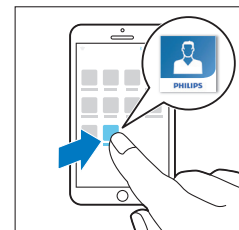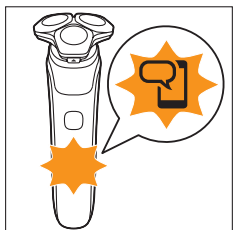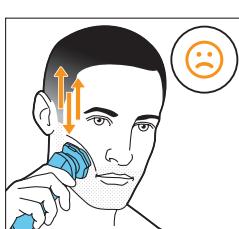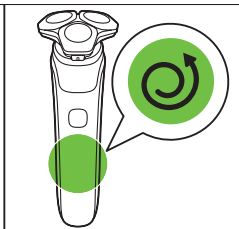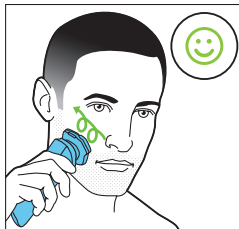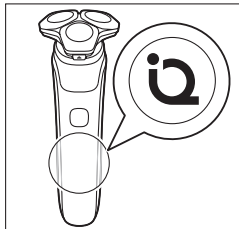      

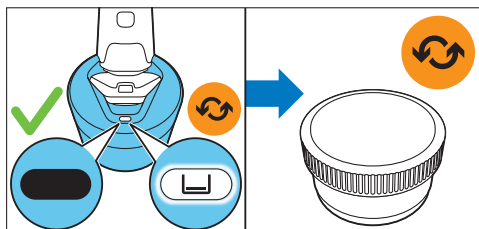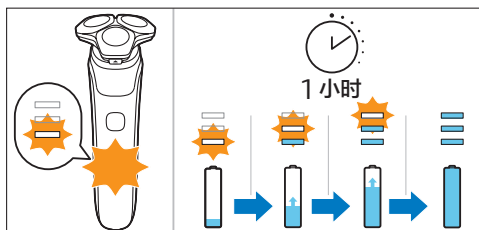  
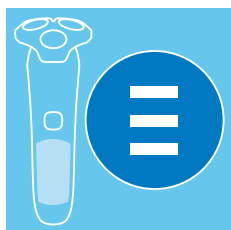 
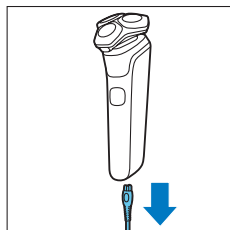 
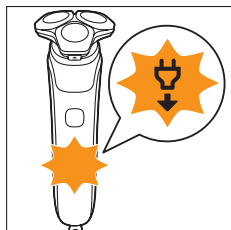 
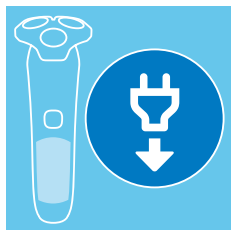 
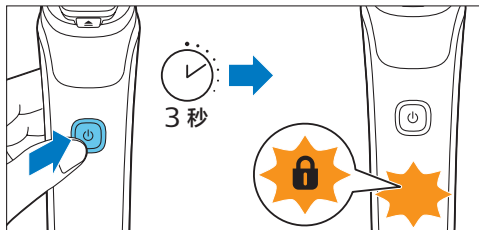 


如何为产品充电？

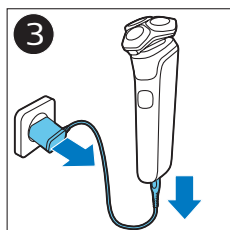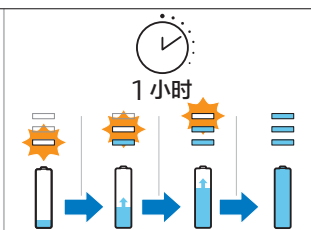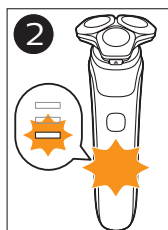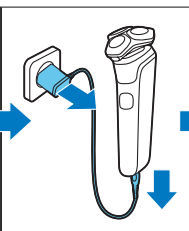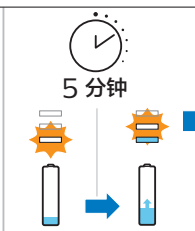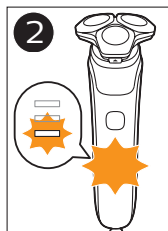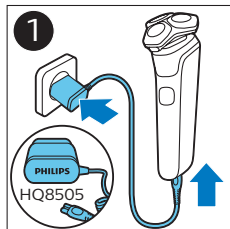       
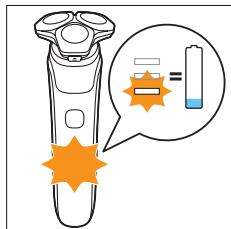 


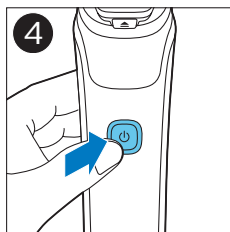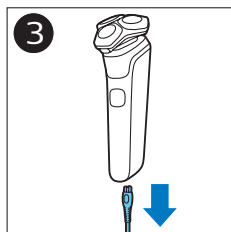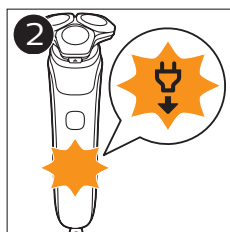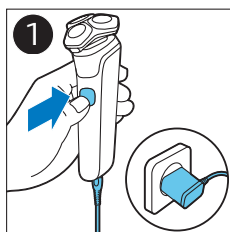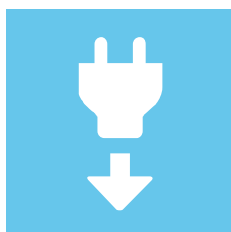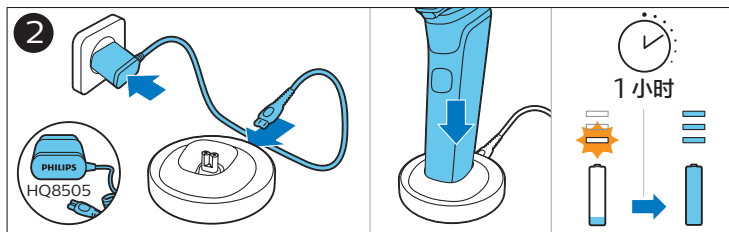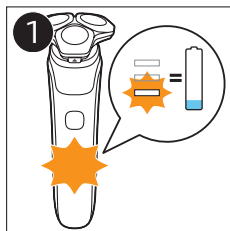       

剃须

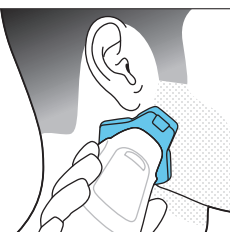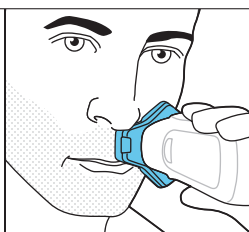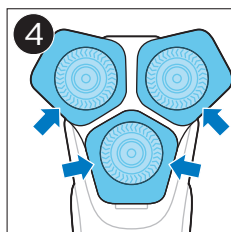   
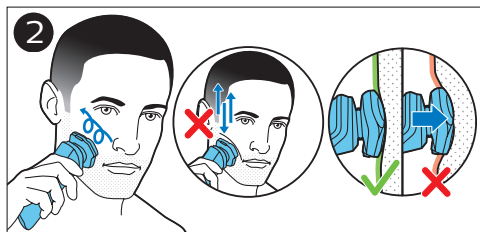 
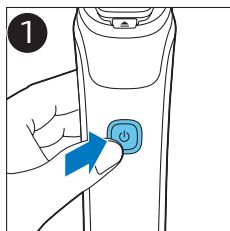 
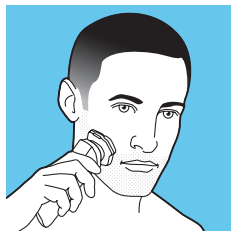 













湿剃






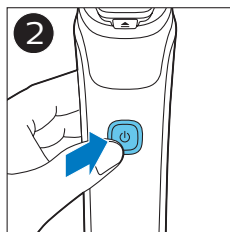 
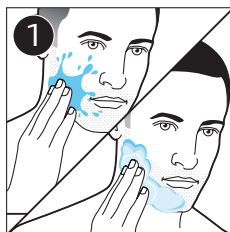 
















在水龙头下冲洗剃须刀

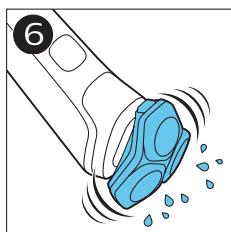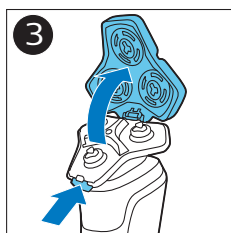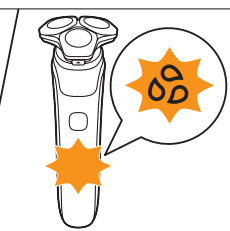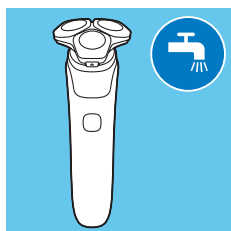    

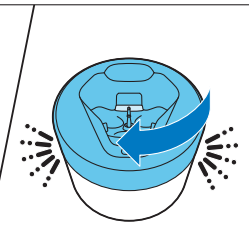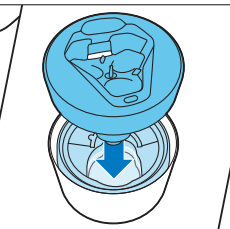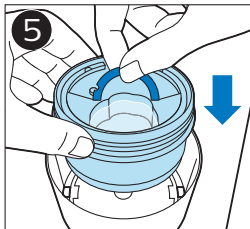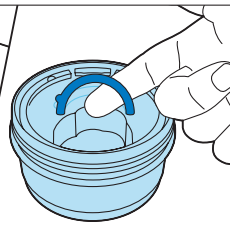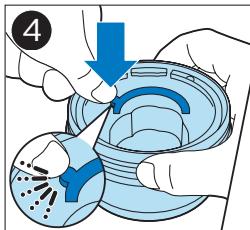     
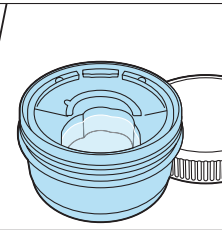 
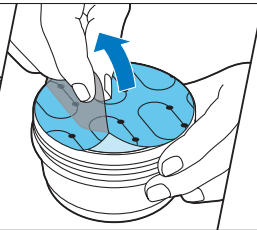 
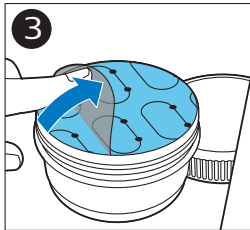 
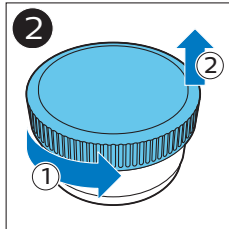 
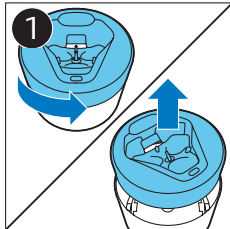 
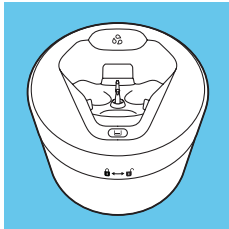 


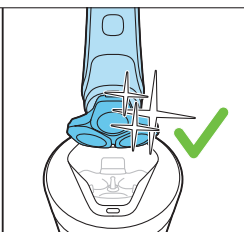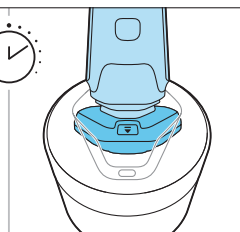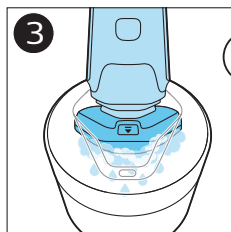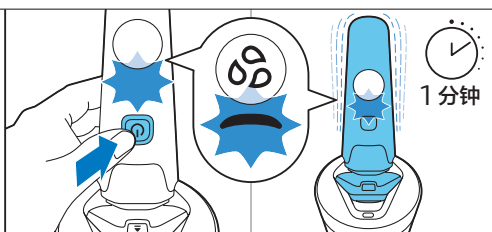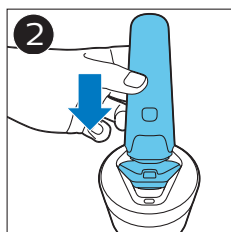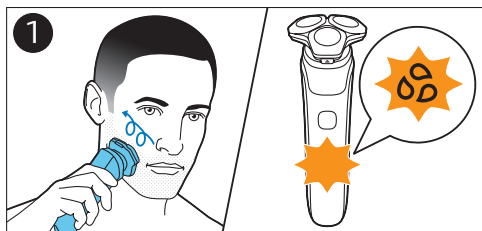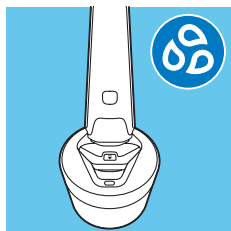       

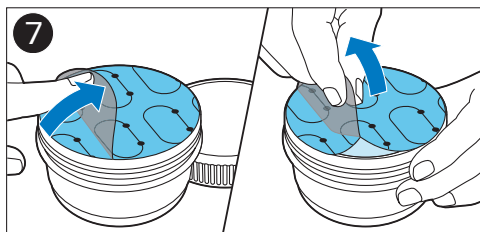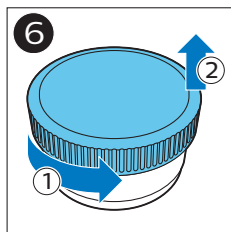  
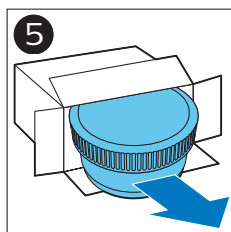 
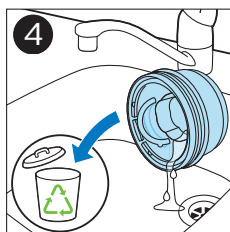 
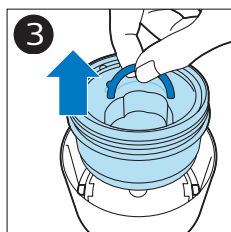 
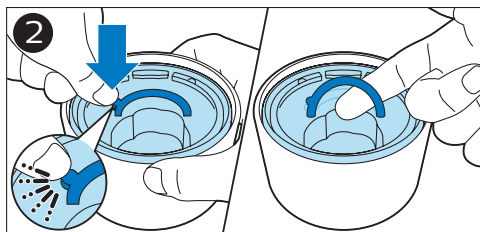 
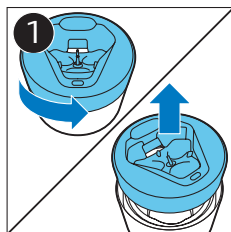 
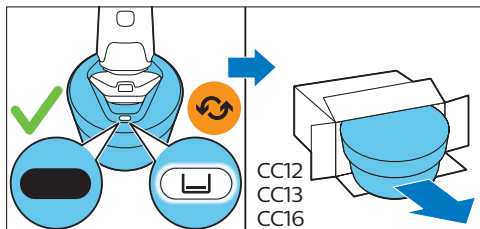 
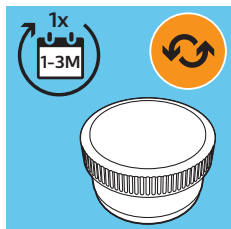 


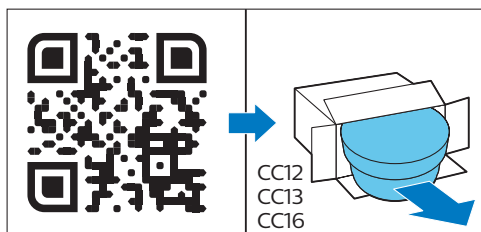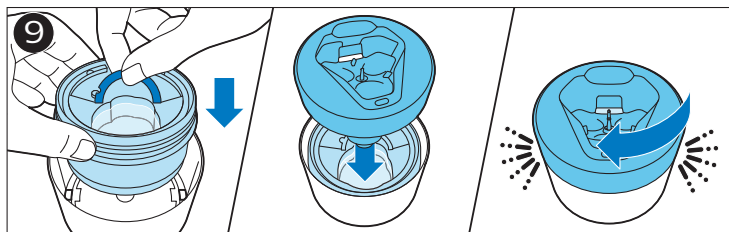  
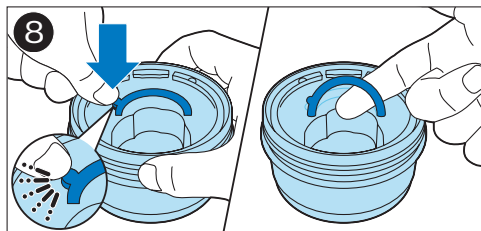 


使用修剪器

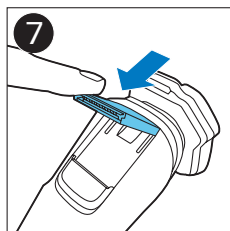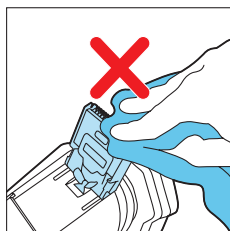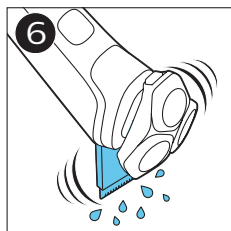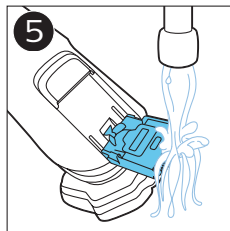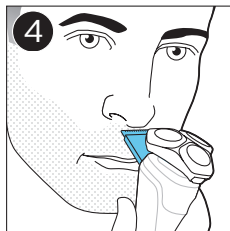     
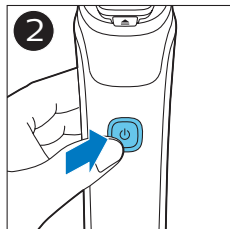 
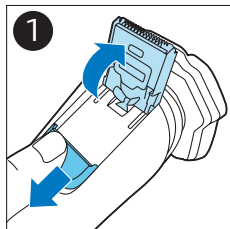 


彻底清洁

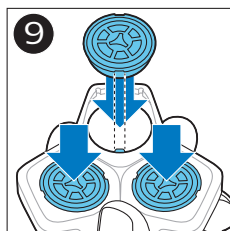 
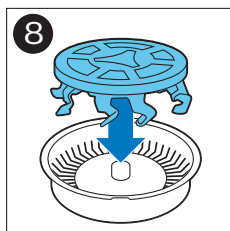 
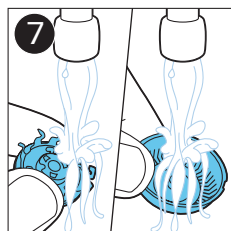 
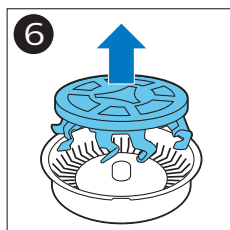 
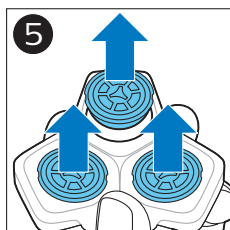 
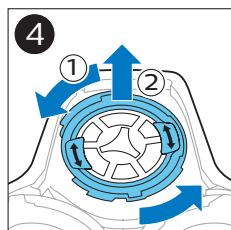 
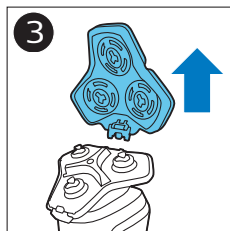 
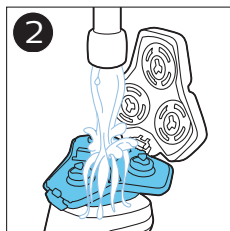 


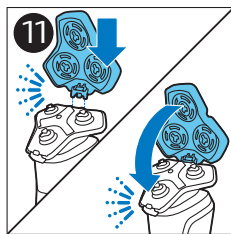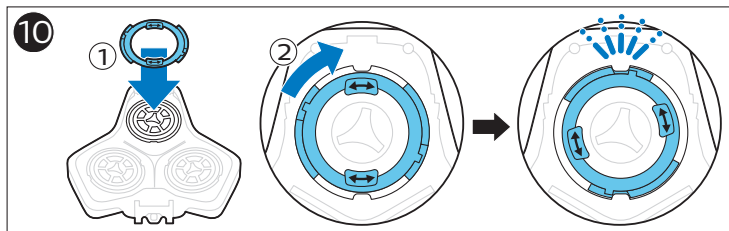  

旅行锁

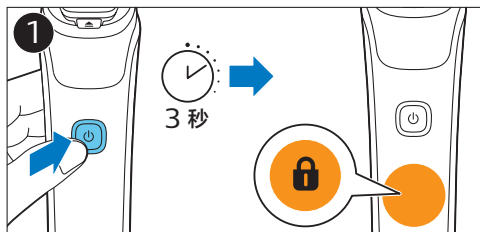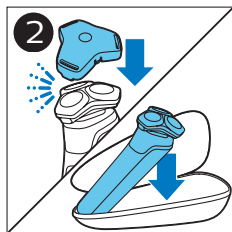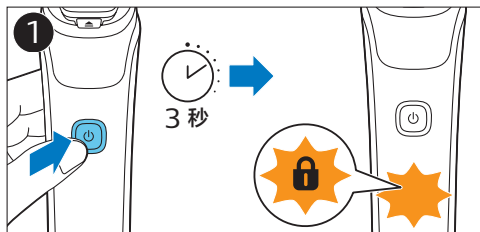   

如何更换剃须刀头？

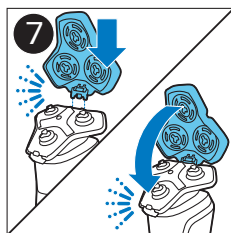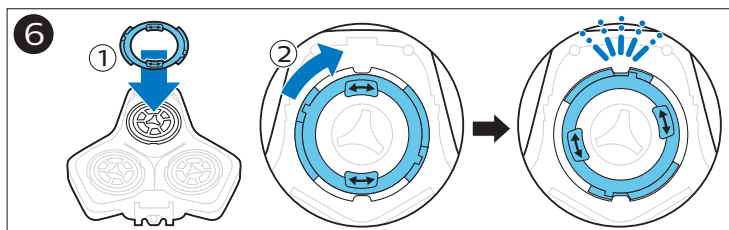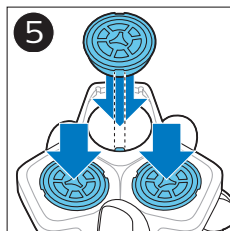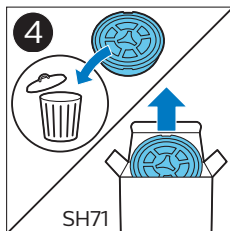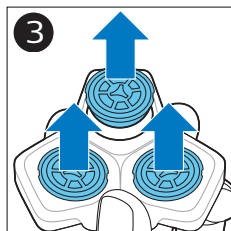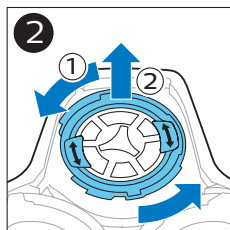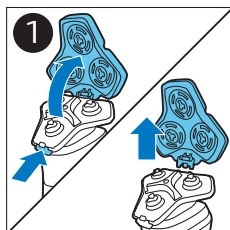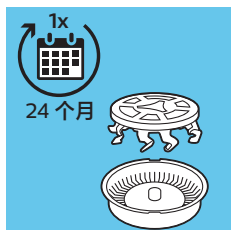        



© 2020 Koninklijke Philips N.V.

All rights reserved

保留所有权利

3000.049.0086.2 (7/8/2020)

> 75% 循环再造纸

保留备用

 >75 % recycled paper
>75 % papier recyclé