

EN	User manual	IT	Manuale utente
DA	Brugervejledning	NL	Gebruiksaanwijzing
DE	Benutzerhandbuch	NO	Brukerveiledning
EL	Εγχειρίδιο χρήσης	PT	Manual do utilizador
ES	Manual del usuario	SV	Användarhandbok
FR	Käyttöohje	TR	Kullanım kılavuzu
FI	Manuel d'emploi	ar	دليل المستخدم
IN	Buku Petunjuk Pengguna	FA	راهنمای کاربر

PHILIPS

Specifications are subject to change without notice
© 2014 Koninklijke Philips N.V.
All rights reserved.

English

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

• **WARNING:** Do not use this appliance near water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

• **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• Always unplug the appliance after use.

• If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

• Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

• Do not use the appliance for any other purpose than described in this manual.

• When the appliance is connected to the power, never leave it unattended.

• Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

• Do not wind the mains cord round the appliance.

• Wait until the appliance has cooled down before you store it.

• Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and dangerous to the skin.

• Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates/barrel should never touch the surface or other flammable material.

• Avoid the mains cord from coming into contact with the hot parts of the appliance.

• Keep the appliance away from flammable objects and material when it is switched on.

• Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

• Only use the appliance on dry hair. Do not operate the appliance with wet hands.

• Keep the heating plates/barrel clean and free of dust and styling products such as mousse, spray and gel.

• The heating plates/barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

• If the appliance is used on color-treated hair, it can be damaged. When unwinding the section of the hair after styling, do not pull the hair as it would stretch the cut. Select a suitable attachment and style for the hair type you want.

• Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

• Do not insert metal objects into openings to avoid electric shock.

• Place the appliance with the holder in a warm, stable position, away from the heat of the oven.

• Place the appliance with the holder in a warm, stable position, away from the heat of the oven.

• Place the appliance with the holder in a warm, stable position, away from the heat of the oven.

• Place the appliance with the holder in a warm, stable position, away from the heat of the oven.

• Place the appliance with the holder in a warm, stable position, away from the heat of the oven.

• Place the appliance with the holder in a warm, stable position, away from the heat of the oven.

• Place the appliance with the holder in a warm, stable position, away from the heat of the oven.

• Place the appliance with the holder in a warm, stable position, away from the heat of the oven.

• Place the appliance with the holder in a warm, stable position, away from the heat of the oven.

• Place the appliance with the holder in a warm, stable position, away from the heat of the oven.

• Place the appliance with the holder in a warm, stable position, away from the heat of the oven.



