

Philips
Чехол

для бритв S5xxx, S7xxx, S9xxx

CP9062

Чехол для безопасного хранения бритвы.

Пластиковый чехол обеспечивает гигиеничное хранение бритвы. Сумка прекрасно подходит для того, чтобы взять бритву с собой в поездку.

PHILIPS

Характеристики

Сменная деталь

- Совместимость:: S5400/41, S5620/12, S5620/41, S9021/12, S9021/13, S9031/12, S9031/13, S9031/26, S9031/27, S9041/12, S9041/13, S9111/12, S9111/26, S9111/31, S9111/32, S9111/41, S9111/42, S9112/43, S9151/31, S9151/41, S9151/42, S9161/31, S9161/32, S9161/41, S9161/42, S9171/31, S9171/32, S9181/13, S9511/31, S9511/32, S9511/41, S9511/42, S9511/63, S9521/31, S9521/32, S9521/41, S9711/31, S9711/32, S9911/10, S9911/11, S9911/33, S9911/62, S9988/68, S5008, S5010, S5011, S5013, S5015, S5050, S5070, S5075, S5077, S5078, S5079, S5080, S5081, S5420/04, S5420/06, S5420/08, S5510/37, S5510/45, S5520/45, S5600/12, S5600/41, S5085, S5205, S5290, S5355, S7310, S7311, S7320, S7370, S7510, S7520, S7530, S7550, S7710, S8950, S9090, S9181, S9182, S9512, S9522, S9988, S5090, S5095, S5210, S5211, S5230, S5270, S5271, S5340, S5360, S5370, S5380, S5390, S5391
- Подходит для:: S9021, S9031, S9041, S9111, S9112, S9121, S9151, S9152, S9161, S9171, S9311, S9321, S9371, S9511, S9521, S9522, S9531, S9711, S9712, S9721, S9731, S9911
- Подходит для модельного ряда:: S5082, S5086, S5091, S5212, S5213, S5231, S5251, S5252, S5272, S5273, S5290, S5335, S5355, S5395, S5396, S7310, S7320, S7371, S7510, S7521, S7522, S7530, S7550, S7720, S7920, S8860, S8880, S8980, S9211, SP9811, SP9851
- Подходит для:: S5100, S5110, S5130, S5140, S5150, S5210, S5211, S5230, S5270, S5271, S5310, S5320, S5330, S5340, S5360, S5370, S5380, S5390, S5391, S5395, S5396, S5397, S5400, S5420, S5510, S5520, S5530, S5540, S5550, S5551, S5560, S5570, S5571, S5572, S5580, S5590, S5600, S5610, S5620, S5630, S5640, S5650, S5651, S5660, S5670, S5391, S5400, S5420, S5510, S5520, S5560, S5570, S5600, S5610, S5620, S5630, S5640, S5650, S5651, S5660, S5670, S7720, S7780, S7920, S9021, S9031, S9041, S9051, S9111, S9112, S9121, S9151, S9152, S9161, S9171, S9181, S9182, S9185, S9186, S9311, S9321, S9371, S9511, S9512, S9521, S9522, S9531, S9551, S9552, S9711, S9712, S9721, S9731, S9732, S9741, S9751, S9781, S9911, S9981, S9988, S5290, S5571, S7310, S7311, S7312, S7320, S7330, S7370, S7510, S7520, S7530, S7540, S7550
- Подходит для моделей:: S7310, S7311, S7320, S7340, S7350, S7360, S7370, S7371, S7510, S7520, S7521, S7522, S7530, S7550, S7560, S7561, S7710, S7720, S7730, S7740, S7780, S7920, S7921, S7980, S8950, S8960, S8980, S9031, S9041, S9051, S9090, S9091, S9111, S9112, S9131, S9151, S9161, S9171, S9181, S9185, S9186, S9211, S9311, S9521, S9531, S9551, S9552, S9711, S9721, S9732, S9733, S9741, S9751, S9781, S9911, SP9820, SP9821, SW5700, SW5710, SW5720, SW6700, SW6710, SW9700, S5672, S5008, S5010, S5011, S5013, S5015, S5040, S5050, S5051, S5070, S5071, S5072, S5073, S5074, S5075, S5076, S5077, S5078, S5079, S5080, S5081, S5082, S5083, S5085, S5086, S5090, S5091, S5095, S5100, S5110, S5120, S5130, S5140, S5150, S5205, S5210, S5211, S5212, S5213, S5214, S5215, S5216, S5230, S5231, S5240, S5250, S5251, S5252, S5270, S5271, S5272, S5273, S5290, S5310, S5320, S5330, S5340, S5351, S5355, S5360, S5361, S5370, S5380, S5390, S5391, S5395, S5396, S5397, S5400, S5420, S5510, S5520, S5530, S5540, S5550, S5551, S5560, S5570, S5571, S5572, S5580, S5590, S5600, S5610, S5620, S5630, S5640, S5650, S5651, S5660, S5670



Дата выпуска 2023-12-13

Версия: 5.0.2

EAN: 87 10103 70806 3

© 2023 Koninklijke Philips N.V.
Все права защищены.

Характеристики могут меняться без предварительного уведомления. Торговые марки являются собственностью Koninklijke Philips N.V. или соответствующих владельцев.

www.philips.com