









www.philips.com

© 2022 Koninklijke Philips N.V. All rights reserved. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. (Royal Philips) or their respective owners.

©2022 Koninklijke Philips N.V. 保留所有权利。 规格如有更改, 恕不另行通知, 商标由Koninklijke Philips N.V.及各自所有者所有。

3000.083.8200.5 (22/12/2022)











100% recycled paper

100% 循环再造纸



Important safety information

Only use the product for its intended purpose. Read this important information carefully before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. Accessories supplied may vary for different products.

The box shows which accessories are supplied with your product and whether your product is Bluetooth enabled. Warning

- To charge the product, only use a supply unit, which complies to China GB standard GB4706.1-2005, 5V===、≥1A、IPX4, in order to guarantee the electrical safety. We advise to use Philips HQ87, or an equivalent certified supply unit. To obtain HQ87, please consult the Philips service hotline. Using a
- non-certified supply unit may cause hazards or serious injuries. Keep the USB cable, the charging stand and the supply unit (available
- separately) dry (Fig. 1). This shaver is waterproof (Fig. 2). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- Do not modify the supply unit
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Unplug the appliance before cleaning it with water. Do not use a damaged appliance. Replace damaged parts with new Philips
- Only use cold or lukewarm water to clean the appliance.
- Because of hygiene, only one person should use the appliance
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.
- Always place the cleaning system on a stable, level and horizontal surface to Always make sure the cartridge compartment is closed before you use the
- cleaning system. When the cleaning system is ready for use, do not move it to prevent leakage
- of cleaning fluid. Water may drip from the socket at the bottom of the shaver when you rinse it . This is normal and not dangerous because all electronics are enclosed in a
- sealed power unit inside the shaver. Do not use the supply unit in or near wall sockets that contain an electric air
- freshener to prevent irreparable damage to the supply unit. Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 5 °C and 35 °C. Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact
- Do not place products and their batteries in microwave ovens or on induction
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Philips Quick Clean Pod Cartridge fluid

- Keep out of reach of children. Do not swallow.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Support

For all product support such as frequently asked questions, please visit www.philips.com/support

Parts that are subject to normal wear (such as shaving heads and cutting units) are not covered by the international warranty.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country

Shaver

Possible cause	Solution
The appliance is still connected to a power source. For safety reasons, the appliance can only be used without cord.	Unplug the appliance and press the on/off button to switch on the appliance.
The rechargeable battery is empty.	Recharge the battery.
The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly or replace them.
The shaving heads are damaged or worn.	Replace the shaving heads.
Hairs or dirt obstruct the shaving heads.	Clean the shaving heads thoroughly.
During cleaning, water may collect between the inner body and the outer shell of the appliance.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.
	The appliance is still connected to a power source. For safety reasons, the appliance can only be used without cord. The rechargeable battery is empty. The travel lock is activated. The shaving unit is soiled or damaged to such an extent that the motor cannot run. The shaving heads are damaged or worn. Hairs or dirt obstruct the shaving heads. During cleaning, water may collect between the inner body and the outer

Philips Quick Clean Pod

Problem	Possible cause	Solution
My shaver isn't clean after using the Philips Quick Clean Pod.	You removed the shaver before the cleaning program was finished.	Leave the shaver in the Philips Quick Clean Pod for the full cleaning program. Each cleaning program takes approximately 1 minute. The cleaning icon goes out when the cleaning program is finished.
	The Philips Quick Clean Pod Cartridge needs to be replaced.	Replace the Philips Quick Clean Pod Cartridge.
	The Philips Quick Clean Pod is tilted.	Place the Philips Quick Clean Pod on a flat surface.
My Philips Quick Clean Pod does not switch on.	The Philips Quick Clean Pod is powered by the motor of the shaver.	Place the shaver into the Philips Quick Clean Pod. Switch on the shaver.
	The appliance is still connected to a power source.	Disconnect the shaver from the supply unit.
	The shaver battery is empty.	Charge the shaver before using the Philips Quick Clean Pod.
My Philips Quick Clean Pod is overflowing.	You regularly use the Philips Quick Clean Pod after rinsing the shaver but not shaking off excess water.	Shake off excess water after rinsing the shaving heads each time before putting the shaver into the Philips Quick Clean Pod.
	You shaved with shaving gel or foam and did not rinse the shaver before using the Philips Quick Clean Pod.	Rinse the shaving heads thoroughly before using the Philips Quick Clean Pod.

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 3).
- Follow your country's rules for the separate collection of electrical products

Removal of built-in rechargeable battery

The built-in rechargeable battery must be removed by a qualified professional when the product is discarded. Instructions for removal of built-in rechargeable batteries can be found on www.philips.com/support.

简体中文

重要安全信息

仅可将本产品用于预期用途。 使用本产品及其电池和附 件之前,请仔细阅读本重要信息,并妥善保管以供日后参 考。误用可能会导致危害或严重伤害。 随附的附件可能因 产品而异。

包装盒上会显示产品随附的附件以及产品是否支持蓝牙。

- 要为本产品充电,使用者必须使用符合GB4706.1-2005标准的5V===、≥1A、IPX4电源适配器,以确保电 气安全。我们建议使用飞利浦电源适配器HQ87或同等 且经认证的电源适配器。请咨询飞利浦服务热线以获得 HQ87。使用未经认证的电源适配器可能会导致危害或 严重伤害。
- 保持 USB 线缆、充电座和电源部件(需单独购买)干
- 警告符号注释: 禁止在打开的水龙头下进行清洗 (图 1)。
- 该剃须刀具有防水性能 (图 2)。 适合在沐浴或淋浴时使 用,也可以放在水龙头下清洗。 出于安全原因,该剃须 刀在使用时不能连接电线。
- 符号注释:适合于在洗澡或淋浴时使用(图 2)。允许 在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器
 - 请勿改装电源部件。
- 本产品也可以由8岁或以上年龄的儿童以及肢体不健 全、感觉或精神上有障碍或缺乏相关经验和知识的人 士使用,但前提是有人对他们使用本产品进行监督或 指导,以确保他们安全使用,并且让他们明白相关的危 害。 切勿让儿童玩弄本产品。 不要让儿童在无人监督 的情况下对本产品进行清洁和保养。
- 用水清洁产品前,请先将电源插头拔掉。
- 请勿使用已经损坏的产品。请用新的飞利浦部件更换损 坏的部件。
- 请仅使用冷水或温水清洁产品。
- 出于卫生考虑,仅能由一个人使用本产品。
- 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液 体清洁设备。
- 清洁系统必须放在稳定、平坦的水平表面上,以防漏 液。
- 使用清洁系统前,请始终确保滤芯仓已关闭。
- 清洁系统准备就绪时,切勿移动,以免清洁液漏出。
- 冲洗剃须刀时,水可能从产品底部的插口漏出。 这是正 常的,而且没有危险,因为所有电子元件都封闭在剃须 刀内部的密封电源部件中。
- 请勿在包含电动空气清新器的墙壁插座上或其周围使用 电源部件,以免电源部件受到不可修复的损坏。
- 请勿在出现皲裂、有开放性伤口、有愈合中伤口、处于 手术恢复期的皮肤上使用清洁刷。如果您患有皮肤疾病 或皮肤具有严重过敏反应(例如严重的痤疮、晒伤、皮 肤感染、皮肤癌、发炎、湿疹、牛皮癣、尼龙过敏等情
- 况),也请勿使用清洁刷。 如果您服用了类固醇类药物,请勿使用洁面刷。
- 使用产品前,请摘下穿环、首饰、眼镜等配饰。
- 请仅使用飞利浦原装附件或消耗品。
- 充电、使用和存放本产品的温度应介于 5°C至 35°C之间。
- 请将产品和电池远离火源,切勿将其暴露于阳光直射处 或高温下。
- 如果产品异常发热或发出异味、变色或充电时间比平时 长,请停止使用并停止为其充电,并联系飞利浦。
- 切勿将产品及其电池放置在微波炉中或电磁炉上。
- 为防止电池发热或释放有毒有害物质,切勿打开、改 装、刺穿、损坏或拆卸产品或电池。 切勿使电池短路、 过度充电或反向充电。
- 如果电池损坏或出现泄漏,请避免与皮肤或眼睛接触。 如果不慎接触,请立即用清水冲洗并就医。

飞利浦须刀清洁中心滤芯液

- 请置于儿童接触不到的地方。
- 切勿吞食。 电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准

和法规。 支持

有关常见问题等所有产品支持,请访问 www.philips.com/support。

正常使用会出现磨损的部件(例如剃须刀头和修剪部件) 不在国际保修条款的涵盖范围之内。

产品中有害物质的名称及含量						
	有害物质					
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB's 集成电路板	Х	0	0	0	0	0
Electrical contact pins 电接触片	Х	0	0	0	0	0
Internal metal parts 内部金属件	X	0	0	0	0	0

O:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求 该表格中所显示的"有害物质"在产品正常使用情况下不会

对人身和环境产生任何伤害。

该表格中所显示的"有害物质"及其存在的部件向消费者 和回收处理从业者提供相关物质的存在信息,有助于产 品废弃时的妥善处理。

PHILIPS

产品:飞利浦电动剃须刀 型号: S8850 额定电压: 3.6V === IPX7 额定输入功率: 1.7W 充电电压/电流: 5V === / 生产日期: 请见产品本体 产地:中国广东珠海 珠海经济特区飞利浦家庭电器有限公司

珠海市金湾区三灶镇定湾二路365号全国顾客服务热线: 4008 800 008 本产品根据国标 GB4706.1-2005,

GB4706.9-2008制造 不包含电源适配器。使用者必须使用符合

GB4706.1-2005标准的5V=== 、≥1A、 IPX4电源适配器,以确保电气安全

珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号全国顾客服务热线: 4008 800 008 本产品根据国标 GB4706.1-2005, GB4706.9-2008制造 不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V === 、≥1A、 IPX4电源适配器,以确保电气安全。

PHILIPS

产品: 飞利浦电动剃须刀

产地:中国广东珠海

デ品: 6利用电动刺频// 型号: S5836 额定电压: 3.6V=== 额定输入功率: 1.7W 充电电压/电流: 5V===/1A 生产日期: 请见产品本体

IPX7

PHILIPS

产品: 飞利浦电动剃须刀 型号: \$5830 额定电压: 3.6V === IPX7 额定输入功率: 1.7W 充电电压/电流: 5V === /1A 生产日期: 请见产品本体 产地:中国广东珠海 珠海经济特区飞利浦家庭电器有限公司 珠海市金湾区三灶镇定湾二路365号全国顾客服务热线: 4008 800 008

GB4706.9-2008制造

本产品根据国标 GB4706.1-2005,

不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V === 、≥1A、 IPX4电源适配器,以确保电气安全。

PHILIPS 产品: 飞利浦电动剃须刀

型号: SU7366 额定电压: 3.6V === IPX7 級定电法: 3.6V === 額定輸入功率: 1.7W 充电电压/电流: 5V === /1A 生产日期: 请见产品本体 产地: 中国广东珠海 珠海经济特区飞利浦家庭电器有限公司

珠海市金湾区三灶镇定湾二路365号全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.9-2008制造

不包含电源适配器。使用者必须使用符合 GB4706.1-2005标准的5V === 、≥1A IPX4电源适配器,以确保电气安全。

保留备用

发行日期: (22/12/2022)

故障种类和处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无法根 据以下信息解决问题,请访问 www.philips.com/support 查阅常见问题列表,或联系您所在国家/地区的客户服务 中心。

治()活 丁

剃须刀		
问题	可能的原因	解决方法
按下开/关钮 时,产品不 工作。	产品仍连接电源。 出于安全 原因,本产品在 使用时不能连接 电线。	拔掉产品插头并按开/关 按钮打开产品。
	充电电池的电量 已耗尽。	给电池充电。
	旅行锁已被激 活。	按住开/关按钮 3 秒钟以禁用旅行锁。
	剃须刀头部件被 污染或损坏,导 致马达无法运 行。	彻底清洁剃须刀头或将其 更换。
产品的剃 页 效果 不如 以前好。	剃须刀头已损坏 或磨损。	更换剃须刀头。
	毛发或污垢堵塞 了剃须刀头。	彻底清洁剃须刀头。
水从产品底 部漏出。		这是正常现象,而且没有 危险,因为所有电子元件 都封闭在产品内部的密封 电源部件中。

	707C1736	11-11-10			
问题	可能的原因	解决方法			
使用飞利浦须刀 清洁中心后,剃 须刀依旧不干 净。	您在清洁程序结束 前取出剃须刀。	请将剃须刀放在飞 利浦须刀清洁中心 中以完成整个清洁 程序。每个清洁 程序大约需要 1 分 钟。清洁程序结 束后,清洁图标熄 灭。			
	需要更换飞利浦须 刀清洁中心滤芯。	更换飞利浦须刀清 洁中心滤芯。			
	飞利浦须刀清洁中 心倾斜。	将飞利浦须刀清洁 中心置于平面上。			
飞利浦须刀清洁 中心无法启动。	飞利浦须刀清洁中 心由剃须刀的马达 驱动。	将剃须刀放入飞利 浦须刀清洁中心 中。 打开剃须刀。			
	产品仍连接电源。	断开剃须刀与电源 部件的连接。			
	剃须刀电池电量耗 尽。	在使用飞利浦须刀 清洁中心前,请给 剃须刀充电。			
飞利浦须刀清洁中心溢水。	经常在冲洗剃须刀 后但未甩掉多余水 分时使用飞利浦须 刀清洁中心。	每次冲洗剃须刀头 后都要甩掉多余的 水分,然后再将剃 须刀放入飞利浦须 刀清洁中心中。			
	您在用剃须 喱或剃须泡沫剃须后,并未冲洗剃须刀,就使用飞利浦须刀清	使用飞利浦须刀清 洁中心之前,请彻 底冲洗剃须刀头。			

回收

- 此符号表示电器产品和电池不能与一般的生活垃圾一同

洁中心。

- 请遵守您所在国家/地区有关分类回收电器产品和电池 的规定。

取出内置充电电池


丢弃产品时,必须由有资质的专业人员进行处理。 在废弃器具前,必须将电池从器具中取出;在取出电 池时,器具必须要断电;电池应安全地处置请访问 www.philips.com/support 了解取出内置充电电池的 说明。

包装盒内有什么?




的附件可能因产品而异。包装盒上会显示随附于您产品的附件。

如何为产品充电?

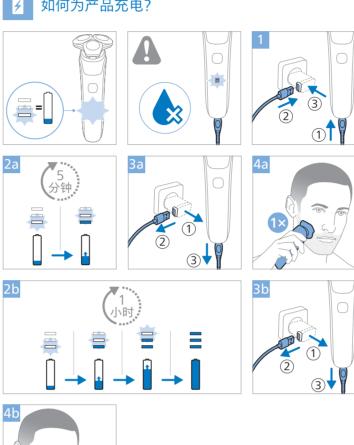





使用充电座充电

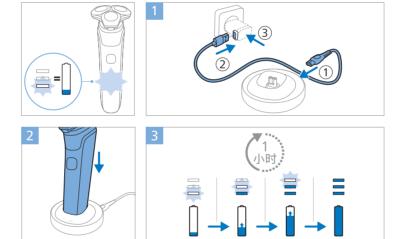


使用前拔掉充电器

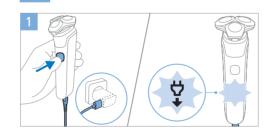




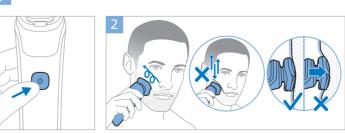

修剪鼻毛和耳毛

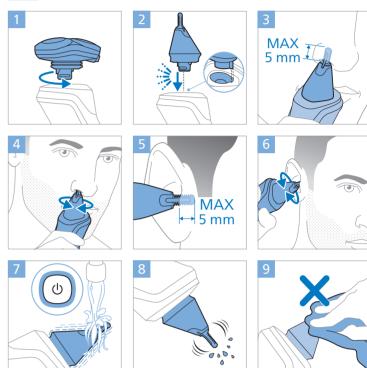


6 在水龙头下冲洗剃须刀

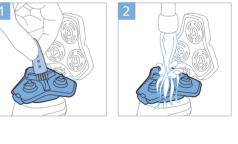





68 使用清洁中心

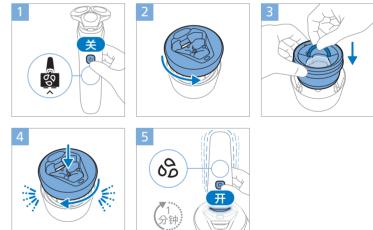

更换须刀清洁液



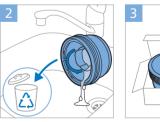

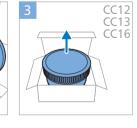

▲ 旅行锁





如何更换剃须刀头?





