



English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the supply cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not pull on the supply cord after using. Always unplug the appliance by holding the plug.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your warranty becomes invalid.
- Do not wind the supply cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.
- Avoid the supply cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair.
- Do not operate the appliance with wet hands.
- Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- The heating plates has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on color-treated hair, the heating plates may be stained.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.
- Do not insert metal objects into openings to avoid electric shock.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

- This symbol means that electrical products shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical products.



2 Overview

- ① Handle
- ② Release buttons
- ③ Indicator
- ④ Power on/off
- ⑤ Hanging loop
- ⑥ Lever
- ⑦ Cooling tips
- ⑧ Crimping attachment

3 Before Use

Note: Do not change the crimping attachment when it is hot. Only change the attachment when the appliance is cooled down.

| Hairstyle | Attachment | Temperature Setting |
|--------------------|---------------------------|---------------------|
| Tight/loose crimps | Crimping attachment (⑧) | 210°C |

How to attach and detach (Fig.2)

- 1 Ensure the lever (⑥) of attachment is pointing at the release buttons (②) on the top of the handle (①).
- 2 Slide the crimping attachment onto the handle.
 - To remove the attachment, press both release buttons (②) on both sides of the handle. Remove the attachment only when both the appliance and attachment have cooled down.

Tips and Tricks:

- Use a smaller amount of hair for longer hair lengths and/or to get more defined crimps.
- Apply hair spray to your hair after styling for long-lasting results.

4 Warranty and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com/support or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide warranty leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

5 Troubleshooting

| Problem | Cause | Solution |
|-------------------------------------|---|--|
| The appliance does not work at all. | The power socket to which the appliance has been connected may be broken. | Check the appliance is plugged in correctly. Check the fuse for this power socket in your home. |

简体中文

感谢您的惠顾，欢迎光临飞利浦！为了能充分享受飞利浦提供的支持，请在 www.philips.com.cn/welcome 上注册您的产品。

1 重要信息

- 使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。
- 警告：请勿在靠近水的地方使用本产品。
- 本产品在浴室内使用时，使用后拔下插头，因为即使本产品开关断开后，接近水仍存在危险。
- 警告：不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- 警告符号注释：禁止在洗澡或淋浴时使用。
- 使用后务必拔下产品的插头。
- 如果电源线损坏，为避免危险，必须由飞利浦、飞利浦授权的服务中心或类似的专业技术人员进行更换。
- 本产品适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上无障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。不得让儿童玩耍本产品。不要让儿童在无人监督的情况下进行清洁和保养。
- 为了增加保护，建议在浴室供电的电气回路中安装一个额定剩余工作电流不超过 30mA 的剩余电流装置 (RCD)。详情请向安装商咨询。

- 使用后请勿拉扯电源线。拔下产品插头时，请握紧插头。
- 烫伤危险。将本产品置于儿童触及不到的地方，尤其在使用和冷却过程中。
- 连接产品之前，请确保产品上标示的电压与当地电源电压相符。
- 请勿将本产品用于本手册中说明以外的任何其它用途。
- 请勿对假发使用本产品。
- 当产品连接了电源时，切勿让其无人看管。
- 切勿使用由其他制造商生产的，或未经飞利浦推荐的任何附件或部件。如果使用此类配件或部件，您的保修将失效。
- 切勿将电源线缠绕在产品上。
- 待产品完全冷却后再存放。
- 由于产品会很烫，请在使用时多加注意。只能握住手柄，因为其他部位会很烫，并且避免与皮肤接触。
- 始终将本产品放置在隔热的平稳表面上。热加热板不得接触表面或其他可燃材料。
- 不要让电源线接触到产品的灼热部分。
- 如果产品已打开，请使产品远离易燃物体和材料。
- 当产品变热时切勿在其表面覆盖任何物品（如毛巾或衣服）。
- 产品只能用于干的头发。
- 切勿用湿手操作本产品。
- 保持加热板洁净无尘且未粘上定型产品（如摩丝、定型喷剂和发胶）。切勿将本产品与定型产品结合使用。

- 加热板上涂有涂层。此涂层可能会随着时间的推移慢慢磨损。但是，这并不影响产品的性能。
- 将产品用于染过色的头发时，加热板可能会染上颜色。
- 产品只能送到飞利浦授权的服务中心检修。由不合格人员进行修理可能将用户置于极度危险的境地。
- 切勿将金属物体插入开口中，以免触电。

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

回收

- 此符号表示电器产品不能与一般的生活垃圾一同弃置。
- 请遵守您所在国家/地区有关分类回收电器产品的规定。

2 概览

- ① 手柄
- ② 释放按钮
- ③ 指示灯
- ④ 开启/关闭
- ⑤ 挂环
- ⑥ 控制杆
- ⑦ 不烫手尖端
- ⑧ 蓬松造型夹板

3 使用前的准备工作

注意：切勿在产品很热时更换铁板烫发附件。仅在产品冷却后更换附件。

| 发型 | 附件 | 温度设定 |
|-----------------|----------------|--------|
| 紧致波纹卷/ 松散波纹卷 | 蓬松造型 夹板 (⑧) | 210° C |

如何连接和拆卸 (图 2)

- 1 确保附件的控制杆 (⑥) 指向手柄 (①) 顶部的释放按钮 (②)。
- 2 将铁板烫发附件安装到手柄上。
 - 要取下附件，按住手柄两侧上的释放按钮 (②)。仅在产品和附件均冷却后取下附件。

提示和诀窍：

- 为长发造型，为了获得更卷曲的效果，每次请使用少量的头发进行造型。
- 在造型完成后，使用头发定型喷剂固定发型以获得持久造型效果。

4 保修和服务

如果您需要了解信息（如更换附件的相关信息）或有任何疑问，请访问飞利浦网站 www.philips.com.cn/support。您也可以与您所在地的飞利浦客户服务中心联系（可从保修卡中找到其电话号码）。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。

5 故障种类和处理方法

| 问题 | 原因 | 解决方法 |
|-----------|------------------|------------------------------|
| 产品完全无法工作。 | 产品所连接的电源插座可能已损坏。 | 检查设备已正确插入。 检查您家中电源插座的保险丝。 |

保留备用

出版日期： 2022-09-02

| 产品中有害物质的名称及含量 | | | | | | |
|--|--------|--------|--------|--------------|------------|--------------|
| 部件名称 | 有害物质 | | | | | |
| | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| 发热组合 | X | O | O | O | O | O |
| 电源线 | X | O | O | O | O | O |
| 本表格依据SJ/T 11364的规定编制。 O：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。 | | | | | | |

*该表格中所显示的“ 有害物质 ”在产品正常使用情况下不会对人身和环境产生任何伤害。

*该表格中所显示的“ 有害物质 ”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

PHILIPS

产品 : 飞利浦蓬松造型器
型号 : BHH808
额定电压 : 220V~
额定频率 : 50Hz
额定输入功率 : 35W
生产日期 : 请见产品本体
产地 : 中国广东中山

飞利浦（中国）投资有限公司
上海市静安区灵石路718号A1幢
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.15-2008, GB4343.1-2018及
GB17625.1-2012制造