 




Visit us:
www.philips.com/water

Specifications are subject to change without notice

© 2020 AquaShield
All rights reserved.
The Philips trademark and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license.
This product has been manufactured by and is sold under the responsibility of Hong Kong AquaShield Health Technology Company Limited and Hong Kong AquaShield Health Technology Company Limited is the warrantor in relation to this product.
Rev B MAY 20

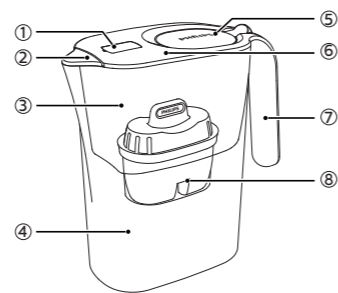 


EN

- ① Timer*
- ② Filtered water outlet
- ③ Raw water funnel
- ④ Filtered water jug
- ⑤ Tap water inlet
- ⑥ Cover
- ⑦ Handle
- ⑧ Filter cartridge

TC

- ① 計時器*
- ② 出水口
- ③ 原水桶
- ④ 淨水桶
- ⑤ 注水蓋
- ⑥ 上蓋
- ⑦ 手柄
- ⑧ 濾芯

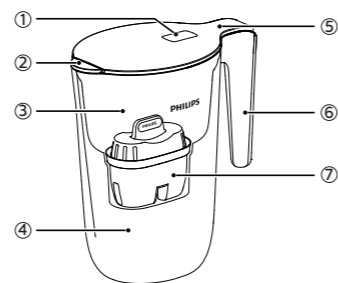

EN

- ① Timer*
- ② Filtered water outlet
- ③ Raw water funnel
- ④ Filtered water jug
- ⑤ Cover
- ⑥ Handle
- ⑦ Filter cartridge

TC

- ① 計時器*
- ② 出水口
- ③ 原水桶
- ④ 淨水桶
- ⑤ 上蓋
- ⑥ 手柄
- ⑦ 濾芯


*** Notes | 注意**

EN

1. The timer is applicable for selective models.
2. Both Micro X-Clean and Micro X-Clean Ultra filters are compatible with the following filter jugs: AWP2935, AWP2936, AWP2937, AWP2938, AWP2951, AWP2952, AWP2953, and AWP2954.
3. There may be differences in the appearance between different models.

TC

 1. 計時器只適用於部分型號。
2. Micro X-Clean與Micro X-Clean Ultra濾芯均可適用於以下型號淨水壺：AWP2935、AWP2936、AWP2937、AWP2938、AWP2951、AWP2952、AWP2953和AWP2954。
3. 不同型號之間可能存在外觀上的差異。

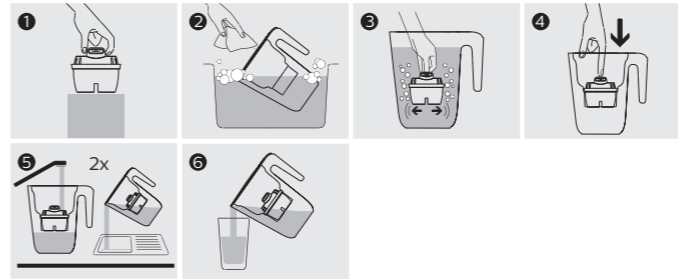

EN

1. Open the box and take out the filter cartridge. It is common that its surface may have some carbon powder, this is normal. These particles are harmless and are washed off during the preparation process.
2. Clean the water jug and the funnel. They are dishwasher safe (max. 50°C). Hand wash the lid if it comes with a timer. If there is no timer, the lid is also dishwasher safe.
3. Soak the filter cartridge in clean water for 15 minutes. Shake the filter cartridge slightly to wash the carbon powder on the surface.
4. Press the filter down firmly to ensure a tight seal. Press the "SET" button for 3 seconds to activate the timer (applicable for models with timer).
5. Fill the pitcher with tap water. Discard your first two pitchers of filtered water.
6. Enjoy the clean filtered water.

TC

 
1. 打開包裝，取出淨水器和濾芯。若濾芯表面存有碳粉屬正常現象，碳粉對健康無不良影響。若您發現碳粉，可沖洗濾芯沖去表面碳粉。
2. 清洗淨水壺。本淨水壺可放進洗碗機（最高水溫：50°C），若上蓋帶有計時器，請手洗清潔淨水壺的上蓋；若上蓋不帶計時器，上蓋亦可放進洗碗機進行清洗。
3. 將濾芯在清水中浸泡15分鐘後沖洗乾淨，沖洗過程中可適當搖晃濾芯使得表面碳粉被沖掉。
4. 將濾芯按壓裝入原水桶。按“SET”按鍵3秒啟動計時器（計時器適用於部分型號）。
5. 將市政自來水接入淨水壺進行過濾。將前兩次濾出的水倒掉，淨水壺即可正常使用。
6. 享受Philips淨水壺帶來的美味。

PHILIPS

Water Solutions

Filter jug

AWP2935 AWP2951
AWP2936 AWP2952
AWP2937 AWP2953
AWP2938 AWP2954

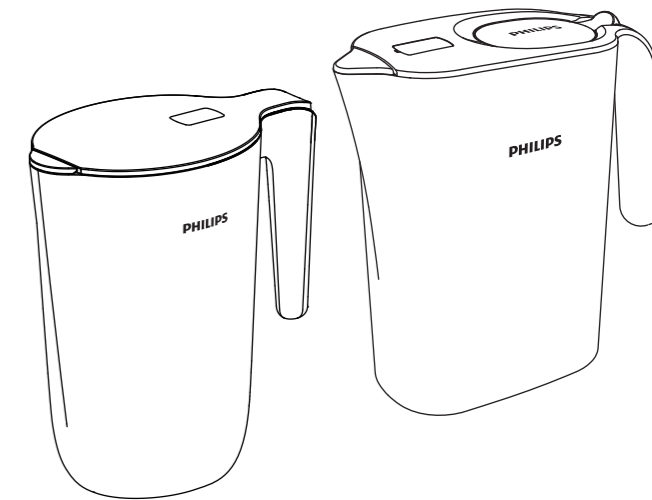

User Manual

The drawing is for illustration only. Actual product may vary.
產品示意圖僅供參考，與實際產品可能存在差異。

Product introduction

Congratulations on your purchase and welcome to Philips! Now enjoy crisp and pure tasting water filtered by our Micro X-Clean and Micro X-Clean Ultra filter.

Timer for filter replacement



In order to maintain the best status of the filter cartridge, Philips recommends that you to replace the filter cartridge at least every 30 days. This timer has a 30-day countdown. A new pitcher with a timer will show a blank display until it is activated.

- Start: Please press "SET" button firmly for 3 seconds to activate the timer.
- Normal reset: When it displays 00, after the filter cartridge is replaced, press the "SET" button firmly for 3 seconds to start a new cycle of countdown.
- Forced reset: For the replacement of filter cartridge at any time within a cycle of timing, press "SET" button firmly for 8 seconds to force it to reset.
- During countdown, the dot will be flashing, and the number of days & graph will be decreasing. At the beginning it will show 30 days, and please replace the filter when the timer shows 00.

Precautions

Warning

- Use municipal tap water as the source. Do not use any water of unknown source.
- Keep the pitcher away from children.
- Be sure to handle the pitcher gently and carefully. Do not modify or drop the filter cartridge. If it has been modified, externally damaged or dropped, replace it.
- This product is intended for domestic use only.

Cautions

- Please note that some models have a button battery. If eaten by mistake, it can cause serious internal burning, even death.
- This product does not filter liquids other than tap water. If you accidentally pour other liquid through the filter cartridge, the filtered cartridge may become blocked.
- Do not filter hot water above 38°C.
- If you accidentally pour hot water into the pitcher, there will be a temporary odor in the filtered water.

EN

- If there are a lot of impurities (after the container is washed or if it has not been used for a long time), please let the tap water run through it for a while before using the pitcher.
- Do not put the product in a high temperature environment to avoid deformation of the product.
- The filtered water should be consumed within 24 hours and not put in direct sunlight.
- Do not put this product in the freezer, as it may cause damage to the product.

Daily maintenance

- Philips recommends that you replace the filter cartridge every 30 days. The actual lifetime of the filter cartridge may vary depending on the use frequency and quality of the local tap water.
- Please keep the product clean. When cleaning it, take out the filter cartridge. Do not use detergent when cleaning it.

Guarantee & Service

If you need information or if you have any problems, please visit the Philips website at www.philips.com/water or contact the consumer care center in your country. If there is no consumer care center in your country, go to the local dealer.

Packing List

Pitcher	1X
Filter cartridge	1X
User Manual	1X



Please keep this user manual for future reference

產品介紹

感謝您購買本產品。歡迎來到飛利浦的世界！
Micro X-Clean與Micro X-Clean Ultra濾芯為您帶來清爽潔淨好水。

濾芯更換計時器提醒



為了維持濾芯的最佳狀態，Philips 建議您每 30 天至少更換一次濾芯。
本計時器為 30 天倒計時器，全新的計時器應該是無顯示狀態。

- 啓動：請持續3秒按住「SET」鍵，啓動計時器。
- 正常複位：顯示為00時，更換濾芯後，請持續3秒按住「SET」鍵，即可開始一個新周期計時。
- 強制複位：中途任何時候更換濾芯，請持續8秒按住「SET」鍵均可強制進行複位。
- 正常計時時，圓點會一直閃爍，數字和進度條會隨時間變化不斷減少（顯示數字代表離下次更換濾芯的剩餘天數，對應百分比的進度條顯示為剩餘濾芯壽命的估值），初始狀態時數字顯示為30Days，當數字顯示為00、進度條消失且點和框一直閃爍，用戶需要更換濾芯。

注意事項

警告

- 本產品使用原水水質為市政自來水，不明水源請勿使用。
- 應看管好兒童，避免他們將產品當作玩具。
- 請務必非常小心地處理濾芯，請勿修改或跌落濾芯。如果濾芯已經過修改、外部損壞或跌落過，請加以更換。
- 本產品僅適用於家庭生活用水。

注意

- 請注意本產品中部分型號含一枚鈕扣式電池。如果誤食，它可能發生嚴重後果，甚至導致死亡。
- 本產品不能過濾除食水以外的其它液體。如果不小心將其它液體通過濾芯，濾芯可能會堵塞。
- 當使用淨水器時，請勿使用38°C以上熱水。
- 如果不小心將熱水倒入了淨水器，淨水中會有暫時性異味。
- 若食水中出現大量渾濁物（如清洗水桶後或長期未使用食水等情況），請在使用本淨水器前流放一段時間的食水，可延長濾芯壽命。
- 請不要把產品放在火焰或高溫處，以免引起產品變形。
- 請於24小時內將過濾水飲用完畢，並避免放置陽光直射處。
- 請勿冷凍本產品，會引起產品破損。

TC

日常維護

- 建議每30天更換濾芯，濾芯實際使用壽命視使用頻率及水質延長或縮短。
- 請經常保持產品清潔，清潔時請取出濾芯，禁用洗滌劑和強揮發性溶劑清洗。

保固與服務

若您需要相關服務或資訊，或是有任何問題，請瀏覽飛利浦網站，網址為www.philips.com/water 或聯絡您當地的飛利浦顧客服務中心。若您當地沒有顧客服務中心，請洽詢當地的飛利浦經銷商。

裝箱清單

淨水壺	1X
濾芯	1X
說明書	1X



請妥善保管此說明書