


PHILIPS

Under-the-sink
filtration system

AUT2015
AUT3015

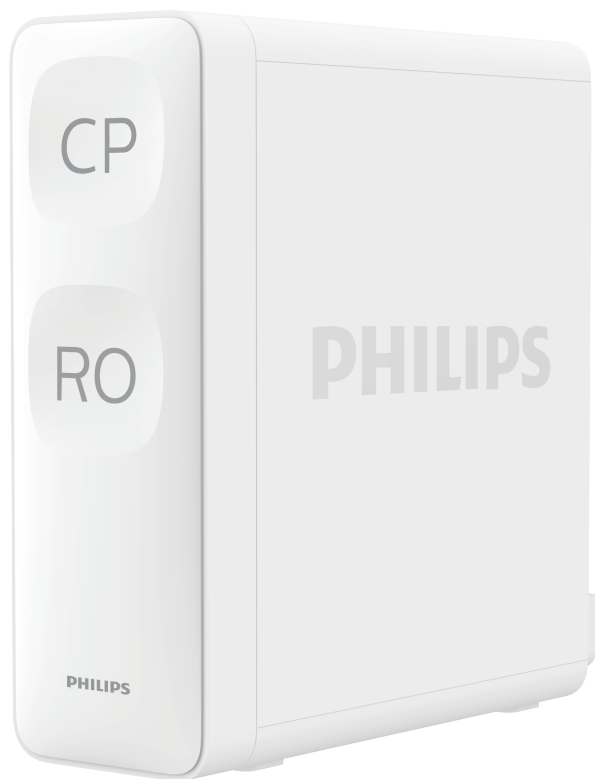

User manual

説明書

Contents | 目錄

| | | | |
|-------------------------|---|---------|----|
| I. Product Introduction | 1 | I. 產品介紹 | 10 |
|-------------------------|---|---------|----|

| | | | |
|----------------------------|---|----------|----|
| II. Product Specifications | 1 | II. 產品規格 | 10 |
|----------------------------|---|----------|----|

| | | | |
|---|---|----------------|----|
| III. Product overview and installation illustration | 1 | III. 產品結構與安裝圖示 | 10 |
|---|---|----------------|----|

| | | | |
|-------------------------------------|---|----------|----|
| IV. Installation | 2 | IV. 產品安裝 | 11 |
| Installing the three-way ball valve | 2 | 安裝三通球閥 | 11 |
| Installing the faucet | 3 | 安裝龍頭 | 12 |
| Installing the system | 3 | 安裝濾水器 | 12 |

| | | | |
|---------------------|---|---------|----|
| V. Using the system | 4 | V. 產品使用 | 13 |
| First-time use | 4 | 首次使用 | 13 |
| User interface | 4 | 用戶使用界面 | 13 |

| | | | |
|------------------------------|---|----------|----|
| VI. Maintenance | 5 | VI. 維護保養 | 14 |
| Routine maintenance | 5 | 日常維護 | 14 |
| Filter lifetime | 5 | 濾芯壽命 | 14 |
| Filter cartridge replacement | 6 | 濾芯更換 | 15 |

| | | | |
|------------------|---|-----------|----|
| VII. Precautions | 6 | VII. 注意事項 | 15 |
| Warning | 6 | 警告 | 15 |
| Notes | 7 | 注意 | 16 |

| | | | |
|-----------------------|---|------------|----|
| VIII. Troubleshooting | 8 | VIII. 故障排除 | 16 |
|-----------------------|---|------------|----|

| | | | |
|-------------------------|---|-----------|----|
| IX. Guarantee & Service | 9 | IX. 保固與服務 | 17 |
|-------------------------|---|-----------|----|

| | | | |
|-------------------|---|---------|----|
| X. Packaging list | 9 | X. 包裝清單 | 17 |
|-------------------|---|---------|----|


I. Product Introduction


Thank you for purchasing. Philips under-the-sink water filtration system AUT2015/AUT3015 with tankless design ensures every drop of water is freshly filtered. 3-stage RO filtration system effectively removes chlorine, sediments, VOCs, heavy metal, pesticides, virus and bacteria so that you can enjoy pure water easily.

II. Product Specification

| | | |
|--------------------------|--|--------------------|
| Product name | Philips under-the-sink water filtration system | |
| Product model | AUT2015 | AUT3015 |
| Filtered water flow rate | 2 liters/minute | |
| Purified water flow rate | 1.05 liters/minute | 1.58 liters/minute |
| Filtration capacity | CP filter: 6,000L RO filter: 11,000L | |
| Inlet water pressure | 0.1-0.4 MPa | |
| Inlet water temperature | 5°C-38°C | |
| Rated voltage | 110V/60Hz | |
| Rated power | 65W | 90W |
| Applicable water source | Municipal tap water | |

III. Product overview and installation illustration

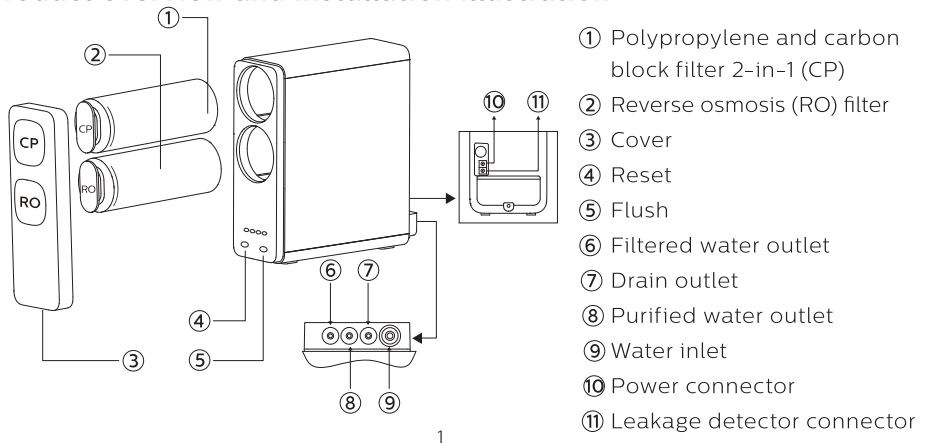


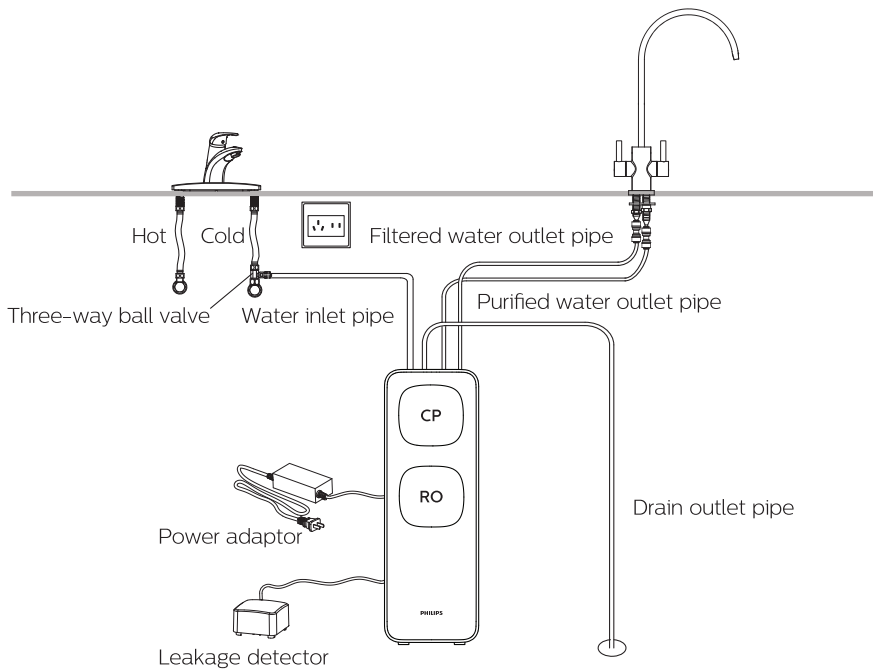

IV. Installation

1. Installing the three-way ball valve


- Turn off the cold water valve. Disconnect the cold water hose from the cold water valve.
- Install the three-way ball valve to the cold water valve, and screw it tightly. Please don't miss the gasket on the three-way ball valve during installation.
- Connect the cold water hose with the three-way ball valve and screw it tightly. Please don't miss the gasket on the cold water hose during installation.

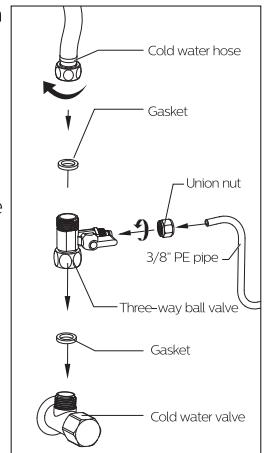

2. Installing the facet

Select an appropriate installation position. Make sure the faucet sits flat on top of the sink or countertop surface. Drill a hole with a diameter of about 29mm. Skip this step if there is already a hole on the sink.

Install the faucet according to the diagram. Screw the faucet stem nut all the way up the faucet stem and tighten to secure the faucet. From underneath the sink, hand-tighten the faucet quick connect fitting onto the faucet stem.

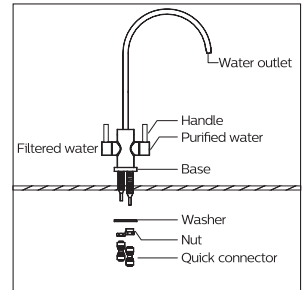

3. Installing the system

a. Connect with the water inlet

Cut a section of 3/8" pipe. Insert one end of the pipe into the inlet hole of the system until it stops. Insert the other end of the pipe into the three-way ball valve nut until it stops.

b. Connect with the water outlet and the faucet

Cut a section of 1/4" pipe. Insert one end of the pipe into the quick connect fitting connected to the filtered water of the faucet until it stops. Insert the other end of the pipe into the filtered water outlet hole of the system until it stops.

Cut another section of 1/4" pipe. Insert one end of the pipe into the quick connect fitting connected to the purified water of the faucet until it stops. Insert the other end of the pipe into the purified water outlet hole of the system until it stops.


c. Connect with the drain water outlet and floor drain.

Cut a section of 1/4" pipe. Insert one end of the pipe into the drain outlet hole of the system until it stops. Insert the other end of the pipe into the drain pipeline.

d. Connect with power.

e. Check if the system is installed properly

Turn on the cold water valve and the three-way ball valve. Check for leaks before leaving installation.

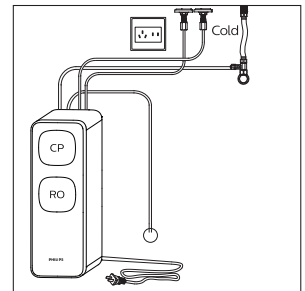


V. Using the system

First-time use

- Turn on the faucet. The auto-flush will be on automatically.
- After the auto-flush is complete, allow water to run for 30 minutes to flush air and carbon fines (very fine black powder).

User interface

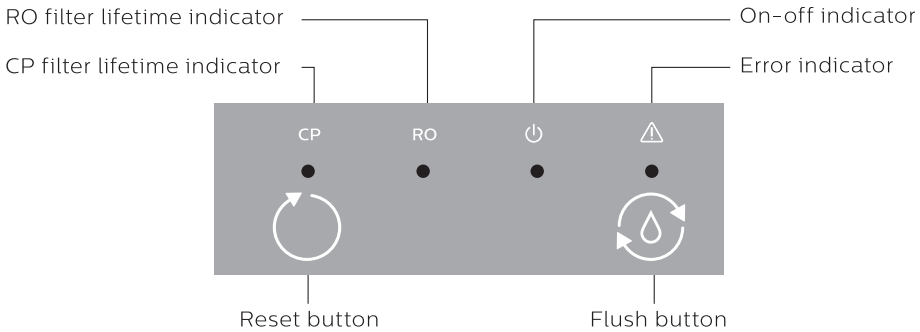

When the system is connected with power, you will hear a beep, and all indicators will light up for 3 seconds, then the flush will be automatically on. If there's no operations after the auto-flush, the system will turn into standby mode, and the indicators will be off.

When the system is in standby mode, filter lifetime and on-off indicators will light up to show filter lifetime and on-off status, and the error indicator will be off unless there is an error.

When the faucet is turned on, all the indicators will light up to show filter lifetime and power status. The error indicator will be off unless there is an error.

a. Filter lifetime indicator

| Status | How long will the filter last | Reminder | |
|--------|-------------------------------|--------------------|--|
| | | Indicator | Alert |
| Normal | More than 7 days | Blue light | N/A |
| Alert | Less than 7 days | Flashing red light | Beeps for 6 times whenever the faucet is turned on |
| | Expired | Constant red light | Beeps for 6 times whenever the faucet is turned on |

b. Error indicator

If the faucet is constantly turned on for 2 hours, the system will turn into protection model and shut down. Meanwhile, the error indicator flashes red, and you will hear beeps for 15 times. You need to disconnect with power and reconnect.

When the leakage is detected, the failure indicator constantly light in red, and you will hear the beep. The system will shut down. You need to fix the leakage and reconnect with power. When there is leakage, the error indicator will show constant red light, and you will hear beeps.

c. Auto-flush

- Flushes automatically for 18 seconds when the system is powered up.
- Flushes automatically for 6 seconds when the system has worked for 5 minutes.

d. Flush button

When the system is in standby mode, press the flush button, and the device will be flushed. During the flush, press the flush button again to stop.

f. Reset button

Resetting filter lifetime

Long press the reset button for 5 seconds. You will hear a beep, and the indicator of CP filter lifetime flashes blue. Press the reset button again for 1 second to select the filter that needs to be reset.

When the indicator of the selected filter flashes, long-press the reset button for 3 seconds. You will hear a beep, and the indicator will turn constant blue light. This means it has been reset successfully.

VI. Maintenance

Routine maintenance

- If the system is not used for more than two days, turn on the faucet and allow the water to run for at least 5 minutes to flush the filters.
- If the system will not be used for more than one week, take out the filter cartridges, seal them with plastic wraps, and store them in the refrigerator (not in the freezer). Allow the water to run for at least 10 minutes before using them again.
- If you will not use the system for a long time, please cut off the water supply. Turn on the faucet to release the internal pressure and avoid damage to the device before using it again.

Filter lifetime

| Filter type | Model | Filter replacement |
|-------------|---------------|--------------------|
| CP filter | AUT706 | 6-12 months* |
| RO filter | AUT747/AUT767 | 24-36 months* |

Notes:

* The actual lifetime of filter cartridge depends on the local tap water quality and a daily consumption of 10 liters.

The recommended replacement period is an average based on different local tap water quality. If the local tap water quality is below average, the actual lifetime of the cartridge would differ from the recommended replacement time. If the filter cartridge is blocked, please replace it.

This system can only work with Philips filters.

Filter cartridge replacement

- a. Cut off the power.
- b. Removes the front cover
- c. Turn the filter that needs to be replaced anticlockwise.
- d. Remove the packaging of the new filter, and insert it in the system. Turn it clockwise to align the triangle icon on the filter with the lock icon on the system.
- e. Connect with power. If the RO filter is replaced, and allow the water to run for 30 minutes, while if the CP filter is replaced, discharge the water for 10 minutes.
- f. Reset the filter lifetime according to chapter V.

Notes:

In the process of the filter replacement, there may be a small amount of water coming out at the bottom of the system, which may trigger the leakage detector. Please wipe the water around the leakage detector before plug in again.

VII. Precautions**Warning**

- Always use municipal tap water as the water source. Do not use with water that is microbiologically unsafe or unknown quality without adequate disinfection before or after the device.
- This system is not intended for user by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the system by a person responsible for their safety. Children should be supervised to ensure that they do not play with the system.
- Be sure to handle the system gently and carefully. Do not attempt to modify or repair the system yourself, otherwise the warranty becomes invalid.
- This device is intended for domestic use only.
- The inlet temperature of the machine requires 5-38°C. When the inlet temperature exceeds 38°C, the filter will be damaged and invalid. If the inlet water temperature is lower than 5°C, it may cause freezing and rupture of the system, resulting in water leakage.
- Do not reverse the installation order of the water purifier filter to avoid affecting the filter performance of the water purifier.

- If the power cord appears to be damaged, please stop using the product. To avoid risks of danger, the power must be replaced by the manufacturer, its service agent or similarly qualified person.
- If the product is abnormal or faulty, stop using it immediately, unplug the power supply, and close the inlet valve, or it may cause damages to components, such as property safety, smoke, fire, electric shock, etc.
 - Examples of exception and failures
 - There is water seeped or leaked
 - The product is cracked or damaged
 - There is abnormal sound or burnt smell
 - When the power cord is pulled, the power supply is not stable
 - The power plug or power cord is abnormally hot
 - The machine does not work or does not produce water
 - Please contact the after-sales personnel for inspection immediately
- If not using the water purifier for long time, cut off the water source and power. Turn on the handle of the faucet to release the internal pressure to avoid damage to the water purifier.

Notes

- The system and installation shall comply with applicable local regulations.
- The contaminants or other substances removed or reduced by this system are not necessarily in all user's water.
- For the best performance, please change your filter cartridge according to the filter lifetime indicator. When a significantly lower flow rate is observed, we recommend to change the filters.
- This system should be placed on a stable and flat surface.
- Keep the device away from heat.
- Organic solvent such as gasoline etc. shall not be used for wiping the housing of the device. If cleaning is required, please gently wipe the surface of the product with wet cloth after it is disconnected from power supply.
- The device shall not be placed in place that may have inflammable gas leakage
- The information of this user manual is subject to change without prior notice to the users.

VIII. Troubleshooting

| Fault | Possible cause | Solutions |
|---|--|--|
| No water comes out of the faucet | The device is not connected with power. | Check if the adaptor is connected properly. |
| | Cold water valve, three-way ball valve or faucet is off. | Turn on the valve or the faucet. |
| | Lifetime of filter is expired. | Please replace the filters. |
| | Connection of pipeline is incorrect. | Please check the pipelines and ensure they connect correctly. |
| The flow rate of filtered water gets slower | Filter is blocked. | Please replace the filters. |
| | Inlet water pressure is low. | Please install a pump before the system, or wait until the water pressure gets stable. |
| | PE pipes are bent. | Check the PE pipes. |
| Poor outlet water quality | The filters have expired. | Please replace the filters. |
| | The device hasn't been used for more than 2 days. | Allow water to run for 5 minutes before using it again. |
| | The quality of the inlet water is poor. | Please ensure to only use tap water as the water source. |
| Leakage | Pipes or filters are not installed properly. | Reinstall the system according to chapter IV. |
| | Gasket of filter is worn. | Please contact the after-sales service. |
| | Gasket of the faucet is worn. | Please contact the after-sales service. |
| | Components are damaged. | Please contact the after-sales service. |
| Filter lifetime indicator remained unchanged | The electronic modules are damaged. | Please contact the after-sales service. |
| Error indicator lights in red, or there are beeps | Leakage examination module is abnormal. | Please contact the after-sales service. |
| | Leakage happens. | Refers to chapter V. |
| | Turning on the faucet for more than 2 hours. | Refers to chapter V. |
| | The PCB board of temperature sensor is damaged. | Please contact the after-sales service. |

| | | |
|-------------------------------------|---|--|
| The buttons don't work | Misoperations against the user manual.. | Follow the steps according to Chapter V. |
| | Button module is damaged. | Please contact the after-sales service. |
| Indicators on the device don't work | The device is not connected with power. | Check if the power adaptor is connected. |
| | The light board is damaged. | Please contact the after-sales service. |

IX. Guarantee & Service

If you need information or if you have any problems, please visit www.philips.com or contact the customer care center in your country. If there is no customer care center in your country, go to a local dealer. Within two years from the date of purchase, you will receive free warranty service for any damage caused by the manufacturing process, or components under normal operation confirmed by our maintenance service. The warranty service does not include frequently replaced consumable components, auxiliary devices, transportation fees, and door-to-door service. Please show the proof of purchase to the service personnel during maintenance.

X. Packaging list

| | |
|----------------------|----|
| System | 1x |
| Power Adaptor | 1x |
| Three-way ball valve | 1x |
| 3/8" PE pipe | 1x |
| 1/4" PE pipe | 1x |
| Faucet | 1x |
| User manual | 1x |
| Leakage detector | 1x |
| Quick start guide | 1x |


I. 產品介紹


感謝您選擇飛利浦。飛利浦AUT2015與AUT3015型櫥下式濾水器，新型無水箱設計，搭載三重反滲透過濾系統，有效去除餘氯、雜質、揮發性有機化合物、重金屬、殺蟲劑、病毒以及細菌，讓您暢享純淨好水。

II. 產品規格

| | | |
|--------|-------------------------------|----------|
| 產品名稱 | 飛利浦櫥下式濾水器 | |
| 產品型號 | AUT2015 | AUT3015 |
| 淨水流速 | 2升/分鐘 | |
| 純水流速 | 1.05升/分鐘 | 1.58升/分鐘 |
| 淨水量 | CP濾芯: 6,000L RO濾芯: 11,000L | |
| 適用進水水壓 | 0.1-0.4 MPa | |
| 適用進水溫度 | 5°C-38°C | |
| 額定電壓 | 110V/60Hz | |
| 額定功率 | 65W | 90W |
| 適用水源 | 市政自來水 | |

III. 產品結構與安裝圖示

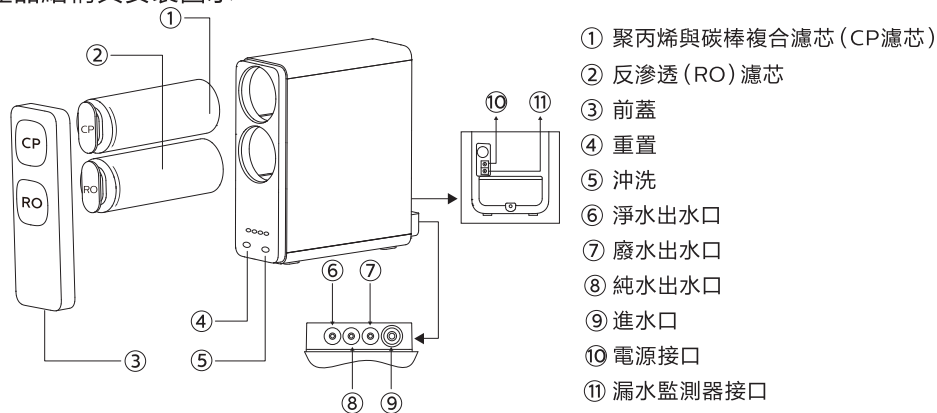


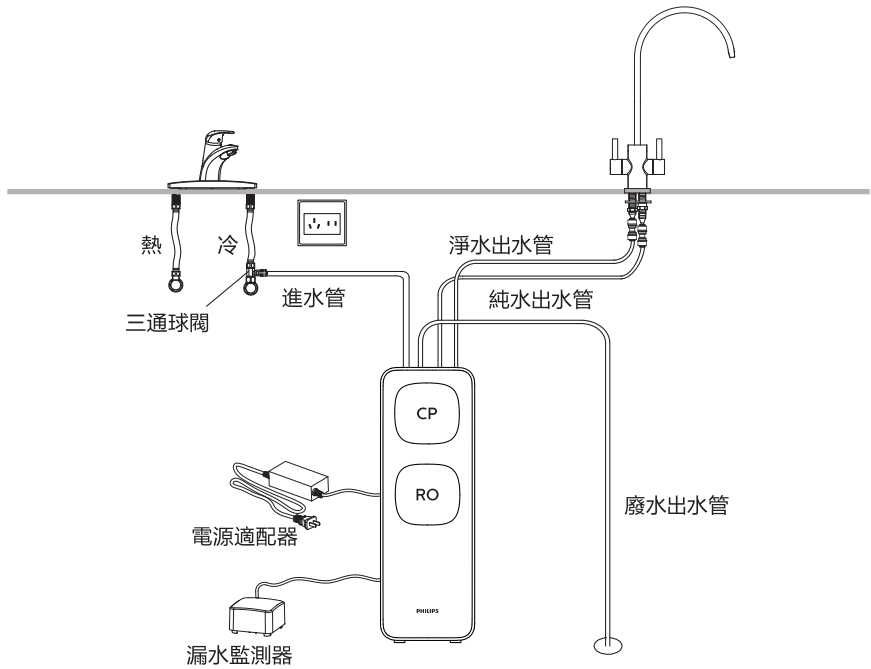

IV. 產品安裝


1. 安裝三通球閥

- 關閉冷水閥，將冷水軟管從冷水閥上擰下。
- 將三通球閥安裝在冷水閥上，並將其擰緊，安裝時，請勿遺漏三通球閥上的密封墊。
- 將冷水軟管安裝在三通球閥上，並將其擰緊，安裝時，請勿遺漏冷水軟管上的密封墊。

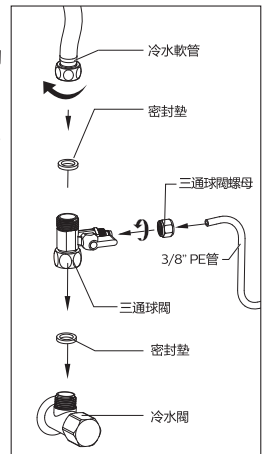

2. 安裝龍頭

在水槽或者檯面上選擇合適的安裝位置，安裝位置的半徑3cm內需平整，鑽一個直徑約為29mm的孔；如在檯面上已有這個孔，請忽略此步驟。龍頭請按圖示安裝——將龍頭桿上的螺母一直弄到龍頭桿上，並擰緊以固定龍頭。從水槽下面，用手將快速接頭擰緊到龍頭桿上。

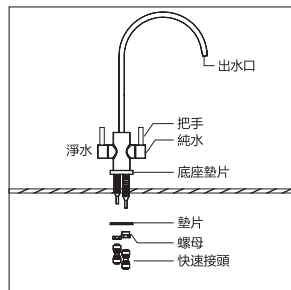

3. 安裝濾水器

a. 連接進水口與三通球閥

剪取適當長度的“3/8” PE管，一端插入濾水器的進水口處直到插到底，另一端安裝在三通球閥上直到插到底。

b. 連接出水口與龍頭

剪取適當長度的“1/4” PE管，一端安裝在龍頭底部的快速接口上直到插到底，另一端插入淨水出水口處直到插到底。

剪取適當長度的“1/4” PE管，一端安裝在龍頭底部的快速接口上直到插到底，另一端插入純水出水口處直到插到底。


c. 連接廢水出水口與地漏

剪取適當長度的“1/4” PE管，一端插入廢水出水口直到插到底，另一端放入排廢水管道內。

d. 取電源適配器插頭插入家用電源插座。

e. 檢查濾水系統是否安到位

打開冷水閥和三通球閥，檢查安裝完畢後是否有漏水現象。

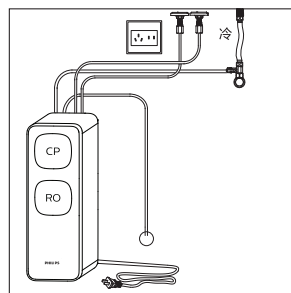


V. 產品使用

首次使用

- 打開龍頭，自動沖洗啟動。
- 自動個沖洗結束後，打開龍頭把手，待純水從龍頭的出水口處出水30分鐘。若有黑色粉末（碳粉）釋出，屬正常現象。

用戶使用介面

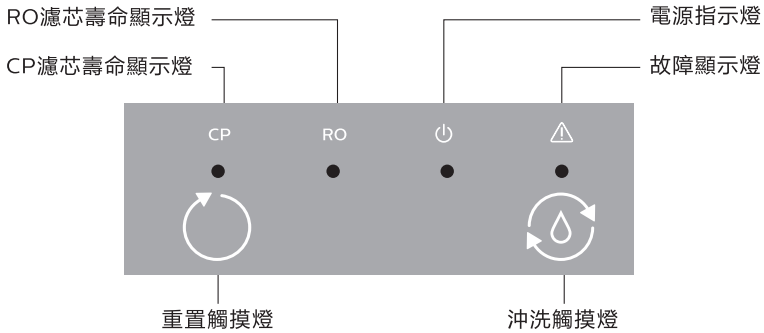

設備通電後，蜂鳴器鳴叫一聲，所有指示燈常亮3S，3S後機器自動沖洗18S。沖洗完成後，若無製水，則進入待機狀態。

整機進入待機狀態時，顯示濾芯壽命與開關狀態，故障顯示燈閃爍後熄滅（除非發現故障，故障顯示燈亮）。

龍頭通水時，顯示濾芯壽命與開關狀態，故障顯示燈閃爍後熄滅（除非發現故障，故障顯示燈亮）。

a. 濾芯壽命顯示燈

| 壽命階段 | 壽命時間 | 提示方式 | |
|------|------|-------|------------|
| | | 壽命指示燈 | 蜂鳴器 |
| 正常 | 長於7天 | 藍色常亮 | 無提醒 |
| 警示 | 短於7天 | 閃爍紅燈 | 龍頭通水時，鳴叫6聲 |
| | 到期 | 常亮紅燈 | 龍頭通水時，鳴叫6聲 |

b. 故障顯示燈

整機連續工作提醒：水泵連續制水2小時，則機器進入長時間製水保護狀態，所有部件停止工作，檢修指示燈紅色閃爍，蜂鳴器鳴叫15聲。進入長時間制水保護狀態時，需重新通電才能恢復。

漏水提醒：當檢測到漏水時，檢修指示燈紅色常亮，蜂鳴器持續鳴叫，整機停止工作。此故障狀態下，按鍵不可用，整機排除故障後需要重新通電才可解除報警繼續使用。

c. 自動沖洗

- 通電後沖洗：整機通電後，產品自動沖洗18秒。
- 累計制水沖洗：整機累計製水5分鐘，沖洗6秒。

d. 沖洗按鍵

整機在待機狀態下，觸按“沖洗”鍵，整機進入手動沖洗狀態；如機器沖洗過程中，再次點按“沖洗”鍵則退出沖洗模式恢復沖洗前的模式狀態。

f. 重置按鍵

長按復位按鍵5秒蜂鳴器鳴叫1聲，第一級CP濾芯壽命指示燈藍色閃爍，再短按重置鍵1秒，進入濾芯選擇模式，選擇所需重置的濾芯。

當重置濾芯指示燈處於閃爍狀態下，長按重置按鍵3秒，蜂鳴器鳴叫1聲，濾芯指示燈變為藍色常亮，重置成功。

VI. 維護保養

日常維護

- 若濾水器超過2天未使用，再次使用前請打開龍頭，放出純水至少五分鐘以便沖洗濾芯。
- 若濾水器超過一周末使用，取出濾芯，將其用保鮮膜密封放置冰箱內（請勿放置至冷藏格內）。再次使用前請打開龍頭，放出純水至少10分鐘。
- 當長時間不使用濾水器時，請切斷水源與電源。再次使用前請打開龍頭，放出純水以釋放內部氣壓避免損壞濾水器。

濾芯壽命

| 濾芯類型 | 濾芯型號 | 更換週期 |
|------|---------------|----------|
| CP | AUT706 | 6-12個月* |
| RO | AUT747/AUT767 | 24-36個月* |

注意：

* 各濾芯的實際使用壽命取決於當地自來水水質和每天使用量。本濾水器所建議的各濾芯更換週期是根據各地自來水的使用情況的平均數值，實際濾芯使用壽命可能與建議更換週期存在差異。若濾芯過早堵塞或失效，請立即更換濾芯。

本濾水器僅適配飛利浦濾芯。

濾芯更換

- a. 斷開電源（產品具有不斷水換芯功能，更換濾芯時只需斷開電源即可開始更換）。
- b. 按圖示取下前蓋。
- c. 逆時針旋出需更換的濾芯。
- d. 撕開濾芯收縮膜後將新的濾芯依照其在濾水器中的位置（三角標與鎖緊位所對應的位置）順時針旋入濾水器內。
- e. 恢復濾水器電源，打開龍頭，讓其出水。如有更換反滲透膜濾芯，前30分鐘的出水，請勿使用。如僅更換其它濾芯，前10分鐘的出水，請勿使用。
- f. 根據第V章內容重置濾芯壽命。

注意：

濾芯拆卸更換時，可能會有少量殘水滲出導致漏水監測器報警，如報警，請擦拭監測器處殘水後重新通電。

VII. 注意事項

警告

- 本產品適用水源為市政自來水，不明水源請勿使用。
- 本產品不適合體能差、敏感度或智力較弱者，或者缺乏使用經驗和不瞭解本產品的人士（包括兒童）使用，除非已有負責安全的人員監管他們或者告知他們本產品的正確使用方法，並需對小孩進行監管，確保他們不要玩弄本產品。當兒童使用本產品，或者在兒童附近使用本產品時，必須進行嚴密監管。
- 請注意輕拿輕放本產品。切勿自行拆卸、改裝機器，否則不在保修條款內。
- 本產品僅限於家庭用水。
- 本濾水器進水溫度要求5~38℃水溫度超過38℃可能損壞密封件導致漏水；進水溫度低於5℃，可能造成冰凍，引起管道破裂，導致漏水。
- 濾水器濾芯安裝順序切勿顛倒以免影響濾水器過濾性能。
- 若電源線已損壞，請停止使用該產品。為避免危險，必須由製造商或其服務代理商或其指定售後人員進行更換。
- 如果濾水器工作異常，請立即停止使用，切斷電源以及進水閥門，聯繫售後客服作進一步檢測，否則可能會損壞組件，如財產安全、冒煙、著火、觸電等。
- 異常和故障的例子：
 - 有滲漏或漏水
 - 產品破裂或損壞
 - 有異常聲音或燒焦的氣味
 - 拔下電源線時，電源不穩定
 - 電源插頭或電源線異常發熱
 - 機器不工作

如出現上述情況，請立即聯繫售後人員進行檢查。

- 如果長時間不使用濾水器，請切斷水源和電源。打開水龍頭的手柄以釋放內部壓力，以避免損壞濾水器。

注意

- 本濾水器系統與安裝步驟需符合當地法規。
- 本濾水器所宣稱的去除或減少污染物的效能不一定適用於所有地區使用者所處地區的水源。
- 為保持本濾水器的最佳性能，請根據第VI所描述的建議更換濾芯期限更換濾芯。若發現本濾水器流速明顯降低，建議您立即更換濾芯。
- 請將本產品平穩放置。
- 本濾水器請保持遠離熱源以免變形或損壞。
- 請勿使用有機溶劑（例如汽油等）擦拭本設備。如果需要清潔，請在斷開電源後，用濕布輕輕擦拭產品表面。
- 請勿將設備放置在易燃氣體洩漏處。
- 若本說明書所涉及的訊息進行變更，請恕不另行通知。

VIII. 故障排除

| 故障現象 | 故障可能的原因 | 故障解決方法 |
|-----------|-----------------|----------------|
| 龍頭不出水 | 設備未連接電源適配器或連接鬆動 | 檢查電源適配器連接是否正常 |
| | 冷水閥、三通球閥或龍頭沒打開 | 將各閥門或龍頭打開 |
| | 濾芯壽命到期 | 請更換濾芯或聯係售後處理 |
| | 管路連接錯誤 | 請檢查管路，保證管路連接正常 |
| 龍頭出水流量小 | 濾芯堵塞 | 請更換濾芯或聯係售後人員 |
| | 水壓過低或供水量不足 | 請與售後人員聯繫 |
| | PE管打折 | 檢查PE管 |
| 出水水質差 | 濾芯失效 | 請跟換濾芯 |
| | 長期停用（2天以上） | 使濾水機通水5分鐘後使用 |
| | 自來水水質差 | 請確認使用水源為市政自來水 |
| 濾水器漏水 | 管路或濾芯安裝不到位 | 重新安裝或聯係售後人員 |
| | 濾芯密封圈磨損 | 請與售後人員聯繫 |
| | 進出水接頭密封圈磨損或偏位 | 請與售後人員聯繫 |
| | 其他零部件有損壞 | 請與售後人員聯繫 |
| 濾芯壽命始終未減少 | 電子控制器或顯示模塊損壞 | 請與售後人員聯繫 |

| | | |
|------------------|---------------|---------------|
| 故障指示燈紅色亮或閃爍、蜂鳴齊響 | 漏水檢測模塊異常 | 請與售後人員聯後 |
| | 設備漏水 | 請參照第V頁產品使用 |
| | 連續製水時間大於2小時 | 請參照第V頁產品使用 |
| 按鍵失靈 | 按鍵未按說明書指引操作 | 按說明書功能指引操作按鍵 |
| | 按鍵模塊損壞 | 請與售後人員聯後 |
| 濾水器主機指示燈不亮 | 設備未連接電源適配器 | 檢查電源適配器連接是否正常 |
| | 主機燈板損壞或其連接線鬆動 | 請與售後人員聯後 |

IX. 保固與服務

若您需要相關服務或資訊，或是有任何問題，請瀏覽飛利浦網站，網址為www.philips.com/water或聯絡您當地的飛利浦顧客服務中心。若您當地沒有顧客服務中心，請洽詢當地的飛利浦經銷商。從購買日期後兩年內，產品擁有兩年保固期。在購買日期後兩年內，凡經本公司特約維修站人員確認為正常使用情況下，因製作工藝或元器件造成之損壞，您都將獲得免費保修服務。此免費服務不包括需時常更換的易耗零配件、輔助裝置、運輸費及維修上門服務費。維修請攜同購買憑證正本方為有效。

X. 包裝清單

| | |
|----------|----|
| 濾水器系統 | 1x |
| 電源適配器 | 1x |
| 三通球閥 | 1x |
| 3/8" PE管 | 1x |
| 1/4" PE管 | 1x |
| 龍頭組件 | 1x |
| 說明書 | 1x |
| 漏水監測器 | 1x |
| 快速入門指南 | 1x |



Specifications are subject to change without notice
www.philips.com/water

© 2021 AquaShield

All rights reserved.

The Philips trademark and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license.

This product has been manufactured by and is sold under the responsibility of Hong Kong AquaShield Health Technology Company Limited and Hong Kong AquaShield Health Technology Company Limited is the warrantor in relation to this product.

Rev A FEB 21

