

PHILIPS

AVENT

www.philips.com/avent
Philips Consumer Lifestyle B.V.
Tussendiepen 4, 9206 AD Drachten,
The Netherlands

Trademarks are the property of
Koninklijke Philips N.V.

© 2022 Koninklijke Philips N.V.

All rights reserved.

3000.094.0810.1 (24/11/2022)



ENGLISH

Keep the user manual and product packaging for future reference.

For your child's safety and health

WARNING!

- Continuous and prolonged sucking of fluids will cause tooth decay.
- Always check food temperature before feeding.
- Throw away at the first signs of damage or weakness.
- Keep all components not in use out of the reach of children.
- Never attach to cords, ribbons, laces or loose parts of clothing. The child can be strangled.
- Never use feeding teats as a soother.
- Always use this product with adult supervision.

Before first use, clean the product and then place in boiling water for 5 minutes. This is to ensure hygiene. After each use, wash in warm, soapy water, remove any food residues and rinse thoroughly. If you use a brush to clean the tip of the feeding teat, clean it as carefully as possible to avoid damage. Clean before each use to ensure hygiene. Do not allow children to play with small parts or walk/run while using bottles or cups. Do not place the product in a heated oven or microwave. Do not use aggressive cleaning agents. Do not place parts on surfaces cleaned with antibacterial cleaners. Inspect before each use and pull the feeding teat in all directions. Throw away at the first signs of damage or weakness. We recommend replacing feeding teats every 3 months. Keep feeding teats in a dry, covered container. Do not leave a feeding teat in direct sunlight or heat, or leave in disinfectant (sterilizing solution) for longer than recommended, as this may weaken the teat. If you need information or support, please visit www.philips.com/support.