

www.philips.com/avent

Philips Consumer Lifestyle B.V.

Tussendiepen 4, 9206 AD Drachten,

The Netherlands

 
Trademarks are the property of Koninklijke Philips N.V. \odot 2023 Koninklijke Philips N.V.

All rights reserved.

3000.094.0811.2 (05/04/2023)







ENGLISH

Read all instructions carefully before use. Keep the user manual and product packaging for future reference.

For your child's safety and health

WARNING!

- Continuous and prolonged sucking of fluids will cause tooth decay.
- Always check food temperature before feeding.
- Throw away at the first signs of damage or weakness.
- Keep all components not in use out of the reach of children.
- Never attach to cords, ribbons, laces or loose parts of clothing. The child can be strangled.
- Never use feeding teats as a soother.

 Always use this product with adult supervision.
It is not recommended to use a microwave to warm up baby food or drinks. Microwaves may destroy valuable nutrients in food/drinks and may produce localized high temperatures. If you decide to use the microwave, take extra care to stir heated food/ drinks to ensure even heat distribution and check the temperature before serving. Only place the container in the microwave, without the screw ring, teat and cap. Do not allow children to play with small parts or walk/run while using bottles. Always discard any breast milk that is left over at the end of a feed.
Inspect before each use and pull the feeding teat in all directions. Throw away at the first signs of damage or weakness.

Before first use

Disassemble all parts, clean and then sterilize the parts by placing in boiling water for 5 minutes. This is to ensure hygiene.

Assembly

Make sure that the feeding teat is fully pulled through the screw ring as shown in the image (Fig. 1, 2).

Cleaning and storage

Clean all parts before each use to ensure hygiene. After each use, disassemble all parts, wash in warm, soapy water, remove any food residues and rinse thoroughly. If you use a brush to clean the tip of the feeding teat, clean it as carefully as possible to avoid damage. Then sterilize by boiling for 5 minutes. Make sure that you wash your hands thoroughly and that the surfaces are clean before contact with sterilized components. During sterilization with boiling water, prevent the parts from touching the side of the pot. This can cause irreversible product deformation, defect or damage that Philips cannot be held liable for. Food colorings may discolor parts. This product is dishwasher safe. Do not place the product in a heated oven. Do not bring the bottle parts in contact with or place on surfaces with abrasive or antibacterial cleaning agents. We recommend replacing feeding teats every 3 months. Keep feeding teats in a dry, covered container. Do not leave a feeding teat in direct sunlight or heat, or leave in disinfectant (sterilizing solution) for longer than recommended, as this may weaken the teat.

Compatibility

Replacement teats are available separately. These bottle parts are compatible only with teats from Philips Avent Grow range. Philips Avent Grow range is not compatible with Philips Avent Steam Sterilizer and Philips Avent AirFree vent.

Support

If you need information or support, please visit www.philips.com/support.