

Register your product and get support at
www.philips.com/welcome

55PFL5755/V7



EN

User manual

PHILIPS

Contents

1	Notice	2	Timer Function	14
			Lock Functions	14

2	Important	3		
---	-----------	---	--	--

3	Your TV	5		
	Bottom Panel Buttons	5		
	Sockets	6		
	Remote Control Functions	7		

4	Use your TV	8	6	Other Information	15
	Switching on	8		Troubleshooting	15
	Switching off	8			
	Initial Set-up	9			
	Using Menu System	9			
	SET UP	9			
	Source label	9			
	Automatic search	9			
	Automatic Update	10			
	Analog Manual Installation	10			
	Organiser	10			

5	Use more of your TV	11	7	Product information	16
	Adjusting the Picture	11		Supported display resolutions	16
	VGA	11		Multimedia	16
	Adjusting the Sound	12		Tuner/Reception/Transmission	16
	PAP Function	12		Remote control	16
	Option	12		Power	16
	USB Function	13		Supported TV mounts	17
				Product specification	17

1 Notice

Pixel characteristics

This LCD/LED product has a high number of colour pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

Warranty

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by Philips Service Centres and official repair shops. Failure to do so shall void any warranty, stated or implied.

Any operation expressly prohibited in this manual, any adjustments, or assembly procedures not recommended or authorised in this manual, shall void the warranty.

2 Important

Read and understand all instructions before you use your TV. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire !

- Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilled on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
- Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.



- Never insert objects into the ventilation slots or other openings on the TV.
- When the TV is swiveled ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.

Risk of electric shock or fire !

- Never expose the remote control or batteries to rain, water or excessive heat.
- Avoid force coming on to power plugs. Loose power plugs can cause arcing or fire.

Risk of injury or damage to the TV!

- Two people are required to lift and carry a TV that weights more than 25 kg.

- When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.
- When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. PE Electronics bears no responsibility for improper wall mounting that result in accident, injury or damage.

Risk of injury to children!

Follow these precautions to prevent the TV from toppling over and causing injury to children:

- Never place the TV on a surface covered by a cloth or other material that can be pulled away.
- Ensure that no part of the TV hangs over the edge of the surface.
- Never place the TV on tall furniture (such as a bookcase) without anchoring both the furniture and TV to the wall or a suitable support.
- Educate children about the dangers of climbing on furniture to reach the TV.

Risk of overheating!

- Never install the TV in a confined space. Always leave a space of at least 4 inches or 10 cm around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.

Risk of damage to the TV!

- Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.

Risk of injury, fire or power cord damage!

- Never place the TV or any objects on the power cord.
- To disconnect the TV power cord easily from the power outlet, ensure that you have full access to the power cord at all times.

- When you disconnect the power cord, always pull the plug, never the cable.
- Disconnect the TV from the power outlet and antenna before lightning storms. During lightning storms, never touch any part of the TV, power cord or antenna cable.

Risk of hearing damage!

- Avoid using earphones or headphones at high volumes or for prolonged periods of time.

Low temperatures

- If the TV is transported in temperatures below 5°C, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

Screen care

- Avoid stationary images as much as possible. Stationary images are images that remain on-screen for extended periods of time. Examples include: on-screen menus, black bars and time displays. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV.

- Risk of damage to the TV screen! Never touch, push, rub or strike the screen with any object.
- To avoid deformations and colour fading, wipe off water drops as soon as possible.

 
Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

3 Your TV

Bottom Panel Buttons

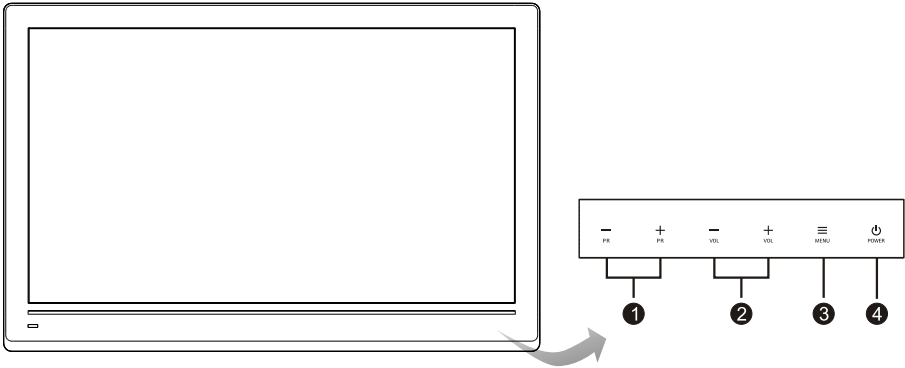

1. PROGRAM DOWN/UP button

Scans down/up through the channel list. In the menu system, PROGRAM DOWN acts like the OK button on the remote in the main menu, and in other menu, it acts like the left direction button on the remote and adjusts menu; PROGRAM UP acts like the right direction buttons on the remote and adjust menu controls.

2. VOLUME DOWN/UP button

Decreases/increases the volume. In the menu system, they act like the down/up direction buttons on the remote and adjust menu controls.

3. MENU button

Brings up the menu system.







4. POWER button



Turns the TV on or standby.

Note: The location and names of the function buttons and power button on the TV may vary according to TV model.

Sockets

 
Note: The location and names of the sockets on the TV may vary according to TV model, and not all sockets available on all models.

- USB** -  **USB socket (input) at the side (right)**
This socket can be used to connect a USB device.
- HDMI 1** - 
or
HDMI 2 -
or
HDMI 3 -
or
HDMI 4 -
or
HDMI 5 - **HDMI1/HDMI2/HDMI3/HDMI4/HDMI5 sockets (input) at the side (right)**
The HDMI (High-Definition Multimedia Interface) socket lets you connect a device, such as a Blu-ray player, with a HDMI output for best picture quality. It also provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable.
- SPDIF** -  **SPDIF socket (output) at the side (bottom)**
Use a digital optical cable to connect your TV to a digital amplifier.
- ANTENNA IN** -  **ANTENNA IN socket (input) at the side (bottom)**
This socket can be used to connect to an external antenna.
- CMP adapter** -  **CMP/YPbPr adapter socket (input) at the side (bottom)**
The socket can be used to connect the attached CMP adapter cable with YPBPR component sockets, then can be used to connect a device that has component video sockets, such as a DVD player. The component sockets can recognize if the device you're connecting to is Y Pb Pr compatible or Y Cb Cr compatible. The component sockets provides excellent picture quality because the video is separated into three separate parts.
- AUDIO in adapter** -  **AUDIO in adapter socket (input) at the side (bottom)**
When using the CMP adapter socket, the socket can be used to connect the attached AUDIO in adapter cable with audio L & R sockets, and be used to obtain sound.

And this socket provides audio connection when using the HDMI jack for DVI, or used to obtain sound when a PC is connected to the VGA socket.
- VGA** -  **VGA socket (input) at the side (bottom)**
This socket can be used to connect a computer.
- AV adapter** -  **AV adapter (input/output) socket at the side (bottom)**
The socket can be used to connect the attached AV adapter cable with VIDEO and AUDIO L & R IN/OUT sockets, then AV IN sockets can be used to connect a range of equipment, including video recorders, camcorders, decoders, satellite receivers, DVD players, or games consoles. The VIDEO IN socket provides composite video connection; AV OUT sockets can be used to connect a VCR to record programs. You must leave the TV on the same channel you are recording. The VIDEO OUT socket provides composite video connection.
- Note:** When connecting the AV adapter cable, please make sure the side with triangular mark towards outside. And for AV IN or OUT sockets, you can find the AV IN or AV OUT mark on the big crunode.

Remote Control Functions


Note: -Remote Control (Depending on the models) and operation of remote control may be affected by bright artificial light near to the TV.

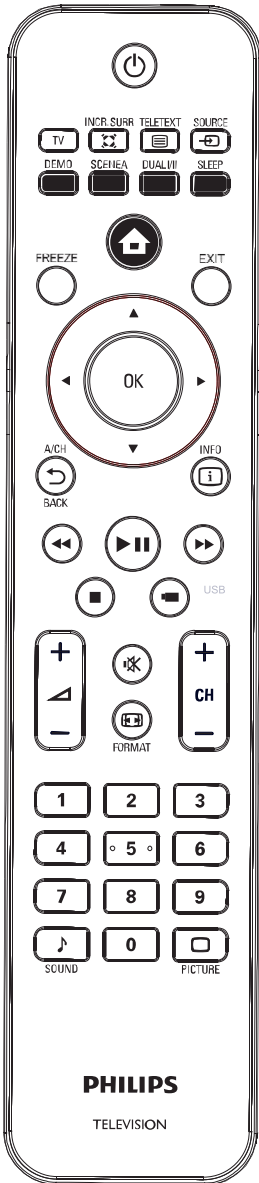

Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

 (On/Off button) Turns the TV on or off.

TV Access the TV mode.

 **INCR. SURR** Enables Incredible Surround for stereo sources. Enables spatial mode for mono sources.

 **TELETEXT** Toggles teletext on or off.

SOURCE Press to select signal source.


DEMO Toggles the demonstration menu on or off.

SCENEA Deletes the selected file in the playlist .

DUAL I/II Switches Stereo and Nicam Stereo to Mono. Selects first language (Dual I) or second language (Dual II) in bilingual programmes


SLEEP Sets a delay after which the TV switches off

Note: -**INCR. SURR, TELETEXT, DEMO, SCENEA, DUAL I/II, SLEEP** keys function depending on model/source mode. Red, Green, Blue, Yellow keys depending on model .


 **MENU** Brings up the main menu or press to return to the previous menu.

FREEZE Freezes the picture, Note:- Feature will work only in RF & AV mode.

EXIT Exits the menu system.

 (up, down, left and right direction buttons) Highlights different items in the menu system and adjusts the menu controls. Selects the picture format.

OK Confirms your selection.

 **BACK A/CH** Returns you to the previous Screen/RF mode. In USB function, returns to the previous menu.

Toggle between the current channel & the last viewed channel.

INFO Displays the status information.


 Fast reverse button.


 Play/Pause button.


 Fast forward button.

 Stop button.

USB Access the USB mode.

 Increases or decreases volume.


 **(MUTE)** Reduces the TV's volume to its minimum level. Press again to restore the volume.


 **FORMAT** Selects a picture format. Note:- No function in USB mode.

CH +/- Scans up or down through the current channel list or change source mode.

Note: Change press CH + / - Button to change the Source. (numeric buttons) Enters channel numbers.

0-9 Enters a letter, a digit or a symbol in some functions.

 **SOUND** Toggles through the sound modes: Speech, Music, Movies, Multimedia and Personal.

 **PICTURE** Toggles through the picture preset settings: Vivid, Standard, Movie, Power saver and Personal.

Note: -Sound/Picture keys depending on Source mode.

4 Use your TV

 
Switching on

Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two AAA batteries in the remote control.

Precautions on using batteries:


- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.

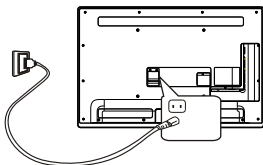

2. Connect the power cable **FIRST** to the television, **THEN** to a mains socket.

Your TV set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.

 Note: The figures are for representation only. The location of the power socket at the back of the television might differ depending on the model.

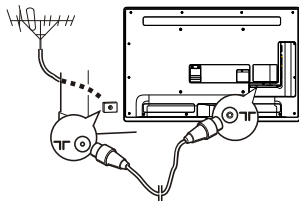

3. Connect an outside aerial to the **ANTENNA IN** socket at the back of the TV set.

The aerial socket (75 OHM - VHF / UHF / cable) can be used for connecting an external aerial or other equipment fitted.

4. When powered on, the TV will be turned on directly.

 
If the power indicator lights up, the TV set is in standby mode. Press the \odot button on the remote control or at the bottom of the TV set to turn on the TV.

Switching off

- To put the TV set into standby mode, press the \odot button on the remote control or on the TV, the TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet.

Initial Set-up

Initial set-up involves selecting all the settings required to be able to search for and store all the channels you can receive. Make sure that the television is switched on and follow all the steps in turn specified hereafter.

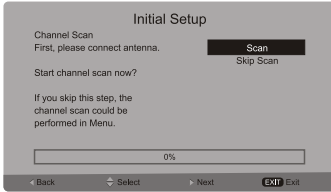

1. Press the up or down direction button to select the **Scan** option and press the **OK** or right direction button to start the search automatically. All available TV programmes are stored. This operation takes a few minutes. The display shows the progress of the search and the number of programs found.

 
Note: To prevent the channel setup process from being interrupted, wait for the message indicating that the setup is complete.

In this step, you can also select **Skip Scan** to skip the initial setup progress. But when you turn the TV on next time, the Initial setup menu will still appear.

2. During the setup, user can follow the hints available at the bottom of the screen to return to the last step by pressing the left direction button. Or press **Exit** to exit or interrupt the search halfway.
3. After initial setup is complete, press **OK** to exit. The channels are arranged in a preset order. If you wish to skip channels, modify the preset order or rename channels, select **Setup > Organiser** and press the **OK** or right direction button to enter.

Using Menu System

This section explores the menus of your TV. Each menu is outlined and detailed to help you get the most from your TV.

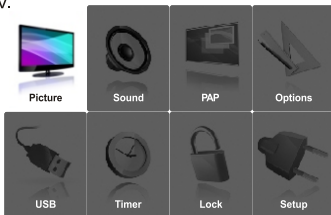


To access the menu system:

1. Press the Menu button to display the main menu.
2. Press the up, down, left, right direction button to select the desired item, then press the **OK** button to open the corresponding submenu.

3. In submenus, use the up or down direction button to select menu options, use the left or right direction button to set functions or change values. Use the **OK** button to activate a setting. Use the **OK** or right direction button to open the corresponding submenu.

4. Press **Menu** to return to the previous menu or press **Exit** to close the menu.

 SET-UP

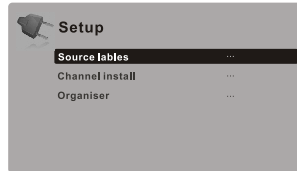


Source labels

You can select the accessory devices you have connected to the external inputs /outputs.

1. Display the main menu by using the **Menu** button, select Setup and press **OK** to enter the **Setup** menu.
2. Highlight Source labels, and press the **OK** or right direction button to display the **Source labels** menu.
3. Use the up or down direction button to select a connector your equipment is connected to, then press the left or right direction button to select the type of apparatus attached to this connector.

Automatic search

 This option allows the TV to search for, find and store all the available channels for the antenna or cable input selected. Follow all the steps in turn specified hereafter.

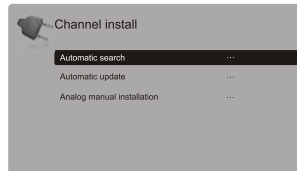

1. Press the **Menu** button to display the main menu, and select the **Setup > Channel install**, then press the **OK** or right direction button to enter.
2. Select the **Automatic search** and press the **OK** or right direction button to start the automatic search process. The search may take a few minutes. During the process, you can press **Menu** or **Exit** to abort halfway.
3. Once the automatic search ends, press the **Menu** button to return to the last step or press **OK** to restart your channel search.

Note:-Digital channel are not available for India.

Automatic Update

This allows you to update all available channels, without altering the sorting of existing channels.

 
1. Display the **Channel install** menu, press the up or down direction button to highlight **Automatic update** option.
2. Press the **OK** or right direction button to start to update the channels. To stop the update process, press the **Menu** button.
3. When the search is completed, press **Menu** to return, or press **OK** to restart.

Analog Manual Installation

1. Display the **Channel install** menu, press the up or down direction button to highlight **Analog manual installation**, press the **OK** or right direction button to enter.
2. Press the up/down/left/right direction and number or **OK** button to search, fine tune or store the channel.
3. Press **Menu** to return to the previous menu or press **Exit** to close the menu.

Organiser

After the automatic search, channels are arranged in a preset order. You can skip channels, modify the preset order or rename channels, select **Setup >Organiser** and press the **OK** or right direction button to enter.

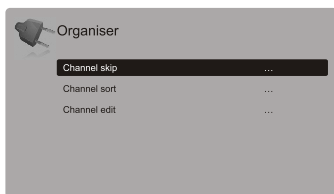

Channel Skip: If a channel was stored twice or its reception is poor, you can simply skip it. The skipped channels can not be selected by pressing the PROGRAM UP /DOWN button.

Select the **Channel skip** option and press the **OK** or right direction button to display **Channel skip** menu. Press the up or down direction button to select a channel and press the **OK** button to check the box.

Channel Sort: swaps two channels' position.

1. Select the Channel sort option and press the **OK** or right direction button to display **Channel sort** menu.
2. press the up or down direction button to select a channel, and press **OK** to confirm.
3. Press the up or down direction button to select your swapped channel, and press **OK** to swap the two channels.

Channel Edit: Select the **Channel edit** option and press the **OK** or right direction button to display **Channel edit** menu. Press the **OK** button to enter. Then press the number button to edit the channel.

When you have finished, press **Menu** to return, or press **Exit** to close the menu.

Note:-

- Use Red/Green or UP/DOWN Arrow keys to scroll the up /down list in channel Edit Menu.
- Network name & Frequency option not applicable for user.
- Refer below Table to Edit channel Naming.

1 abc/ABC	2 def/DEF	3 ghi/GHI
4 jkl/JKL	5 mno/MNO	6 pqr/PQR
7 stu/STU	8 vwx/VWX	9 yz/YZ
	0 +,-,.,	

 
5 Use more of your TV

Adjusting the Picture

The menu for adjusting the picture are used to obtain the best picture settings according to your preference, the type of program you are watching and the ambient lighting.

Display the main menu by pressing **Menu** and select **Picture**, then press the **OK** button to confirm. The **Picture** options are as below:

Note: Some options may be not available for certain signal sources.

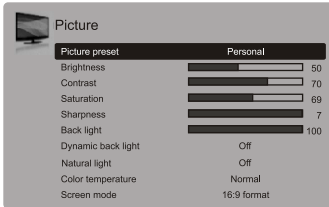

Picture preset: Use the left or right direction button to scroll through the picture preset settings: **Vivid**, **Standard**, **Movie**, **Power saver** and **Personal**.

Note: **Movie** is recommended Home Viewing mode, which confirms to recommendation of MEPS (Minimum energy performance standards). And the energy rating label is performed in this mode.

Brightness: Adjusts the brightness of the picture.

Contrast: Adjusts the difference between light and dark areas of the picture.

Saturation: Adjusts the richness of colour.

Sharpness: Adjusts the crispness of the edges in the picture.

Note: Saturation & Sharpness features are not available in VGA mode.

Back light: This option can be used to adjust the brightness of the back light, depending on room lighting.

Dynamic back light: Auto adjusts the back light, depending on the detected picture light and shade. Use the left or right direction button to select **On** or **Off**, if **On** is selected, the **Back light** option is not available.

Note: The **Dynamic back light** option is available only when the Picture preset is Personal. When the **Dynamic back light** is On, or the value of **Back light** exceeds the defaulted value in **Movie** mode, the TV will not satisfy the MEPS certification. And when turning on the TV next time, a prompt will appear.

Natural light: Auto adjusts the back light, depending on room lighting. Use the left or right direction button to select **On** or **Off**, if **On** is selected, the **Back light** option is not available.

Note: The **Natural light** option is available only when the Picture preset is Personal.

Color temperature: Adjusts the color temperature of the picture. Use the left or right direction button to scroll through the color settings: **COOL** for a more blue palette of picture colors; **NORMAL**; and **WARM** for a more red

palette of picture colors.

Note: For some models, the **Color temperature** option cannot be available.

Screen mode: Use the left or right direction button to select the picture size: **4:3 format**, **cinerama**, **14:9 zoom**, **16:9 zoom**, **16:9 zoom up** and **16:9 format**. (Note: You are recommended to use the full screen mode. Do not use the display mode with black bars on both sides of the picture (such as 4:3) for long time, otherwise the TV screen may be damaged permanently.)

Note: In HD mode, **16:9 format**, **Stretch zoom**, **Wide zoom2**, **Zoom2**, **Wide zoom** and **4:3 format** are available.

Auto format: Use the left or right direction button to select **On** and **Off**, when **On** selected, the picture will display the picture according to HD Signal's format.

Note: Auto format is available only in TV and AV mode.

Noise reduction: Sets the level at which noise is measured and reduced in the picture.

Motion enhance: This function is used to cancel motion judder. Select the **Motion enhance** option, then press the right direction or **OK** button to display the **Motion enhance** menu. The **Motion enhance** menu appears with the following options:

Effect: Use the left or right direction button set the Motion enhance effect: **Low**, **Middle**, **High** and **Off**. (Note: When **Off** is selected, the **Demo partition** and **Demo** options are not selectable.)

Demo partition: Use the left or right direction button to toggle among **Left**, **Right** and **All**.

Demo: This function is used for demo. Press the right direction or **OK** button to demonstrate the Motion enhance effect in selected demo partition.

Note: The **Auto format**, **Noise reduction** or **Motion enhance** option may appear in the next page of Picture menu, you can press the up or down direction button to switch.

VGA:-

Note: This function is only available in PC mode.

Auto Adjust: Press the right direction or **OK** button to adjust the picture's position, phase and clock automatically. The menu will auto exit after the adjustment is finished..

H Position (Horizontal Position): Adjusts the picture's position left or right.

V Position (Vertical Position): Adjusts the picture's position upward or downward.

 
Clock: Adjusts the clock sync of the picture.

Phase: Adjusts the picture if there is flicker of screen letters, color misalignment, or blurring.

Press Menu to return or Exit to close the menu.

Adjusting the Sound

Display the main menu by press the **Menu** button and select **Sound**, then press the **OK** button to confirm. The Sound menu appears with the following options:

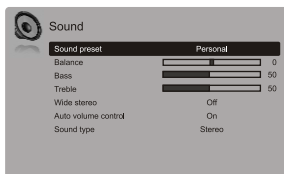

Sound preset: Select a sound type from the list using the left or right direction button: **Speech, Music, Movies, Multimedia** and **Personal**.

Balance: Use the left or right direction button to balance the sound between the left and right speakers.

Bass: Decreases or increases the bass of the TV using the left or right direction button.

Treble: Decreases or increases the treble of the TV using the left or right direction button.

Note: when adjusting Balance, Bass or Treble, Sound preset auto switched to Personal.

Wide stereo: use the left or right direction button to switch On or Off.

 
Auto volume control: turns on this option to keep the same sound level for all channels.

Sound type: select a sound type from the list using the left or right direction button.

Note: The options offered depend on the programme you are watching.

PAP Function

To display the pictures from different source inputs side by side. Note that one window is for TV inputs, the other is for VGA, HDMI and CMP inputs.

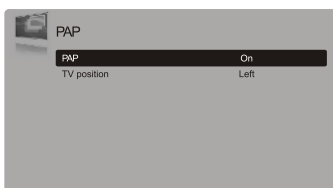


1. Display main menu by pressing **Menu**. Select **PAP** and press **OK** to confirm.
2. Select the **PAP** item, and press the left or right direction button to turn on/off PAP function.
3. When **On** is selected, select TV position, press the left or right direction button to reposition the TV window.

Note: Press the left or right direction button to toggle the focus window. When focus in TV window, digit keys and PROGRAM (CH +/-) UP/DOWN work in TV. When focus in the other window, PROGRAM (CH +/-) UP/DOWN can change available extension sources.

Options

Display main menu by pressing **MENU**. Select **Options** and press **OK** to confirm.

 The **Options** options are as below:

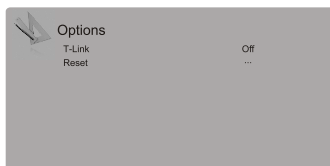


T-Link(HDMI CEC): To search for CEC devices connected to the HDMI sockets in your TV and enable one-touch play and one-touch standby between CEC devices, press the left or right direction button to select **On** or **Off**.

One-touch play: One-touch play enables you to press the play button on, for example, your DVD remote control. This starts playback on your DVD device and automatically switches your TV to the correct source, displaying DVD content.

System standby: System standby enables you to press and hold the button on, for example, your TV remote control. This switches your TV and all connected HDMI devices on or to standby mode.

Reset: This feature enables you to reset the picture and sound settings to their predefined factory values, but maintain the channel installation settings. Press **OK** to start to reset the TV to factory settings.

 USB/Media centre Functions

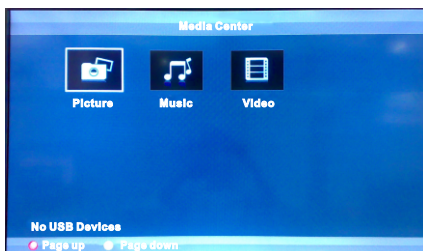

Your TV is fitted with a USB connector that enables you to view pictures, listen to music or watch videos stored on a USB storage device, by pressing USB key Enter / Exit USB Mode /media centre.

Note:-Press Exit key to Exit USB mode.

Supported file formats:

Picture: JPEG

Music: MP3

Video coding format: H.264/MPEG4/MPEG2/MPEG1

When a USB device is detected, it enters the **Media Center** menu directly.

Picture

To display pictures if available.

1. Select **Media Center (By pressing USB key) > Picture**, then press **OK** to enter the main file content browser.
2. In the main file content browser, you can press the red/green key on the remote control to page up/down.
3. Select an inner file folder, press **OK** to enter a subfile content browser. User can also press red/green key to page up/down in the sub browser in the same way as mentioned above.
4. Select a picture in either main or sub file content browser, press **OK** to watch, and a slide show begins from the selected picture.
5. Press the colour buttons on the remote control to perform the available functions shown at the bottom frame. Use Red color key for option selection & Green color key for Play/Pause operation.

Note:

During the playback of picture, the yellow button doesn't work. When the picture is paused, press the Yellow button to rotate the picture when Green color key is play.

6. Use A/CH(Back) key to come on Menu/Folder from Sub Menu/Folder.

Music

To playback music if available.

1. Select **Media Center > Music**, then press **OK** to enter the main file content browser.
2. Press the red/green key to page up/down in either main or sub file content browser in the same way as in picture display function.
3. Select a song, press **OK** to play, and an automatic playback begins from the selected song.
4. Press:
 - the colour buttons on the remote control to perform the available functions shown at the bottom frame.
 - **REV** (left arrow), **PLAY/PAUSE** (right arrow), **FWD** (right arrow), **STOP** (right arrow), **Pre** (left arrow), **Next** (right arrow) to perform the related functions.
5. Use **A/CH**(Back) key to come on Menu/Folder from Sub Menu/Folder.

Video

To watch video if available.

1. Select **Media Center > Video**, then press **OK** to enter the main file content browser.
2. Press the red/green key to page up/down in either main or sub file content browser in the same way as in picture display function.
3. Select a video, press **OK** to watch, and an automatic playback begins from the selected video.
4. Press:
 - the colour buttons on the remote control to perform the available functions shown at the bottom frame.
 - **REV** (left arrow), **PLAY/PAUSE** (right arrow), **FWD** (right arrow), **STOP** (right arrow), **Pre** (left arrow), **Next** (right arrow) to perform the related functions.

 
Note:-

 - Use virus free Pen/USB Drive.
 - Use Listed USB key's for better functions.

Timer Function

The **Timer** menu allows you to programme an automatic turn-off or wake-up timer ..

Display main menu by pressing **Menu**. Select **Timer** and press **OK** to confirm. The **Timer** options are as below:

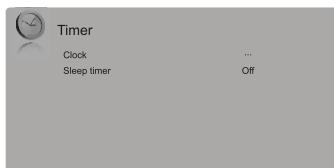

Clock: press the **OK** or right direction button to display its options:

You should set time at **Time** item. Highlight **Time**, use the left or right direction button to select input space, enter the current time using the digit keys.

Note: The time set in Time option will not be memorized when turning on the TV next time, and the TV 's time will start from the default.

Power on timer: use the left or right direction button to select **On** or **Off**. If you select **On**, you should set a time period after which the TV automatically switches to on at **Time** item. Highlight **Time**, use the left or right direction button to select input space, enter the current time using the digit keys.

Power off timer: use the left or right direction button to select **On** or **Off**. If you select **On**, you should set a time period after which the TV automatically switches to off at **Time** item. Highlight **Time**, use the left or right direction button to select input space, enter the current time using the digit keys.

Sleep timer: sets a period of time after which the TV set goes into standby mode. Use the left or right direction button to set the period (120 minutes maximum). To disable this function, select **Off**.

Lock Function

 
This menu can control the special function for TV channels.

Note: You must enter your personal code before entering the Lock menu.

Display the main menu by pressing **Menu** and select **Lock**, then press **OK** to confirm. Then press the number button to enter the password to enter the **Lock** menu.

The factory default code is 0000. And the super password is 0812. If you forget your code, enter it to override any existing codes.

The **Lock** options are as below:

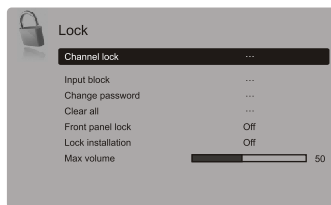

Channel Lock: this option allows you to lock a certain TV channel. Highlight **Channel lock**, press the **OK** or right direction button to display **Channel lock** menu. Use the up or down direction button to select a certain TV channel you want to lock, then press the **OK** button to lock. To unlock all locked channel use the same operation.

Input block: this option allows you to lock a certain external source you want to lock. Press the **OK** or right direction button to display **Input lock** menu, then press the up or down direction button to select a certain external source you want to Lock, and press the **OK** button to lock. To unlock, use the same operation.

Note: When the current input is locked, you can press **OK** and enter the password to enter.

Change password: this option allows you to change the password. Press the **OK** or right direction button to enter, then press the number button to enter the new password twice.

Clean all: this option allows you to unlock all locked channels. Press **OK** to confirm.

Front panel lock: this option allows you to lock the set's buttons, press the left or right direction button to select **On** to lock the set's buttons.

Note:-When front panel lock is set to ON ,all keys of front panel will be locked.

Lock installation: press the left or right direction button to select **On** to prevent access to the Installation menu to prevent any channels from being set up without your consent.

Max volume: press the left or right direction button to set the max volume when watching programme.

6 Other Information

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

No picture, no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

Remote control does not work

1. Change the batteries.
2. Batteries are not installed correctly.
3. Main power is not connected.

No picture, normal sound

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

Normal picture, no sound

1. Press the **Vol+** button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

Blank screen in VGA mode

Perhaps the TV can not recognize the resolution set by the PC. Suggest to change to the best resolution or other standard resolutions of the Windows system.

Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor/outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

7 Product information

Product information is subject to change without notice. For detailed product information, go to www.philips.com/support.

Supported display resolutions

Computer formats (HDMI)

- Resolution - refresh rate:
 - 640 x 480 - 60Hz, 72Hz, 75Hz
 - 800 x 600 - 56Hz, 60Hz, 72Hz, 75Hz
 - 1024 x 768 - 60Hz, 70Hz, 75Hz
 - 1152 x 864 - 70Hz, 75Hz
 - 1280 x 960 - 60Hz, 75Hz
 - 1280 x 1024 - 60Hz, 75Hz
 - 1600 x 1200 - 60Hz
 - 1360 x 768 - 60Hz
 - 1920 x 1080 - 60Hz

Computer formats (VGA)

- Resolution - refresh rate:
 - 640 x 480 - 60Hz, 72Hz, 75Hz
 - 800 x 600 - 56Hz, 60Hz, 72Hz, 75Hz
 - 1024 x 768 - 60Hz, 70Hz, 75Hz
 - 1152 x 864 - 70Hz, 75Hz
 - 1280 x 960 - 60Hz, 75Hz
 - 1280 x 1024 - 60Hz, 75Hz
 - 1600 x 1200 - 60Hz
 - 1360 x 768 - 60Hz
 - 1920 x 1080 - 60Hz

Video formats

- Resolution - refresh rate:
 - 480i - 60Hz
 - 480p - 60Hz
 - 576i - 50Hz
 - 576p - 50Hz
 - 720p - 50Hz, 60Hz
 - 1080i - 50Hz, 60Hz
 - 1080p - 50Hz, 60Hz

Multimedia

- Supported USB storage device:
(Only FAT 16 or FAT 32 USB storage devices are supported)
- Supported multimedia file formats:
 - Images: JPEG
 - Audio: MP3
 - Video Playback: AVI, MPEG4, H.264, MPEG2, MPEG1



Note

Multimedia filenames must not exceed 128 characters.

Tuner/Reception/ Transmission

- Antenna input: 75ohm coaxial (IEC75)
- TV system: PAL
- Video playback: PAL, NTSC

Remote control

- Batteries: 2 x AAA

Power

- Mains power: AC 110~240 V , 50-60 Hz
- Standby power: < 1 W
- Ambient temperature: 5 to 40 degrees Celsius

Supported TV mounts

To mount the TV, purchase a Philips TV mount or a VESA-compatible TV mount. To prevent damage to cables and connectors, be sure to leave a clearance of at least 2.2 inches or 5.5cm from the back of the TV.

TV screen size (inches)	Required pitch (mm)	Required mounting bolts
55PFL5755/V7	400X400	4 x M6

Product specification

Design and specifications are subject to change without notice.

55PFL5755/V7

- Without TV stand
 - Dimension (WxHxD): 1325 x 846 x 50 (mm)
 - Weight: 22.5 kg

Consumer Guidelines

1. Kindly ensure that the dealer fills up Warranty card correctly.
2. To avail the Warranty please register your product with the Philips -
 - Logon to www.Philips.comOR
 - Contact Philips Consumer Care Centre
3. In the unlikely event of a defect developing in the TV set contact the Philips Customer Care Centre for obtaining warranty service and inform of the defect observed in the set, the type no.and serial no.of the set.
4. On your lodging a complaint, a trained technician will call on you promptly. In the event of the technician deciding that set requires attention at the service station; kindly arrange to deliver the set to the service station designated by technician for further attention. "Home calls" by the technician would however be restricted within the municipal limits of the city / town in which the set has been registered.

Type no. _____ Serial No. _____ Date of Purchase _____

Purchased By: Name _____

Address: _____

Tel. No. _____

Sold by: Name _____

Address: _____

Tel. No. _____

PHILIPS

Model no.: 55PFL5755/V7

Serial no.:



MADE IN PRC

Sold by(User rubber stamp)

Contact Customer Service Executive at:

1800 102 2929(Toll free No.)

1860 180 1111 (Chargable No.)

RegdOffice: PE Electronics Ltd,Auto Cars Compound,Adalat Road,Aurangabad,431005.

WARRANTY

This TV receiver is covered under warranty against any defect arising out of faulty or defective material or workmanship for a period of 12 months from the date of purchase.

Should a defect develop in this set during the period of warranty, PE Electronics Limited undertakes to get the set repaired free of charge either.

From whom the set has been purchased or through an Authorised Service Center for warranty service. However, if the Purchaser has to shift his residence to another town on account of transfer or other reasons, the warranty benefit will be available at the Authorised Service Center.

The warranty is not valid in case of any of the following events:

- The TV set is not used according to instructions given in the 'Direction for use' / 'User Manual'.
- Defects are caused by improper or reckless use.
- Any repair work carried out by persons other than a Philips dealer or Authorised Service Center.
- Any modification or alteration of any nature made in the electrical circuitry of the set.
- This Warranty Card is not completed and signed immediately on delivery of the set by the Philips Dealer.
- Fading effects and/or Ghosts (Multiple Image) in picture, if any, arising due to location / signal reception.
- Defects due to causes beyond control like lightning, abnormal voltage, Acts of God or while in transit to purchaser's residence.

(Refer Consumer Guidelines for further details)

PHILIPS



Specifications are subject to change without notice.

* PHILIPS and the PHILIPS Shield Emblem are registered trademarks of Koninklijke Philips Electronics N.V. and are used under license from Koninklijke Philips Electronics N.V.*

www.philips.com