 


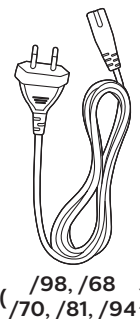
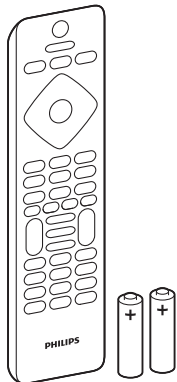
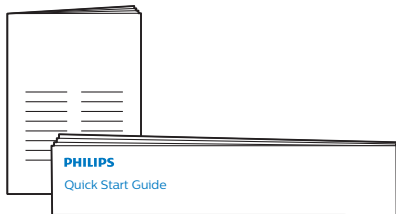
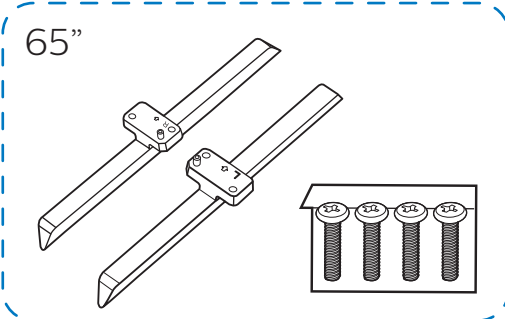
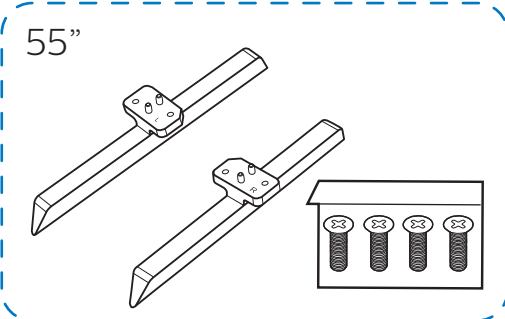
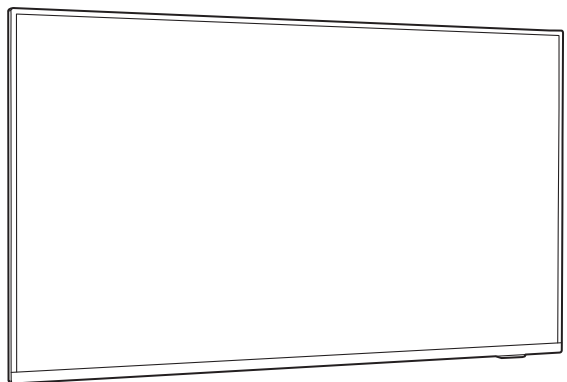


6784 series
Quick Start Guide

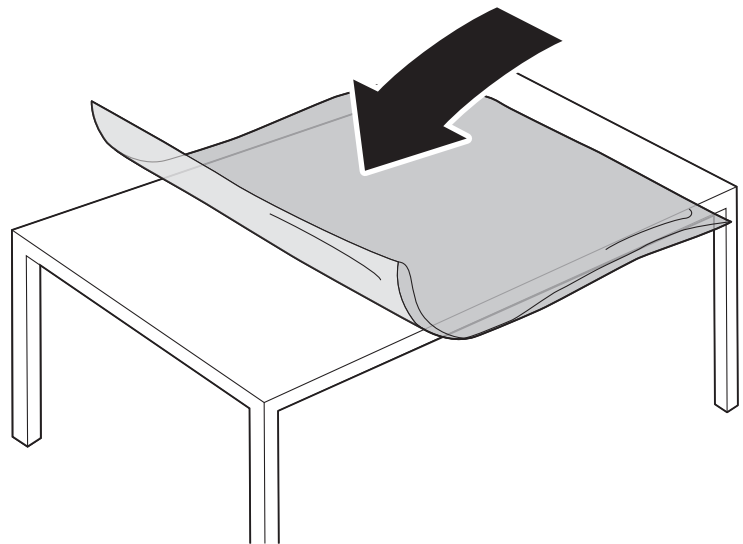


A1
55"


1

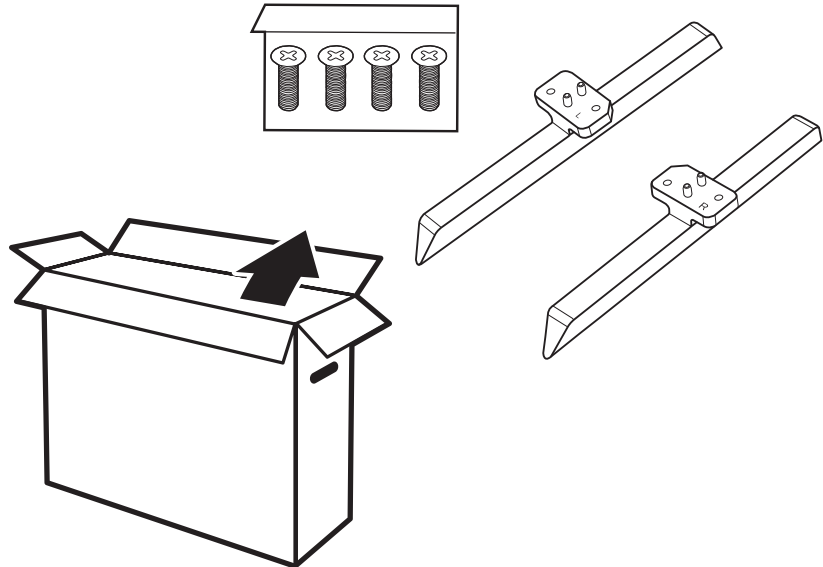


2

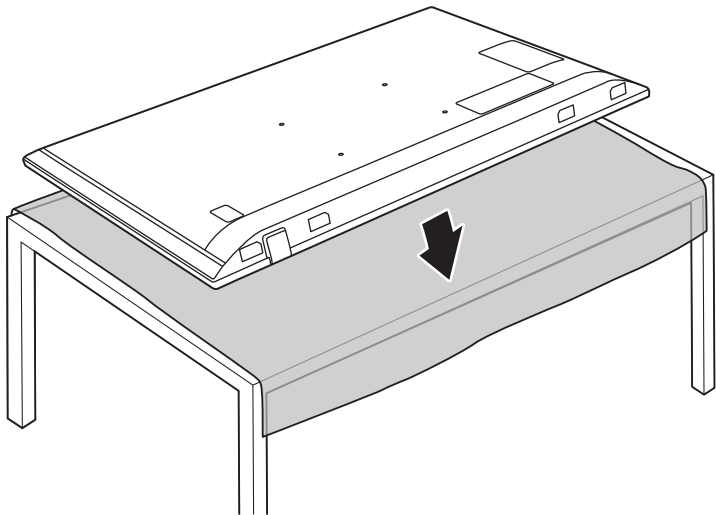


A

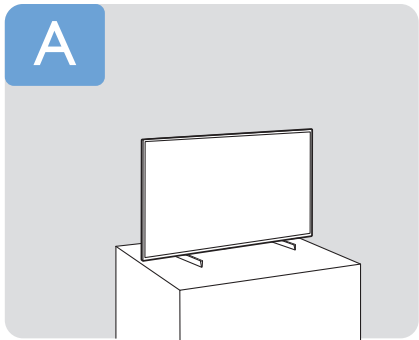


B

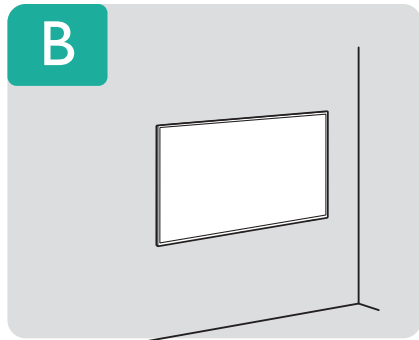



3

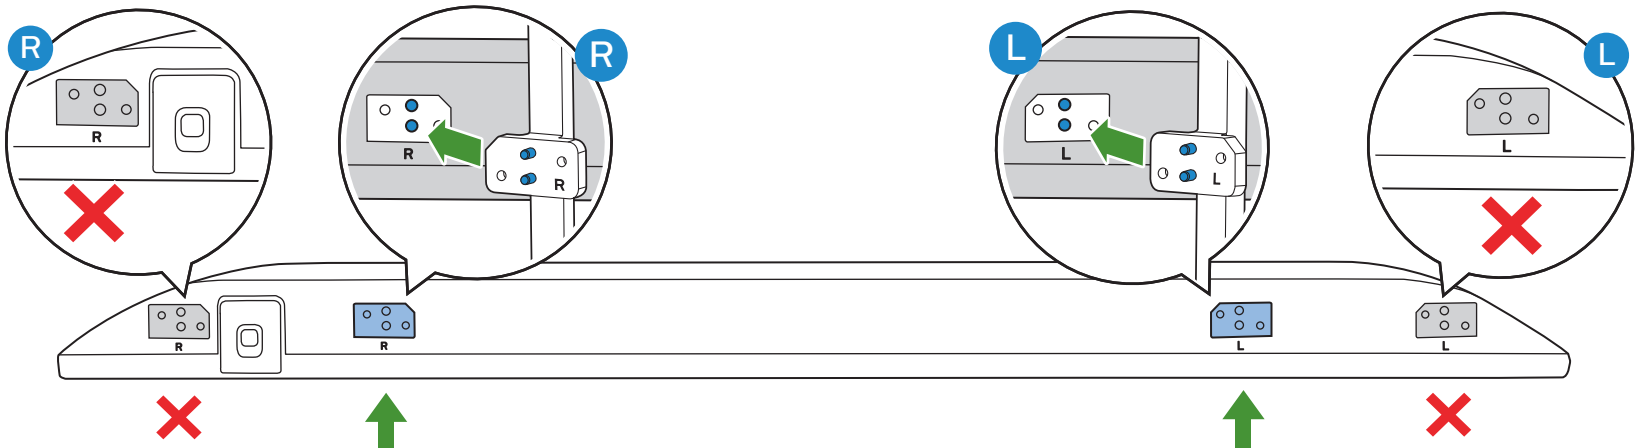

4


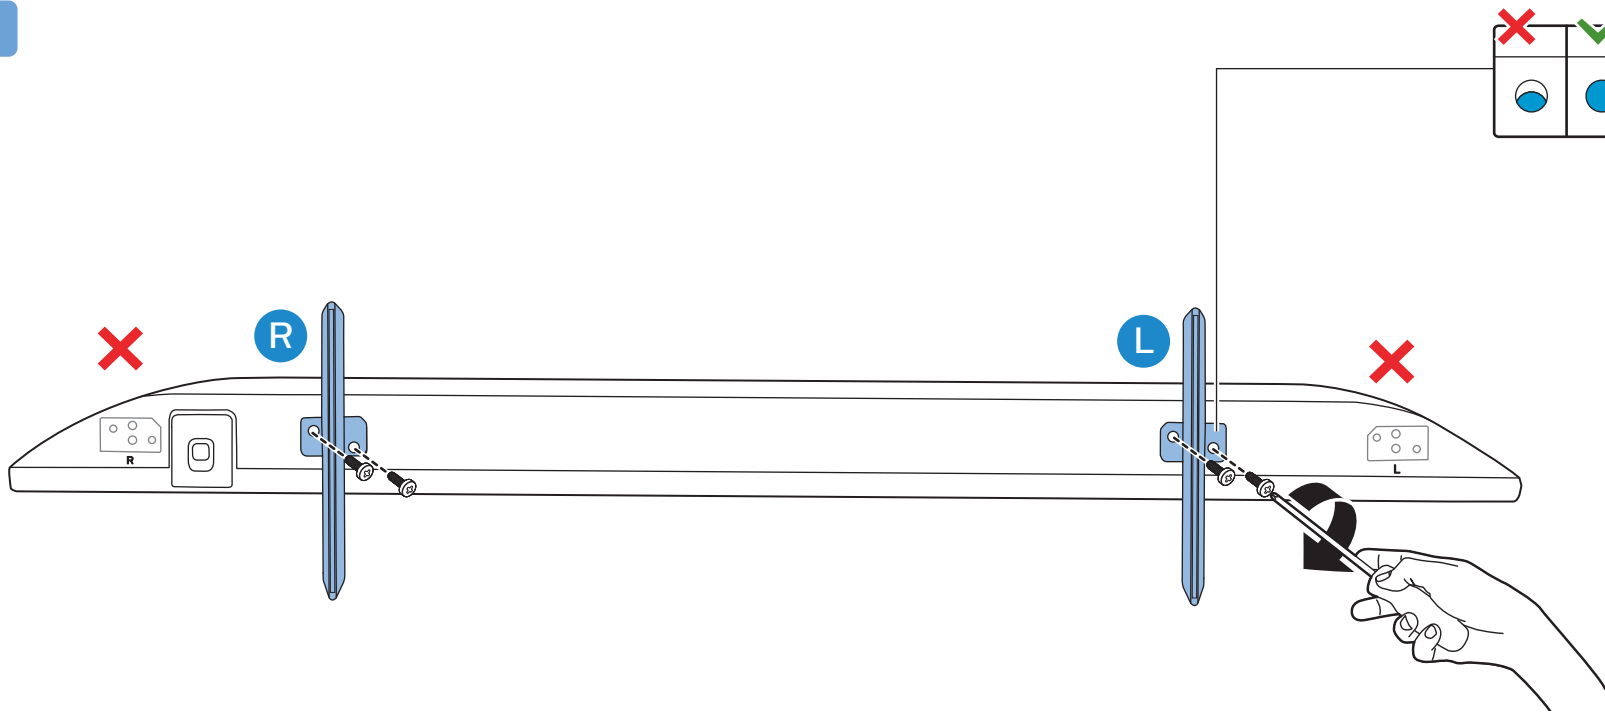


5

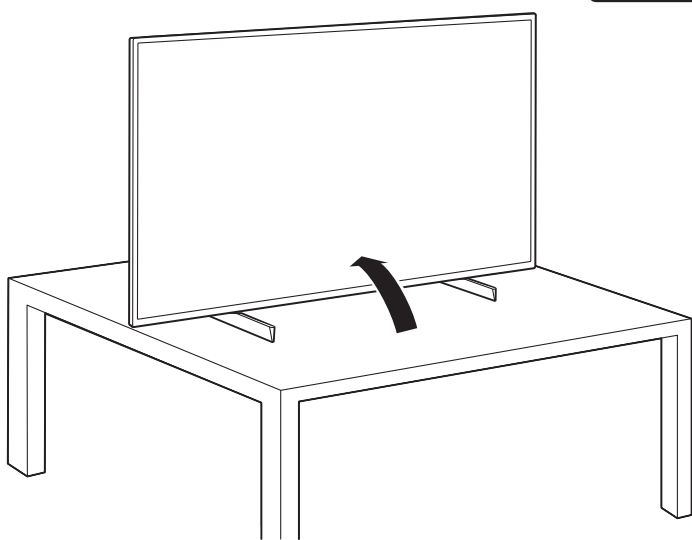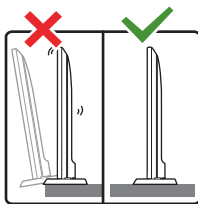


A2
65"


1

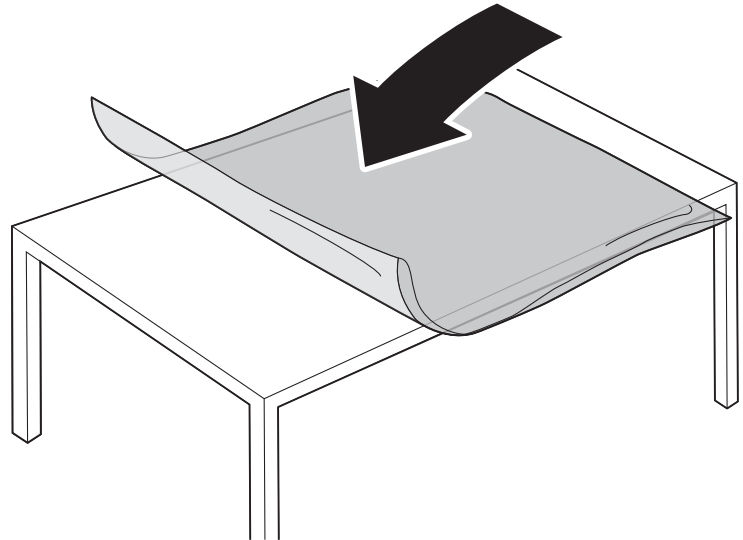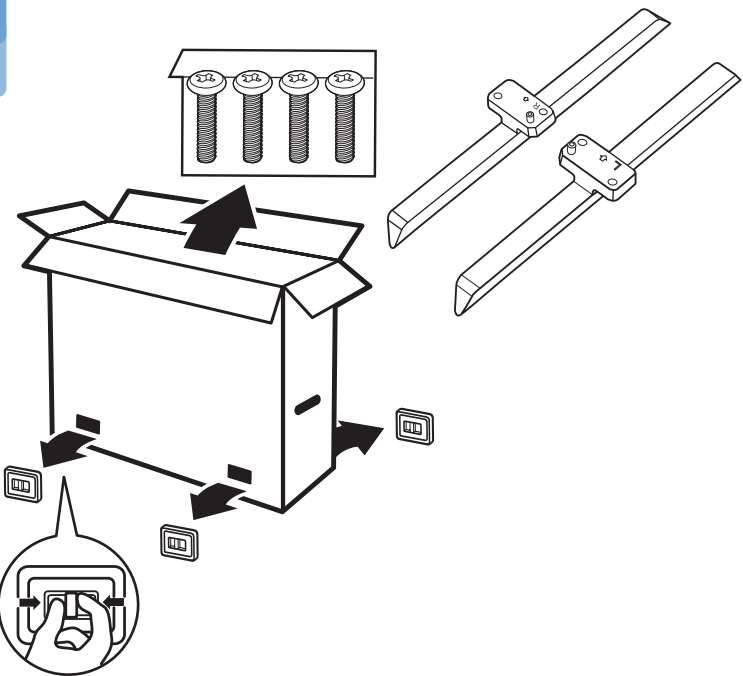


2

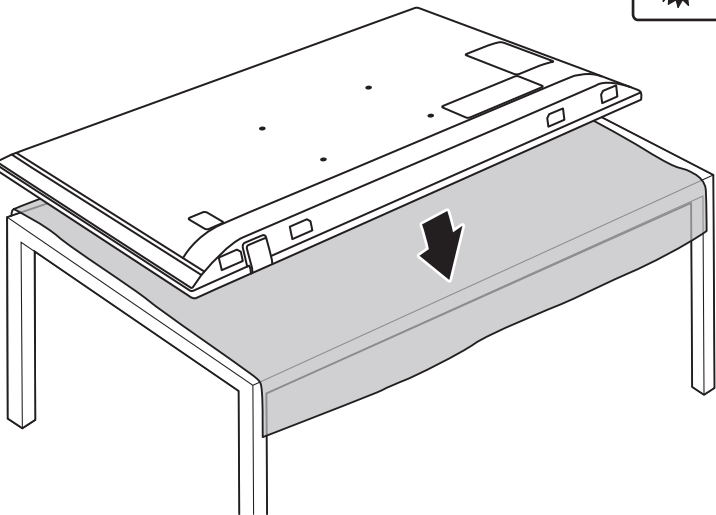


3

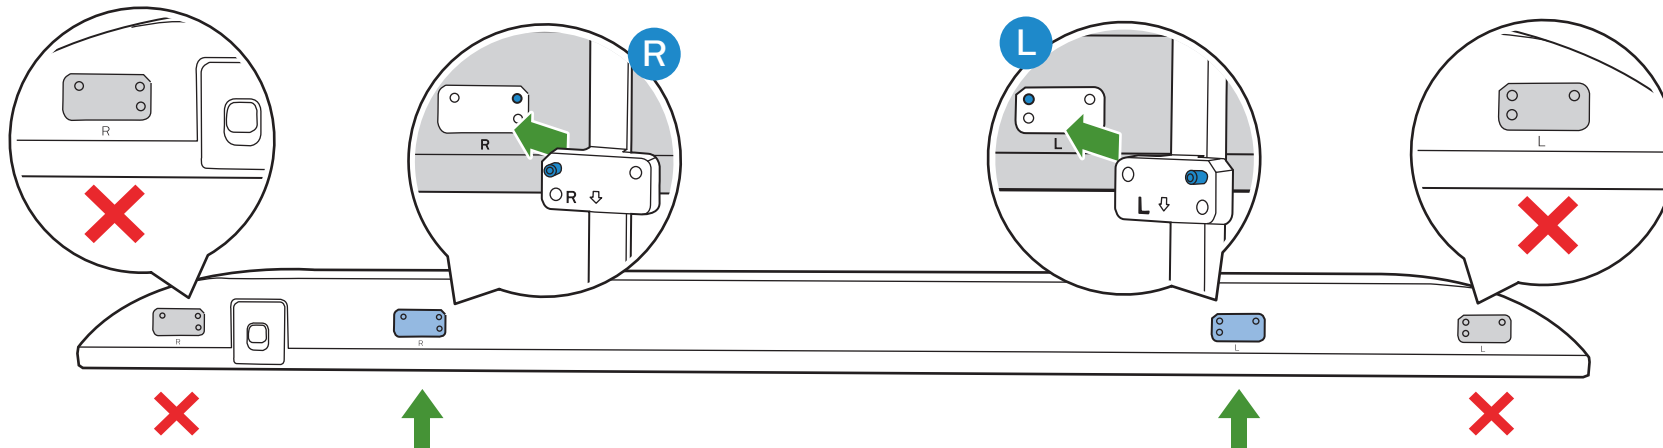


4

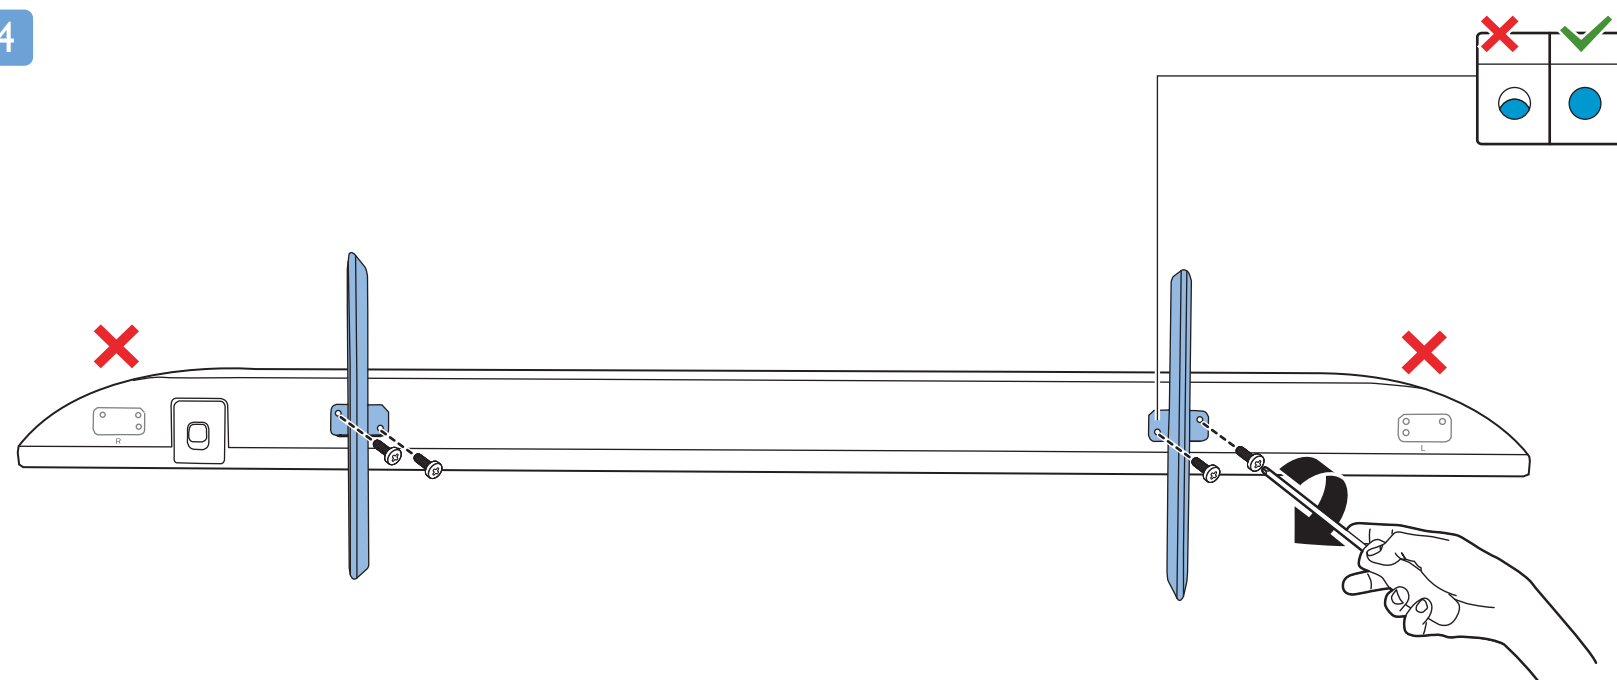


5

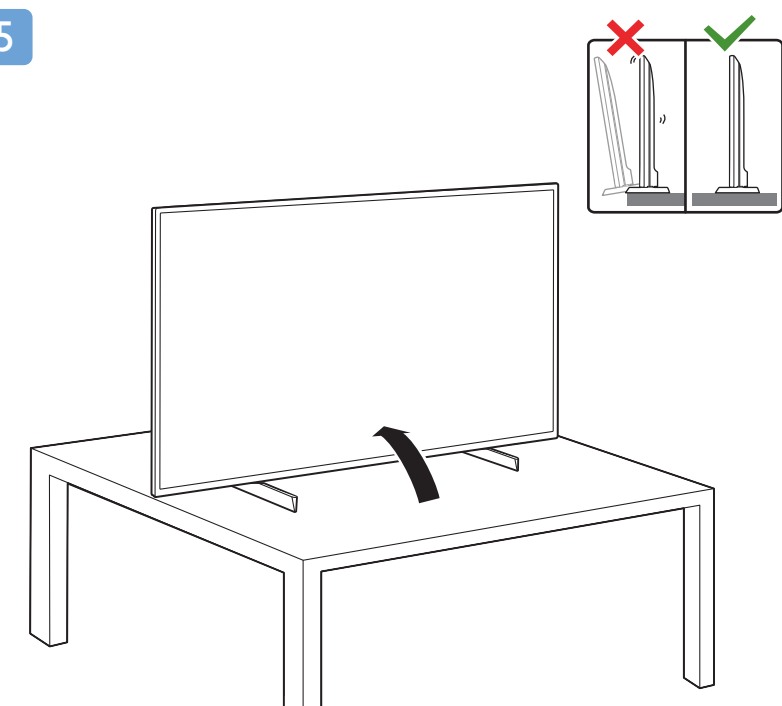


B

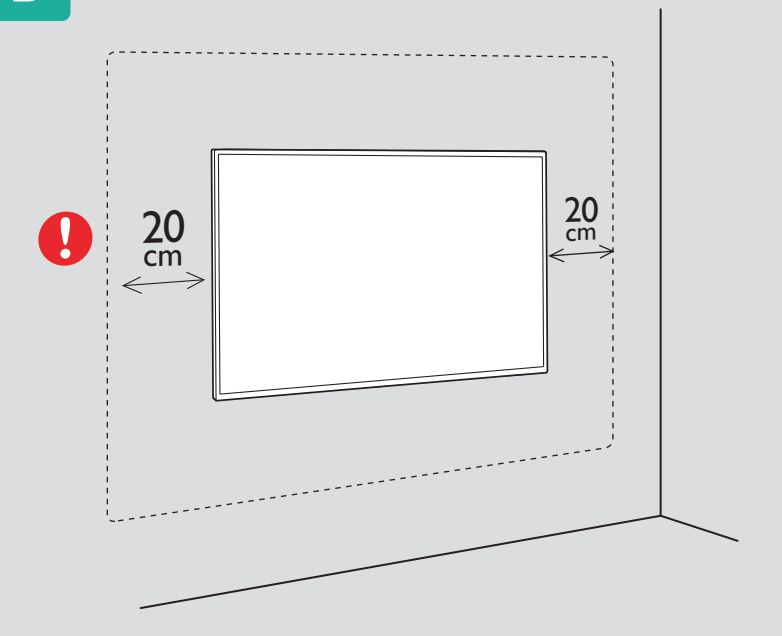


VESA (x, y)

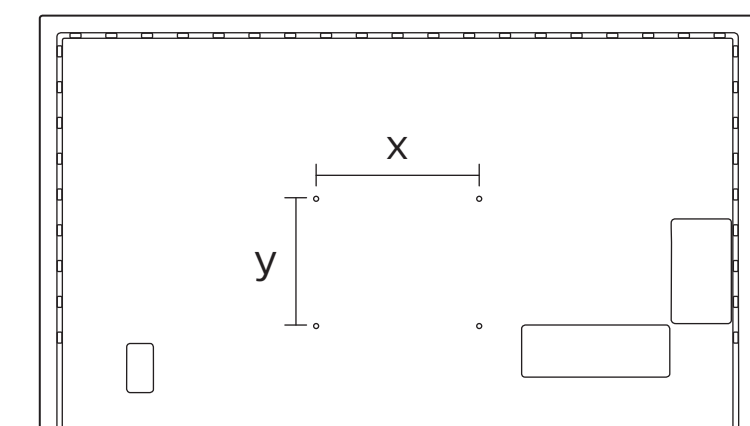55" 300x200mm M6  139 cm65" 400x200mm M6  164 cm


1

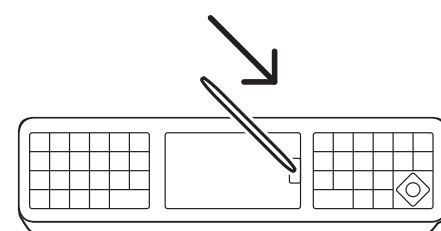

2

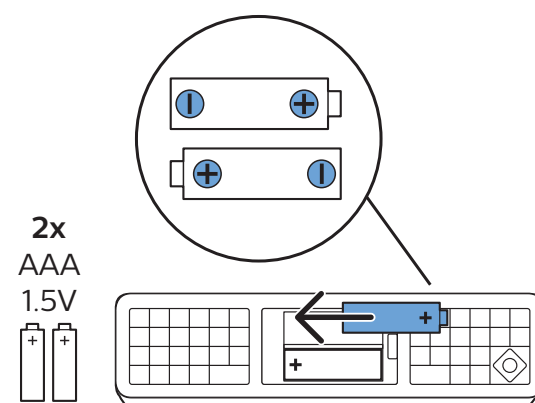

3

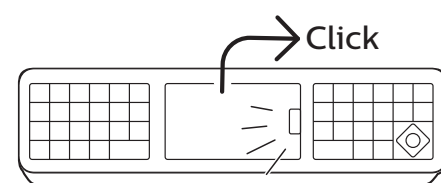

English Read the safety instructions.

Bahasa Malaysia Baca arahan Keselamatan.

Bahasa Indonesia Baca petunjuk keselamatan.

Deutschh Lesen Sie die Sicherheitshinweise.

Français Lisez les consignes de sécurité.

Português Leia as instruções de segurança.

ภาษาไทย โปรดอ่านคำแนะนำด้านความปลอดภัย

Tiếng Việt Hãy đọc chỉ dẫn an toàn.

简体中文 请阅读安全说明。

العربية قراءة تعليمات السلامة.

Register your product and get support at
www.philips.com/TVsupport