



The image shows the front cover of a Philips television's quick start guide. The cover is primarily white with a blue curved design element at the bottom. The Philips logo is prominently displayed in blue at the top. Below it, the word 'Television' is written in a large, white, sans-serif font. At the bottom, the words 'Quick Start Guide' are written in a smaller, white, sans-serif font.The image shows the front cover of a Philips television quick start guide. The top half is white, featuring the 'PHILIPS' logo in a bold, blue, sans-serif font. Below the logo, a dark blue horizontal band contains the word 'Television' in a white, sans-serif font. The bottom half of the cover is a solid medium blue color, with the words 'Quick Start Guide' printed in a white, sans-serif font. The overall design is clean and modern.The image shows the front cover of a Philips television quick start guide. The top half is white, featuring the 'PHILIPS' logo in a bold, blue, sans-serif font. Below the logo, a dark blue horizontal band contains the word 'Television' in a white, sans-serif font. The bottom half of the cover is a solid medium blue color, with the words 'Quick Start Guide' printed in a white, sans-serif font. The overall design is clean and modern.The image shows the front cover of a Philips television's quick start guide. The cover is primarily white with a dark blue horizontal band across the middle. The Philips logo, in its signature blue, is positioned at the top left. Below the logo, the word 'Television' is written in a large, white, sans-serif font against the dark blue background. At the bottom of the cover, the words 'Quick Start Guide' are printed in a smaller, dark blue, sans-serif font on a white background. The overall design is clean and professional.


A




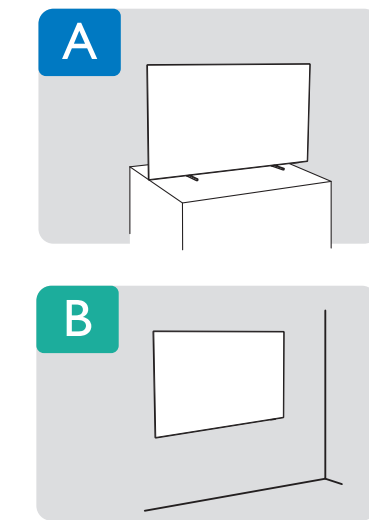


2

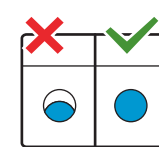

3

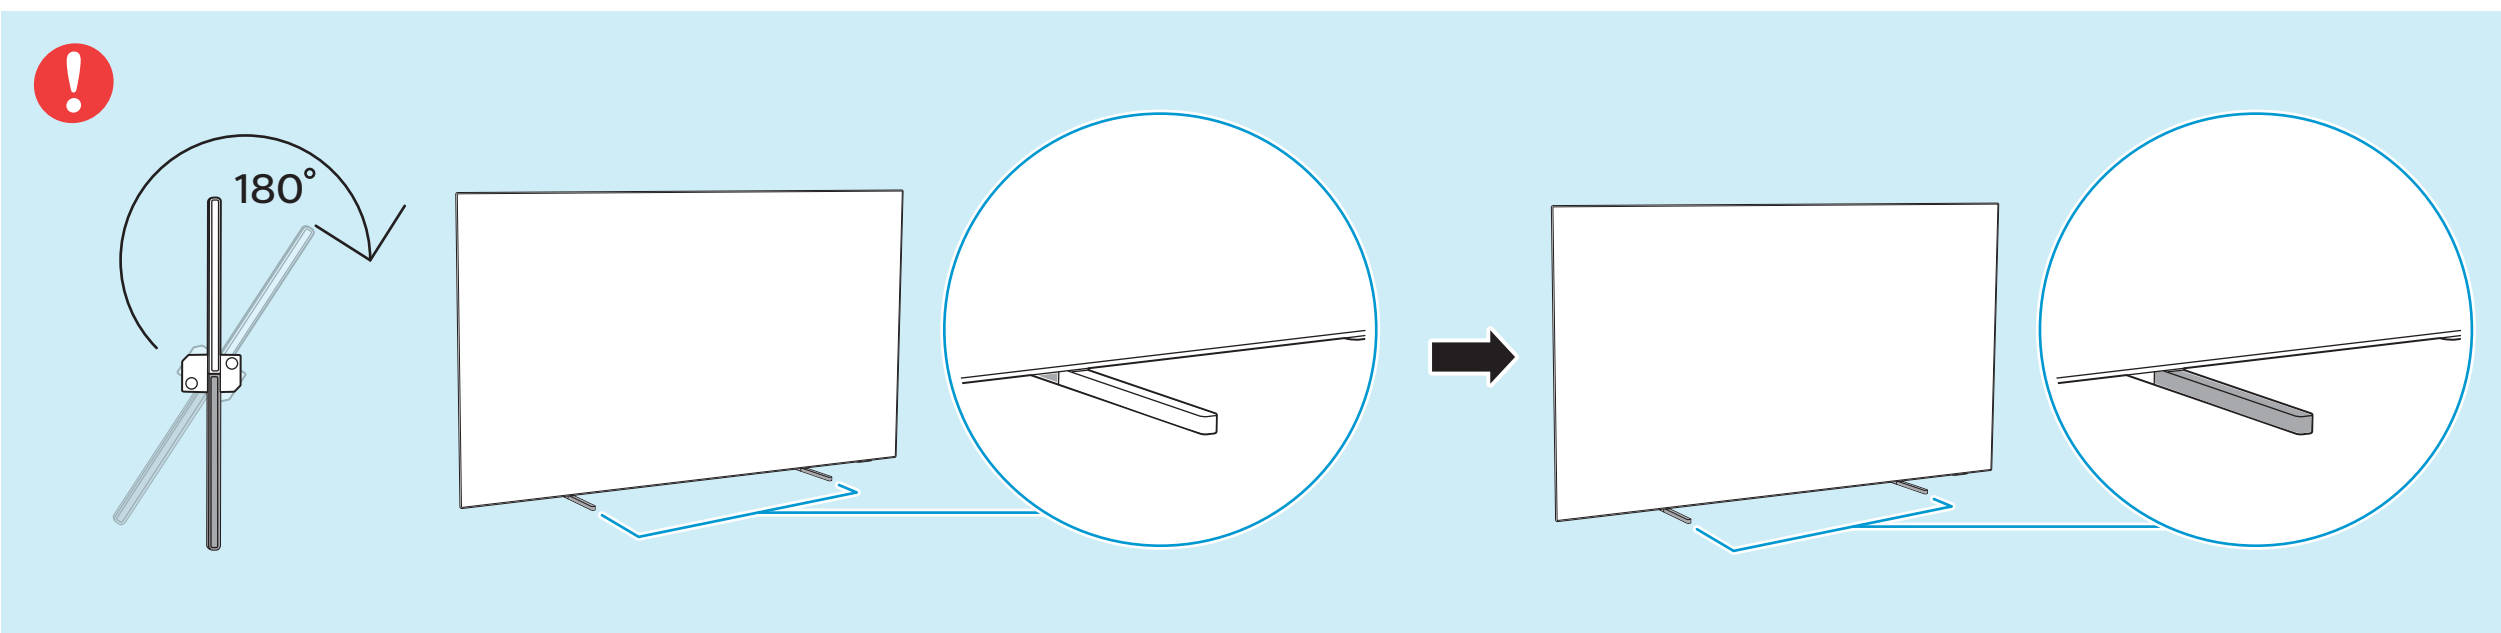

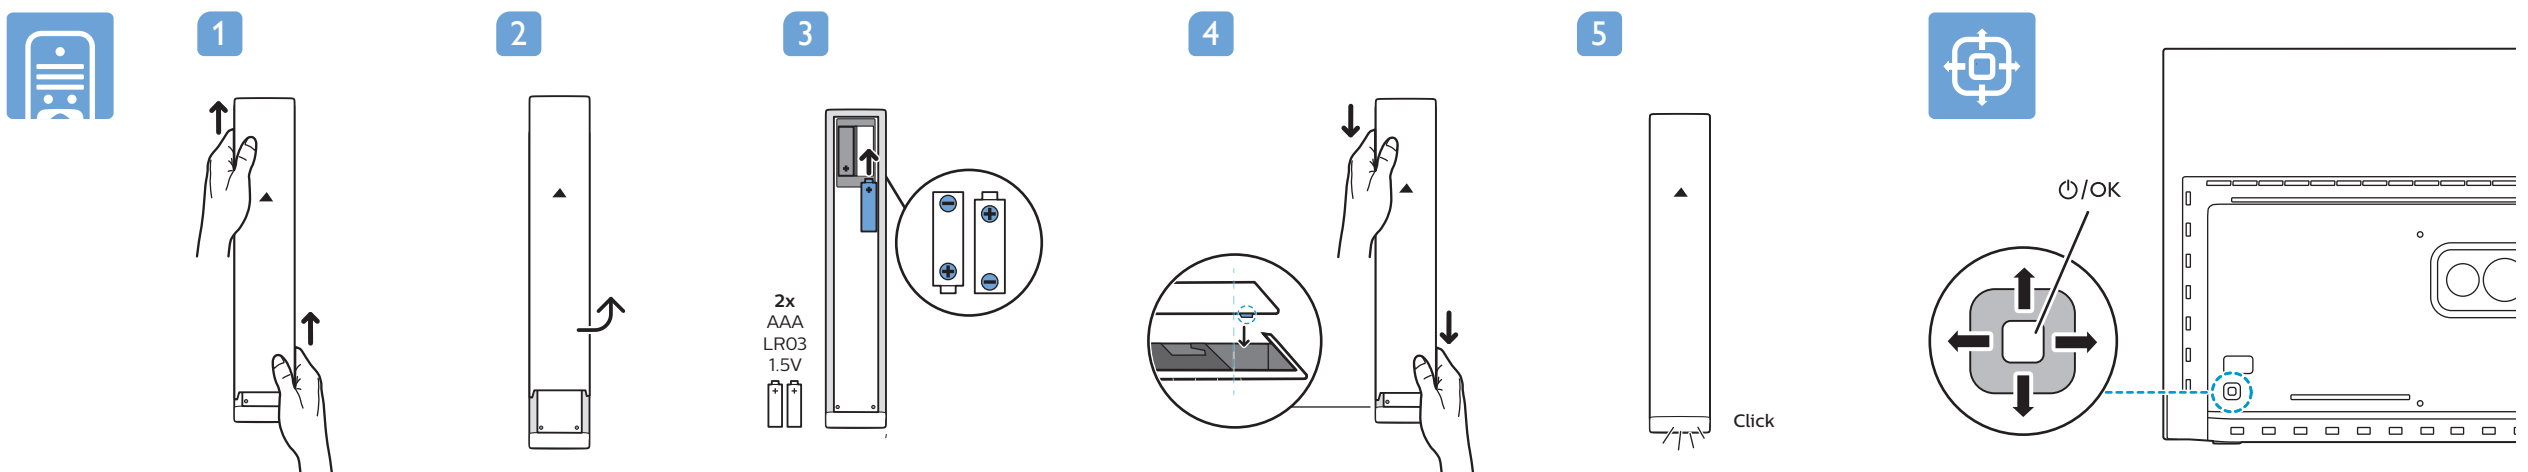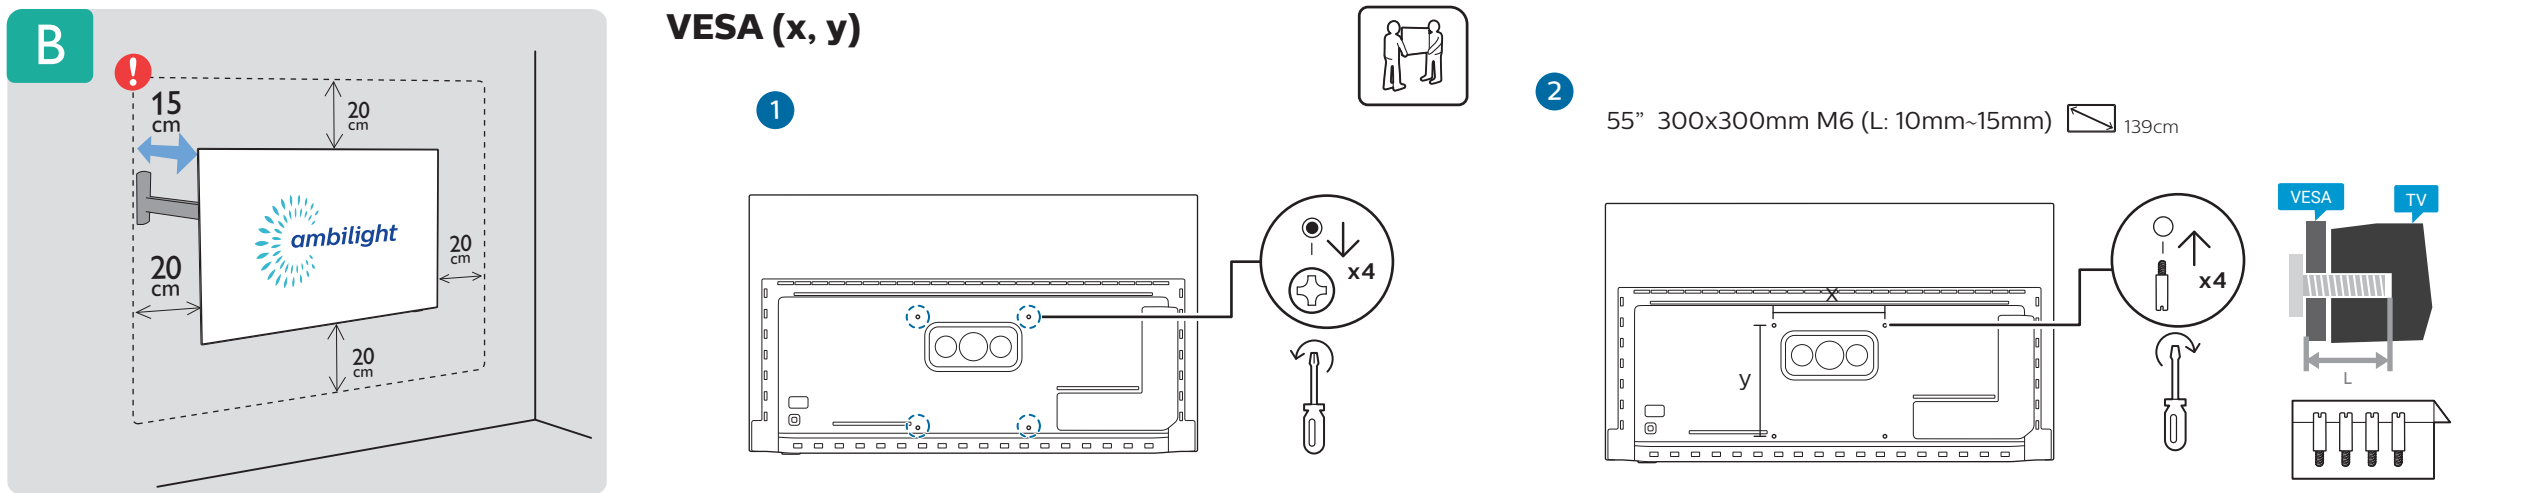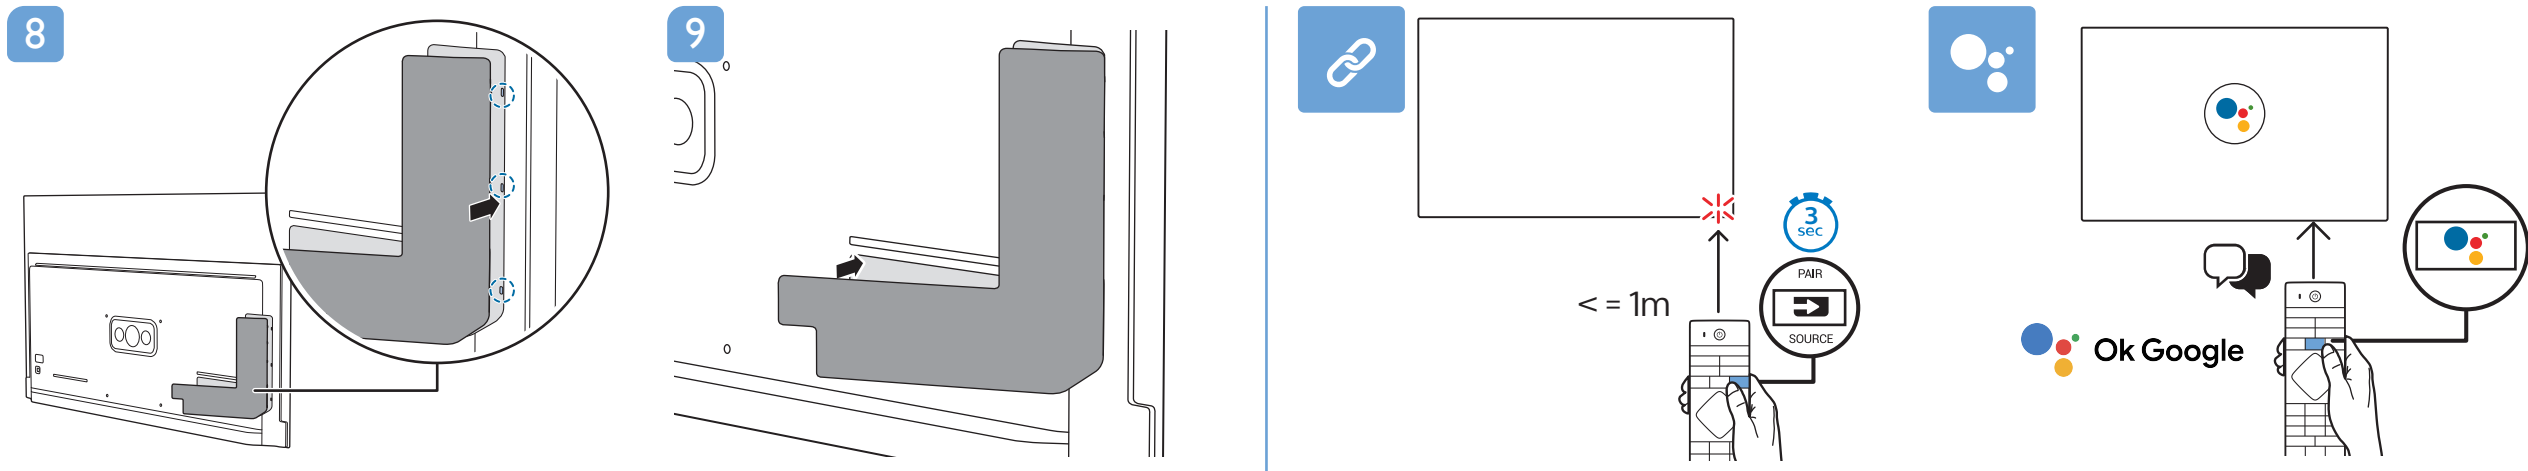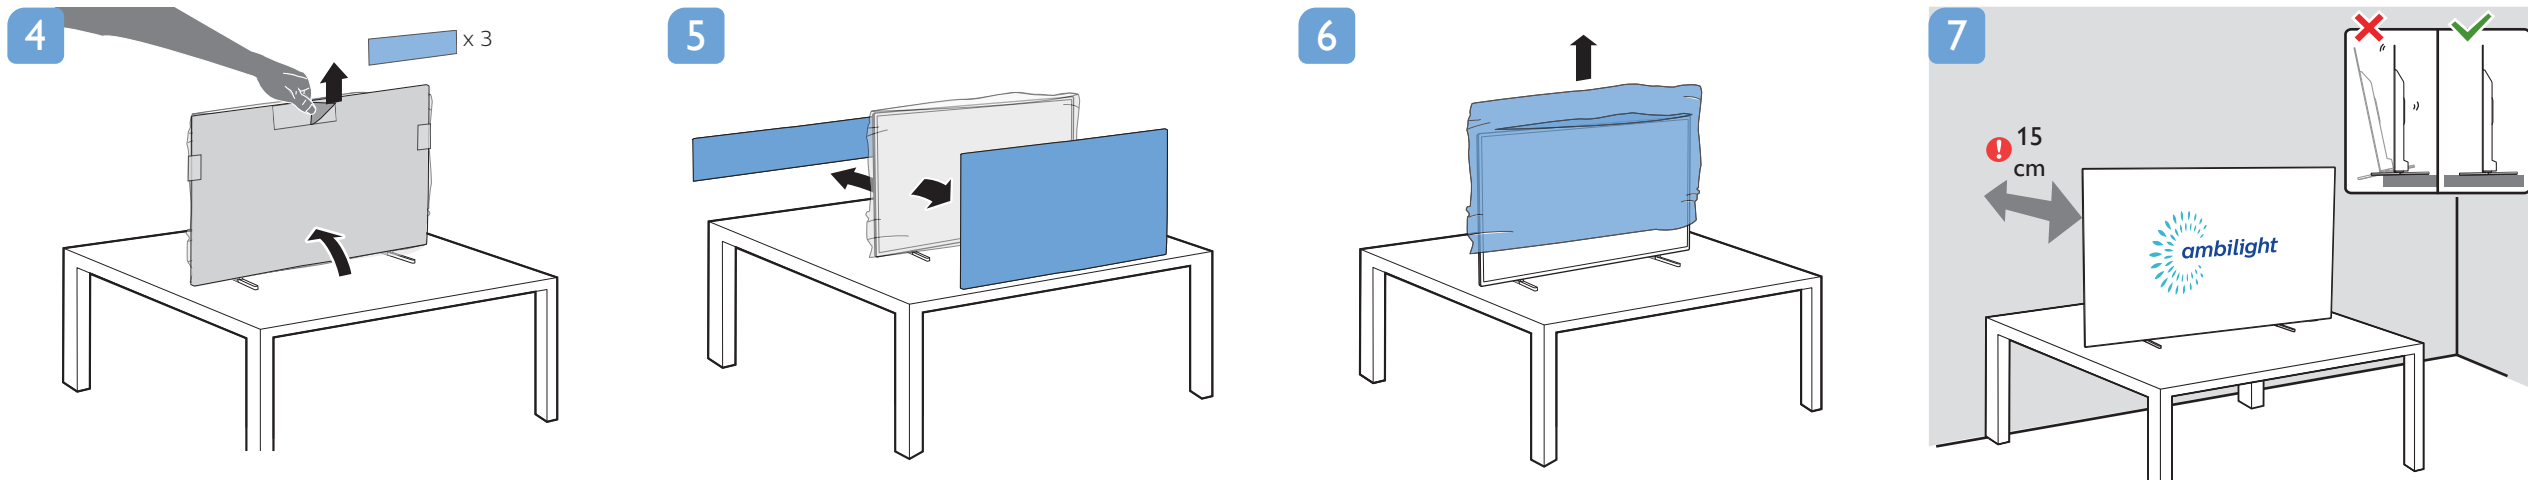

English Read the safety instructions.
Български Прочетете инструкциите за безопасност.
Čeština Přečtěte si bezpečnostní pokyny.
Hrvatski Pročitajte sigurnosne upute.
Dansk Læs sikkerhedsforskrifterne.
Deutsch Lesen Sie die Sicherheitshinweise.
Ελληνικά Διαβάστε τις οδηγίες ασφαλείας.
Eesti Lugege ohutusnõudeid.
Español Lea las instrucciones de seguridad.

Français Lisez les consignes de sécurité.
Italiano Leggere le istruzioni di sicurezza.
Қазақша Қорғаныстық нұсқаулар.
Latviešu Izlasiet drošības norādījumus.
Lietuvių Perskaitykite saugos instrukcijas.
Magyar Olvassa el a biztonsági utasításokat.
Nederlands Lees de veiligheidsvoorschriften.
Norsk Les sikkerhetsforskriftene.
Polski Zapoznaj się z instrukcjami bezpieczeństwa.


Português Leia as instruções de segurança.
Română Citiți instrucțiunile de siguranță.
Русский Читайте инструкции по технике безопасности.
Srpski Pročitajte bezbednosna uputstva.
Slovenščina Preberite varnostna navodila.
Slovenský Prečítajte si bezpečnostné pokyny.
Suomi Lue turvaohjeet.
Svenska Läs säkerhetsinstruktionerna.
ภาษาไทย โปรดอ่านคำแนะนำด้านความปลอดภัย

Türkçe Güvenlik talimatlarını okuyun.
Українська Читайте інструкції з техніки безпеки.
العربية قراءة تعليمات السلامة.
עברית קראו את הוראות הבטיחות

Register your product and get support at www.philips.com/TVsupport

QR code for RC Instructions

QR code for TV software upgrade for Smart TV- (From Internet)

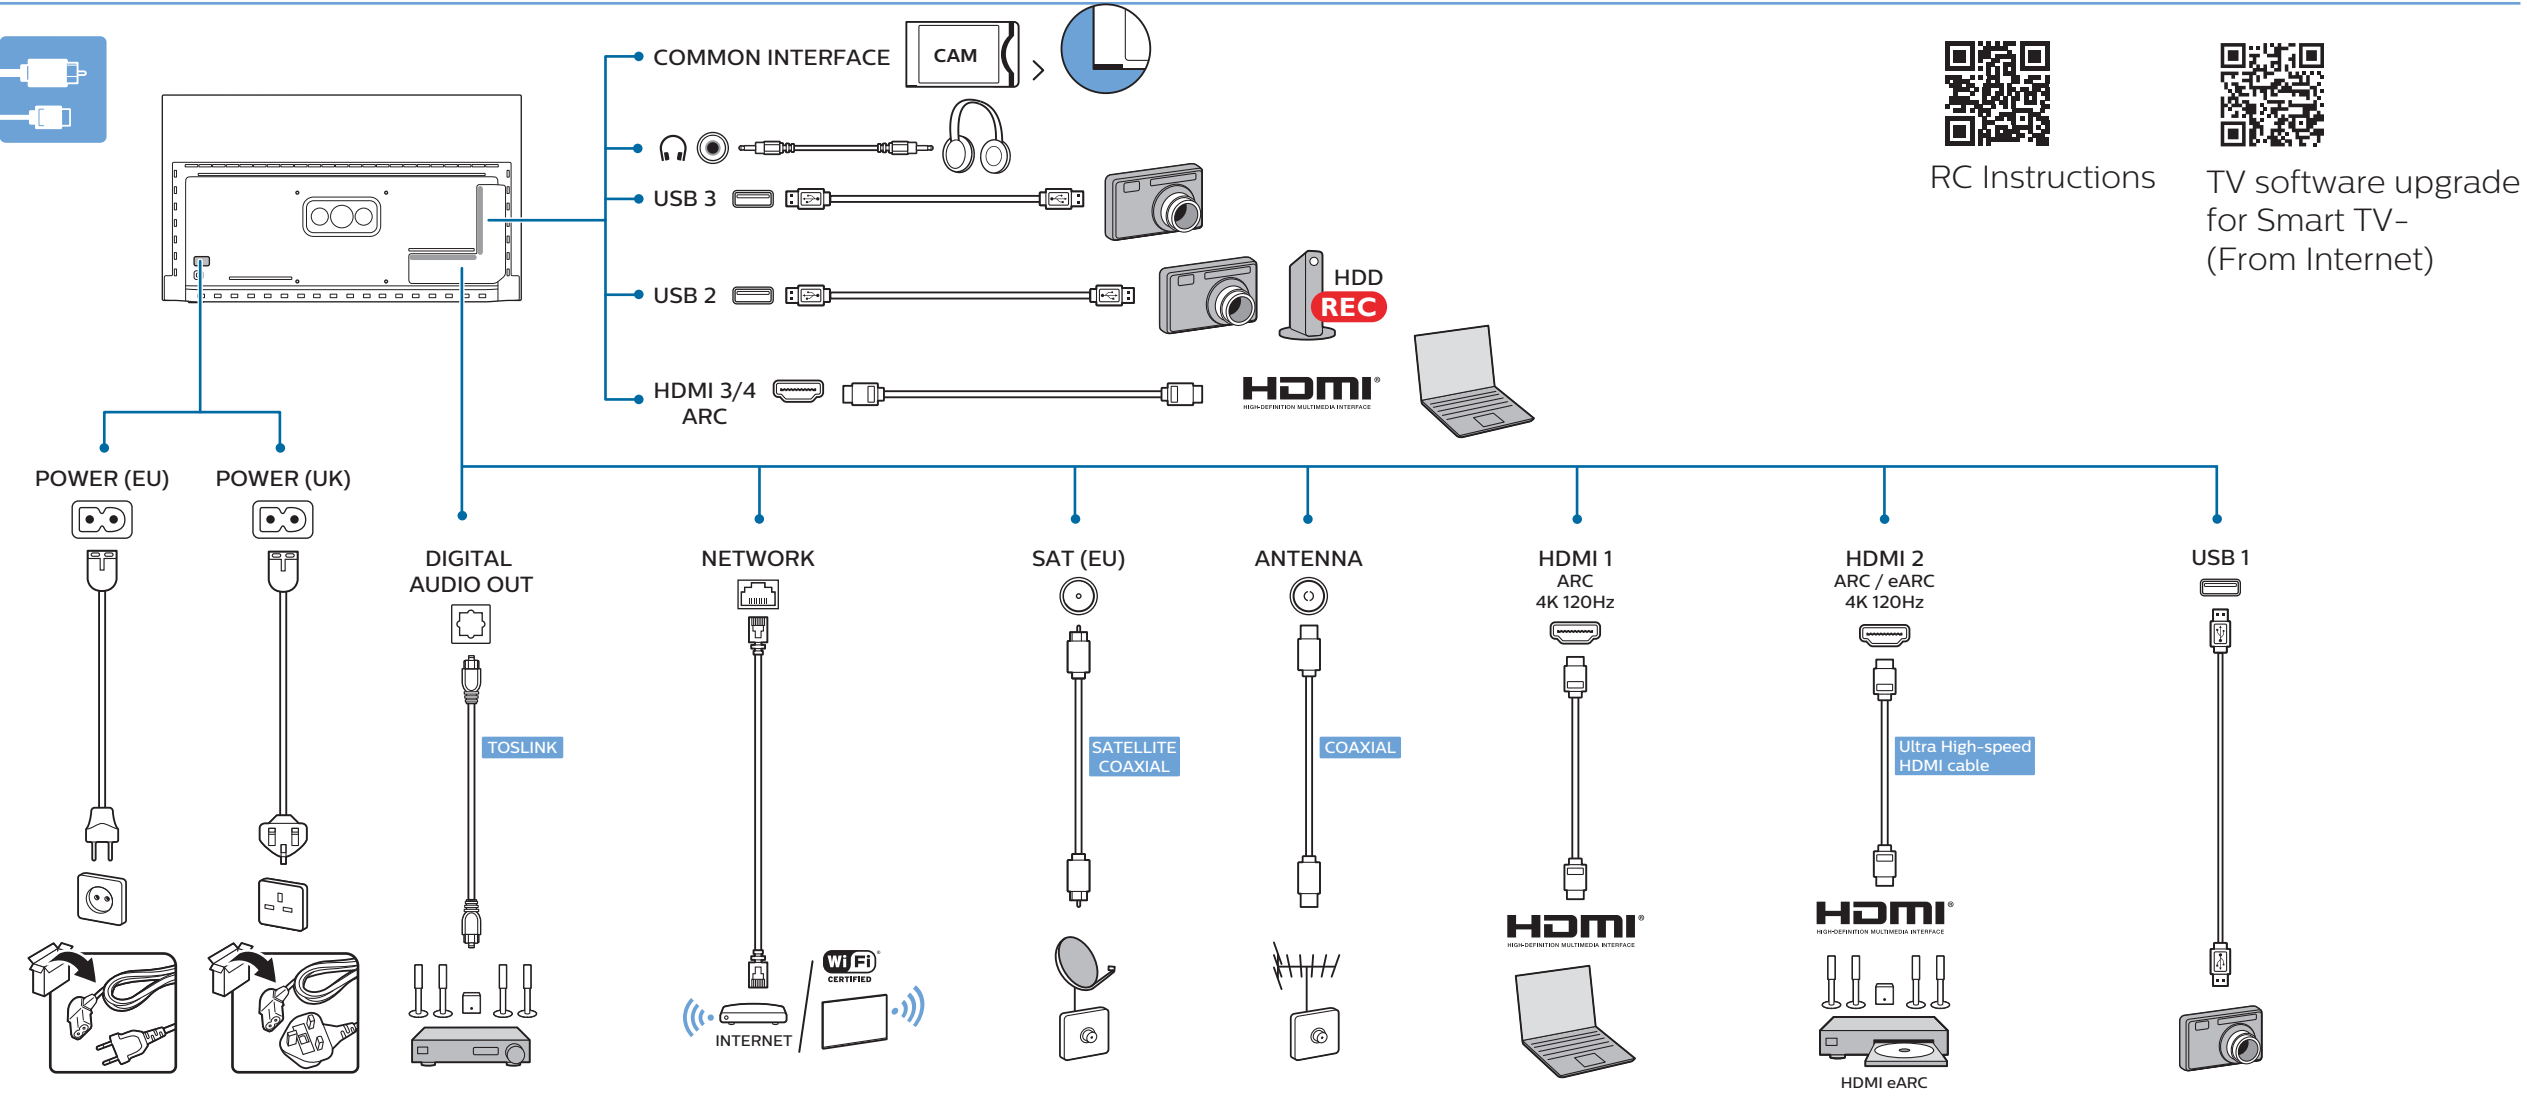

Help

Philips

Warning icons: Fire, Shock, Sharp, Hot, Fragile, etc.

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips shield emblem are trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V. and TP Vision Europe B.V. is the warrantor in relation to this product. 20210: TP Vision Europe B.V. All rights reserved. www.philips.com/welcome