
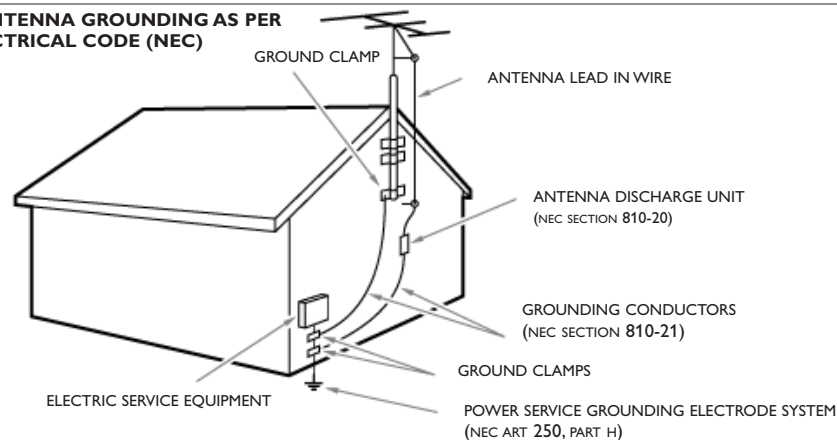


## IMPORTANT SAFETY INSTRUCTIONS

 
 
 
 
### Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product may contain lead or mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).
16. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
17. **Tilt/Stability** - All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinets design.
  - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
  - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
18. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
19. **Power Lines** - An outdoor antenna should be located away from power lines.
20. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the masts and supporting structure grounding of the lead-in wire to an antenna-discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Figure below.
21. **Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
  - a) **Warning:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases should not be placed on this apparatus.
22. **Battery Usage CAUTION** - To prevent battery leakage that may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, with + and - alignment as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.)
  - Remove batteries when the unit is not used for a long time.

#### EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE (NEC)



**Note to the CATV system installer:** this reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.



## About this User Manual

This manual contains all information you will need to initially install and operate your new TV.  
Also read the help texts which are being displayed at the bottom of the screen.

### Help?



*If this instruction manual does not give an answer or if 'Before Calling Service' does not solve your TV problem, you can call your Local Philips Customer or Service Centre. See the supplied World-wide guarantee booklet.*

*Please, have the Model and Serial number which you can find at the back of your television set or on the packaging, ready, before calling the Philips helpline 0800-701-02-03*

Model: 42PF9831D/78

Serial No:

English

## Contents


Safety warnings .....	2	Connect:	
Getting started .....	3	a VCR or DVD recorder .....	45
Use of the remote control RC4403 .....	6	a recorder and other A/V devices .....	46
Use of the OPTION button .....	9	a recorder and Cable box with RF output .....	47
Buttons on the right side of the TV .....	10	a satellite receiver or Cable box with A/V outputs .....	48
Turn the TV on .....	10	a recorder and satellite receiver or Cable box with A/V outputs .....	49
First time installation .....	10	a DVD player, or other accessory digital source devices .....	50
How to navigate through the menus .....	13	a device to the HDMI connector .....	52
Use of the TV menu settings .....	15	a Digital Surround receiver .....	53
Adjust picture menu settings .....	17	Record with your recorder .....	53
Adjust sound menu settings .....	20	Select connected equipment .....	53
Enjoy Ambilight .....	22	Audio and video equipment buttons .....	54
Adjust feature menu settings .....	24	Before calling service .....	55
How to search for and store TV channels ..	31	Annex 1 - Philips TV software upgrade with portable memory .....	57
Set your preferences .....	34	Annex 2 - Philips TV-Slideshow Format with background music .....	59
Select your connections .....	35	Annex 3 - Philips TV - Digital camera and USB issues .....	61
Set your clock .....	35	Annex 4 - Issues referring to connected peripherals with a HDMI connector .....	62
Reset AV settings .....	36	Index .....	63
How to upgrade the TV software .....	36	Recycling .....	64
Create your favorite list .....	37	Product information .....	65
Multimedia Browser .....	38		
To make video and audio connections .....	42		
Side panel overview .....	43		
Rear panel overview .....	44		

310431525771

## Safety warnings

### General

**Do not insert the power plug in a wall socket or hang the TV to the wall before all connections are made.**

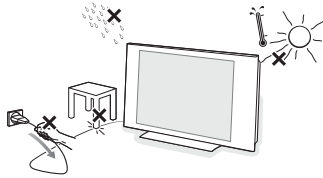

- Place or hang the TV wherever you want, but make sure that air can circulate freely through the ventilation slots. Leave at least 4" to 6" free all around the TV.
- Do not install the TV in a confined space such as a book case or a similar unit.
- To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed in the vicinity.
- Avoid heat, direct sunlight and exposure to rain or water.
- The equipment shall not be exposed to dripping or splashing.
- To prevent damaging the power (AC) cord which could cause a fire or electric shock, do not place the TV on the cord.

### Care of the screen

Do not touch, push, rub or strike the screen with anything hard as this may scratch, mar or damage the screen permanently.

And please do not rub with dust clothes with chemical treatment. Do not touch the surface with bare hands or greasy cloth (some cosmetics are detrimental to the screen).

Unplug the TV before cleaning the screen.

When the surface becomes dusty, please wipe gently with absorbent cotton or other soft materials like chamois soaks. Do not use acetone, toluene and alcohol because they cause chemical damage. Do not use liquid cleaners or aerosol cleaners. Wipe off saliva or water drops as soon as possible. Their long time contact with the screen causes deformations and color fading.

### Caution

Installing the TV requires special skills that should only be performed by qualified personnel. You should not attempt to do the work yourself. Philips bears no responsibility for improper mounting or mounting that results in accident or injury. Make sure that the wall mount is being

fixed securely enough so that it meets safety standards.

### Mounting the TV on the wall

This TV provides the VESA mounting interface (not supplied) and is VESA compatible with the 4 supplied VESA studs to be inserted in the back of the TV.

### Electric, Magnetic and Electromagnetic Fields ("EMF")

- Philips Royal Electronics manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electro magnetic signals.
- One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
- Philips is committed to develop, produce and market products that cause no adverse health effects.
- Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
- Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

### Pixel characteristics

Your TV display is made with high-precision technology and is made with a high number of colour pixels. Although it has effective pixels of 99,999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (with industry standards) and is not a malfunction.

## Getting started

### Before you start


**Warning:** do not insert the power plug into the mains at the bottom of the TV and in a wall socket before all connections are made.

Before installing your TV or before hanging it on the wall, first connect your accessory devices. See To make video and audio connections, p. 42.

### Overview of the rear connector panel

There is a wide range of audio and video devices that can be connected to your TV. See To make audio and video connections, p. 42.

English

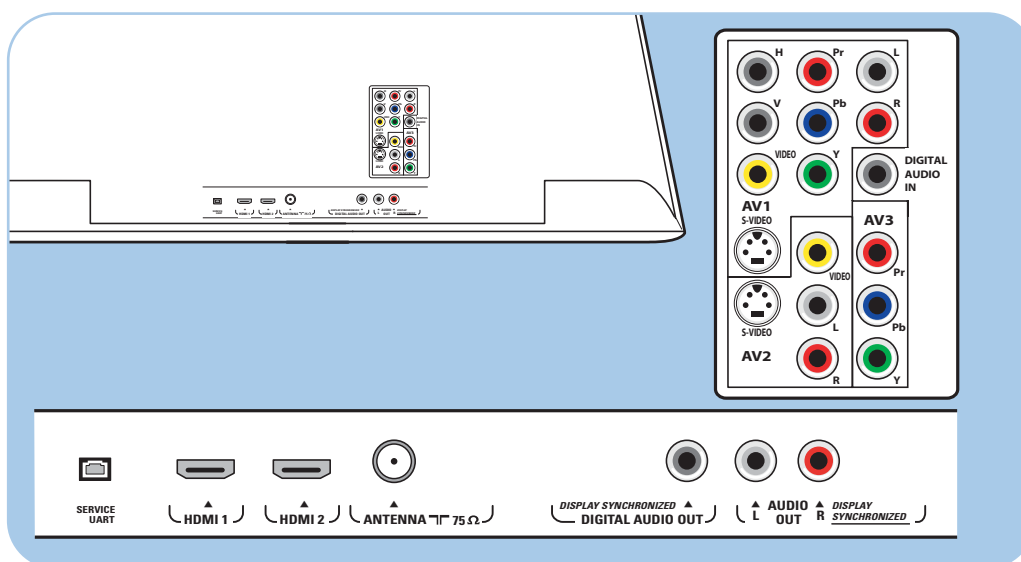

**AV1** can handle YPbPr, VIDEO, S-VIDEO, RGB-HV and L/R Audio,

**AV2** can handle VIDEO, S-VIDEO and L/R Audio,

**AV3** can handle YPbPr,

**HDMI 1** and **2** can handle Digital video and audio,

**Side** can handle VIDEO or S-VIDEO, L/R Audio and USB,


**Service UART** : For use only by authorized service personnel.

Note for installers/integrators : Do not connect RS232 without level shifter.

**Supported video formats:** 480i, 480p, 576i, 576p, 720p, 1080i.

**Warning:** disconnect all power sources before making any connections.


## Getting started (Continued)

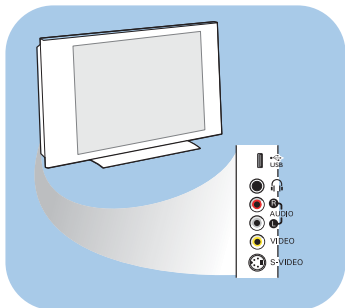

### Overview of the side connector panel

- To connect a camera, camcorder or game, see To make video and audio connections, p. 42.
- To connect a headphone, see To make video and audio connections, p. 42.
- To connect a USB device, see Multimedia browser, p. 38.


## Connect to the TV

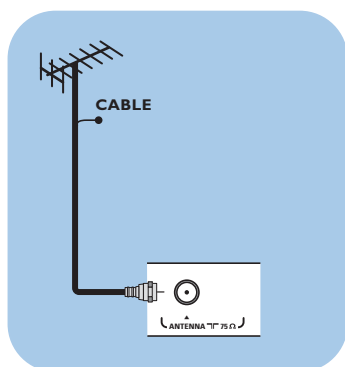

Connect directly to the TV or connect via your current cable box or Satellite Receiver box.

- **Directly to the TV** (you will not be able to receive pay channels)
  1. Connect the cable TV signal or the incoming antenna signal to the **CABLE/ANTENNA 75 Ω** jack at the bottom of the TV.
  2. See page 32 for details on using Autoprogram to store channels in the TV's memory.

**Note:** This connection will supply stereo sound to the TV if it is being broadcast by the station you are watching.

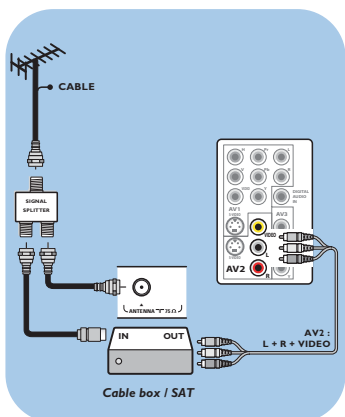

### • Via a cable box or Satellite box

1. Maintain the connection of the TV cable of your home into your cable box or satellite receiver box.
2. Connect your Cable box or satellite receiver box to the back of the TV using the best connection options. See to make audio and video connections, p. 42.
3. Select the source using the **AV** button on the remote control.
4. Press the **OK** button to confirm your selection.

For more information, please refer to your cable box or satellite receiver box manual.

## Getting started (Continued)


**Note: Watching Cable TV programs that don't require the cable box**

Since you've connected the cable TV signal directly to the TV's tuner, you can also watch the unscrambled programs by simply tuning to the desired channel. You must first use Autoprogram, however, to store channels in the TV's memory. See page 34. This connection will supply stereo sound to the TV if it is being broadcast by the station you are watching.

English

## Connect the mains

- Insert the power cord supplied into the mains at the bottom of the TV and in the wall socket.

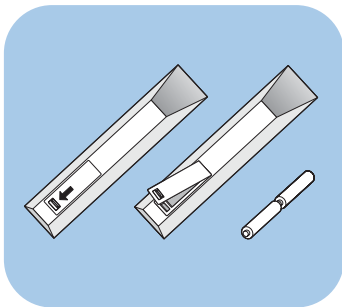
**Remote control**

- Insert the 2 batteries supplied (Type RAA6-1,5V). Be sure the (+) and (-) ends of the batteries line up correctly (inside of case is marked.)

For most buttons pressing a button once will activate the function. Pressing a second time will de-activate it.

## Use of the remote control RC4403

**Attention:** this remote control can not be programmed to work accessory devices.

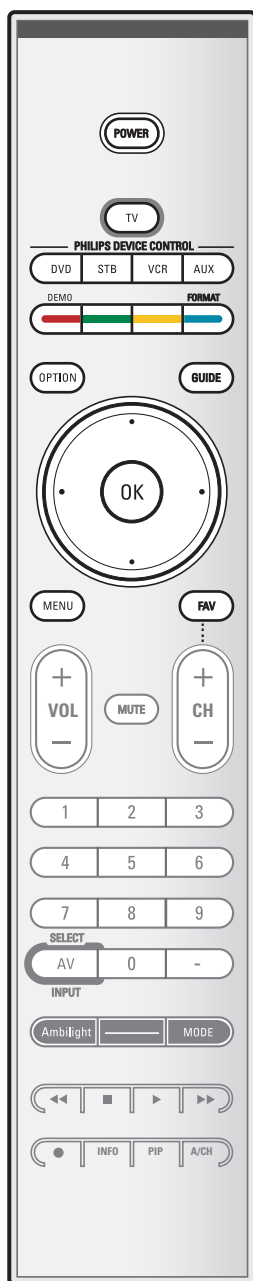

### POWER

Press to turn on/off the TV from or to standby mode.

**Attention:** the TV is never powered off completely unless it is physically unplugged.

**TV** Press to select TV mode.

### DVD STB VCR AUX

Press to select one of the system modes in which the remote control can be used.

### DEMO Demo on/off

See p. 31.

### Color buttons

When functions are attached to the color buttons, the color buttons are shown on screen.

### OPTION

To open and close the Quick access menu which contains a few frequently used options, like Closed captions, Picture format,...

**GUIDE** no function.

### Cursor buttons

Press the cursor buttons up/down, left/right to navigate through the menus.

**Note:** If necessary, you can adjust the picture position to the center of the screen with the cursor buttons.

**OK** - to activate a setting

- to display the list of channels stored (according to the selection made in the Installation mode - Antenna or Cable, p. 32.)
- starts playing content in the Multimedia Browser application, p. 40.


**MENU** Settings menu on/off. See p. 13.

**FAV** - to display the channel list

- you can create up to four favorite lists.



## Use of the remote control RC4403 (Continued)

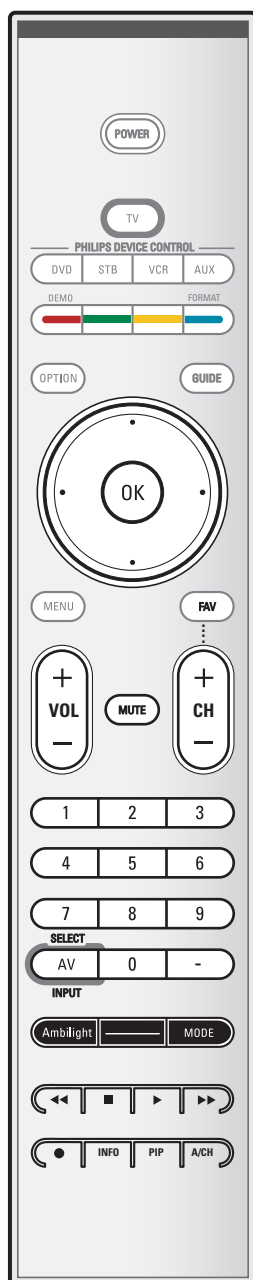

### VOL Volume

Press + or - to adjust the volume.

### MUTE

Interrupt the sound or restore it.

### CH Channel selection

- To browse through the TV channels or sources stored and marked in the selected Favorite channels list (see p. 37);
- To quickly browse through the list in the menus;

#### Notes:

- You don't have to start the installation again once you have searched for and stored the available TV channels.
- To select between Antenna or Cable TV channels, first make your selection in the Installation menu, Channels, Installation mode, see p. 33.

### Numeric buttons

To select a TV channel.

### SELECT AV INPUT

Press repeatedly to select **AV1, AV2, AV3, HDMI, Side** or **TV channels** when in TV mode, according to where you connected the accessory devices (p. 53).

- no function.

### Ambilight

- **Ambilight:** Press to switch Ambilight On or Off. For the Ambilight settings, see TV menus, Ambilight, p. 22.
- **MODE:** Press this button repeatedly to toggle through the Ambilight modes.

### ◀▶▶▶● Audio and Video equipment buttons

See Audio and Video equipment buttons, p. 54.

See Multimedia browser functional buttons, p. 41.

### INFO

Display information: Press to display (when available) information about the selected TV channel and program or accessory device.

- PIP** no function.

### A/CH

Press to alternate between the currently viewed channel and the previously viewed channel.


## Use of the remote control RC4403 (Continued)



### FORMAT

Press this button to summon a list of available display formats (depending on the receiving signal). This lets you choose the display format of your preference.

Press this button repeatedly to select another picture format: Automatic, Super zoom, 4:3, Movie expand 14:9, Movie expand 16:9 or Wide screen.

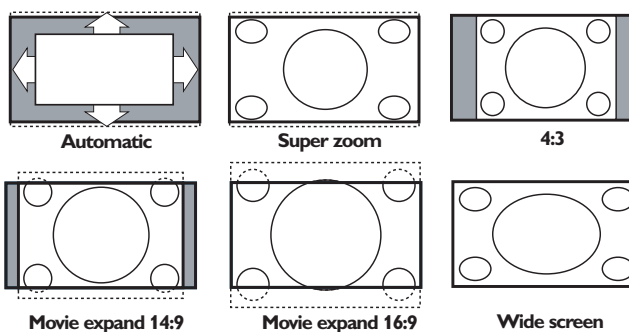

Automatic makes the picture fill the screen as much as possible.

Super zoom removes the black bars on the sides of 4:3 programs with minimal distortion.

When in Movie expand 14:9, Movie expand 16:9 or Super zoom picture format, you can make subtitles visible with the cursor up/down.

**Note:** With HD sources not all screen formats will be available.

## Use of the **OPTION** button



Quick access
Closed captions
Picture format
Equalizer
Clock

The **OPTION** button allows you to display the Quick access menu which will give you direct access to some features and menu options.

1. Press the **OPTION** button.
  - ▷ The Quick access menu appears.
2. Press the cursor up/down to select a menu item.
3. Press the **OK** button to jump to the selected menu item in the TV menu (except for the clock option).
4. Use the cursor buttons to make a selection.
5. Press the **OPTION** button to exit.

English

### Closed captions

See Adjust Feature menu settings, p. 26.

### Picture format

See Adjust Picture menu settings, p. 19, or Use of the remote control, Format button, p. 8.


### Equalizer

See Adjust Sound menu settings, p. 20.

### Clock

Select to activate/deactivate the clock display on the screen.

## Buttons on the right of the TV

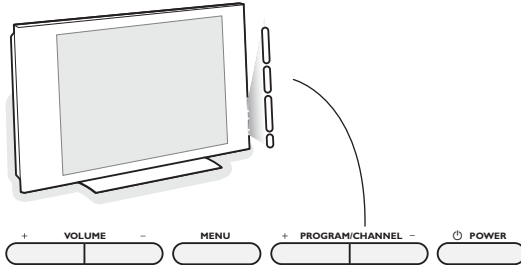

Should your remote be lost or broken you can still change some of the basic settings with the buttons on the right side of your TV. Press the power switch to switch the TV on.

The **MENU** button can be used to summon the TV menu without the remote control.

Use:

- the **VOLUME +** and - buttons and the **PROGRAM/CHANNEL +** and - buttons to select menu items;
- the **MENU** button to confirm your selection.

## Turn the TV on

- Press the power switch at the right side of the TV.
  - ▷ An indicator on the front of the TV lights up.
- Press the **+CH-** button or the **POWER** button on the remote control.

**Note:** the first time (and only the first time) you turn on your TV, you see a Welcome screen followed by the installation procedure. See First time installation below.

## First time installation

The installation procedure consists of a series of screens that will guide you through the installation of your TV. Follow the instructions on screen.

**Note:** if the TV has already been installed before and/or you want to change the First time installation settings, proceed with Use of the TV menu settings, p. 15.

## First time installation (continued)



### Step 1: select your on-screen language

After the Welcome screen you are asked to select a language of the TV's on-screen menus. The text of the header and the info on screen continuously change language.




1. Press the cursor up/down to highlight your language.
2. Press the **OK** button on the remote control.
3. Follow the instructions on screen to proceed.

English

### Step 2: complete the initial TV installation procedure

1. Press the green color button on your remote control to start the television installation.
2. Select **Cable** or **Antenna** in the Installation mode and press the green color button.
  - ▷ When **Antenna** is selected, the TV will detect antenna signals and will search for antenna TV (2-69) channels available in your local area.
  - ▷ When **Cable** is selected, the TV will detect cable company supplied signals and will search for cable TV (1-125) channels available in your area.
3. Press the green color button on your remote control to start the Automatic channel installation.
  - ▷ All available TV channels are searched for and stored automatically. This will take a few minutes. When the search is complete, the menu will indicate the number of channels found.
4. Press the red color button again when the search is completed.


**Note:** if you choose to install the channels at a later time, select Autoprogram in the TV menu, Installation, Channels to scan available channels.

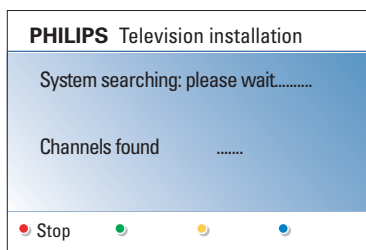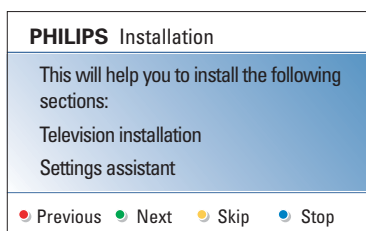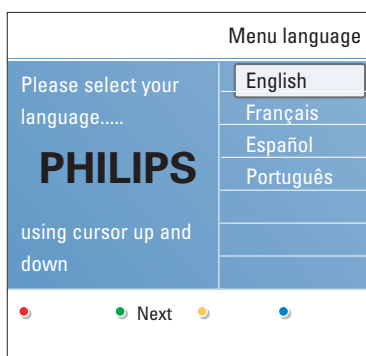

## First time installation (Continued)

### Step 3: Settings assistant: select your TV settings

By means of several split screens/full screens you are prompted to select your preferred picture, sound and Ambilight settings, to finally arrive at a complete setting which satisfies you.

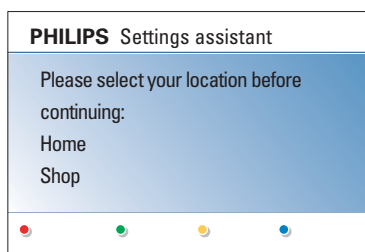

1. Press the green color button on your remote control to enter the **Settings assistant** menu.
2. Select your Location with the cursor up/down and press the green color button.
  - ▷ If you choose **Shop** it will skip the Settings assistant. The TV parameters for Picture, Sound and Ambilight will then be set to predefined fixed settings. Press the green color button again to proceed.
  - ▷ If you choose **Home** it will display the Settings assistant.
3. Use the cursor left/right to each time select your preferred screen.
4. Press the green color button to each time confirm your selection and to jump to the following screen.
  - ▷ The following items will be presented sequentially. In the header it is mentioned how many screens have been completed and how many screens there are in total. The Settings assistant will step sequentially through the following settings: Picture, Sound and Ambilight.
5. Press the green color button twice to store all the settings and to return to the TV installation menu.

**Note:** when you skip or stop the Settings Assistant, then the Standard settings Philips selected for you will be chosen.

6. Press the **OK** button to finish the First time installation procedure and to display the first stored TV channel.

**Note:** any time you can change or reset your settings or adjust individual settings for Picture, Sound and Ambilight in the TV settings menu.  
 See p. 15, Use of the TV menu settings.  
 To control the settings of special TV functions, features and accessory equipment.  
 See p. 25, Adjust feature menu settings.

## How to navigate through the menus



### Introduction

A lot of guiding instructions, help texts and messages will be displayed on your TV when you use the menus or when you try to execute an action.

Read the help texts which are being displayed on the specific item highlighted.

The color button at the bottom of the screen refer to the different actions which may be executed.

Press the corresponding color button on the remote control to perform the required or desired action.

English

1. Press the **MENU** button on the remote control.
  - The main menu appears on the screen.
  - **TV menu** allows you to access the TV menu. See below.
  - **Channel list** allows you to access the TV channel list and to create up to four favorite lists with your preferred TV channels. See Create your favorite channel list, p. 37.
  - **Multimedia** allows you to access the Multimedia browser application. It lets you display your personal multimedia files. Multimedia is only present when a USB device is connected. See Multimedia browser, p. 39.
2. Use the cursor up/down to highlight and select a menu item.
3. Use the cursor right to enter the highlighted menu item.
  - The right panel shows the content of the highlighted menu item.

Television	TV menu
	Channel list
Multimedia	

TV menu	TV settings
TV settings	Settings assistant
Features	Reset to standard
Installation	Picture
	Sound
	Ambilight
Info	

## How to navigate through the menus (continued)

TV menu	TV settings
TV settings	Settings assistant
Features	Reset to standard
Installation	Picture
	Sound
	Ambilight
Info	

4. Use the cursor up/down to select a menu item.
  - **TV settings** allows you to adjust your preferred picture, sound and Ambilight settings
  - **Features** allows you to control the settings of special TV features
  - **Installation** allows you
    - to select your menu language;
    - to search for and store your TV channels;
    - to set or adjust various special functions;
    - to select connected peripheral equipment;
    - to reset your picture, sound and Ambilight settings to the factory standard settings;
    - to upgrade your TV software.
5. Press the cursor right to enter the highlighted menu item.
  - ▷ The content of the right panel is moved to the left panel and the right panel now shows the content of the newly highlighted item in the left panel.

**Note:** in some cases it is important that the picture can be watched while you adjust the settings. This means that when the highlight is on the right side panel, the other menu items hide away. When the cursor left is pressed, the hidden menu items reappear and the highlight moves to the left panel.

6. Press the **MENU** button to exit the main menu.



## Use of the TV menu settings

Television	TV menu
	Channel list
Multimedia	

The TV menu allows you to access and change settings and preferences in case you want to change the First time installation settings and/or you want to control the settings of special TV functions, features and peripheral equipment.

English

### Adjust viewing and listening settings

TV menu	TV settings
TV settings	Settings assistant
Features	Reset to standard
Installation	Picture
	Sound
	Ambilight
Info	

1. Press the **MENU** button on the remote control.
  - The main menu appears on the screen.
2. Select **TV menu** and press the cursor right.
  - The TV menu is displayed.
3. Select **TV settings** and press the cursor right.
  - The TV settings menu is moved to the left.
4. Press the **MENU** button to exit the menu.

To make it easier to change the settings of the TV, there are 3 ways of doing it.

### A. Change settings in an easy-to-use manner with the Settings assistant

Each time you've made a selection, press the green color button to confirm your selection.

1. Select **Settings assistant** and press the cursor right.
  - By means of several split screens/full screens you are prompted to select your preferred picture, sound and Ambilight settings to finally arrive at a complete setting which satisfies you.  
See First time installation, Step 3: Settings assistant: select your TV settings, p. 12.
2. Press the green color button to return to the TV menu again.

## Use of the TV menu settings (continued)

TV menu	
TV settings	Reset to standard
Settings assistant	Current
Reset to standard	Natural
Picture	Vivid
Sound	Subtle
Ambilight	
Info	

### B. Use of the Standard settings

This allows you to reset your settings for viewing and listening to predefined factory settings.

1. Select **Reset to standard** and press the cursor right.
  - ▷ A menu appears which allows you to select one of the standard settings for viewing and listening.
  - ▷ **Current** shows your current settings for viewing and listening.
  - ▷ If you select **Natural**, it allows you to set your picture, sound and Ambilight settings to the recommended standard values. In most cases this will give the best balanced viewing experience.
  - ▷ If you select **Vivid**, it allows you to set your picture, sound and Ambilight settings to rich values, making use of the TV capabilities to its full extend.
  - ▷ If you select **Subtle**, it allows you to set your picture, sound and Ambilight settings to the purest representation of the original source content.
2. Press the green color button to store the selected setting.

### C. Individual settings for picture, sound and Ambilight

- Select **Picture**, **Sound** or **Ambilight** and press the cursor right.
  - ▷ A menu appears which allows you to fine tune the picture, sound and Ambilight settings.
  - ▷ To adjust the Picture settings, see Adjust picture menu settings, p. 17.
  - ▷ To adjust the Sound settings, see Adjust sound menu settings, p. 20.
  - ▷ To adjust the Ambilight settings, see Enjoy Ambilight, p. 22.

## Adjust picture menu settings

TV menu	TV settings
TV settings	Settings assistant
Features	Reset to standard
Installation	Picture
	Sound
	Ambilight
Info	

TV menu	
TV settings	Picture
Settings assistant	Contrast
Reset to standard	Brightness
Picture	Color
Sound	Tint
Ambilight	Sharpness
	Color temperature
	.....
Info	

The picture menu contains the settings that affect the quality of the picture.

1. Press the **MENU** button on the remote control.
  - The main menu appears.
2. Select **TV menu** and press the cursor right.
  - The TV menu is moved to the left.
3. Select **TV settings** and press the cursor right.
  - The TV settings menu is moved to the left panel.
4. Select **Picture** and press the cursor right.
  - The Picture menu is moved to the left panel.
5. Use the cursor up/down to select the Picture menu items.
6. Press the cursor right to enter the selected Picture menu item.
7. Use the cursor buttons to adjust the settings.
8. Press the cursor left to return to the Picture menu.

### Contrast

Adjusts the intensity of bright parts in the picture but keep the dark parts unchanged.

### Brightness

Adjusts the light output of the complete picture, which will mainly affect the darker areas of the picture.

### Color

Adjusts the saturation level of the colors to suit your personal preference.

### Tint

Allows you to select the color mix (tint) of the picture.

### Sharpness

Adjusts the sharpness of fine details in the picture.

### Color temperature

Increases or decreases **Warm** (red) and **Cool** (blue) colors to suit personal preferences.

- Select **Cool** to give the white colors a blue, **Normal** to give the white colors a neutral, **Warm** to give the white colors a red tint.
- Select **Custom** to make a customized setting in the Custom color temperature menu item.

## Adjust picture menu settings (Continued)

TV menu	
TV settings	Picture
Settings assistant	.....
Reset to standard	Custom color temp.
Picture	Pixel Plus
Sound	ClearLCD
Ambilight	Dynamic contrast
	DNR
	.....
Info	

### Custom color temperature (only when Color temperature is set to Custom)

Fine tunes the white point (**WP**) and black level (**BL**) of the picture.

1. Select **Custom color temperature** and press the cursor right.
2. Use the cursor buttons to select and adjust the settings of:

**R-WP**: allows you to customize the color temperature by adjusting the red whitepoint of the picture.

**G-WP**: allows you to customize the color temperature by adjusting the green whitepoint of the picture.

**B-WP**: allows you to customize the color temperature by adjusting the blue whitepoint of the picture.

**R-BL**: allows you to customize the color temperature by adjusting the red blacklevel of the picture.

**G-BL**: allows you to customize the color temperature by adjusting the green blacklevel of the picture.

3. Use the color button to reset to the predefined settings.
4. Press the cursor left to return to the Picture menu.

### Pixel Plus

Pixel Plus is the most ideal setting, as it fully processes the image to make every single pixel the best it can be, improving contrast, sharpness, picture depth, and color reproduction and brilliance from every source, including High Definition.

- Select **On** or **Off** to activate/de-activate Pixel Plus.

### ClearLCD (if available)

ClearLCD results in superior sharpness of motion reproduction, better black level, high contrast with a flicker-free, quiet image and a larger viewing angle.

### Dynamic contrast

Automatically makes the contrast in the darker and the brighter picture areas more noticeable as the image on the screen changes.

- Normally select **Medium**. It may be preferred to select **Minimum**, **Maximum** or **Off**.

### DNR

**DNR** automatically filters out and reduces the image noise. This improves picture quality when receiving weak signals.

- Select **Off**, **Minimum**, **Medium** or **Maximum** according to the image noise in the picture.

## Adjust picture menu settings (Continued)

TV menu	
TV settings	Picture
Settings assistant	.....
Reset to standard	MPEG artifact red...
Picture	Color enhancem..
Sound	Active Control
Ambilight	Light sensor
	Picture format
Info	

### MPEG artifact reduction

**MPEG artifact reduction On** smoothens the transitions on digital content.

- Select **On** or **Off**.

### Color enhancement

Automatically controls green enhancement and blue stretch. It makes the colors more vivid.

- Select **Off**, **Minimum**, **Medium** or **Maximum**.

### Active Control

The TV continuously measures and corrects all incoming signals in order to provide the best picture possible.

- Select **On** or **Off** to activate/de-activate Active control.

### Light sensor

Light sensor **On** automatically adjusts the picture and ambilight settings for best viewing dependent on the lighting conditions in the room.

- Select **On** or **Off**.

### Picture format

This allows you to adjust the size of the picture dependant on the broadcasted format and your preferred setting.

**Tip:** this function is also accessible via the **OPTION** button on the remote control.

How to navigate through the TV settings menu, see p. 12: Use of the TV menu settings.

Choose among the following picture formats: Automatic, Super zoom, 4:3, Movie Expand 14:9, Movie Expand 16:9 or Wide screen.

Automatic makes the picture fill the screen as much as possible.


In case of subtitles in the bottom black bar, Automatic makes the subtitles visible.

In case of a broadcaster logo in the corner of the top black bar, the logo disappears from the screen.

Super zoom removes the black bars on the sides of 4:3 programs with minimal distortion.

When in Movie Expand 14:9, Movie Expand 16:9 or Super zoom screen format, you can make subtitles visible with the cursor up/down.

**Note:** with HD sources not all picture formats will be available.

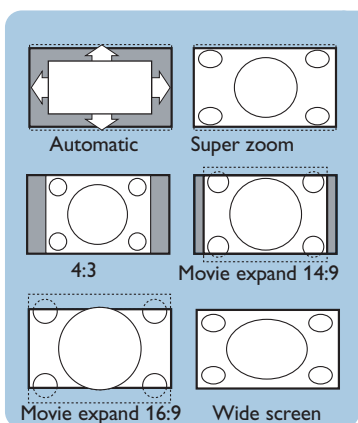

## Adjust sound menu settings

TV menu	
TV settings	Sound
Settings assistant	Equalizer
Reset to standard	Volume
Picture	Balance
Sound	Alternate audio
Ambilight	Mono/Stereo
	.....
Info	



Manufactured under license from Dolby Laboratories. 'Dolby' 'Pro Logic' and the double-D symbol are trademarks of Dolby Laboratories.

The sound menu contains the settings that affect the quality of the sound.

1. Press the **MENU** button on the remote control.
  - ▷ The main menu appears.
2. Select **TV menu** and press the cursor right.
  - ▷ The TV Menu is moved to the left.
3. Select **TV settings** and press the cursor right.
  - ▷ The TV settings menu is moved to the left panel.
4. Select **Sound** and press the cursor right.
  - ▷ The Sound menu is moved to the left panel.
5. Use the cursor up/down to select the Sound menu items.
6. Press the cursor right to enter the selected Sound menu item.

**Note:** dependent on the input signal, one or more menu items may not be selectable.

7. Use the cursor buttons to adjust the settings.
8. Press the cursor left to return to the Sound menu.

### Equalizer

Allows you to change the frequency response of the sound to match your personal taste.

**Tip:** this function is also accessible via the **OPTION** button on the remote control.

### Volume

Allows you to adjust the sound output level.

### Balance

Allows you to adjust the output of the right and left speakers to obtain the best stereo reproduction for your listening position.

### Alternate audio

Gives you the possibility to swap between the **Main** and **Second audio Program (SAP)** when it is available.

## Adjust sound menu settings (Continued)

TV menu	
TV settings	Sound
Settings assistant	.....
Reset to standard	Mono/Stereo
Picture	Sound mode
Sound	Headphone volume
Ambilight	AVL
	Delta volume
	Auto surround
Info	

### Mono/Stereo

Allows you to select, per TV channel, **Mono** or **Stereo** sound when analog stereo broadcasts are available.

### Sound mode

Allows you to select the modes for more spatial or surround sound reproduction dependent on the broadcasted signals or signals from external inputs received.

### Headphone volume

Allows you to control the level of sound through the headphones.

### AVL (Auto volume leveling)

Automatically reduces the volume differences between channels and programs, providing a more constant overall level. This will also reduce the dynamics of sound.

### Delta volume

Allows you to correct for any permanent volume differences between TV channels or external sources.

### Auto surround


When switched **On**, this allows the TV to automatically switch to the best surround sound mode the broadcaster transmits.

## Enjoy Ambilight

TV menu	
TV settings	Ambilight
Settings assistant	Ambilight
Reset to standard	Brightness
Picture	Mode
Sound	Color
Ambilight	Custom color
	Separation
	.....
Info	

The ambilight menu contains the settings for controlling the ambient lighting. Using ambient light gives a more relaxed viewing experience and improves perceived picture quality. Analysis of the picture content adapts the colors continuously. But the lights can also be set to any fixed color and many shades of white.

1. Press the **MENU** button on the remote control.
  - The main menu appears.
2. Select **TV menu** and press the cursor right.
  - The TV Menu is moved to the left.
3. Select **TV settings** and press the cursor right.
  - The TV settings menu is moved to the left panel.
4. Select **Ambilight** and press the cursor right.
  - The Ambilight menu is moved to the left panel.
5. Use the cursor up/down to select the Ambilight menu items.
6. Press the cursor right to enter the selected Ambilight menu item.
7. Use the cursor buttons to adjust the settings.
8. Press the cursor left to return to the Ambilight menu.

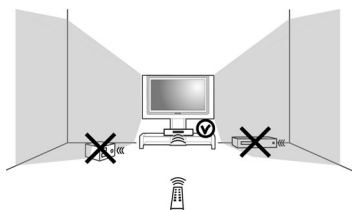

### Caution: Infrared interference

To avoid bad infrared remote control reception, place your peripheral equipment out of sight of the ambient lights of your TV. Ambilight does not function well when the room temperature is less than 59°F/15°C.

### Ambilight

Allows you to switch the lights On or Off at the rear of the TV.

- Select **Off** to switch off the ambient lights and downlight all other ambilight menu items.
- Select **On** to switch on the ambient lights. Refine the light settings in the menus below.

### Brightness

Allows you to adjust the light output of the ambilights.



## Enjoy Ambilight (Continued)

TV menu	
TV settings	Ambilight
Settings assistant	.....
Reset to standard	Mode
Picture	Color
Sound	Custom color
Ambilight	Separation
	Balance
Info	

### Mode

Allows you to choose for constant background lighting or for background lighting that matches the images displayed on the screen.

- Use the cursor buttons to select Color, Relaxed, Moderate or Dynamic.

- **Color**: this will show constant light according to the settings in the Color menu below. It allows manual fine tuning in the next Ambilight menu items.

- The options **Relaxed**, **Moderate** or **Dynamic** will dynamically match brightness and color to the screen content. The selection made will effect the speed which determines the viewing impression.

For example:

- in **Relaxed** mode, the rate of brightness and color change, as predefined in the factory, is smoothly and soft which gives you an immersive yet relaxed viewing.
- in **Moderate** mode the rate of brightness and color change can be experienced as between Relaxed and Dynamic.
- in **Dynamic** mode the rate of brightness and color change is more quick and dynamic. This gives you full immersion and involvement with the screen content.

### Notes:

- the rate of change is limited, as not to cause uncomfortable sensations;
- according to the selection made, some Ambilight menu items will be downlighted and can not be selected.

English

### Color

**Note:** only available when Color has been selected in the Mode menu above.

Allows you to select or adjust the color of the light to your own personal choice.

- **Warm white** is matched to that of most normal lightbulbs. Select this setting if you want the Ambilight to fit best with normal living room lighting.
- **Cool white** is matched to that of normal daylight (6500K). Select this setting if you prefer more cool lighting.

**Note:** the 6500K is the SMPTE recommended setting for ambient backlighting of displays.

- **Blue**: preferred by most consumers to create a cool, modern and/or mystical atmosphere. Select this setting according to your personal taste or mood.
- **Red**: preferred by most consumers to create a cosy, special atmosphere. Select according to your personal taste or mood.
- **Custom**: select if you want to customize the ambilight colour.

## Enjoy Ambilight (Continued)

TV menu	
TV settings	Ambilight
Settings assistant	.....
Reset to standard	Mode
Picture	Color
Sound	Custom color
Ambilight	Separation
	Balance
Info	

### Custom color

**Note:** only available when Custom has been selected in the Color menu.

Allows you to customize the ambilight color.

- Select **Palette** to select the general color of the light output.
- Select **Saturation** to adjust the colorfulness of the light.

### Separation

Allows you to define the stereo effect in case, Relaxed, Moderate or Dynamic has been selected in the Mode menu.

- Select **Off** for a mono behavior which means that all lamps will behave equally.
- Select **Minimum**, **Medium** or **Maximum** to define the Ambilight stereo effect spread over the available lamps.

### Balance

Allows you to adjust the color and level of light intensity on the left and right side of the picture.

## Adjust feature menu settings

TV menu		Features
TV settings		Closed captions
Features		Caption service
Installation		Sleeptimer
		Child lock
		Set/Change PIN
		On timer
		Demo
Info		

The Features menu allows you to control the settings of special TV functions, features and accessory equipments.

1. Press the **MENU** button on the remote control.
  - ▷ The main menu appears.
2. Select **TV menu** and press the cursor right.
  - ▷ The TV Menu is moved to the left.
3. Select **Features** and press the cursor right.
  - ▷ The Features menu is moved to the left panel.
4. Use the cursor up/down to select the Features menu items.
5. Press the cursor right to enter the selected Features menu item.
6. Use the cursor buttons to adjust the settings.
7. Press the cursor left to return to the Features menu.

## Adjust feature menu settings (continued)

TV menu	Features
TV settings	Closed captions
Features	Caption service
Installation	Sleeptimer
	Child lock
	Set/Change PIN
	On timer
	Demo
Info	

### Closed captions

This displays the transmitted CC-text on the screen according to your chosen CC service in the Caption menu below. This text can either be permanently displayed (assuming that the service is available in the broadcast) or only when mute is active.

1. Press the cursor right after having selected **Closed captions**.
2. Select **On**, **Off** or **On during mute**.

### Caption service

This allows you to select the Closed Captions service levels of analog broadcasting to be displayed. Closed Captioning allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses on-screen 'text boxes' to show dialogue and conversations while the TV program is in progress. Captions will appear on the screen during captioned broadcasts.

#### Notes:

- This television provides display of television closed captioning conforming with the EIA-608 standard and in accordance with Sections 15.119 of the FCC rules.
- The captions do not always use correct spelling and grammar. Not all TV programs and product commercials are made for broadcast with Closed Caption informations included. Refer to your area's TV program listings for the TV channels and times of Closed Caption shows. The captioned programs are usually noted in the TV listings with service marks such as 'CC'.

1. Select **Caption service**.
2. Press the cursor right.
3. Select the desired Caption service:
  - ▷ **CC 1, 2, 3 or 4**  
Dialogue (and descriptions) for the action on the captioned TV program shows on screen. Usually CC 1 is the most used. CC 2 may be used for alternate languages if they are being transmitted.
  - ▷ **T 1, 2, 3 or 4**  
Often used for channel guide, schedules, bulletin board information for Closed Captions programs, news, weather informations or stock market reports. Not all Caption services are necessarily being used by a TV channel during the transmission of a Closed Caption program.

### Sleeptimer

This sets a time period after which the TV automatically turns to standby.

1. Select **Sleeptimer**.
2. Press the cursor right.
3. Select a value with the cursor up/down. The list will have values from **0** to **180 minutes**.  
You can always turn off your TV earlier or select another time set.

## Adjust feature menu settings (continued)

TV menu	Features
TV settings	Closed captions
Features	Caption service
Installation	Sleeptimer
	Child lock
	Set/Change PIN
	On timer
	Demo
Info	

### Child lock

With a 4-digit PIN, you are able to lock TV channels and external sources to prevent children from watching certain programs.

1. Select **Child lock**.
2. Press the cursor right to enter the Child lock menu.
3. Enter your 4-digit PIN.

**Note:** you have to re-enter your PIN code each time you enter the Child lock menu.

4. Select one of the menu items of the Child lock menu and press the cursor right.

### Lock after

**Note:** Lock after is only selectable if time and date are known. See Set your clock menu, p. 35.

This allows you to prevent the viewing of the selected channel after a selectable time delay. Locked channels can still be tuned, but the picture is blanked and the audio is muted.

1. Press the cursor right and select **Timer On** or **Off**.
  - When set to **On** this allows you to set the clock.
2. Select **Time** and press the cursor right.
  - This allows you to set the time after which the lock is set.
3. Select **AM** or **PM** to select the correct period of the day.
4. Enter the time with the digit or the cursor buttons.

### Channel lock

This allows you to completely lock a certain TV channel or external source.

- Select the channels or subchannels you want to lock.

### TV ratings lock

Your TV is equipped with a V-chip. This allows you to control access to individual programs based on their movie and TV ratings. All settings apply to all AV inputs, except HDMI. The program content advisory data are sent by the broadcaster or program provider.

1. Select **TV ratings lock** with the cursor down.
  - A list appears, showing the age-based TV ratings and a corresponding content-based ratings list.
2. Press the cursor right to enter the list.
3. Select an age-based TV rating with the cursor up/down, and enter, if present, the list with content-based ratings with the cursor right, and select one content-based rating.
4. Press **OK** to activate/de-activate the selected rating.
5. Select another content-based rating if you like and press **OK** again.

TV menu/Features	
Child lock	Lock after
Lock after	Timer
Channel lock	Time
TV ratings lock	
Movie ratings lock	
Info	

Age-based rating	Content-based rating
All	none
None	none
TV-Y	none
TV-Y7	(FV) Fantasy Violence
TV-G	none
TV-PG	(D) Dialog (L) Language (S) Sex (V) Violence
TV-14	(D) Dialog (L) Language (S) Sex (V) Violence
TV-MA	(L) Language (S) Sex (V) Violence

## Adjust feature menu settings (continued)

When **All** has been selected, all items in the age-based and in the contents-based lists are locked.

If, while **All** is selected, any other item, either an age-based or content-based item, is unselected, then All is automatically unselected.

**No rating** is the selection for items that either have no rating information or have a rating of None. Both will be locked.

When an item on the age-based list is selected, all items below that item of the same group are locked as well.

When you select a content-based rating, all identical content-based ratings in the older age-based categories are also selected.

English

### Notes:

- You can lock/unlock any number of ratings on the list without re-entering your PIN.
- Each ratings item has a box-graphic in front of it to indicate whether or not programs carrying that rating are currently locked.

### TV ratings

<b>TV-Y</b>	appropriate for children of all ages with themes and elements suitable for children aged 2-6
<b>TV-Y7</b>	programs designed for children age 7 and older
<b>TV-Y7-FV</b>	programs include fantasy violence more intense than other programs in the TV-Y7 category
<b>TV-G</b>	programs suitable for all ages. These programs contain little or no violence, no strong language and little or no sexual dialogue or situations
<b>TV-PG</b>	programs contain elements that some parents may find unsuitable for younger children and which may need parental guidance. The program may contain moderate violence, sexual dialogue and/or situations and some strong language.
<b>TV-14</b>	programs contain elements that may not be suitable for children under 14 years of age. These programs include one or more of the following: intense violence, intense sexual situations, suggestive dialogue and strong language.
<b>TV-MA</b>	programs are designed to be viewed by adults and may be unsuitable for children under the age of 17. These programs may contain graphic violence, explicit sexual activity and/or crude or indecent language.

## Adjust feature menu settings (continued)

MenU TV/Features	
Child lock	Movie ratings lock
Lock after	All
Channel lock	NR
TV ratings lock	G
Movie ratings lock	PG
	PG-13
	R
	NC-17
	X
Info	

### Movie ratings lock

This function allows you to control access to individual movies based on their MPAA ratings (Motion Picture Association of America).

1. Select **Movie ratings lock** with the cursor down. A list appears, showing all valid MPAA content ratings.
2. Press the cursor right to enter the list.
3. Select a movie rating with the cursor up/down.
4. Press **OK** to activate/de-activate the selected rating.

Each rating item has a box-graphic in front of it to indicate whether or not programs carrying that rating are currently locked.

When **All** has been selected, all items on the movie ratings list become selected. (All movies are locked.)

If, while **All** is selected, any other item is unselected, then **All** is automatically unselected.

When any other item has been selected, all ratings below are selected as well, thus all movies with those ratings will be locked.

### Movie ratings

<b>NR</b>	not rated
<b>G</b>	movies with a mild content, suitable for all ages
<b>PG</b>	movies for which parental guidance is recommended. They may contain a few racy or violent scenes or maybe some bad language
<b>PG-13</b>	movies for which parental guidance may be recommended if under age 13
<b>R</b>	restricted. The movies usually contain offensive sex or bad language and may be unsuitable for children under the age of 17. Parental guidance or permission needed.
<b>NC-17</b>	even with parental permission, forbidden under age 17. More offensive sex, violence or bad language.
<b>X</b>	movies which generally focus on sex, violence and/or bad language. Also known as pornography.

## Adjust feature menu settings (continued)

TV menu	Features
TV settings	Closed captions
Features	Caption service
Installation	Sleeptimer
	Child lock
	Set/Change PIN
	On timer
	Demo
Info	

### Set/Change PIN

This allows you to set or change the personal 4-digit access PIN that is used in the different lock functions of the TV.

1. Select **Set** or **Change PIN** with the cursor down.
  - ▷ If no PIN-code exists yet, the menu item is set to **Set PIN**. Follow the instructions on screen.
  - ▷ If a PIN-code has previously been entered, the menu item is set to **Change PIN**. Follow the instructions on screen.
2. Enter your PIN with the digit buttons.  
All number combinations from 0000 to 9999 are valid numbers.
3. The **Features** menu reappears with a message confirming that the PIN has been created.

#### Important: you have forgotten your PIN!

1. Select **Change PIN** in the Features menu.
2. Press the cursor right to enter the overriding PIN code 0-7-1-1.
3. Enter a new personal 4-digit PIN code. The previous PIN is erased and the new PIN code is stored.

English

TV menu	Features	On timer
	Closed captions	Timer
	Caption service	Channel
	Sleeptimer	Day
	Child lock	Time
	Set/Change PIN	
	On timer	
	Demo	
Info		

### On timer

From standby, this automatically turns the TV to the specified channel number, at a specified time.

1. Select **On timer**.
2. Press the cursor right to enter the On timer menu.
3. Select **Timer** and press the cursor right.
4. Select **On**.
5. Select **Channel** and then the TV channel you want your TV to turn to on a selected time and day.
6. Select **Day** and then a day of the week or select **Daily**.
7. Select **Time** and enter the time with the digit buttons or with the cursor up/down.
8. Press the **OK** button to activate.
9. Press the cursor left to return to the Features menu or press the **MENU** button to switch off the menu.

**Note:** From now on, **every week**, your TV will automatically turn to the selected channel, on the selected day, at the selected time, until the On timer function is turned off again.

**Note:** only one On timer can be set.

## Adjust feature menu settings (continued)

TV menu	
Features	Demo
Closed captions	Pixel Plus
Caption service	Ambilight
Sleeptimer	ClearLCD
Child lock	Settings assistant
Set/Change PIN	Active Control
On timer	
Demo	
Info	

### Demo

This allows you to get an idea of the features that are part of the television.

1. Select **Demo**.
2. Press the cursor right.
3. Select a desired demo.
4. Press the **OK** button to start the demo.
  - ▷ The selected demo is played once.
5. Press the red color button to stop the demo and to return to the demo menu.
6. Press the red color button to exit the demo menu.



## How to search for and store TV channels

**Tip:** you will need this chapter only if you want to change the installation settings.

Television	TV menu
	Channel list
Multimedia	

TV menu	Installation
TV settings	Language
Features	Channels
Installation	Preferences
	Connections
	Clock
	Reset AV settings
	Software upgrade
Info	

### Installation menu

This menu will adjust settings related to the installation of the TV channels.

1. Press the **MENU** button on the remote control.
  - The main menu appears.
2. Select **TV menu** and press the cursor right.
  - The TV Menu is moved to the left.
3. Select **Installation** and press the cursor right.
  - The Installation menu is moved to the left panel.
4. Use the cursor up/down to select the Installation menu items.
5. Press the cursor right to enter the selected Installation menu item.
6. Use the cursor button to make a selection.
7. Press the **OK** button to activate or to confirm.
8. Press the cursor left to return to the Installation menu or press the **MENU** button to switch off the menu.

English

TV menu	
Installation	Language
Language	English
Channels	Français
Preferences	Español
Connections	Português
Clock	
Reset AV settings	
Software upgrade	
Info	

### Select your language

This allows you to select your menu language out of the list of the available languages.

## How to search for and store TV channels (continued)

TV menu/Installation	
Channels	Autoprogram
Autoprogram	
Installation update	Start now
Installation mode	
Uninstall channels	
Info	

TV menu/Installation	
Installation mode	
Antenna	Please select your installation mode.
Cable	
● Previous	● Next ● ●

### Store TV channels

After language is set correctly, you can now search for and store the TV channels.

1. Select **Channels** and press the cursor right.
2. Select **Autoprogram**.
3. Press the cursor right.
4. Press the **OK** button.
5. Select **Cable** or **Antenna** in the Installation mode.
  - ▷ When **Antenna** is selected, the TV will detect antenna signals and will search for antenna TV channels available in your local area.
  - ▷ When **Cable** is selected, the TV will detect cable company supplied signals and will search for cable TV channels available in your area.

**Note:** Make sure that registration with your cable TV provider and connection of equipment are completed.

6. Press the green corresponding color button on the remote control for "**Next**".

**Note:** All channels must be unlocked in order to autoprogram. If requested, enter your PIN code to unlock all channels. See Adjust Feature menu settings, p. 29.

7. Press the green corresponding color button on the remote control for "**Start**" to start autoprogramming.
  - ▷ The menu screen disappears and the progress of autoprogramming is displayed. The progress bar indicates the number of TV channels found.
  - ▷ When Autoprogramming is complete, a message appears confirming the completion and the TV switches to the first installed TV channel.
8. Press the red color button to finish.

### Notes:

- When you have locked TV channels while initiating autoprogram, a message appears asking to enter your PIN code in order to complete autoprogramming.
- Background autoprogramming occurs only when the TV is turned on.
- Once you have searched for as well the available Antenna as well as the Cable TV channels, they are stored in the memory.

## How to search for and store TV channels (continued)

### Channel tuning

**Important:** After the installation of the TV channels has been done, always make a selection in the Installation menu, Installation mode between Antenna or Cable whether you want to watch Antenna TV channels or Cable TV channels.

**Note:** If you make use of a signal splitter do not forget to put the switch in the corresponding position.

English

Available channels:

- Cable: max. from 1 to 125
- Terrestrial: max. from 2 to 69

If a tuned channel is not yet in the master channel map, the TV will attempt to tune the channel and it will be added to the map.

If the channel is not acquired, a message will appear that the channel is not available.

TV menu	
Installation	Channels
Language	Autoprogram
Channels	Installation update
Preferences	Installation mode
Connections	Uninstall channels
Clock	
Reset AV settings	
Software upgrade	
Info	

### Installation update

This allows you to automatically tune to and update all available channels.

#### Notes:


- this will not reinstall uninstalled channels;
- new channels found will not be added to any favorite list;
- already installed channels will not be renumbered.

TV menu	
Installation	Channels
Language	Autoprogram
Channels	Installation update
Preferences	Installation mode
Connections	Uninstall channels
Clock	
Reset AV settings	
Software upgrade	
Info	

### Installation mode

This allows you to select the already stored terrestrial or cable TV channels. Choose for Antenna or Cable whether these signals are present.

## How to search for and store TV channels (continued)

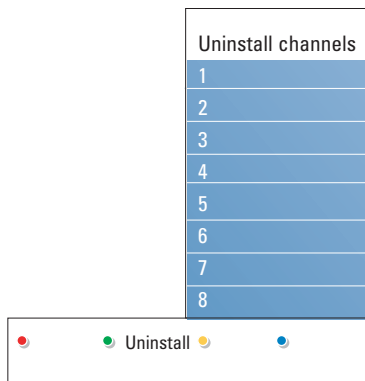


### Uninstall channels

This allows you to uninstall a stored channel so that it is no longer possible to tune to. This also allows you to reinstall an earlier uninstalled channel.

1. Select the channel you want to uninstall.
2. Press the green color button to uninstall the selected channel.
  - ▷ The uninstalled channel is indicated in the list by an icon in front of the uninstalled channel.
3. Press the green color button again to reinstall the uninstalled channel.

## Set your preferences

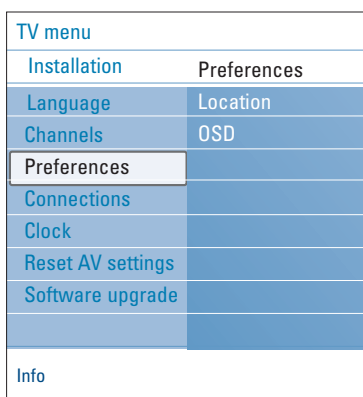

This menu contains items that can set or adjust various special TV functions and that will typically be accessed only occasionally.

### Select your location

This allows you to select the location of your TV.

If you choose for **Shop** it will result in fixed settings of picture, sound and Ambilight.

The location **Home** will give full flexibility to change any predefined settings for picture, sound and Ambilight.

### Select the On Screen Display (OSD)

This allows you to select the display of the volume bar.

1. Select **OSD**.
2. Press the cursor right to select **Minimum** or **Normal**.  
**Normal** to activate the temporarily display of the volume bar.

## Select your connections

TV menu	
Installation	Connections
Language	AV1
Channels	AV2
Preferences	AV3
Connections	HDMI 1
Clock	HDMI 2
Reset AV settings	Side
Software upgrade	Digital Audio IN
Info	

This allows you to identify the type of accessory device you have connected to each particular input and output.

1. Select **Connections**.
2. Press the cursor right to enter the list of types of external inputs.
3. Select the appropriate input with the cursor up/down.
  - ▷ When you select **AV1**, **AV2**, **AV3**, **HDMI 1**, **HDMI 2** or **Side**, a list appears allowing you to identify which type of accessory device is attached to this input.
4. Press the cursor right again to enter the list of types of devices connected to the selected input.
5. Select the accessory device with the cursor up/down.

English

### Digital Audio In

If an accessory device has a digital audio output, you can connect this with a single cable to the TV's **Digital Audio in** jack.

In the Connections menu, assign the Digital Audio in to the corresponding external input to which your accessory device is connected.

In addition to accepting audio input via Digital Audio In, the TV can output encoded Dolby Digital audio via the **DIGITAL AUDIO OUT** connector to an external amplifier or receiver.

If your amplifier or receiver has a matching connector for Digital Audio In, you can connect it with a single cable to the TV's **DIGITAL AUDIO OUT**.

See To make Video and Audio connections, Digital Surround receiver, p. 53.

## Set your clock

TV menu	
Installation	Clock
Language	Time
Channels	Day
Preferences	
Connections	
Clock	
Reset AV settings	
Software upgrade	
Info	

This allows you to set the time and day

**Note:** Adjusting the clock is necessary for the correct working of Lock after (See Adjust feature menu settings, p. 26) features.

### Time - Day

With the cursor buttons, select and enter the correct time and day.

## Reset AV settings

TV menu	
Installation	Reset AV settings
Language	
Channels	Reset
Preferences	
Connections	
Clock	
Reset AV settings	
Software upgrade	
Info	

This allows you to reset most of the picture, sound and Ambilight settings to their predefined factory states.

1. Select **Reset AV settings** with the cursor down.
2. Press the cursor right.
3. Press the **OK** button to erase settings and reset them to their default values.


## How to upgrade the TV software

TV menu	
Installation	Software upgrade
Language	Current softw. info
Channels	Local upgrades
Preferences	
Connections	
Clock	
Reset AV settings	
Software upgrade	
Info	

This menu allows you to upgrade your TV software using a USB device.

The USB device must be filled with the appropriate upgrade image (and structure) which can be found on the [www.philips.com/support](http://www.philips.com/support) website. How to upload a new software version on your portable memory device, see Annex 1, p. 57.

## Create your favorite list

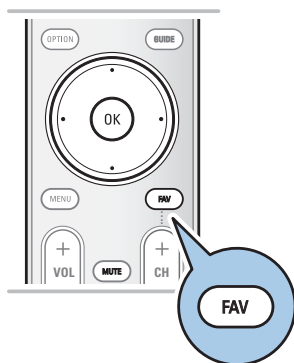

This allows you to select up to four favorite channels lists with your preferred TV channels. For example, each member of your family can create his/her own favorite list.

**Note:** when this button is pressed the first time after you have finished the installation, it will bring up the full channel list. In other situations it will bring up the last selected channel list.

### To select a channel from the displayed favorite list

1. Press the **FAV** button (or the **OK** button).
  - ▷ The last selected channel list appears.
2. Use the cursor up/down to select a channel.
3. Press the **OK** button to display the selected channel.

All channels	
AV1	
AV2	
AV3	
HDMI 1	
HDMI 2	
1	
2	
3	1
<div> <div></div> <div>Select list</div> <div></div> </div>	
Tune to a channel by pressing OK. Use -CH+ for page up/down.	

### To select another favorite channel list

1. Press the **FAV** button (or the **OK** button).
  - ▷ The last selected channel list appears.
2. Press the red color button to bring up the list of possible favorite channel lists.
3. Use the cursor up/down to select a list.
4. Press the **OK** button.
5. Press the **FAV** button again to exit.

All channels	
All	
Favorites 1	
Favorites 2	
Favorites 3	
Favorites 4	
<div> <div></div> <div>Select list</div> <div></div> </div>	
Use cursor up/down to select and OK to confirm.	


### To create a favorite list or to modify the list

1. Press the **FAV** button (or the **OK** button).
  - ▷ The last selected channel list appears.
2. Press the red color button.
  - ▷ A list with all possible favorite channel lists appears.
3. Use the cursor up/down to select a Favorites (1 to 4) channel list.
4. Press the **OK** button.
5. Press the green color button to enter the Edit mode.
  - ▷ The selected Favorite list will bring up a full channel list.
6. Use the cursor up/down to select a channel.
7. Press the **OK** button to check or uncheck the highlighted channel and to add it to or remove it from your selected favorite list.
- 8a. ◦ Press the green color button again to leave the Edit mode.
  - ▷ The modified favorite channel list appears.
  - Press the **FAV** button again to exit.
  - ▷ With the **-P+** button you will be able to browse through the TV channels of the selected list.
- 8b. Press the red color button to remove the channel list.

Favorites 1	
✓ AV1	
✓ AV2	
✓ AV3	
✓ HDMI 1	
✓ HDMI 2	
3	
4	
5	1
<div> <div></div> <div>Exit</div> <div></div> <div></div> <div>Back</div> </div>	
Press the OK button to check / uncheck.	

**Note:** with the digit buttons you can still select channels which are not marked as favorite.

## Multimedia Browser

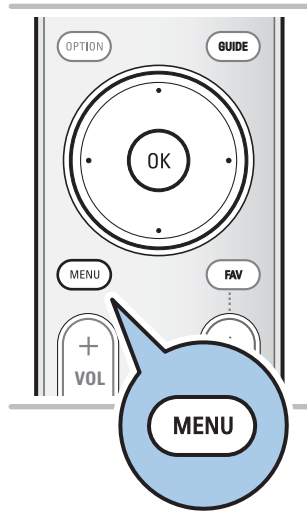

The Multimedia browser lets you display pictures or play audio files stored on a USB device or a memory card. The Multimedia browser application is invoked from the main menu.

1. Press the **MENU** button on the remote control.
2. Select **Multimedia** and press the cursor right.
3. Select the USB device or memory card inserted.
4. Press the cursor right and select a content type.

- Following types of memory cards can be read:  
Compact Flash I & II, Memory Stick, Memory Stick PRO, SD Card, Smart Media, Micro Drive, MultiMedia Card.
- Following file formats can be reproduced:
  - For pictures: JPEG
  - For audio: MP3, MP3 Pro
- Only FAT/DOS-formatted memory devices are supported.
- If your digital camera is not supported, try one of the following solutions:
  - Make sure your camera is switched on and verify if its configuration settings are correct (see the manual of your camera).
  - Remove the memory card from your camera and insert it in the memory card slot. Refer to [www.philips.com/support](http://www.philips.com/support) for more information.
- Philips cannot be responsible if your USB device or memory card is not supported.






## Multimedia Browser (Continued)

### To view content from a Memory card/USB device

**Tip:** if your USB device does not fit into the USB connector at the side, use an USB extend cable to connect the USB device to the USB port. Ask your dealer for more information.

### To insert a Memory card/USB device

**Note:** Memory cards or USB devices are not supplied with this TV.

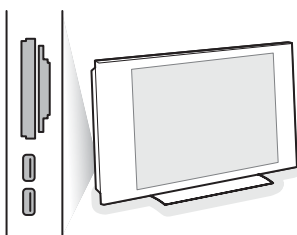

- Insert a memory card in one of the cardslots at the left side of the TV. Insert it to be clicked in.
  - In case of a memory stick or a digital camera, connect it to one of the USB connectors.
- When a memory card or a USB device is inserted, the Multimedia browser menu is displayed automatically. See further.

### To remove the Memory card/USB device

1. First switch off the main menu. To do so, press the **MENU** button to exit the menu.
2. Remove the Memory card/USB device.

	Compact Flash I & II Micro Drive	
	Memory Stick	
	MultiMedia Card / SD Card	
	Smart Media Card	

**Card data protection**

- Do not remove the card/USB device when the content is being read or when browsing. Such action may damage the memory card/USB device.
- Do not touch the terminals on the back of the card.
- Always insert a card in the correct direction. Failure to do so may result in damage to the card and the unit.
- Do not subject the card to excessive pressure or strong impacts.
- Malfunctions of the unit or card may result in data loss or damage to the card.
- Philips shall not accept any liability for damage or loss of stored data.

**Warning:**  
*Memory cards can be swallowed by young children. Do not allow children to handle memory cards. Please, remove the memory card immediately after use.*

## Multimedia Browser (Continued)



### Multimedia Browser menu

1. Insert a USB device or memory card.
2. Select the USB device or memory card under Multimedia with the cursor up/down.
  - ▷ The Multimedia browser allows you to browse content stored on the inserted USB device or memory card.
3. Press the cursor right.
  - ▷ The 2-panel browser will be shown with the left panel containing the content types (Pictures, Music, Video).
  - ▷ The right panel will display the content that is available of the selected content type.
4. Press the cursor up/down to select a content type.
5. Press the cursor right to enter the content.
6. Press the cursor up/down to select a file or a directory.

**Note:** press the green color button to display all the image files in the current directory as thumbnails when browsing pictures. Press the green button again to display the image files in a list.

7. In case a **file**, **directory**, **album** or **playlist** is selected, press the cursor right to enter the content or press the **OK** button to start a slide show or a loop playback of the files present.
  - Press the ► button to pause playing content
8. Press the cursor left to keep music playing and switch back to the Multimedia menu.
9. Press one of the color buttons on the remote control to perform the corresponding function mentioned at the bottom of the screen.

**Tip:** the blue color button can, if necessary, be used to let the color buttons reappear.

10. To stop playing content, press the ■ button on the remote control.

### Notes:

- your TV supports slide shows with background music. See Annex 2, Philips TV-slideshow format with background music, p. 59;
- the playback will continue to play even if temporarily switched to browser screens. The audio will be stopped when another song starts playing, or when the end has been reached;
- more technical remarks can be found in Annex 4, Philips TV-Digital camera and USB issues, p. 62.

### Following icons may appear:


- |          |                          |
|----------|--------------------------|
| folder   | self made playlist/album |
| pictures | video                    |
| music    |                          |

## Multimedia Browser (Continued)

### Function buttons at the bottom of the screen

Details	to display a description of the selected file or directory
Transitions	to select if you like to apply a transition during a slide show
Slide time	to select the duration a picture will be displayed in a slide show
Rotate	to rotate a picture
Repeat one/all	to repeat the playback of a music file
Shuffle	to shuffle music collections in a random way
Zoom	to select one of the zoom magnifications (x1, x2, x4) with the cursor up/down. Additionally you can shift the selected zoom window over the screen with the cursor buttons
Full/small screen	to toggle between a full or a small screen.

**Note:** to rotate a picture or to select one of the zoom magnifications, first stop the slide show with the **OK** button or the blue color button.

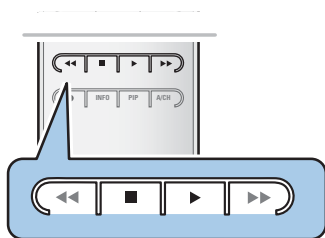

### Multimedia function buttons on the remote control

- ◀◀ to fast rewind displaying content
- to stop playing content
- ▶ - to play a single file, start a slide show, playback of a folder or other collection
- ▢ to pause playing content
- ▶▶ to fast forward displaying content








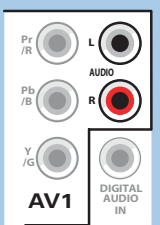

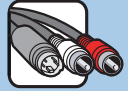






## To make video and audio connections

### Tips:

- use the inputs that are available on your equipment that provide the best video or audio performance, as below;
- if you experience a discolored line on the left or right side of the set, adjust the picture position to the centre of the screen with the cursor buttons.
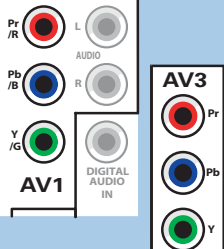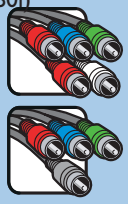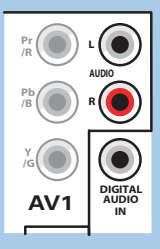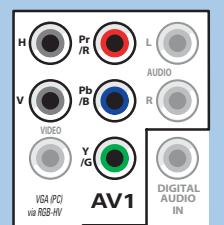
### Note:

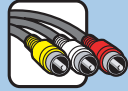- your TV comes with all types of connectors with the exception of the DVI connector but some of your equipment may be equipped with this type. In this case you'll need a DVI to HDMI adapter or a HDMI to DVI cable and separate audio cables, all available at your local dealer.
- be sure to connect the DVI output connector first, then connect to the HDMI input on your TV.

	Connector cable	Audio connection required
 <b>HDMI</b>	HDMI (High-definition Multimedia Interface) 	No
	Component video (480p/720p/480i/1080i) - for analog audio (AV1) - for digital audio (AV1 or AV3) 	
	RGB H/V 	
 <b>S-VIDEO</b>	S-Video 	AUDIO L / R : L AV1 AV2 SIDE R 
 <b>VIDEO</b>	Video 	AUDIO L / R : L AV1 AV2 SIDE R 
 <b>75 Ω</b>	RF/Coaxial 	No

**Warnings:** in case you notice scrolling images, wrong colors or no color; no picture, or even combinations of these on your screen, verify if the connections are done in the correct way and if the resolution and the signal standard of the connected equipment are set in the right way. See the handbook for your equipment.


## To make video and audio connections (Continued)

### Notes:

- Cables are often color-coded to connectors. Connect red to red, white to white....
  - Component video (YPbPr) connection is necessary to view video sources, for example digital broadcastings coming from a settop box, in 1080i, 720p, 576i, 576p, 480i or 480p;
  - The labels for the component video sockets may differ depending on the DVD player or the device connected. Although the abbreviations may vary, the letters B and R stand for the blue and red component signals, respectively, and Y indicates the luminance signal. Refer to the DVD player's or devices instructions for use for definitions and connection details;
  - This television is designed to accept high definition signal standards 480p, 576p, 720p and 1080i as specified by the Electronic Industries Association standard EIA770.3.
- Digital devices from different manufacturers have the possibility of differing output standards which may cause difficulties for the television to properly display.

English

## Side panel overview

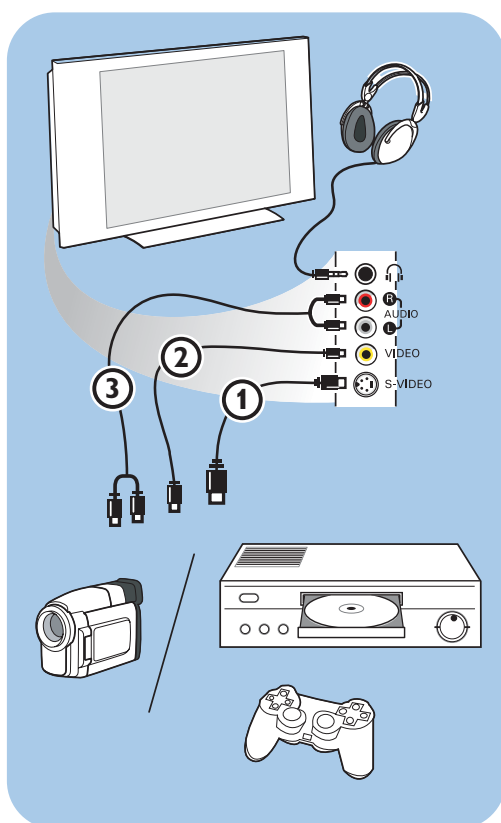

### Camera, Camcorder, Game


1. Connect your camera, camcorder or game as shown.
2. Connect to **VIDEO ②** and **AUDIO L ③** for mono equipment. For stereo equipment also connect **AUDIO R ③**.  
S-VHS quality with an S-VHS camcorder is obtained by connecting the S-VHS cables with the **S-VIDEO** input ① and **AUDIO** inputs ③.

**Warning:** do not connect cable ① and ② at the same time. This may cause picture distortion !


### Headphone

1. Insert the plug into the headphone socket as shown.
2. The headphone impedance must be between 8 and 4000 Ohm. The headphone socket has a 3.5 mm jack.

In the Sound menu select **Headphone** volume to adjust the headphone volume.


**Tip:** Press  on the remote control to switch off the internal loudspeakers of the TV.

## Rear panel overview

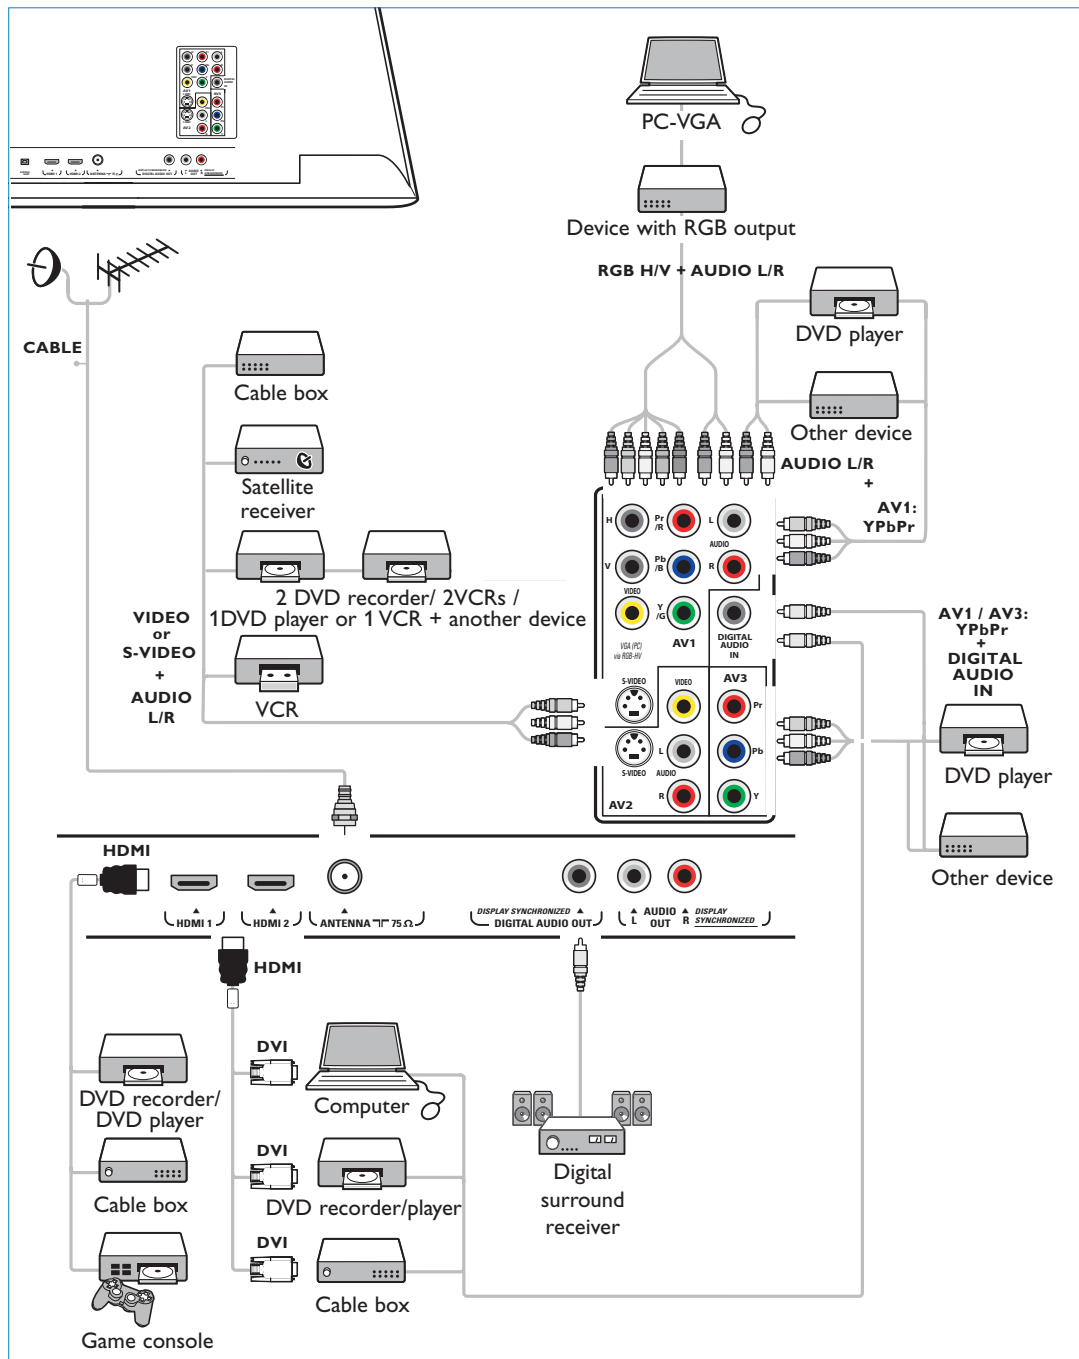

## Connect a VCR or DVD recorder

**Warning:** do not place your recorder too close to the screen as some recorders may be susceptible for signals from the display. Keep a minimum distance of 0,5 m from the screen.

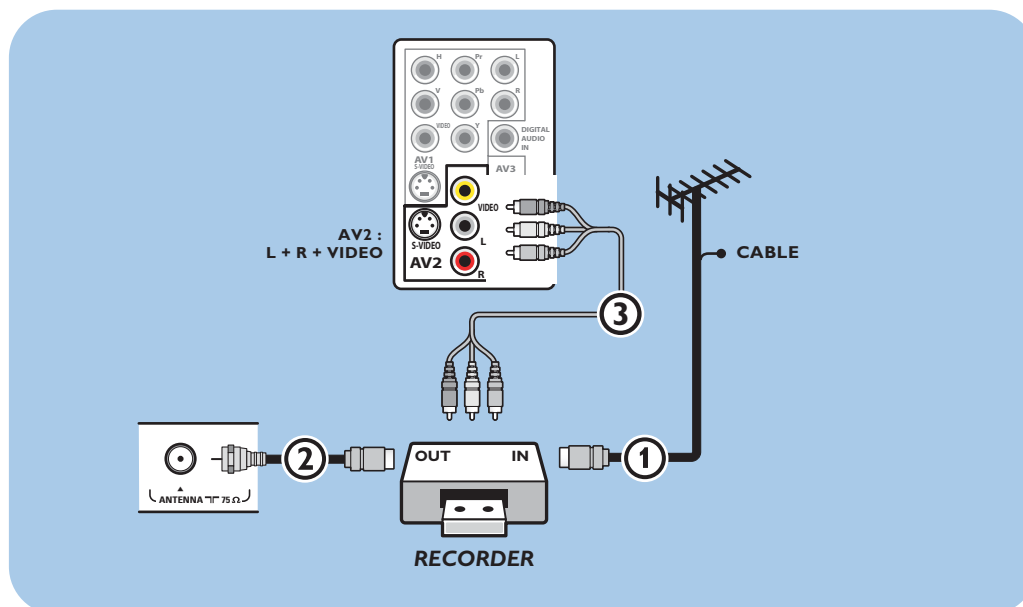


English

1. Connect the RF Antenna or Cable TV cable (eventually via an optional two-way signal splitter and/or Cable TV converter box) ① to the **RF IN** socket of your recorder.
2. Connect another RF cable ② from the output **OUT** of your recorder to the TV's **CABLE/ANTENNA 75 Ω** jack.
3. Better playback quality can be obtained if you also connect the Video, Audio Left and Right (only for stereo devices) AV cables ③ to the **VIDEO, AUDIO L** and **R** input jacks of **AV2**.
4. Select the equipment you have connected in the **Installation** menu, **Connections**, p. 35 and link them to the **AV** connectors you have connected your equipment to.

### Notes:

- cables are often color-coded to connectors. Connect red to red, white to white....
- if your recorder has an S-VHS video jack:  
For improved picture quality, connect an S-video cable with the **S-VIDEO** input and connect the audio cables to the **AUDIO L** and **R** input jacks of **AV2**.  
When using the **S-VIDEO** connector do not connect any device to the **AV2 VIDEO** jack.
- in case of mono equipment, only the left loudspeaker reproduces sound.  
Use a mono to stereo adapter (not supplied) for sound reproduction via all internal loudspeakers.

## Connect a recorder and other A/V devices

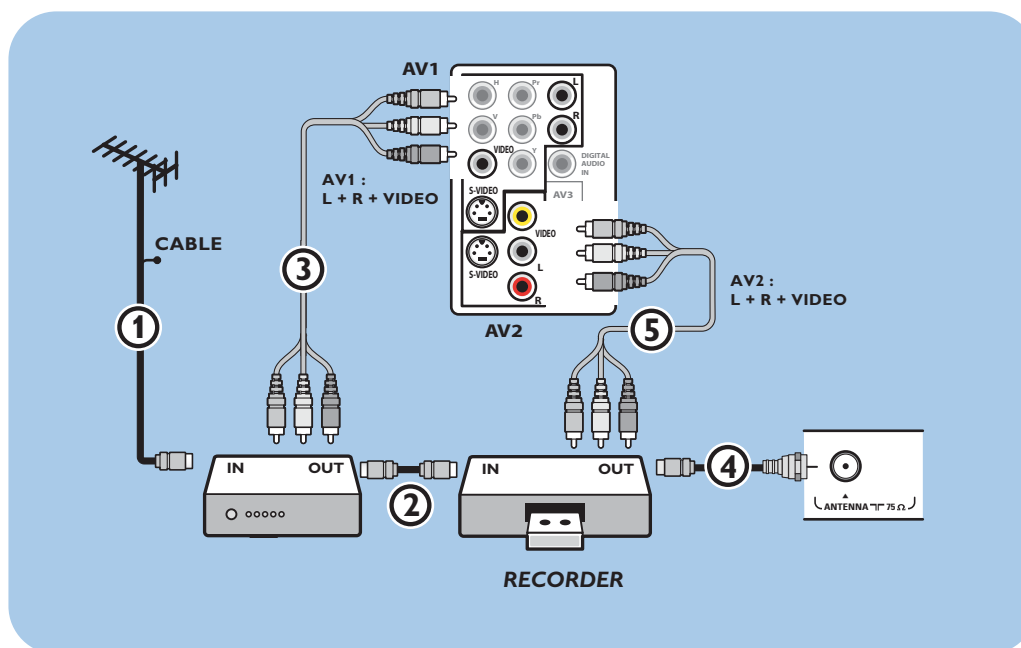


1. Connect the RF antenna cable ① of the **RF IN** socket of your other AV device.
2. Connect the RF output of the AV device to the RF input of the recorder ②.
3. Connect another RF cable ④ from the output **OUT** of your recorder to the TV's input **CABLE/ANTENNA 75 Ω** jack.
4. To obtain better quality, also connect the Video, Audio left and Audio right cables of both devices to **AV1** or **AV2** (**VIDEO, AUDIO L** and **R**.) ③ and ⑤.
5. Select the equipment you have connected in the **Installation** menu, **Connections**, p. 35 and link them to the **AV** connectors you have connected your equipment to.

### Notes:

- cables are often color-coded to connectors. Connect red to red, white to white....
- if your recorder has an S-VHS video jack:  
For improved picture quality, connect an S-video cable with the **S-VIDEO** input of **AV1** or **AV2** and connect the audio cables to the **AUDIO L** and **R** input jacks of **AV1** or **AV2**.  
When using the **S-VIDEO** connector do not connect any device to the **AV1** or **AV2 VIDEO** jack;
- in case of mono equipment, only the left loudspeaker reproduces sound.  
Use a mono to stereo adapter (not supplied) for sound reproduction via all internal loudspeakers.



## Connect a recorder and Cable box with RF output

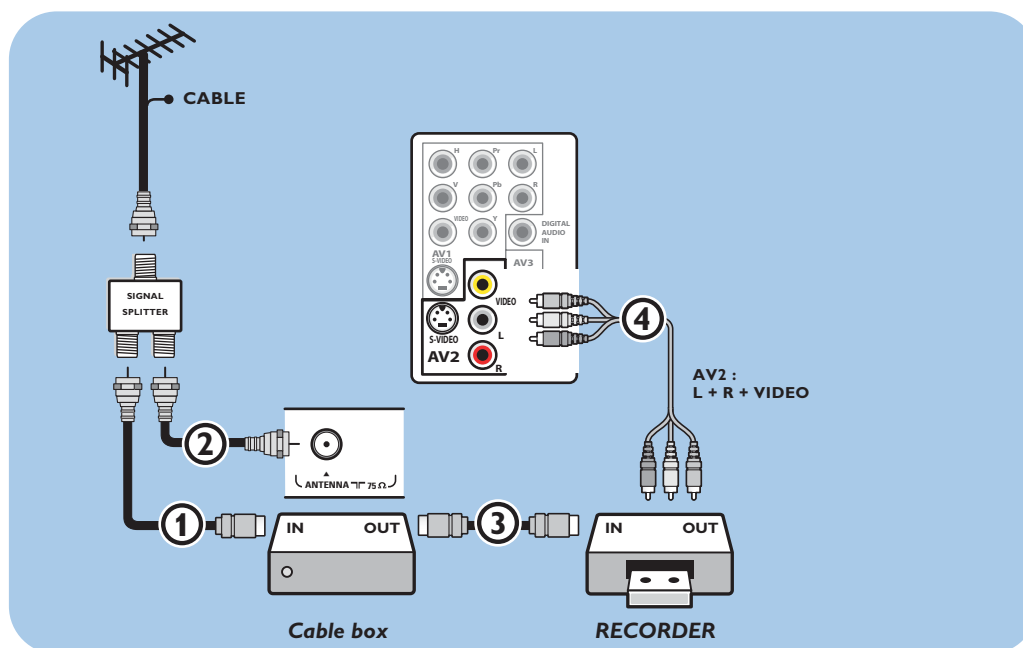


English

1. Use an optional signal splitter.
2. Connect one of the cable TV signal splitter outputs ① to the cable box's **IN** jack.
3. Connect the other cable TV signal splitter output ② to the **CABLE/ANTENNA 75 Ω** plug on the bottom of the TV.
4. Connect the cable box's **OUT** jack ③ to the recorder's **RF IN** socket.
5. Connect the Video, Audio Left and Right (only for stereo sound) recorder AV cables ④ to the **VIDEO**, **AUDIO L** and **R** input **AV2** jacks on the TV.
6. Select the equipment you have connected in the **Installation** menu, **Connections**, p. 35 and link it to the **AV** connector you have connected your equipment to.

### Notes:

- cables are often color-coded to connectors. Connect red to red, white to white....
- if your recorder has an S-VHS video jack:  
For improved picture quality, connect an S-video cable with the **S-VIDEO** input of **AV2** and connect the audio cables to the **AUDIO L** and **R** input jacks of **AV2**.  
When using the **S-VIDEO** connector do not connect any device to the **AV2 VIDEO** jack;
- in case of mono equipment, only the left loudspeaker reproduces sound.  
Use a mono to stereo adapter (not supplied) for sound reproduction via all internal loudspeakers.

## Connect a satellite receiver or Cable box with A/V outputs

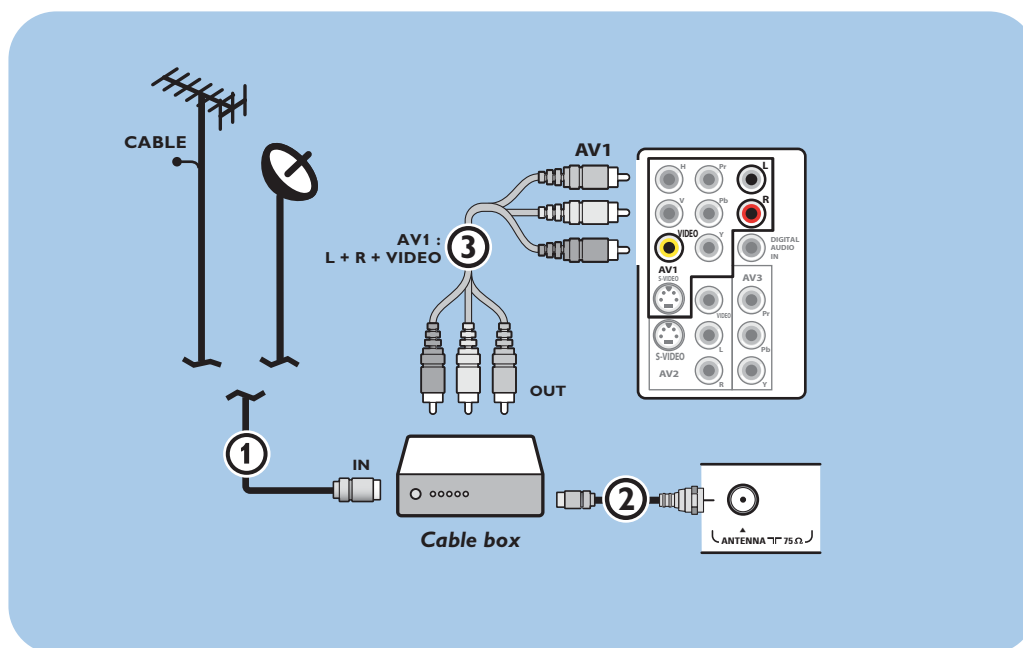


1. Connect the satellite antenna cable or the Cable TV cable ① to the satellite receiver's or cable box's **IN** jack.
2. Connect another RF cable ② from the output **OUT** of the satellite receiver or cable box to the TV's **CABLE/ANTENNA 75 Ω** jack.
3. Connect the Video, Audio left and right AV cables ③ to the **VIDEO**, **L** and **R** audio input jacks of **AV1**.
4. Select the equipment you have connected in the **Installation** menu, **Connections**, p. 35 and link it to the **AV** connector you have connected your equipment to.

### Notes:

- cables are often color-coded to connectors. Connect red to red, white to white....
- if your satellite receiver or cable box has an S-VHS video jack:  
For improved picture quality, connect an S-video cable with the **S-VIDEO** input of **AV1** and connect the audio cables to the **AUDIO L** and **R** input jacks of **AV1**.  
When using the **S-VIDEO** connector do not connect any device to the **AV1 VIDEO** jack;
- in case of mono equipment, only the left loudspeaker reproduces sound.  
Use a mono to stereo adapter (not supplied) for sound reproduction via all internal loudspeakers.

## Connect a recorder and satellite receiver or Cable box with A/V outputs

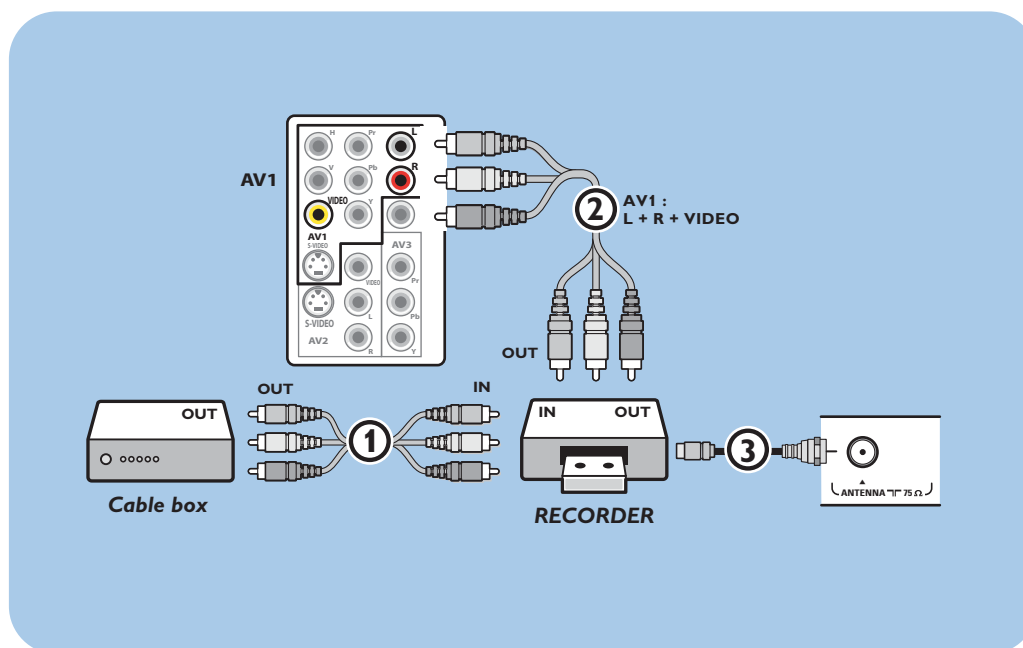

English


1. Connect the satellite antenna cable or the Cable TV cable to the satellite receiver's or cable box's **IN** jack.
2. Connect the AV cables ① to the satellite receiver's or cable box's **AV OUT** jacks and to the recorder's **AV IN** jacks.
3. Connect the Video, Audio Left and Right (only for stereo sound) recorder AV cables ② to the **VIDEO, AUDIO L** and **R** input **AV1** jacks on the TV.
4. Connect another RF cable ③ from the output out of your recorder to the TV's input **CABLE/ANTENNA 75 Ω** jack.
5. Select the equipment you have connected in the **Installation** menu, **Connections**, p. 35 and link it to the **AV** connector you have connected your equipment to.

### Notes:

- cables are often color-coded to connectors. Connect red to red, white to white....
- if your recorder has an S-VHS video jack:  
For improved picture quality, connect an S-video cable with the **S-VIDEO** input of **AV1** and connect the audio cables to the **AUDIO L** and **R** input jacks of **AV1**.  
When using the **S-VIDEO** connector do not connect any device to the **AV1 VIDEO** jack;
- in case of mono equipment, only the left loudspeaker reproduces sound.  
Use a mono to stereo adapter (not supplied) for sound reproduction via all internal loudspeakers.


## Connect a DVD Player or other accessory digital source devices

**Note:** This TV is capable of displaying 1080i, 720p and 480p DTV signals when connected to a DTV tuner cable box. Select the output of the cable box to either 1080i, 720p or 480p. A DTV signal must be available in your area.

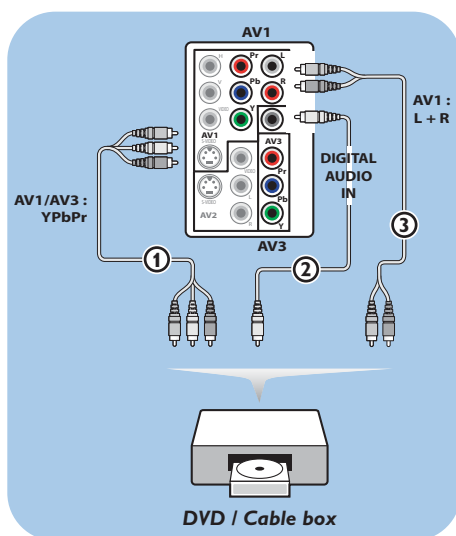

### Devices with Component Video Output Connectors (YPbPr)


1. Connect the three separate component video cables ① to the device having component video outputs (YPbPr), such as cable boxes, DVD-players, laser-disc players, videogame players, satellite receivers or other equipment, and to the **Y, Pb and Pr** jacks of **AV1** or **AV3** on the TV.
2. In case of devices with analog audio signals, connect to the **Y, Pb and Pr** jacks of **AV1**. In case of devices with digital audio signals, connect to the **Y, Pb and Pr** jacks of **AV1** or **AV3**.
3. In case of a device with digital audio, connect the audio cable ② to the **DIGITAL AUDIO OUT** of the device and to the **DIG.AUDIO IN** of the TV. In case of a device with analog audio, connect the audio cable to the device's **AUDIO L** and **R** ③ and to the **L** and **R** audio jacks of **AV1**.
4. Select the equipment you have connected in the **Installation** menu, **Connections**, p. 35 and link it to the **AV** connector you have connected to.

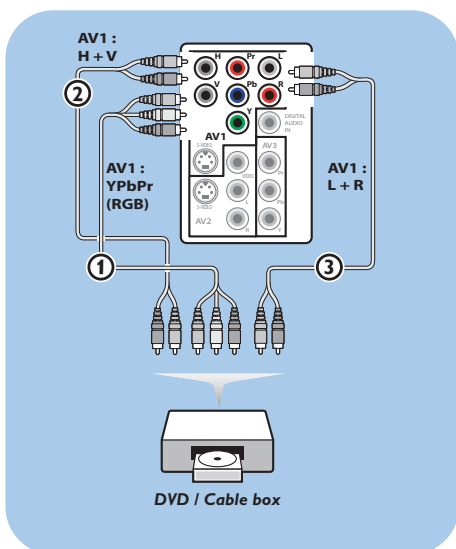

### Devices with RGB Output

1. Connect the device with RGB output with separate Horizontal and Vertical sync to the **Pr/R, Pb/B** and **Y/G** input ① jacks and to the **H** and **V** jacks of **AV1** ②.
2. Connect the audio cables to the **L** and **R AUDIO** jacks of **AV1** ③.
3. Select the equipment you have connected in the **Installation** menu, **Connections**, p.35 and link it to **AV1**.

## Connect a DVD Player or other accessory digital source devices

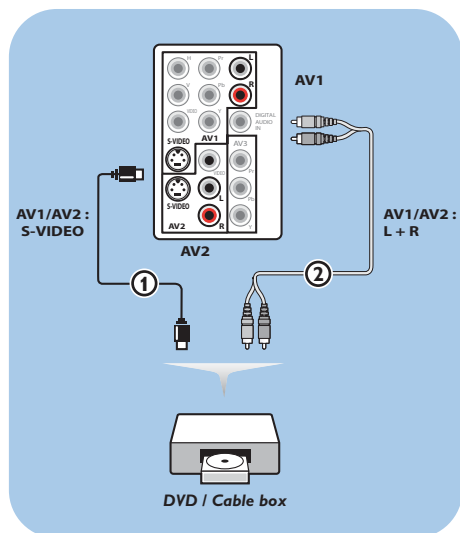

### Devices with an S-Video connector

1. Connect an S-Video cable to the **AV1** or **AV2 S-VIDEO** input ①.

**Tip:** When using the **S-VIDEO** connector do not connect any device to the **AV VIDEO** input that you are using.


2. Connect the audio cables to the device's **AUDIO L** and **R** jacks and to the **L** and **R** audio **AV1** or **AV2** jacks ② on the TV accordingly to where you connected the S-Video cable.
3. Select the equipment you have connected in the **Installation** menu, **Connections**, p. 35 and link it to the **AV** connector you have connected to.

English

## Connect a device to the HDMI (High Definition Multimedia interface) connector

### Notes:


- HDMI is the leading new standard for Digital video and audio interconnection. To the **HDMI** connector you can connect HDMI devices such as a Cable box or compatible DVD-R or DVD player with HDMI, or DVI-equipped devices like a computer.
- If the accessory device has DVI output only, use a DVI to HDMI adapter cable (not supplied) to connect to the **HDMI** connector. (Then also connect the audio cables to AV1 AUDIO L and R.)
- If necessary, you can adjust the picture position to the center of the screen with the cursor buttons.

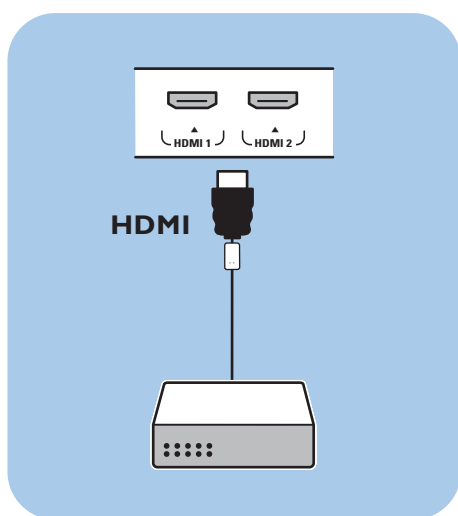

### Devices with a HDMI connector:

1. Connect your HDMI device with the **HDMI** connector.
2. Select the equipment you have connected in the **Installation** menu, **Connections**, p.35 and link it to **HDMI 1** or **2**.

**Note:** in case of any problems, see Annex 4: Issues referring to connected equipment with a HDMI connector, p. 62.

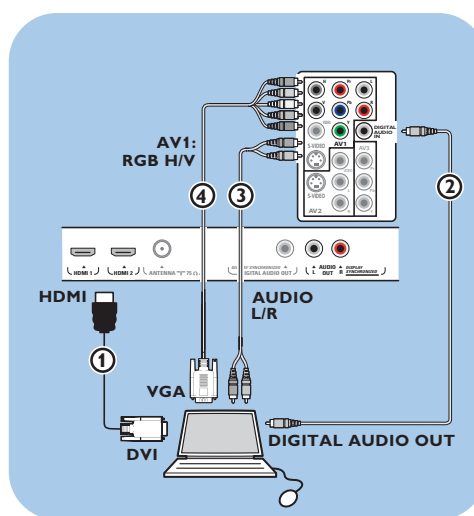


### PC equipped with a DVI connector:

1. Use a DVI to HDMI cable to connect to one of the **HDMI** connectors of your TV ①.
2. Connect the audio cable ② to the PC's Digital Audio out jack and to the **DIGITAL AUDIO IN** jack on the TV.
3. In the **Installation** menu, **Connections**, p. 35, select the **HDMI 1** or **2** input, and link it to the computer (PC).
4. In the same menu, link the **Digital Audio In** to the corresponding **HDMI** input.

### PC equipped with a VGA connector:

1. Use a VGA to RGB H/V cable ④ to connect to the **RGB H/V** connectors of your TV.
2. Connect the audio cable ③ to the **AUDIO R** (right) and **L** (left) inputs of **AV1**.
3. Select the equipment you have connected in the **Installation** menu, **Connections**, p. 35 and link it to **AV1**.

## Connect a Digital Surround receiver

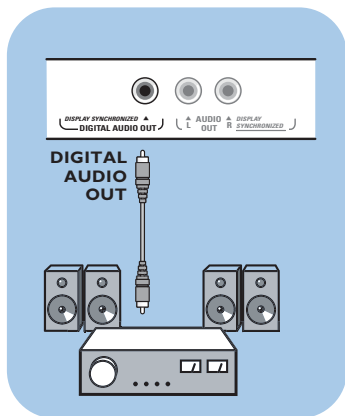

- Connect a MultiChannel Surround receiver to the **DIGITAL AUDIO OUT** connector at the bottom of the TV.

**Note:** Due to legal requirements, it is possible that with certain copy protected PCM audio qualities from a peripheral equipment connected to the **HDMI** input, the Digital audio output signal is muted.

English

## Record with your recorder


### Record a TV program

You can record a TV program using your recorder's tuner without affecting your TV.

- Select the channel number on your recorder.
- Set your recorder to record.  
See the handbook for your recorder.

**Note:** When recording analog programs, switching channel numbers on your TV does not disturb recording !

## Select connected equipment

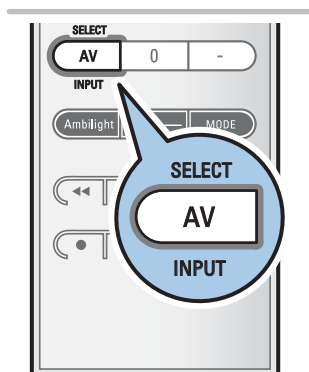

Before operating your connected equipment you have to make a selection in the **Installation, Connections** menu, p. 35.

- Press the **AV** button.
- Press the cursor up/down to select **AV1, AV2, AV3, HDMI 1, HDMI 2, Side** or **TV**, according to where you connected your devices.
- Press **OK**.

## Audio- and video equipment buttons



Most of the audio and video equipment from our range of products can be operated with the remote control of your TV. Press one of the buttons after you pressed one of the mode buttons (**DVD**, **STB**, **VCR**, **AUX**) according to the equipment you want to operate with this remote control. See Use of the Remote control, p. 6-8.

### POWER



### INFO

### MENU

### - CH +

### 0 to 9

cursor up/down

cursor left/right

### A/CH

to switch to standby

for record,

for rewind (**VCR**, **CD**);

search down (**DVD**)

for stop,

for play, for pause

for fast forward (**VCR**, **CD**);

search up (**DVD**)

to display information

to switch the menu on or off

for chapter, channel, track selection

digit entry,

to select the next or the previous

disc (**CD**)

to select the previous or following

track (**CD**)

to select a DVD title/chapter;

index (**AUX**)

**Normal mode:** if no action is being undertaken within 30 seconds, the remote control returns to TV mode.

**Expert mode:** in Expert mode the remote will stay in the selected mode even when the 30 seconds time-out is elapsed.

### To select between Normal and Expert mode

1. Select TV mode with the **TV** button.
2. Press the **OK** button simultaneously with the **MUTE** button for four seconds.
  - ▷ When the **POWER** button is On for one second, the Expert mode is selected and the remote control will remain in the mode selected.
3. Select the desired mode (**DVD**, **STB**, **VCR**, **AUX**)
4. To go back to the TV mode, select **TV** and repeat steps 1. to 3.



## Before Calling Service

Symptoms	Items to Check and Actions to follow
<b>“Ghost” or double images</b>	<ul style="list-style-type: none"> <li>This may be caused by obstruction to the antenna due to high rise buildings or hills.</li> <li>Using a highly directional antenna may improve the picture.</li> </ul>
<b>No power</b>	<ul style="list-style-type: none"> <li>Verify if the TV's AC power cord is plugged into the mains socket.</li> <li>Unplug the television, wait for 60 seconds.</li> <li>Then re-insert plug into the mains socket and turn on the television again.</li> </ul>
<b>No picture</b>	<ul style="list-style-type: none"> <li>Verify antenna connections at the bottom of the TV to see if they are properly connected to the TV.</li> <li>Possible broadcast station trouble. Try another channel.</li> <li>Adjust the contrast and brightness settings. Try another auto picture setting.</li> <li>Verify the Closed Captions control. Some TEXT modes could block the screen.</li> <li>Verify if you selected the correct AV source.</li> </ul>
<b>No picture and power switched on</b>	<ul style="list-style-type: none"> <li>Your TV has a protective mode in case there is too much heat build-up. Verify the clearance around the vents of the device to be certain there are no blocking walls or cabinets which would limit the air flow.</li> </ul>
<b>Picture position adjustment</b>	<p>When displaying a High Definition signal from the YPbPr inputs or HDMI input, if necessary, you can adjust the picture position to the center of the screen with the cursor left/right or up/down buttons on the remote control. This may be needed due to slight differences in output signals from different brands and types of HD sources boxes.</p> <p><i>Note: Most High Definition receiver boxes also have picture-positioning controls in their menu systems. If the TV cursor controls run out of range before the picture is correctly positioned, the receiver box controls will need to be adjusted.</i></p>
<b>No photo, music or video play or in poor quality only</b>	<ul style="list-style-type: none"> <li>Verify if the source complies with a supported PIN.</li> </ul>
<b>No sound</b>	<ul style="list-style-type: none"> <li>Increase the VOLUME.</li> <li>Verify if the TV is not muted, press the mute button on the remote control.</li> <li>When no signal is detected, the TV automatically switches off the sound. This is proper operation and does not indicate a malfunction.</li> </ul>
<b>Good sound but poor color or no picture</b>	<ul style="list-style-type: none"> <li>Adjust the contrast, color, tint and brightness setting.</li> <li>Select Reset AV settings in the Installation menu.</li> </ul>
<b>Snowish picture and noise</b>	<ul style="list-style-type: none"> <li>Verify the antenna connection.</li> </ul>
<b>Television not responding to remote control</b>	<ul style="list-style-type: none"> <li>Verify whether the batteries are working. Replace if necessary.</li> <li>Clean the remote control sensor lens on the monitor.</li> <li>Operating range between TV and the remote control should not be &gt; 240".</li> <li>You can still use the buttons at the right side of your TV.</li> <li>Verify if the remote control is in the correct mode.</li> </ul>

**Before Calling Service (continued)**

Symptoms	Items to Check and Actions to follow
<b>Control of accessory devices</b>	<ul style="list-style-type: none"><li>• The infrared signals of the screen may influence the reception sensibility of other peripherals Solution: replace the batteries of the remote control of other devices. E.g. keep away a wireless headphone from within a radius of 50".</li></ul>
<b>The software will not install</b>	Possibly the operating system is wrong. Go to <a href="http://www.philips.com/support">www.philips.com/support</a> to see which operating systems are supported.
<b>No stable or not synchronized VGA picture</b>	Check if you have selected the correct VGA mode in your PC. See Annex 4, Issues referring to connected equipment with a HDMI connector, p. 62.
<b>Standby</b>	Your TV consumes energy in standby mode. Energy consumption contributes to air and water pollution.
<b>After improper shutdown</b>	If your TV has been shutdown in an improper way (e.g. power drop, power cord plug out), starting up the TV again will take a longer time than usual.

**If your problem is not solved**

Turn your TV off and then on again once.

**Never attempt to repair a defective TV yourself.**

Check with your dealer or call a TV technician.

**Telephone number Philips Customer Care Center: 0800-701-02-45**

Please, have the Model and Product number which you can find at the back of your television set ready, before calling.

## Annex 1 - Philips TV software upgrade with portable memory

### Introduction

Philips offers software upgrade capability for your TV using portable memory. After you have completed a software upgrade, your TV will typically perform better.

What improvements are made depends on the upgrade software you are using as well as the software your TV contained before the upgrade.

You can execute the software upgrade procedure yourself. Be aware that the content of this document is addressing technical or software skilled users.

English

### To prepare a USB device for software upgrade

For the procedure you will require:

- a personal computer with web browsing capability;
- an archive utility that supports the ZIP-format (e.g. WinZip for Windows or Stuffit for Mac OS);
- a preferably empty USB memory stick.

New software can be obtained from your dealer or can be downloaded from the [www.philips.com/support](http://www.philips.com/support) website:

1. Go to [www.philips.com/support](http://www.philips.com/support) using the web browser on your PC.
2. Follow the procedure to find the information and the software related to your TV.
3. Select the latest software upgrade file and download it to your PC.
4. Decompress the ZIP-file and copy the file "autorun.upg" to the root directory of the USB portable memory.

**Note:** only use software upgrades that can be found on the [www.philips.com/support](http://www.philips.com/support) web site.

TV menu	
Installation	Software upgrade
Language	Current softw. info
Channels	Local upgrades
Preferences	
Connections	
Clock	
Reset AV settings	
Software upgrade	
Info	

### To verify the version of the TV software

Before you start the software upgrade procedure, it is advised to check what the current TV software is.


1. Select **Software Upgrade** in the Installation menu.
2. Press the cursor right.
  - ▷ The Software Upgrade menu moves to the left panel.
3. Select **Current Software Info** to observe the version and the description of the software currently installed on your TV.

**Note:** It is possible to upload a software version equal or lower than the current version. In this case only a manual software upgrade procedure is possible. See p. 58.

## Annex 1 (Continued)

### Automatic software upgrade procedure

1. Turn off your TV and remove all memory devices.
2. Insert the portable memory that contains the downloaded software upgrade.
3. Switch on your TV with the **POWER** button on your remote control.
4. At startup the TV will scan the portable memory until it finds the update content. The TV will automatically go to the upgrade mode. After a few seconds it will display the status of the upgrade procedure.

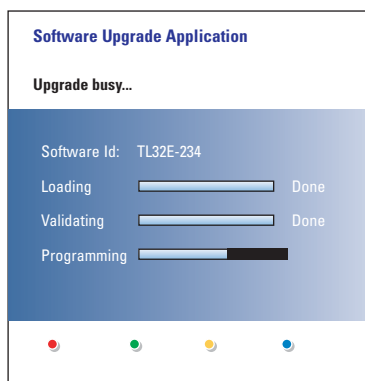

#### Warning:

- you are not allowed to remove the portable memory during the software upgrade procedure;
- in case of a power drop during the upgrade procedure, don't remove the portable memory from the TV. The TV will continue the upgrade as soon as the power comes back;
- if an error occurs during the upgrade you should retry the procedure or contact your dealer.

5. When the software upgrade was successful, remove the portable memory and restart your TV with the **POWER** button on your remote control. Your TV will start up with the new software.

**Note:** once the upgrade is finished use your PC to remove the TV software from your portable memory.

### Manual software upgrade procedure

For a manual software upgrade copy the "autorun.upg" file in a directory called "Upgrades" located in the root of the portable memory.

1. Insert the portable memory that contains the downloaded software upgrade.
2. Select **Software Upgrade** in the Installation menu. Go to **Local upgrades**. The TV will list all compatible software available on the portable memory and display the data for each selected upgrade version.
3. Select the correct upgrade version and press the red color button to start the upgrade. Your TV will restart and will automatically go to the upgrade mode. After a few seconds it will display the status of the upgrade procedure.

**Warning:** if you try to upgrade to a software version equal or lower than the current version, a confirmation will be asked. Downgrading to older software should only be done in case of real necessity.

TV menu	
Installation	Software upgrade
Language	Current softw. info
Channels	Local upgrades
Preferences	
Connections	
Clock	
Reset AV settings	
Software upgrade	
Info	

4. When the software upgrade was successful, remove the portable memory and restart your TV with the **POWER** button on your remote control. Your TV will start up with the new software.

## Annex 2 - Philips TV-Slideshow Format with background music

### Notes:

- the latest version of this document can be found on the Philips support website ([www.philips.com/support](http://www.philips.com/support)).
- Use the type number of your TV to find this documentation and other related files.
- Philips can't be held responsible for any problems that may occur as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

English

### Introduction

This document explains how to make a Philips slideshow file with background audio. Be aware that the content of this document is addressing technical or software skilled users. To start the slideshow open the slideshow file in the Multimedia browser of your TV.

1. Press the **OPTION** button on the remote control after having inserted a USB device and switched on the TV.
2. Select **Multimedia** and press the cursor right.
3. Go to where you stored the slideshow file (.alb) on your portable memory.
4. Select the slideshow file and press the **OK** button to start the slide show.
5. To stop a slide show, press the **■** button.

### General Rules

- The slideshow will use plain ASCII XML syntax to allow the creation and editing of the slideshow files using simple tools.
- All references to network content must be based on the global address of the content.
- Content on a Portable Memory (PM) doesn't have a global address; as a result content from a PM can never be referenced from a slideshow not stored on the PM itself.
- To maintain portability, a slideshow stored on a PM should **ONLY** reference content on the same PM. Referencing global addresses can result in inconsistencies if the PM is used on a non-networked CE device. The latter is however not forbidden, it is only a recommendation.
- It is preferable that URL's referencing PM content are based on a relative path starting from the directory where the slideshow is stored. This path includes the device or drive name of the PM. An absolute path to content will also be supported.
  - relative path: pictures\test1.jpg, tamper.jpg, ..\new\bird.jpg, ...
  - absolute path: USB1:\pictures1\foo\_bar.jpg, C:\f1.jpg, \organization.jpg, ...

### General Format

The format and syntax below will be used to create the slideshow file (simple ascii text) with the extension .alb (.ALB). Examples: slshow1.alb, summer\_holiday\_2004.ALB, test.alb, ...  
The following syntax should be used to create the text file:

```
<?xml version="1.0" encoding="ISO-885h9-1" ?>
<philips-slideshow version="1.0" >
  <title>Title of the slideshow</title>
  <audio>audio_url</audio>
  <slide-duration>30</slide-duration>
  <slides>
    <slide>slide_1_url</slide>
    <slide>slide_2_url</slide>
    <slide>slide_3_url</slide>
    <slide>slide_4_url</slide>
    <slide>slide_5_url</slide>
    <slide>slide_6_url</slide>
    ...
    <slide>slide_N-1_url</slide>
    <slide>slide_N_url</slide>
  </slides>
</philips-slideshow>
```

## Annex 2 (Continued)

### Supported XML-tags

The following table gives a description of the XML syntax.

Tag Name	Use	Description
philips-slideshow	mandatory	Philips slideshow signature including the version.
title	optional	The title of the playlist.
audio	optional	The audio-URL following this tag will define the music playing in the background during the slideshow. A single song or playlist (.m3u & .pls) are the only valid audio references. Other reference will not result in any audio playback. If a single song is referenced the song will be repeated forever. If a playlist is referenced the playlist will be played in sequence with a repeat at the end of the playlist.
slide-duration	optional	The default display time (in 0,1 second) of a slide. The TV application isn't obliged to support this tag. The TV application can force the use of one or multiple predefined display times.
slides	mandatory	Identifies the slides to show.
slide	optional	Identifies the URL of the individual slide.

## Annex 3 - Philips TV - Digital camera and USB issues

### Notes:

- the latest version of this document can be found on the Philips support website ([www.philips.com/support](http://www.philips.com/support));
- the software of your TV is upgradeable. If you have problems first check if you have the latest software installed on your TV. The latest software, together with instructions, can be found on the Philips support website. Use the type number of your TV to find this documentation and other related files.
- Philips can't be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

English

### Digital Camera Issues

If a USB connection between your digital camera and the TV isn't working, you can try the solutions below to resolve your problem.

- Make sure your digital camera is switched on and verify if the configuration of your digital camera is correct (see the manual of your digital camera for more information).
- Some digital cameras allow you to switch off the USB interface. Make sure that the USB interface is switched on before connecting to the TV.
- If you have a digital camera with only internal memory (no removable memory) you can try to copy the content manually to a USB memory device using a personal computer.
- Some digital cameras allow you to switch between PTP (Picture Transfer Protocol) or "PC Link" and USB Mass Storage. Make sure that you select USB Mass Storage or "PC Drive" on your digital camera.
- If your camera supports different interface settings be sure to try them one by one or contact the reseller of your camera to find out the correct setting.

### USB Memory Device Issues

- Devices connected to the USB port of your TV must be "Mass Storage Class" compliant. If your device (digital camera, MP3 player, portable harddisk, ...) is not "Mass Storage Class" compliant it will not be detected by the content browser of the TV.
- The following subsets of the Mass Storage Class specification are supported:  
The implementation of the TV is based on the "Universal Serial Bus Mass Storage Class Specification Overview" (v1.2, June 23, 2003) including all documents referenced by the document. The document can be found on the USB standardization website ([www.usb.org](http://www.usb.org)).  
Full support of the USB Mass Storage Class Bulk-Only Transport (bInterfaceProtocol = 50h).  
Full support of SubClass Code = 05h; SFF-8070i spec.  
Full support of SubClass Code = 06h; SCSI transparent command set.
- For large USB memory devices, when you are in the Content Browser, it may take a long time before you can access your files.
- When using a USB portable harddisk: Due to the high power consumption of the harddisk, it is advised to use the external power supply of the portable harddisk to guarantee proper working under all conditions.

## Annex 4 - Issues referring to connected equipment with a HDMI connector

The **HDMI IN** connector allows the following TV and monitor display modes:

<b>HD</b>	Standard Definition TV (SDTV)	640x480i
		720x480i
		720x576i
	Enhanced Definition TV (EDTV)	640x480p
		720x480p
		720x576p
	High Definition TV (HDTV)	1920x1080i
		1280x720p
<b>PC</b>	VGA	640x480
	SVGA	800x600
	XGA	1024x768

- If necessary, you can adjust the picture position to the centre of the screen with the cursor buttons.
- Due to legal requirements, it is possible that with certain copy protected PCM audio qualities from a peripheral equipment connected to the **HDMI** input, the Digital audio output signal is muted.
- Your TV supports HDCP (High-bandwidth Digital Content Protection). This is a system for protecting DVD content outputted via HDMI from being copied. It provides a secure digital link between a video source (DVD, PC, etc.) and your TV. Content is encrypted at the source peripheral equipment to prevent unauthorised copies from being made.
- Proper working is only guaranteed with HDMI compliant consumer products. Limit the cable length to maximum 5 m.
- Digital peripheral equipments from different manufacturers have the possibility of differing output standards which may cause difficulties for the television to properly display.
- In case no signal is detected from your HDMI equipment, turn off the HDMI equipment and then on again.

To get an optimal viewing, it is advised to switch your DVD player, Blu-Ray or HD cable box to the highest possible supported display modes.




## Index

active control.....	19	headphone.....	43
adjust picture menu settings ..	17	headphone volume .....	21
adjust sound menu settings ..	20	installation menu .....	31
adjust features menu settings ..	22	installation update.....	33
alternate audio .....	21	kensington security lock.....	64
ambilight .....	22	language.....	31
antenna .....	4	lock after.....	27
audio/video equipment		menu button .....	13
buttons .....	54	movie ratings lock .....	29
audio/video connections .....	42	multimedia browser .....	38
autoprogram .....	32	mute button .....	7
auto surround.....	21	navigate through the	
auto volume leveling.....	20	menus .....	13-14
balance.....	20	ok button .....	6
batteries.....	5,64	on timer .....	31
before calling service .....	55	pc.....	52
brightness .....	17	picture format.....	19
cable .....	4	pin code .....	30
camera.....	43	pixel plus.....	18
camcorder .....	43	rear panel overview .....	44
captions service.....	26	record a TV program .....	53
care of the screen.....	2	recorder .....	45-47,49
change pin.....	30	recycling.....	64
channel lock .....	27	remote control .....	6-8
channel tuning.....	33	reset av settings .....	36
child lock .....	27	safety warnings .....	2
clock .....	35	satellite receiver .....	49,50
closed captions .....	26	select your connections .....	35
code setup.....	30	select connected devices .....	53
color .....	17	set pin.....	30
color enhancement.....	19	side connectors.....	42
color buttons .....	6	sharpness .....	17
color temperature .....	17	sleeptimer .....	26
comp. video connectors .....	44-52	slideshow format.....	59
connections .....	35	software upgrade .....	57
contrast.....	17	sound mode .....	21
cursor buttons.....	6	standby button.....	6
custom color temperature .....	18	store channels.....	32
delta volume.....	21	tint.....	17
demo.....	31	turn the tv on .....	10
DNR .....	18	tv menu settings.....	15
DVD player.....	50	tv ratings lock.....	27
DVD recorder .....	45	usb device.....	39
dynamic contrast.....	18	video equipment .....	45
equalizer.....	20	volume.....	20
favorite button .....	6	vcr .....	45
favorite channel list .....	37		
first time installation .....	10		
game.....	43		
getting started.....	3-4		
HDMI connector .....	52,62		

## Recycling

### Recycling

 The packaging of this product is intended to be recycled. Apply to the local authorities for correct disposal.

### Disposal of your old product

Your product is designed and manufactured with highly quality material and components, which can be recycled and reused.

Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste.

The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

### Disposal of batteries

The batteries supplied do not contain the heavy metals mercury and cadmium. Please check on how to dispose of exhausted batteries according to local regulations.



### Kensington Security Slot (if present)

Your TV is equipped with a Kensington Security Slot, to prevent it from getting stolen.

An anti-theft Kensington lock has to be purchased separately.

The Kensington lock is a plastic-coated steel cable with a lock. One end has to be fixed to the opening of the TV and locked with a special button. The other end is attached to a fixed point.

*® Kensington and MicroSaver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world. All other registered and unregistered trademarks are the property of their respective owners.*

## Product information

- Your TV consumes energy in standby mode. Energy consumption contributes to air and water pollution. Very low standby power consumption.
- Specifications: see the product leaflet on [www.philips.com/support](http://www.philips.com/support).
- If you need further assistance, please call the customer support service in your country. The corresponding telephone numbers and addresses are given in the supplied Worldwide guarantee booklet.

### Plasma display characteristics

This Plasma display is designed to be used at altitudes up to 6562 ft above sea level (and/or local air pressure equal or above 800 hPa). Operating this set at higher altitude (lower air pressure) is possible. However, at high altitudes (or local air pressure equal or below 800 hPa) the picture on this display may become unstable and picture performance can deteriorate. In addition, the plasma display may produce a humming sound in these conditions.

These possible adverse effects relate to the altitude and are common of all plasma displays. Once the set is brought below approx 6562 ft (and/or local air pressure equal or above 800 hPa) its function will most likely return to normal.

**Note:** Transportation at high altitudes has no negative effect on the set or picture performance.

### Warning concerning stationary images on the TV screen

A characteristic of LCD and Plasma Display Panels is that displaying the same image for a long time can cause a permanent after-image to remain on the screen. This is called phosphor burn in. Normal use of the TV should involve the showing of pictures that contain constantly moving and changing images that fill the screen.

Examples of stationary images (this is not an all-inclusive list, you may encounter others in your viewing):

- **TV menus;**
- **Black bars:** when black bars appear at the left and right side of the screen, it is recommended to change to a picture format so that the picture fills the entire screen;
- **TV channel logo:** present a problem if they are bright and stationary. Moving or low-contrast graphics are less likely to cause uneven aging of the screen;
- **Stock market stickers:** presented at the bottom of the TV screen;
- **Shopping channel logos and pricing displays:** bright and shown constantly or repeatedly in the same location on the TV screen.

Examples of still pictures also include logos, computer images, time display, teletext and images displayed in 4:3 mode, static images or characters, etc.

**Carefully pay attention to these remarks. The warranty does not apply to damage caused by not taking into account the above mentioned warnings on stationary images.**

#### Notes:

- **reduce contrast and brightness when viewing**
- **once burn-in occurs it will never disappear completely.**

