Quick start guide





English Before using your product, read all accompanying safety information.
(The relevant parameters of instructions are variable, without prior notice, if there is any discrepancy, please in accordance with actual object,)



English

What's in the box

(32")

 
















(1 pc)







 

 





(5 pcs)





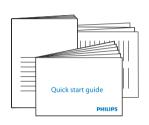



 





(8 pcs)



English Mount the stand


(32/42")

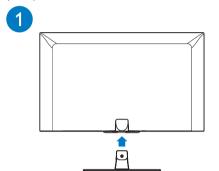


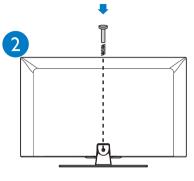






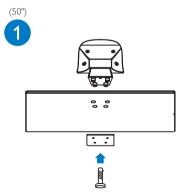


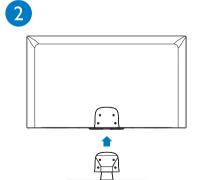


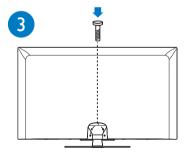




English Connect

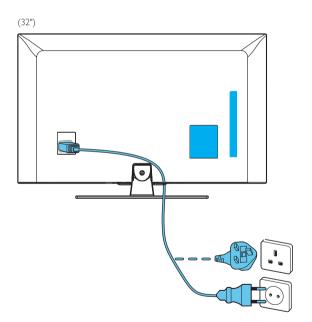


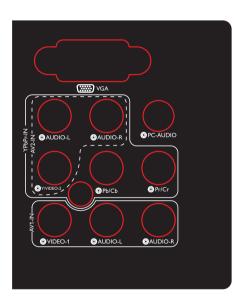






⊙≥

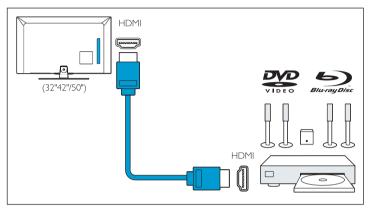


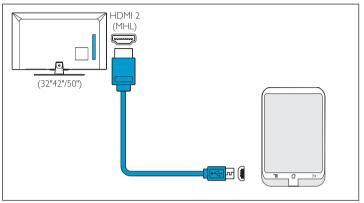


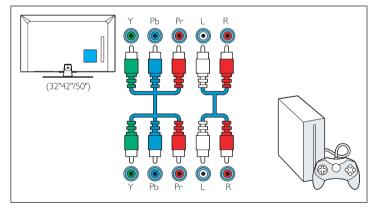

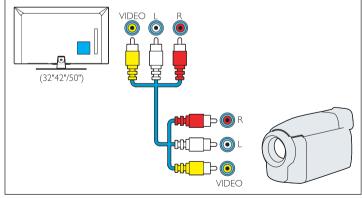

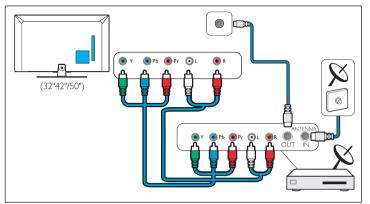


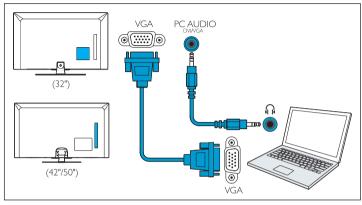


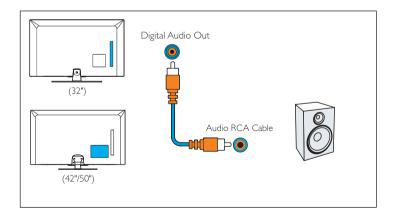





English Insert batteries

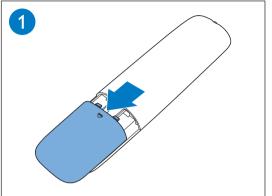

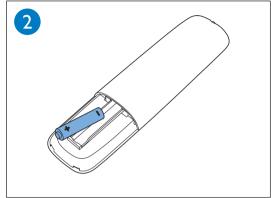

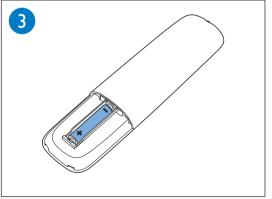


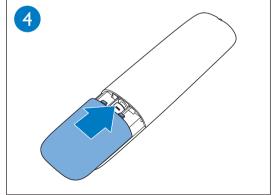




English To wall mount, purchase a suitable bracket.

TV	Н	V
81 cm / 32"	100 mm	100 mm
107 cm / 42"	300 mm	200 mm
127 cm / 50"	400 mm	300 mm

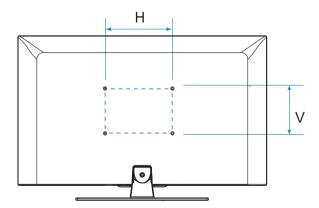



English Press the 0 key on the side panel of the TV or on the remote control to turn on the TV.

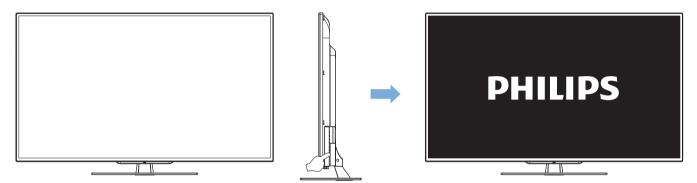



English Please refer to the User's Manual and the Philips support website for more operating instructions.







All registered and unregistered trademarks are the property of their respective owners. Specifications are subject to change without notice.

Philips and the Philips' shield emblem are registered trademarks of Koninklijke Philips Electronics N.V. and are used under license from Koninklijke Philips Electronics N.V.



2014© TP Vision Netherlands B.V. All rights reserved.