




Blu-ray Disc 播放机、HD 游戏机

Blu-ray Disc player; HD game console

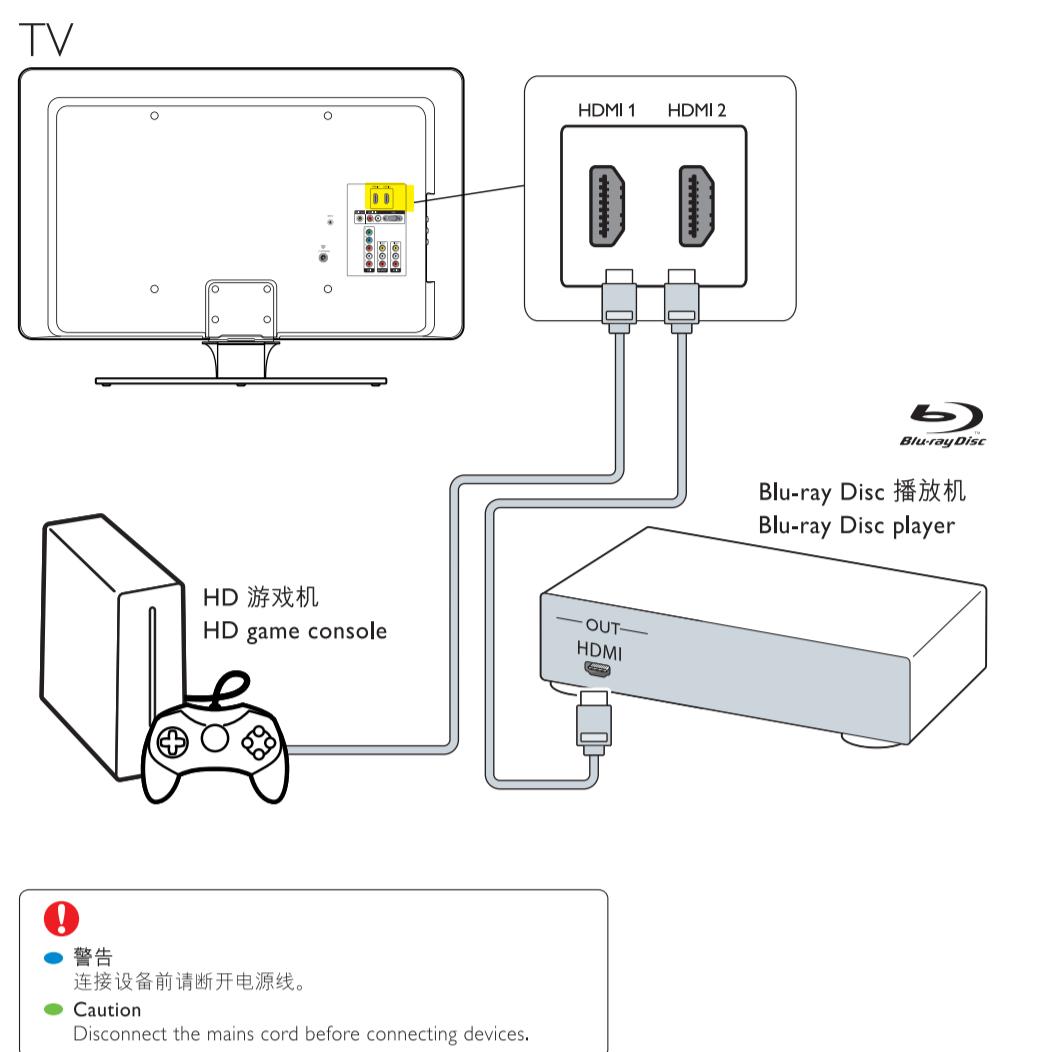


Specifications are subject to change without notice.
Trademarks and/or registered trademarks of Koninklijke Philips Electronics N.V. or their respective owners.
2008 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com


DVD 播放器、家庭影院系统、其它音频系统

DVD player; home theatre system, other audio system

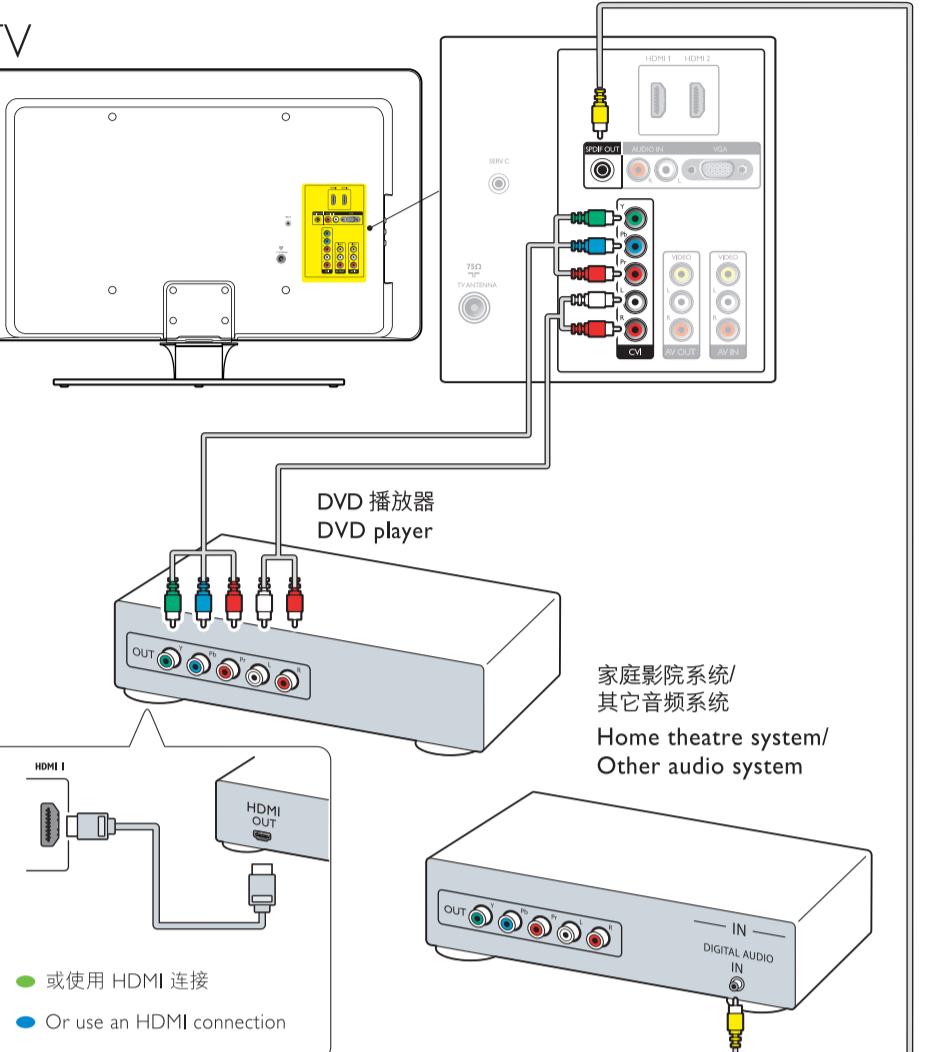


DVD 录放机、有线接收机

DVD recorder, cable receiver

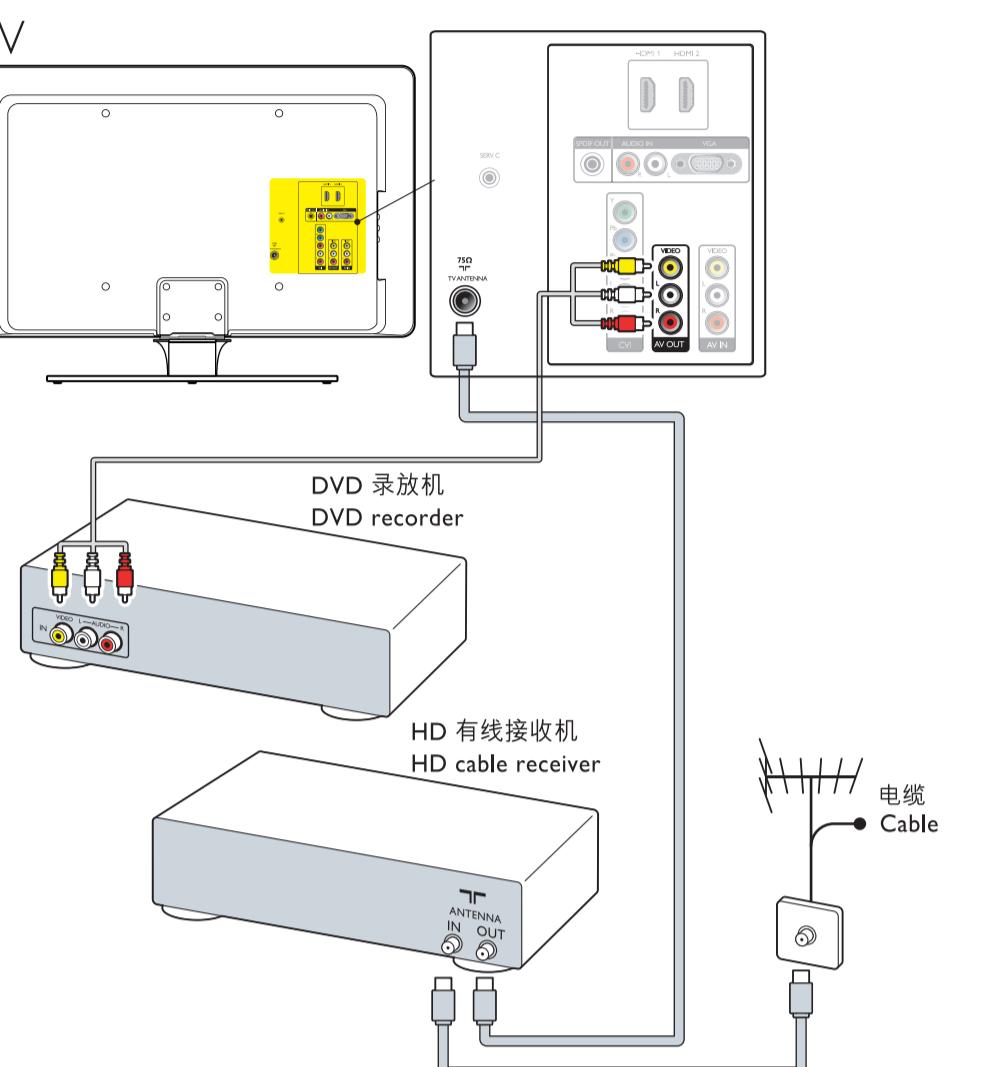

HD 摄录机、耳机、游戏机、摄录机、PC

HD camcorder, headphones, game console, camcorder, PC

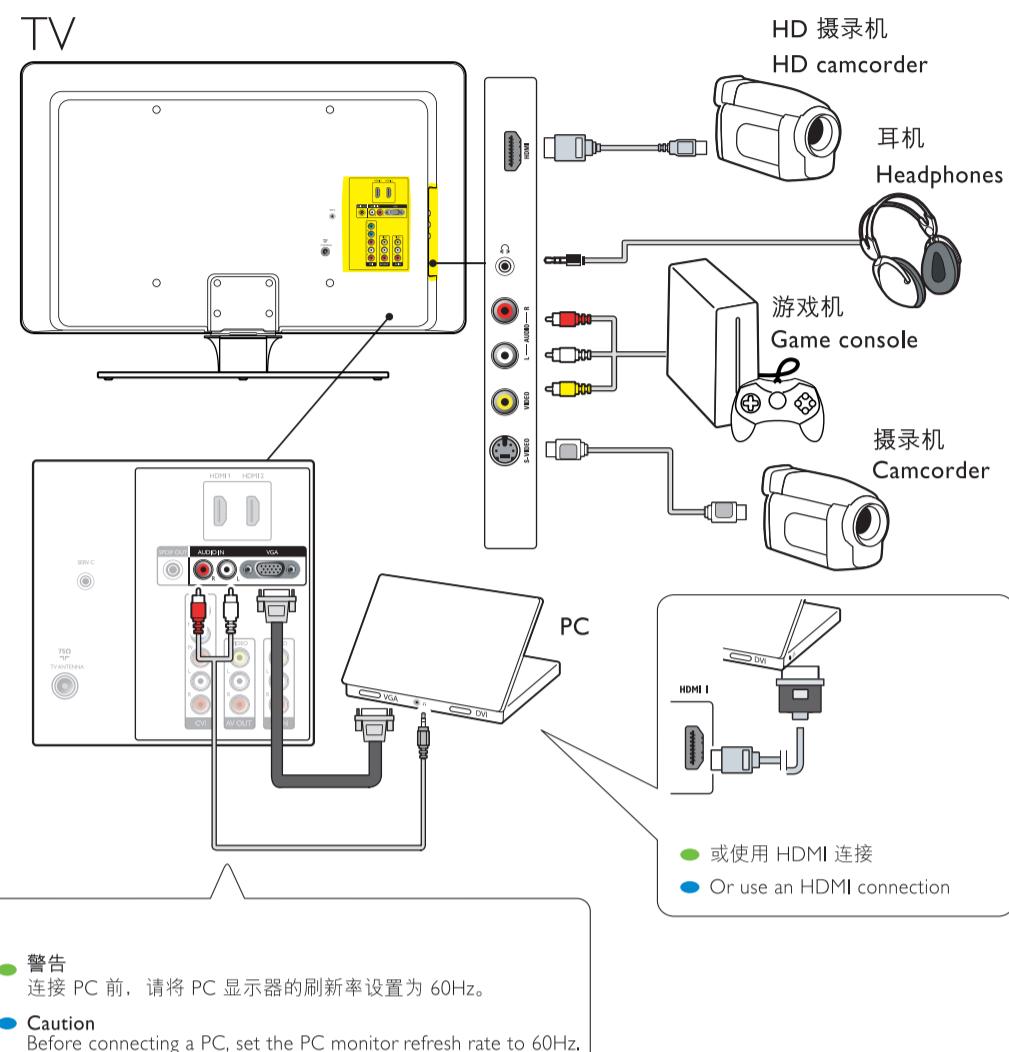

在 www.philips.com/welcome 上
注册产品并获得支持


快速入门

ZH 设定
EN Installation

PHILIPS

包装清单

What's in the box

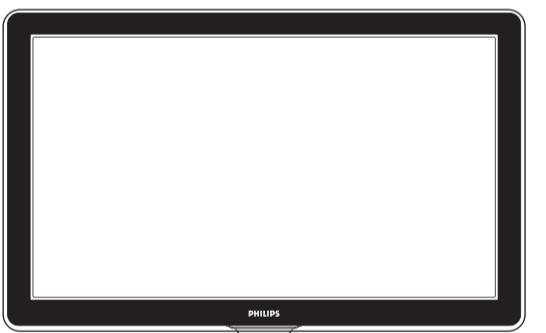

遥控器和 2 节 AAA 电池 (7 号)
Remote control and 2 x AAA batteries


电源线
Mains cord

快速入门指南
Quick Start Guide

用户手册
User Manual


移除旋转锁

Remove the swivel lock

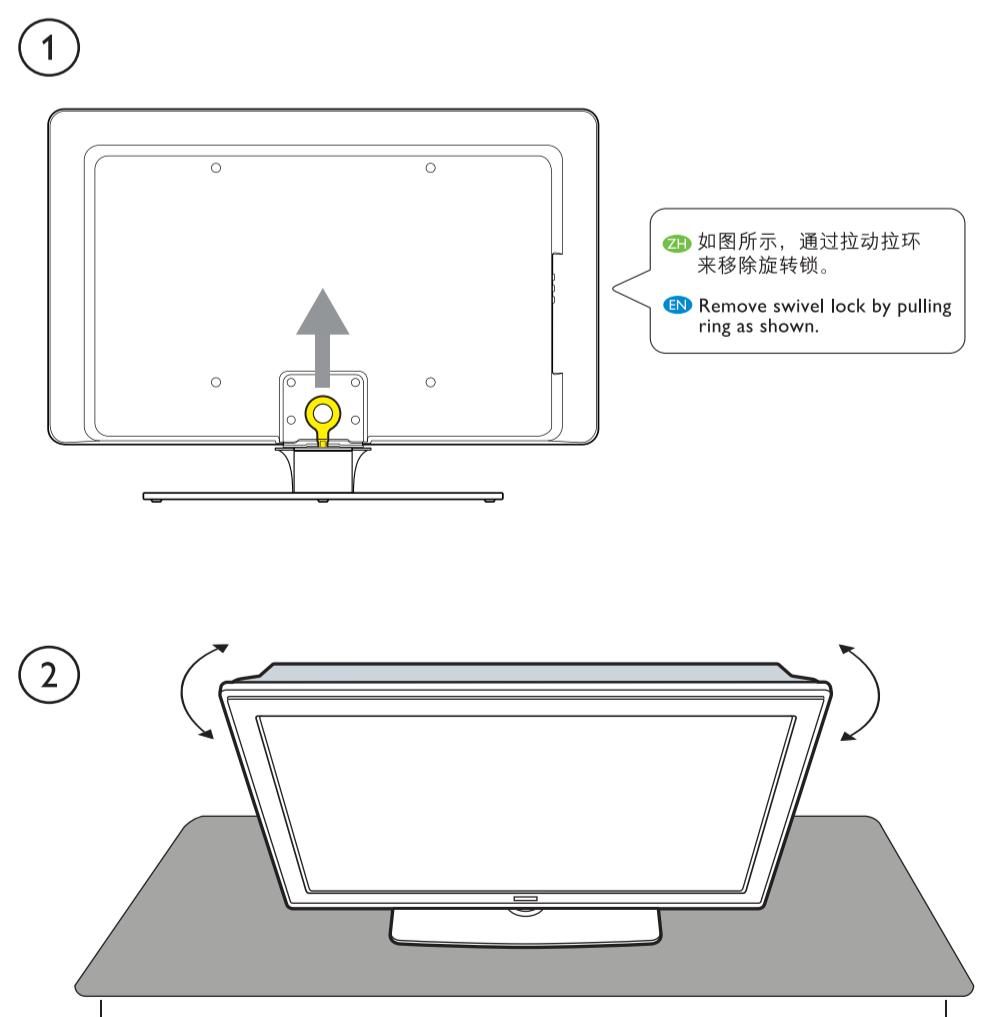

连接电源*和天线

Connect the mains* and antenna

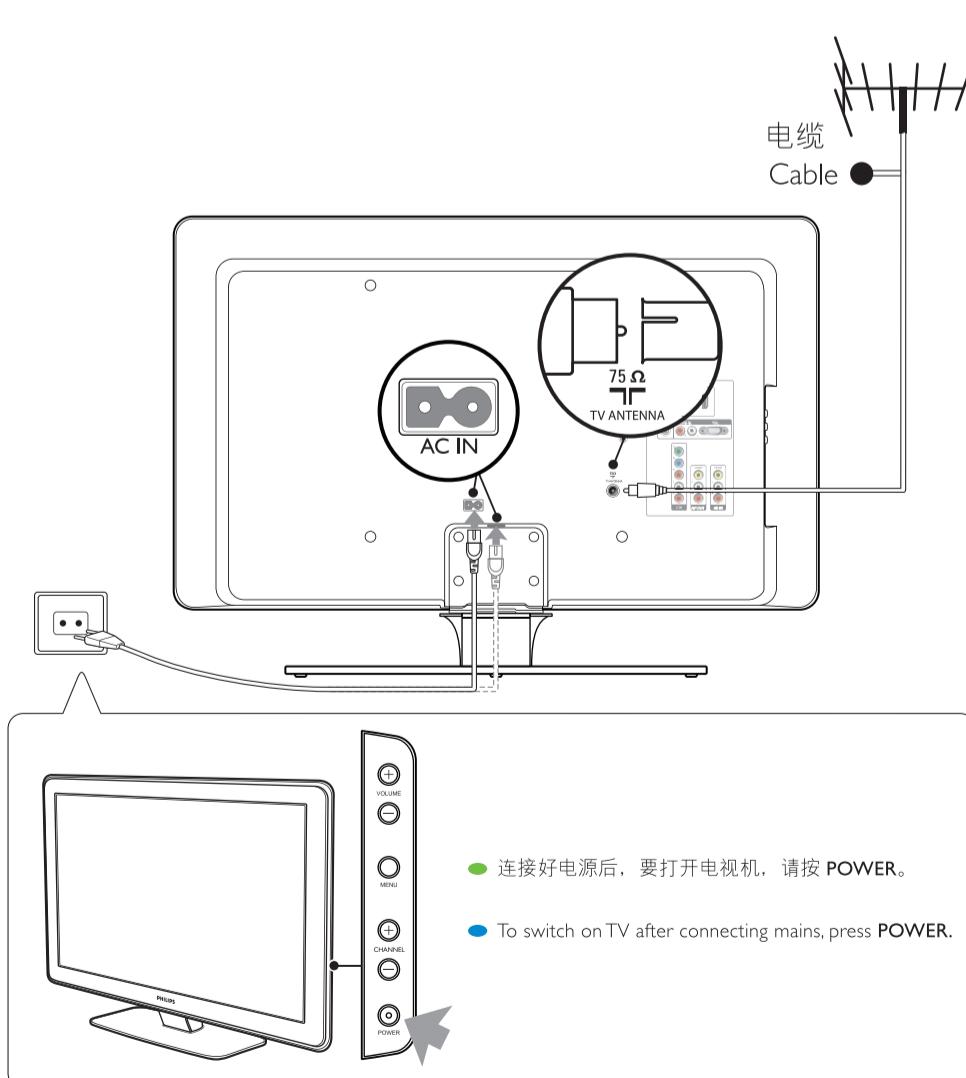

*
AC IN 的位置因电视机型号而异
Position of AC IN varies according to TV model


流光溢彩设置

Ambilight setup



使用遥控器

Use the remote control

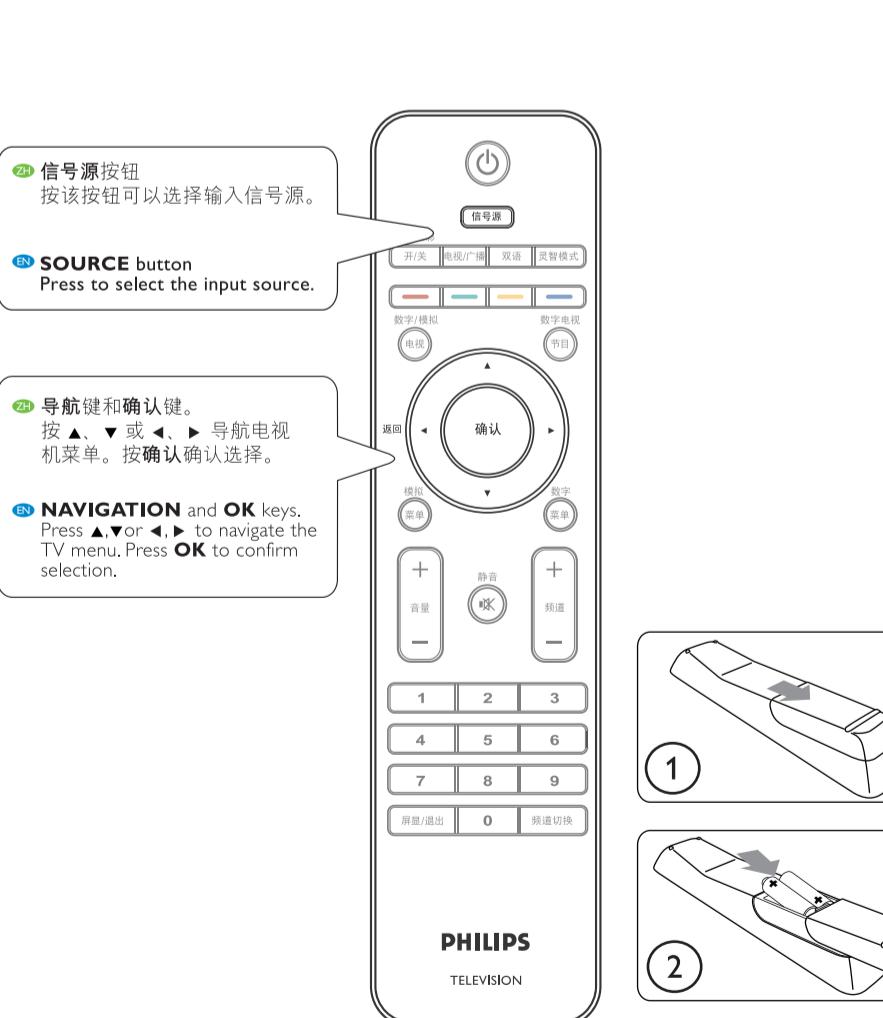

第一次安装

Install for the first time

