



6 Pemutar DVD,VCR
DVD player, VCR

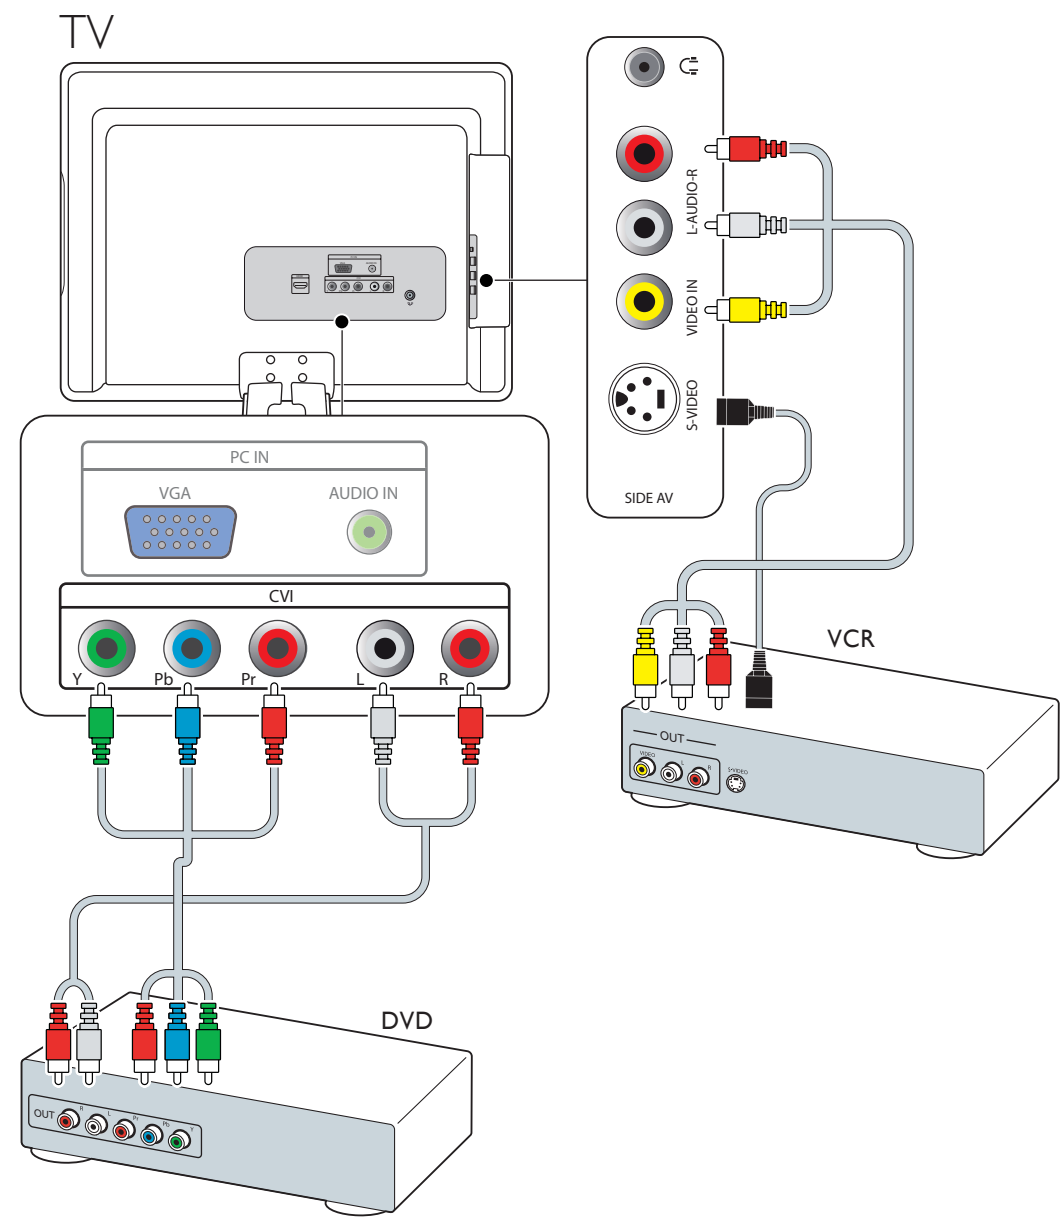


Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners.
© 2008 Koninklijke Philips Electronics N.V. All rights reserved.
www.philips.com



7 Perekam DVD, Kotak unit penerima kabel
DVD recorder, Cable receiver box

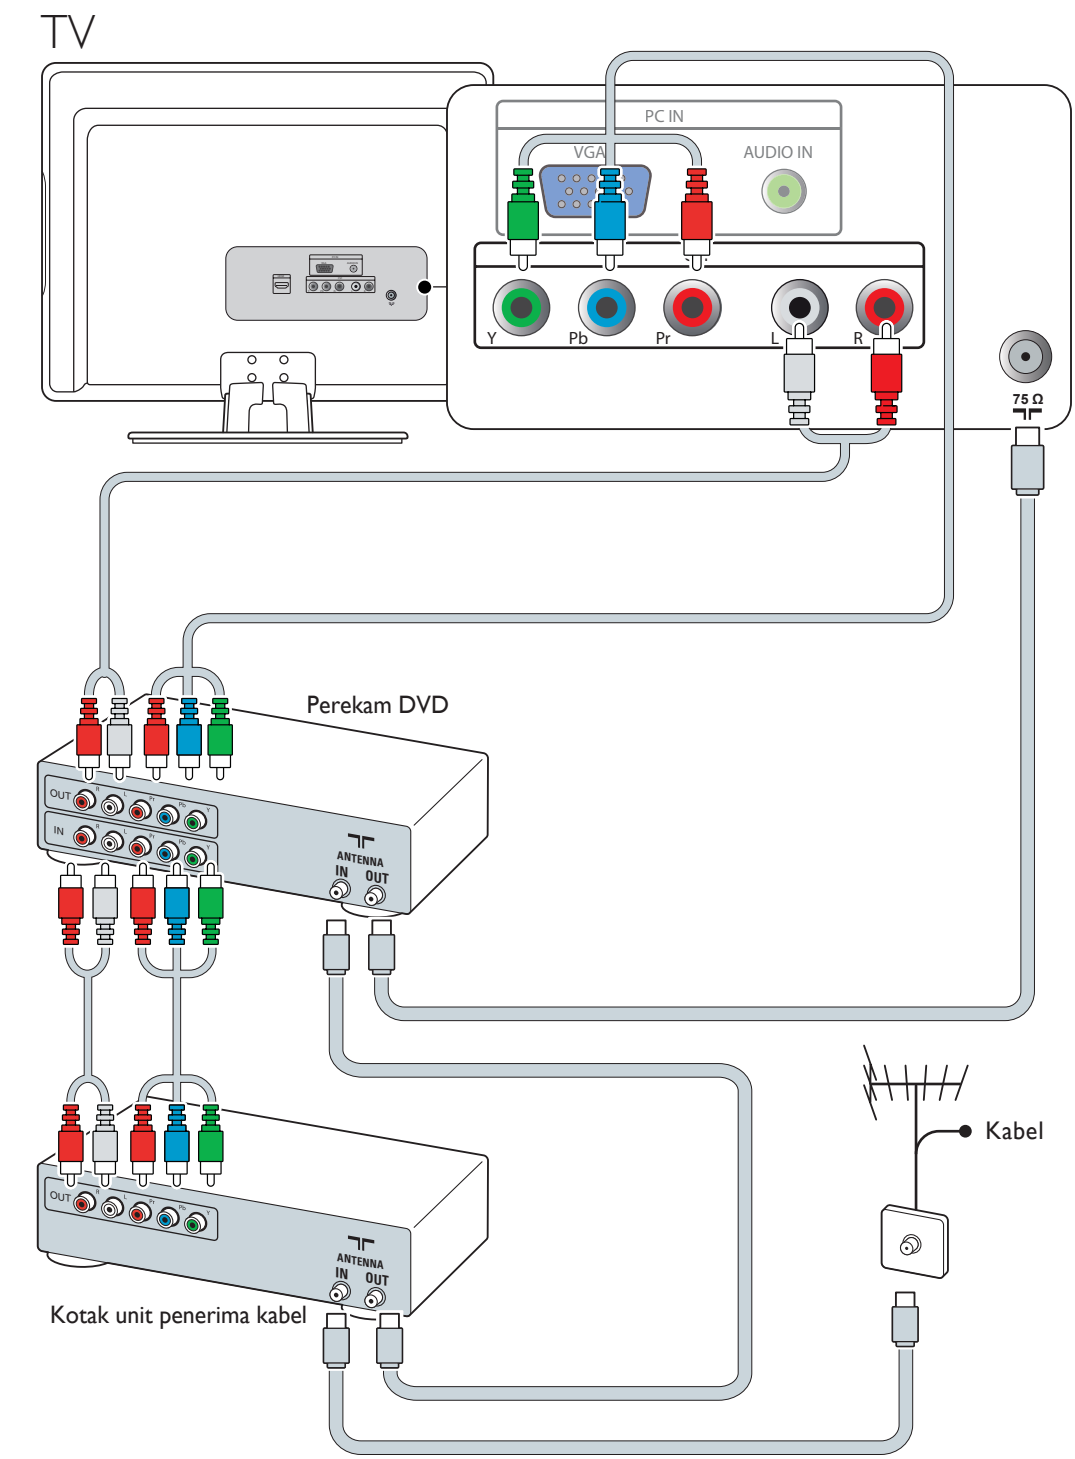


8 Konsol permainan, camcorder HD, PC
Game console, HD camcorder, PC

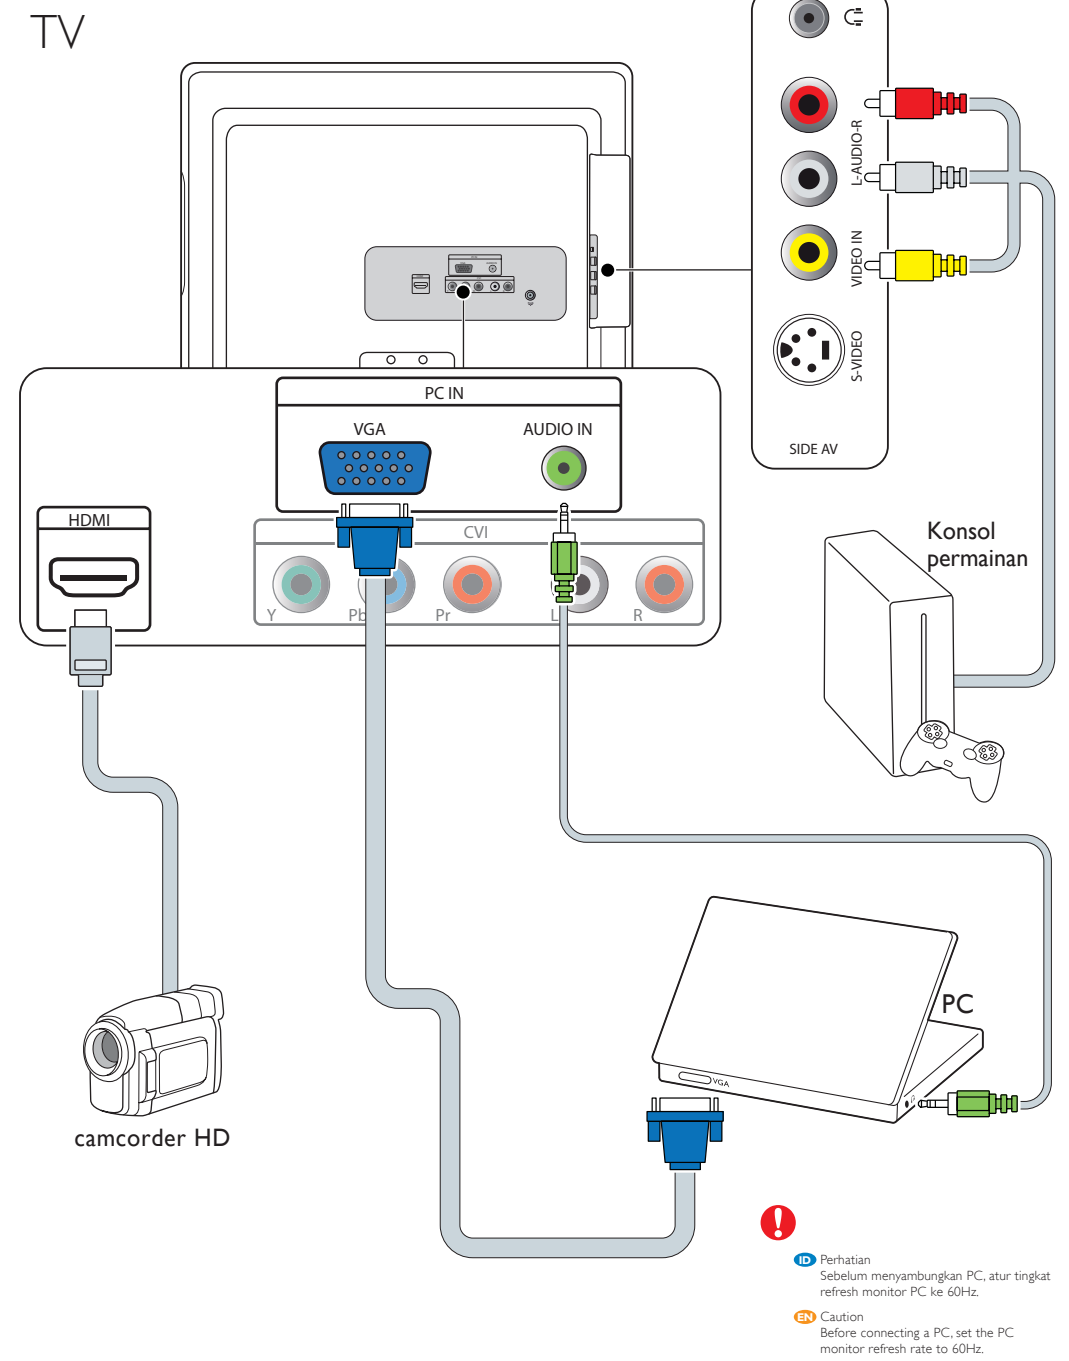


Perhatian
Sebelum menyambungkan PC, atur tingkat
refresh monitor PC ke 60Hz.
Caution
Before connecting a PC, set the PC
monitor refresh rate to 60Hz.

9-a Konfigurasi awal
First time setup

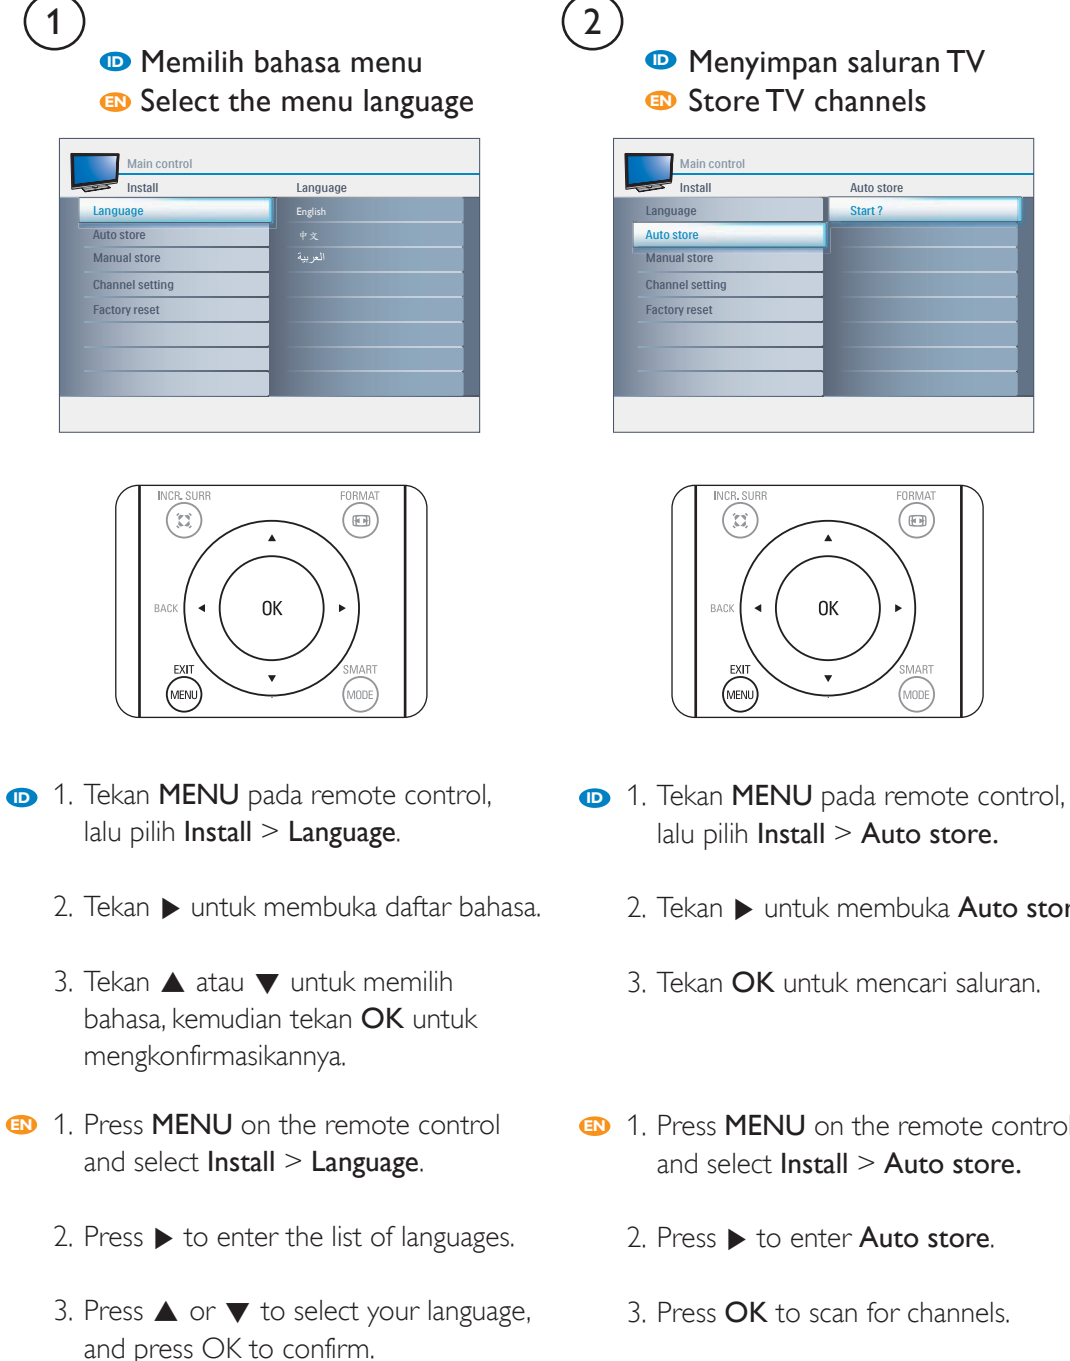

9-b

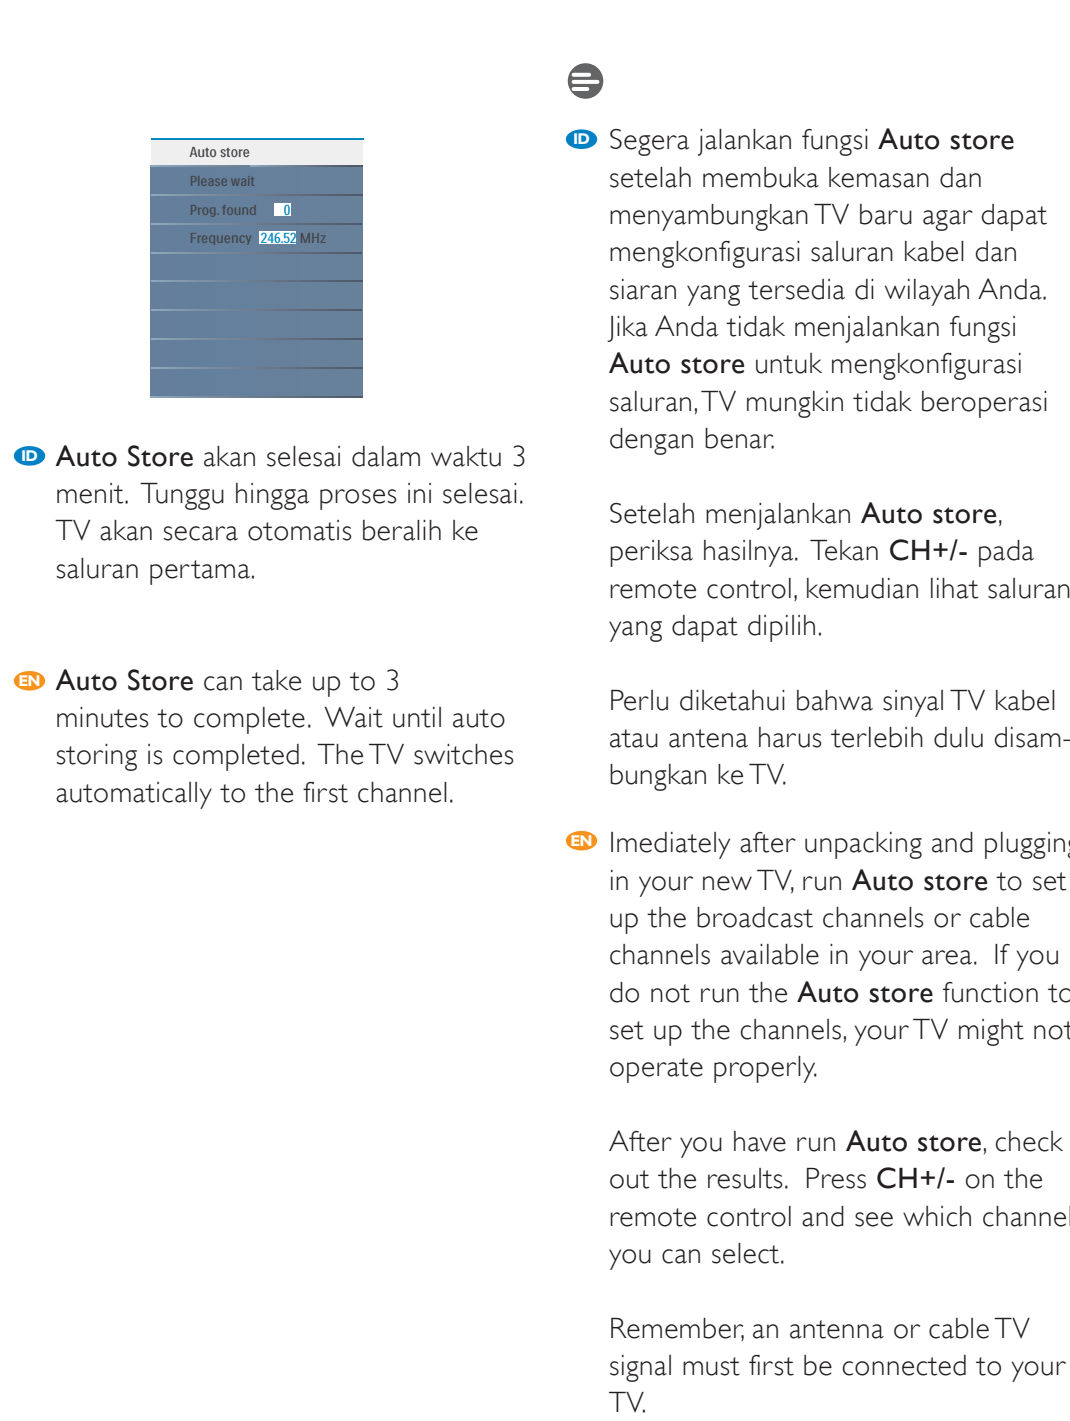

Dafarkan produk dan dapatkan dukungan di
www.philips.com/welcome

19PFL3403


Quick Start

ID Pemasangan


EN Installation

PHILIPS

Isi kemasan What's in the box

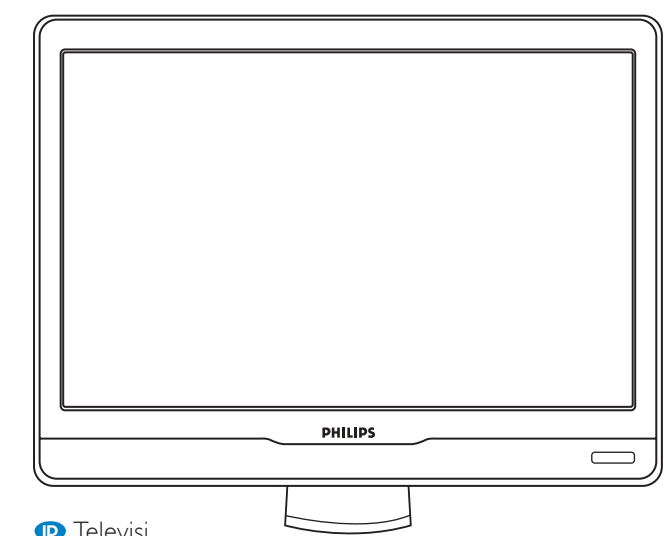


ID Televisi
EN Television

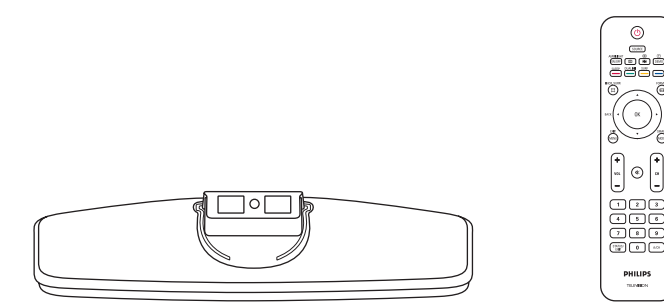

ID Dudukan TV
EN TV stand
ID Remote control dengan 2 baterai AAA
EN Remote control with 2 x AAA batteries




ID Panduan Pengguna
EN User Manual
ID Panduan Ringkas
EN Quick Start Guide

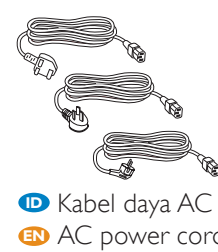


ID Kabel daya AC
EN AC power cord

1 Memasangudukan TV Mounting the TV stand

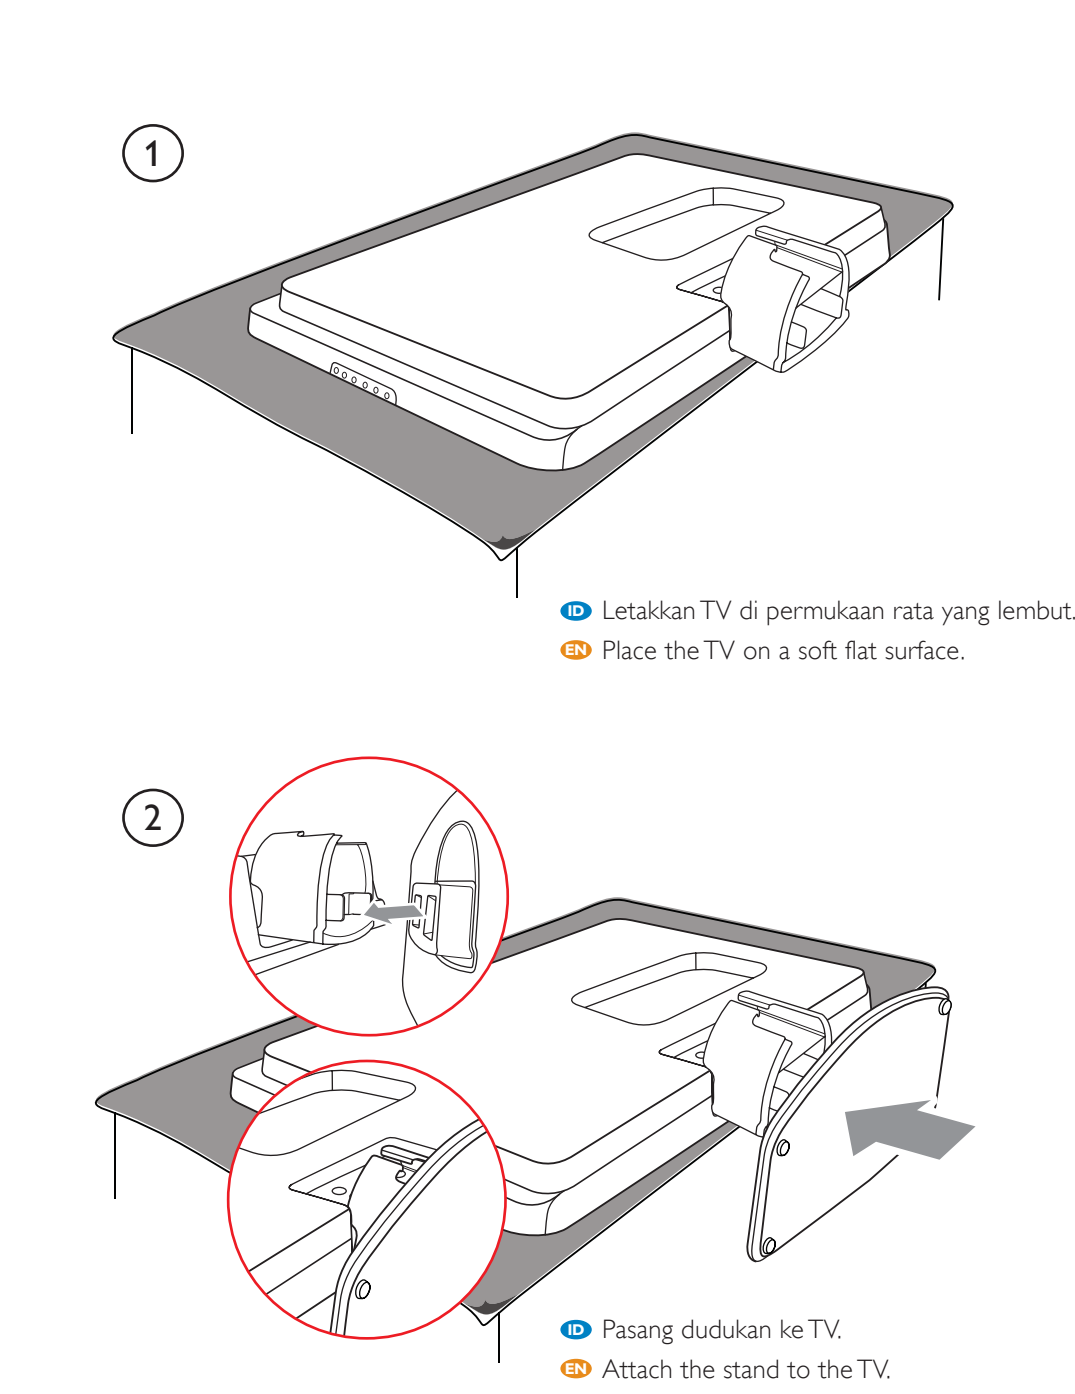


2 Daya dan antenna Power & antenna

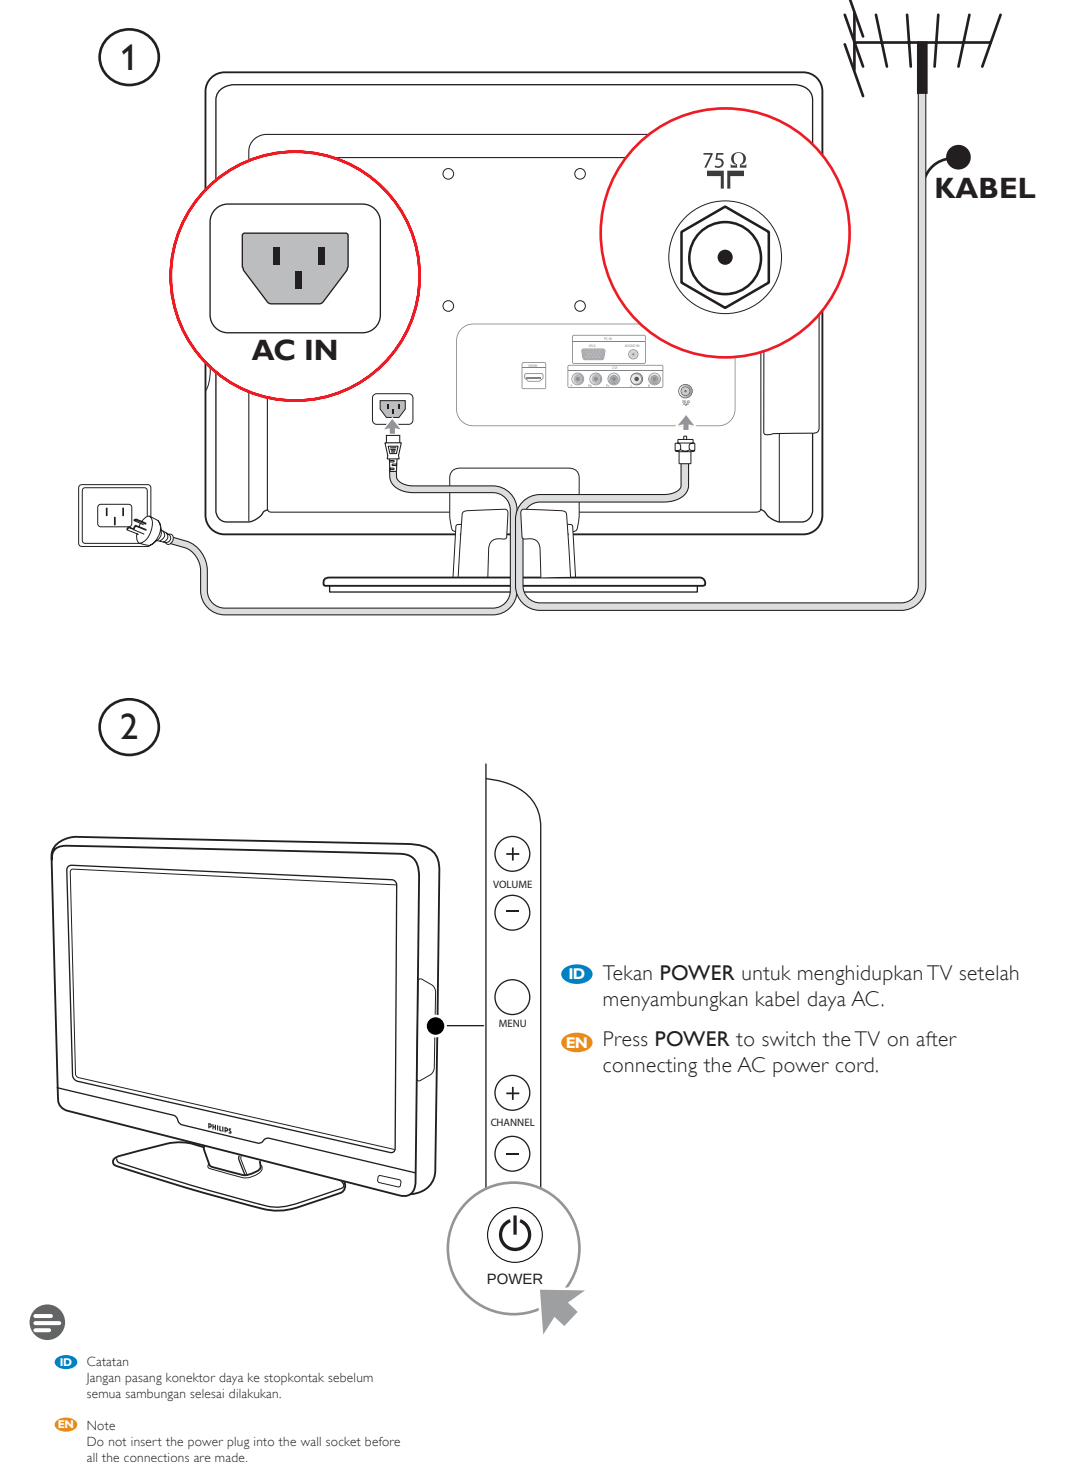

1. Tekan POWER untuk menghidupkan TV setelah menyambungkan kabel daya AC.
2. Press POWER to switch the TV on after connecting the AC power cord.

3 Remote control Remote control

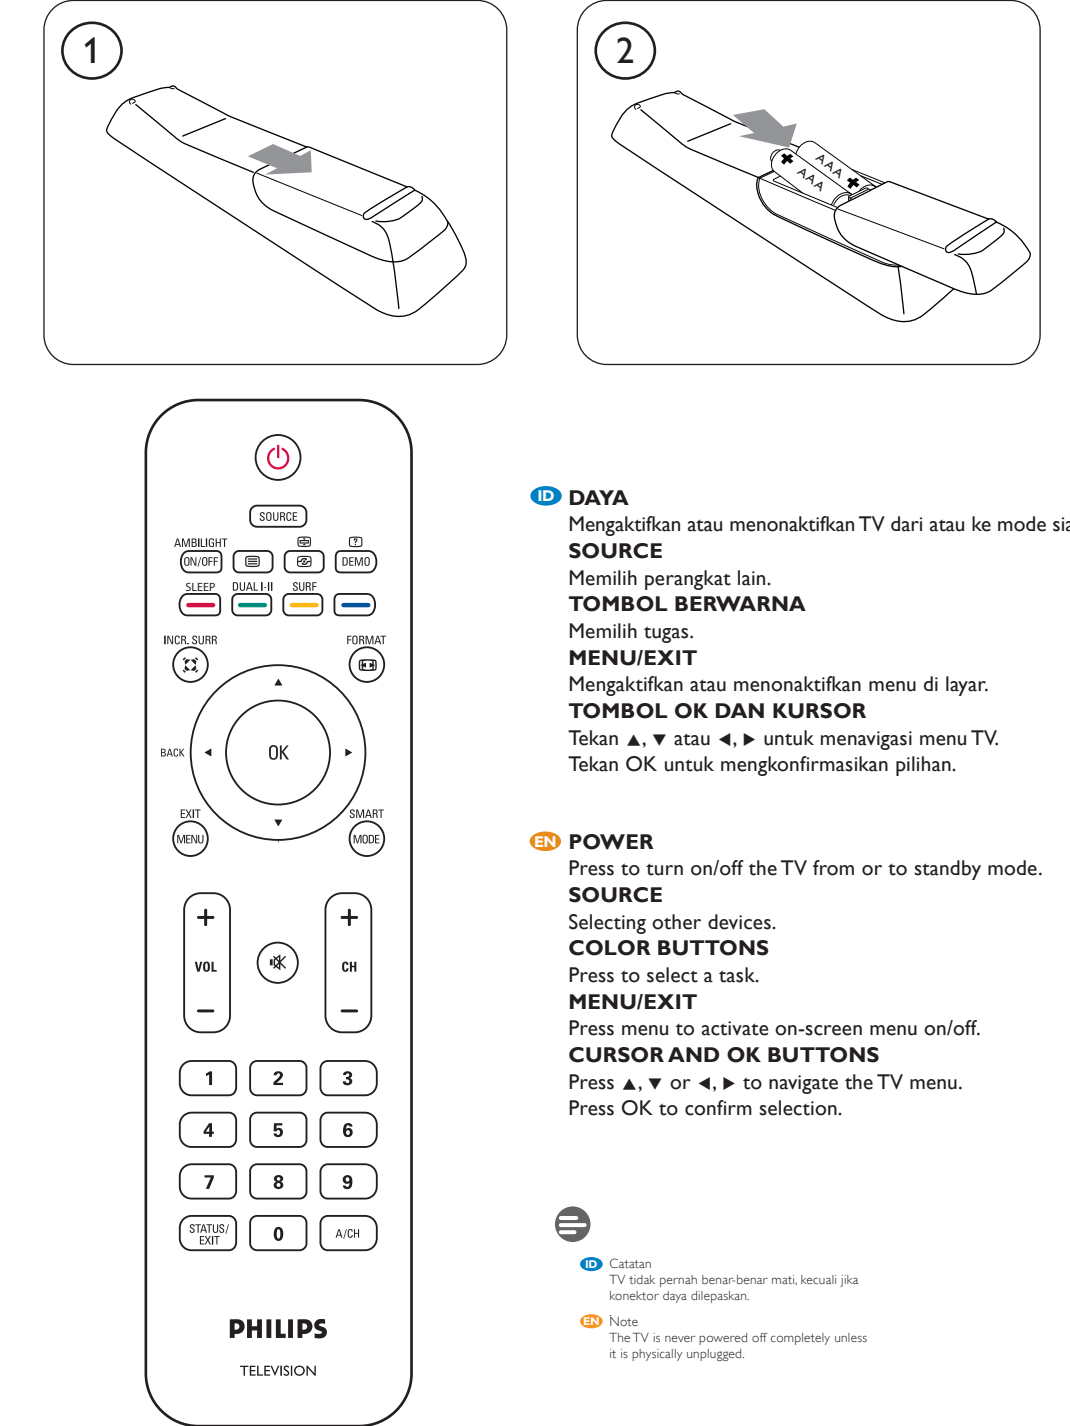


DAYA
Mengaktifkan atau menonaktifkan TV dari mode siaga.
SOURCE
Memilih perangkat lain.
TOMBOL BERWARNA
Memilih tugas.
MENU/EXIT
Mengaktifkan atau menonaktifkan menu di layar.
TOMBOL OK DAN KURSOR
Tekan ▲, ▼ atau ◀, ▶ untuk menavigasi menu TV.
Tekan OK untuk mengkonfirmasi pilihan.


POWER
Press to turn on/off the TV from or to standby mode.
SOURCE
Selecting other devices.
COLOR BUTTONS
Press to select a task.
MENU/EXIT
Press menu to activate on-screen menu on/off.
CURSOR AND OK BUTTONS
Press ▲, ▼ or ◀, ▶ to navigate the TV menu.
Press OK to confirm selection.

Perhatian
TV tidak pernah benar-benar mati, kecuali jika konektor daya dipisahkan.
Note
The TV is never powered off completely unless it is physically unplugged.

4 Soket belakang dan samping Rear & side connectors

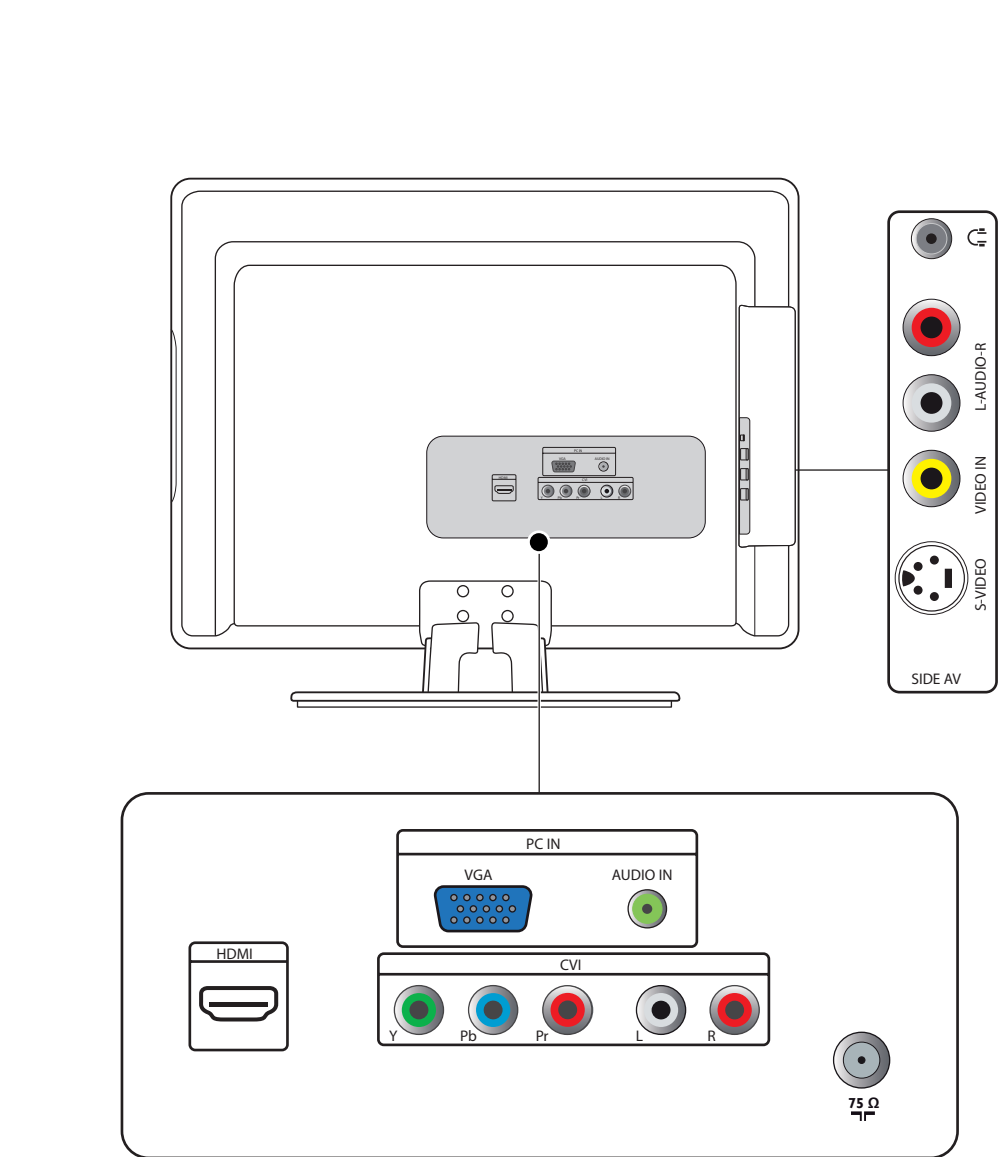

5 Pemutar Blu-ray Disc, Konsol permainan HD Blu-ray Disc player, HD game console

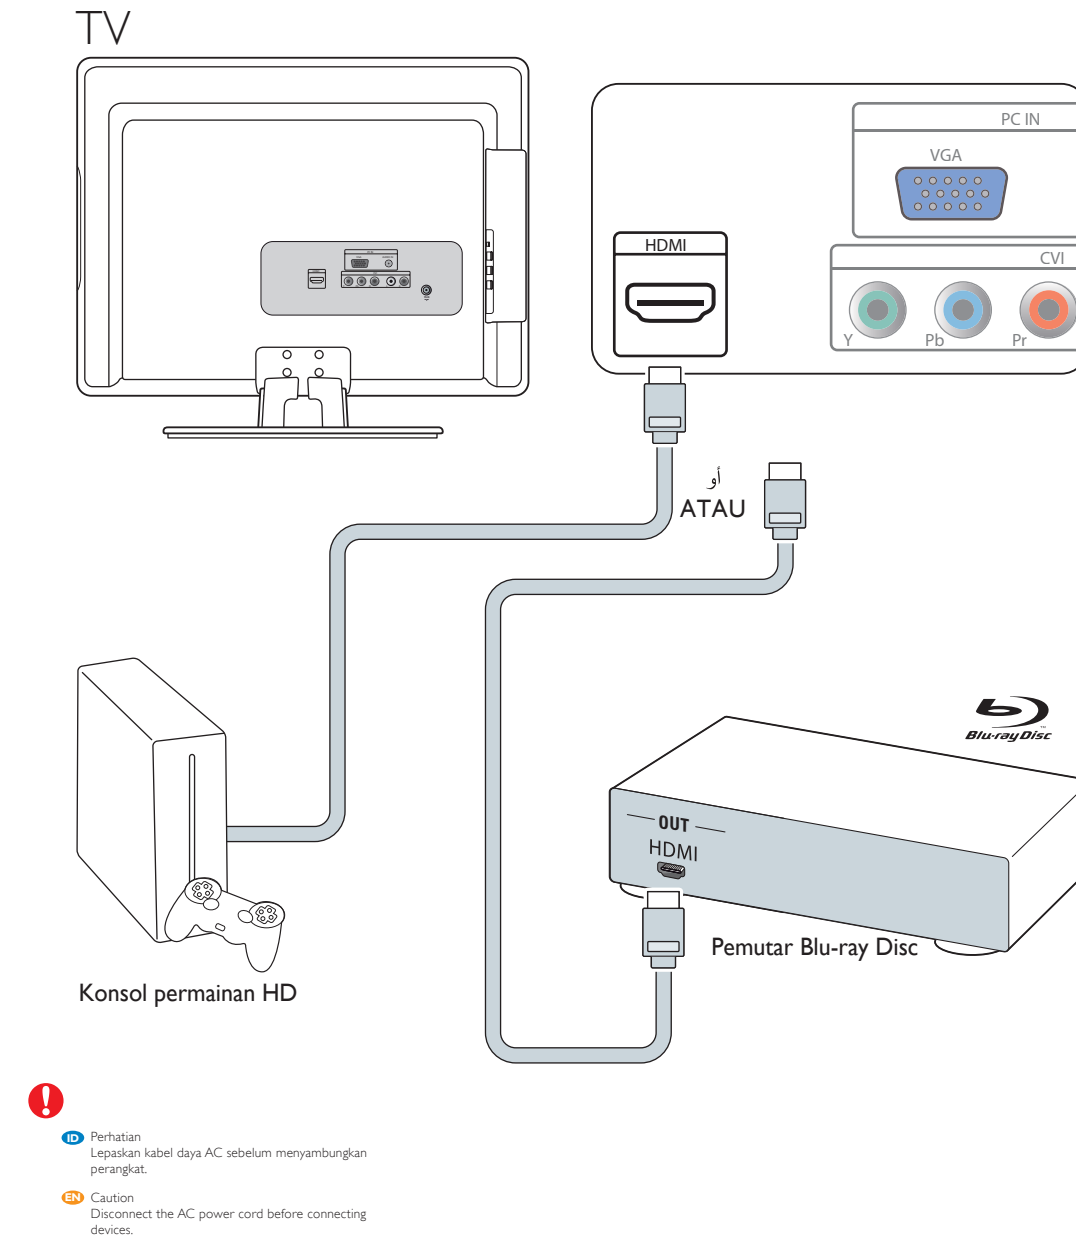

Perhatian
Lepaskan label daya AC sebelum menyambungkan perangkat.
Caution
Disconnect the AC power cord before connecting devices.