


Quick Start Guide

1 Insert the batteries into the handset


Lift the cover on the back of the remote upward gently. Install two AAA batteries. Make sure to match the + and - ends of the batteries in the battery compartment (observe the correct polarity) Replace the cover.



2 Connect the Aerial/Cable straight to your TV

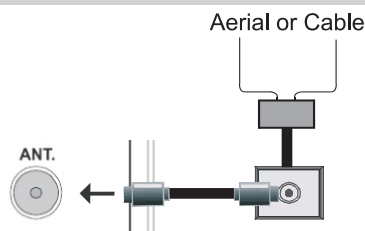

3 Connect the TV to the mains socket

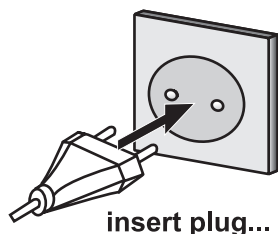

4 To switch the TV on

Connect the power cord to the 220-240V AC, 50 Hz.

To switch on the TV from standby mode either:

1. Press the "O" button, **CH+ / CH-** or a numeric button on the remote control.
2. Press the side function switch until the TV comes on from standby.

5 HDMI input

PLEASE ENSURE BOTH UNITS ARE SWITCHED OFF BEFORE CONNECTING. Use a HDMI to HDMI cable to connect the two units together. To select the HDMI input, press the **SOURCE** button on the remote control. Each time it is pressed, the on-screen menu confirms your selection.

To HDMI connection on the device



6 Start Auto Setup procedure

IMPORTANT: Ensure that the aerial/cable connected and a Common Interface module is not inserted before switching on the TV for the first time installation. Do not insert a common interface module during the search process.

When turned on for the first time, the language selection screen is displayed. Select the desired language and press OK.

First Time Installation (FTI) screen will be displayed next. Set your preferences using the navigation buttons and when finished, press OK to continue.

You can activate Store mode (Optional) option to be available in "Other settings" menu and your TV's features will be illustrated on the top of the screen. A confirmation screen will be displayed. Select **YES** to proceed.

If Home Mode is selected, Store mode will not be available after the First Time Installation. Press **OK** button to continue.

Aerial Installation

If you select **AERIAL** option from the Search Type screen, the television will search for digital terrestrial TV broadcasts.

NOTE: You can press **MENU** button to cancel.

After all the available stations are stored, the Channel List will be displayed on the screen. If you like how the channels are sorted according to the LCN (*), please select "Yes" and then press OK. Press **MENU** button to quit channel list and watch TV.

(*) **LCN** is the Logical Channel Number system that organizes available broadcasts in accordance with a recognizable channel sequence (if available).

Cable Installation

If you select **CABLE** option and press **OK** button on the remote control. To continue, please select YES and press **OK**. To cancel operation, select **NO** and press **OK**. You can select frequency ranges from this screen.

Enter the frequency range manually by using the numeric button.

Note: Searching duration will change depending on the selected search step.

7 Using the recording function(PVR)

Instant Recording: Press (RECORD) button to start recording an event instantly while watching a programme. Press (STOP) button to cancel instant recording.

Timeshift Recording: Press (PAUSE) button while watching a broadcast to activate timeshifting mode. In timeshifting mode, the programme is paused and simultaneously recorded to the connected USB disk. Press (PLAY) button again to resume the paused programme from where you stopped. Press the STOP button to stop timeshift recording and return to the live broadcast.

Note: You can not switch broadcasts or view the Media Browser during the recording mode.

Watching Recorded Programmes

Select the Recordings Library from the Media Browser menu. Select a recorded item from the list (if previously recorded). Press the OK button to view the Play Options. Select an option then press OK button.

Note: Viewing main menu and menu items will not be available during the playback.