 
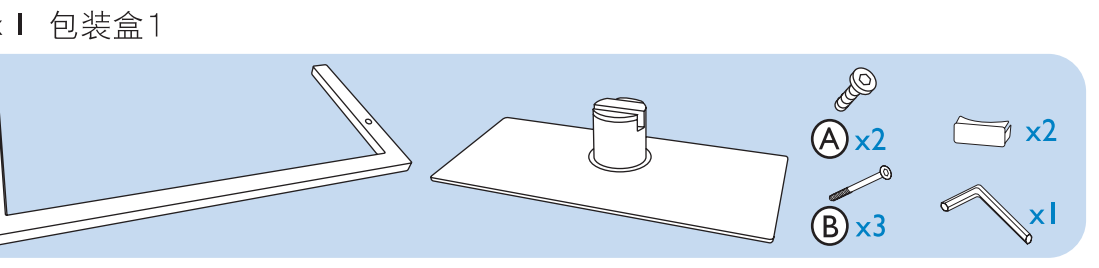 



What's in the box

包装内的物品清单

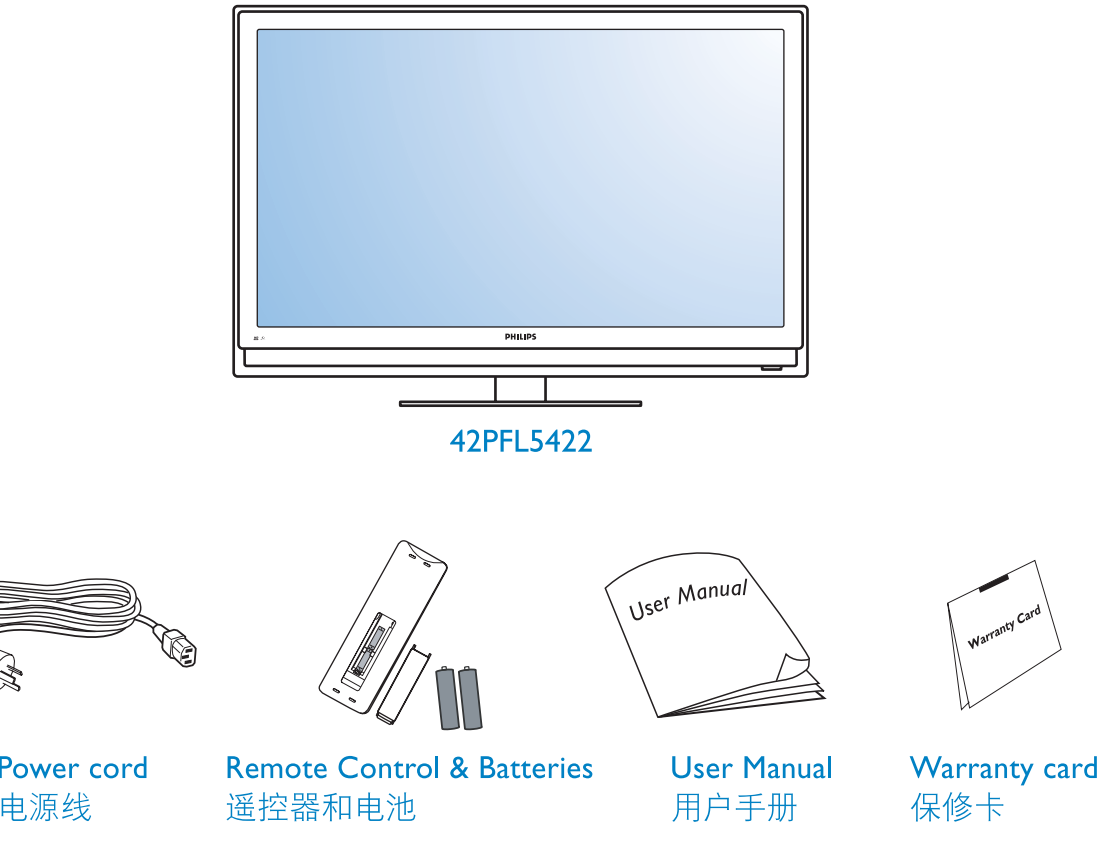


1

 Open the box.
打开包装盒。

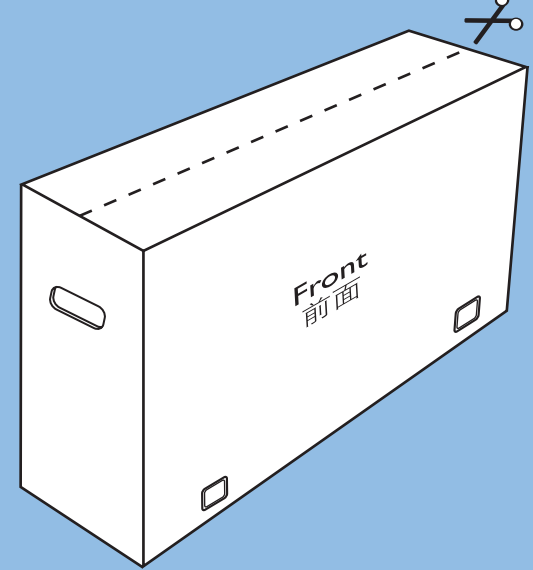


2

 
Remove accessories from the box.
从包装盒中取出配件。

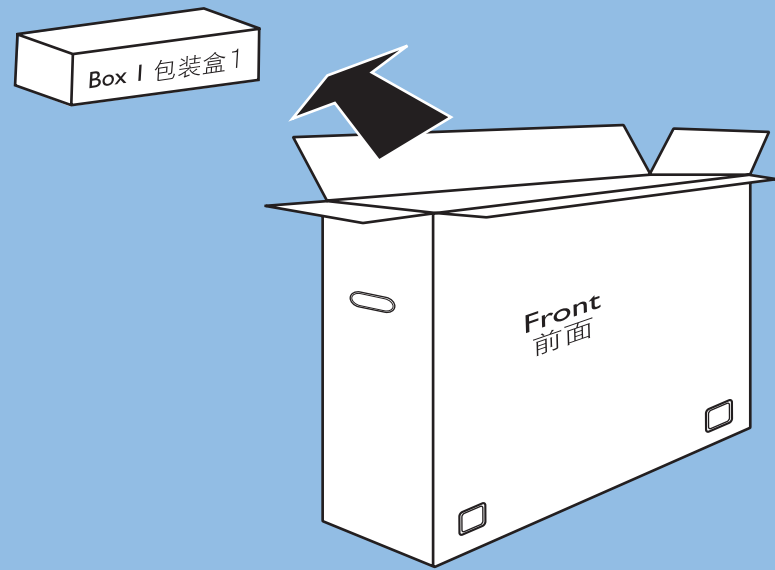

3

  
Follow these steps to take the clips out.
按照下列步骤取下扣子。

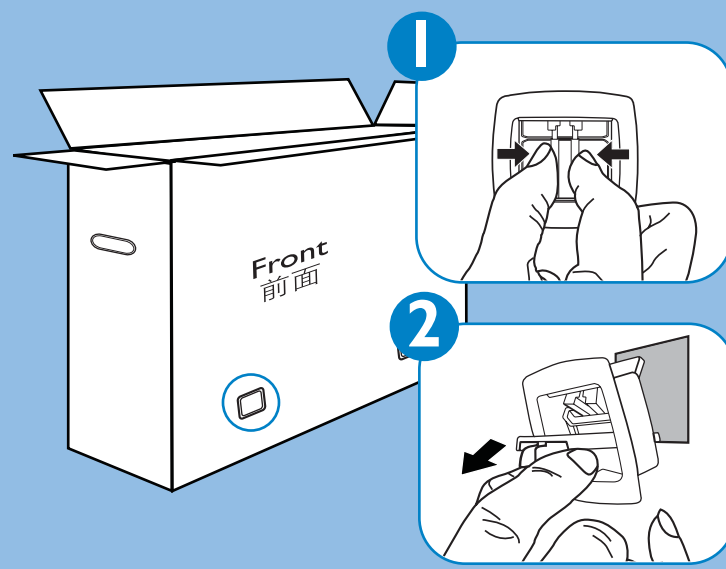


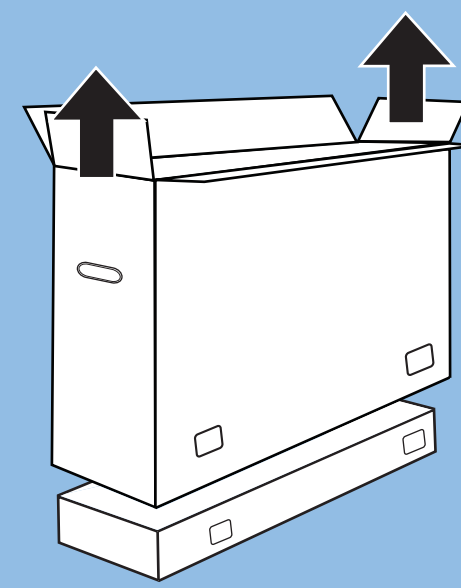


4

  Follow these steps to unfold the bottom of carton.
按照下列步骤展开下纸箱。

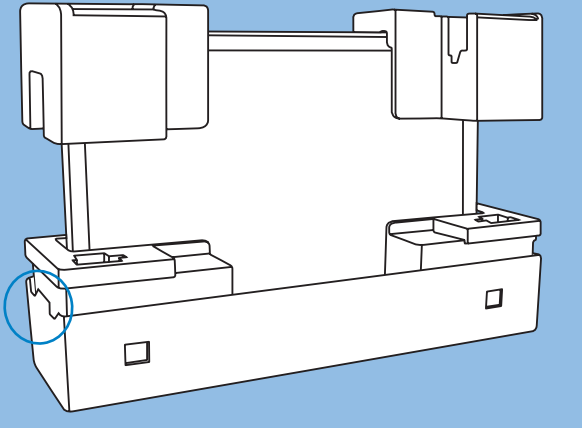


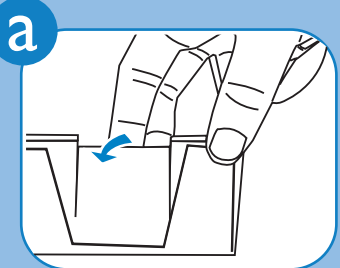


a

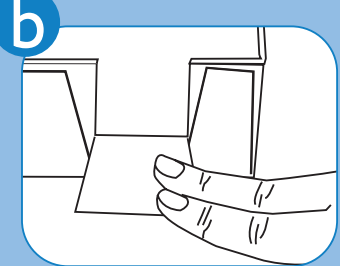 

b

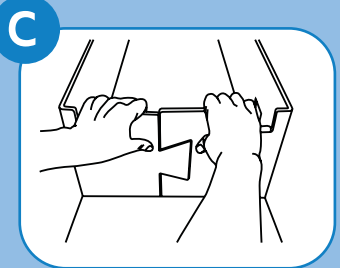 


c

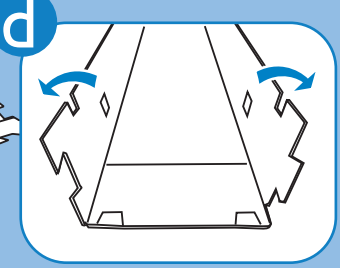 

d


5

 Lie the TV down.
将电视机平放。

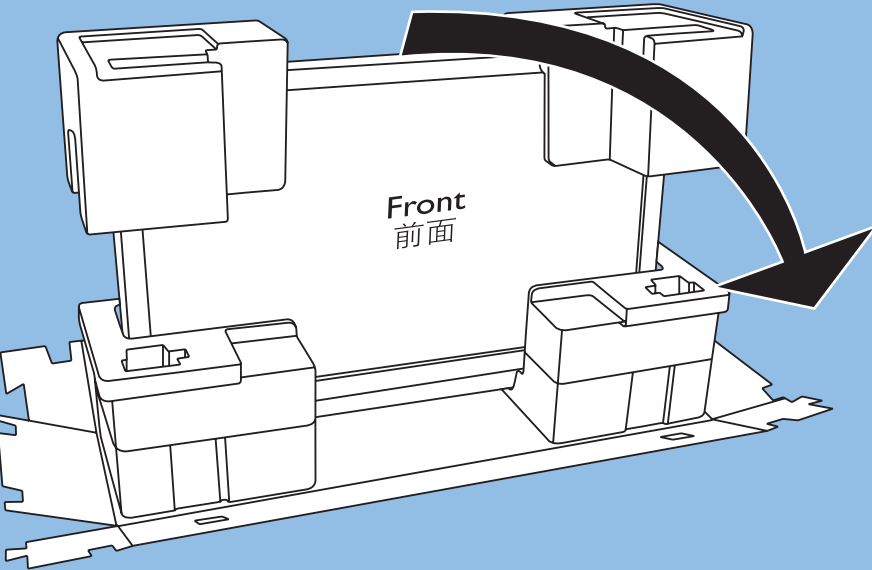


6

Remove the cushion as picture shown.
取下图示小泡沫垫。

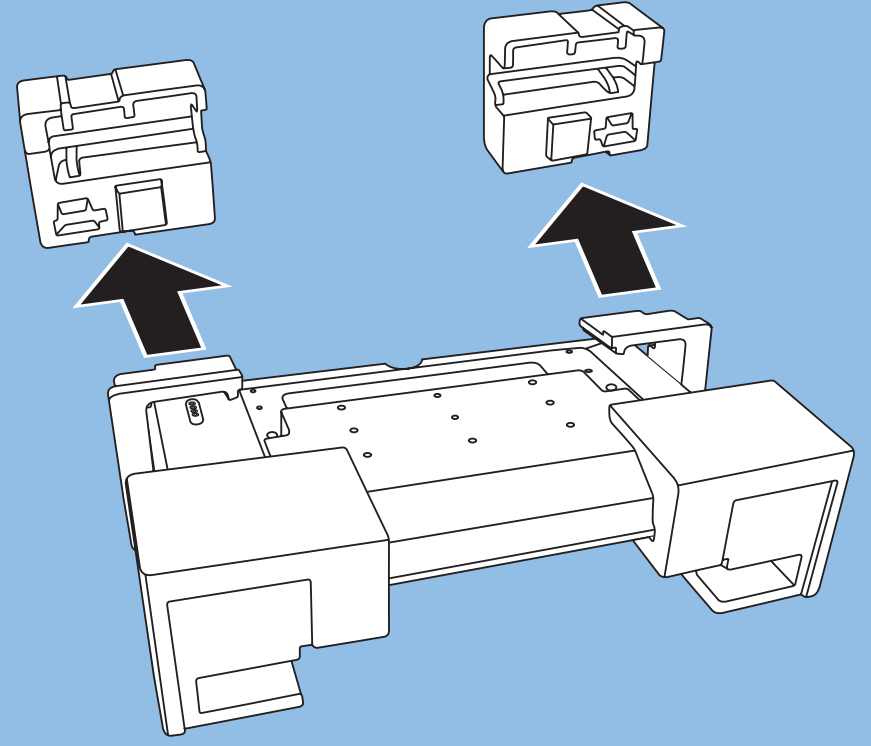 


7

 Remove base accessories from the box and fix the frame with the base.
从包装盒取出底座配件，拴紧基座架。

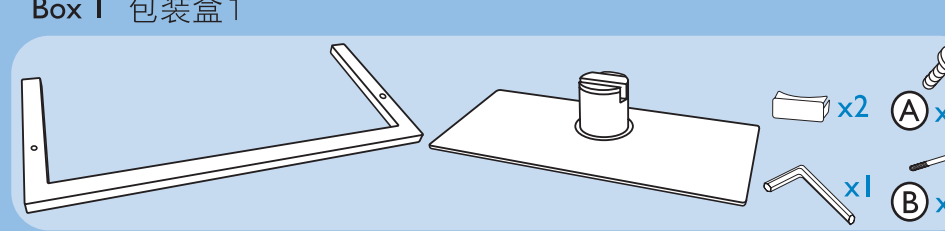


Box I 包装盒1

 A x2
B x3
x2
x1

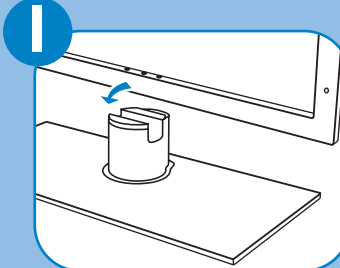




1

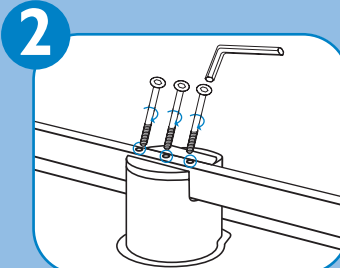 


2


8

    Follow these steps to screw the base.
按照下列步骤拴紧基座架。

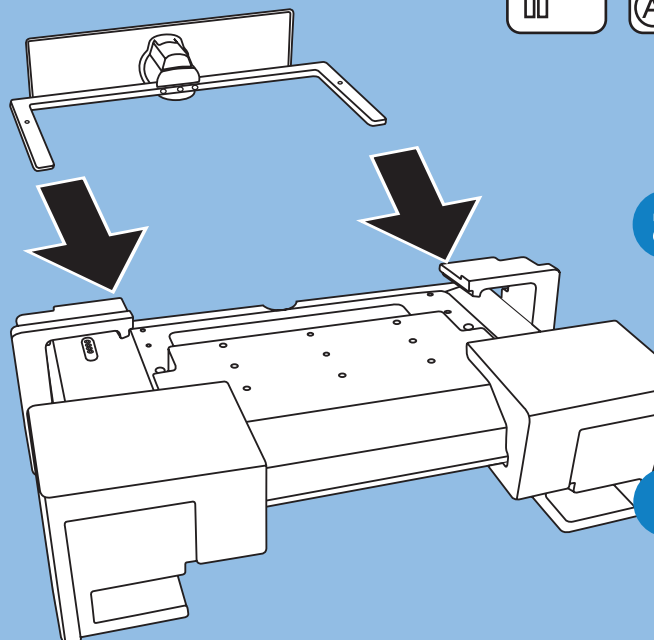


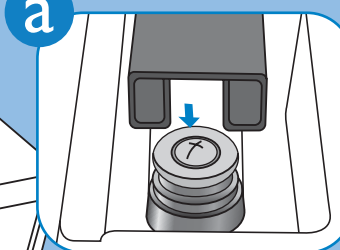

a

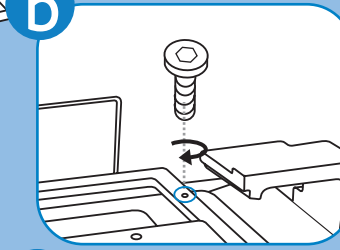 


b

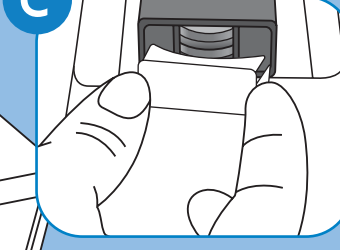 

c


9

 Lift the TV up
将电视机直立起。

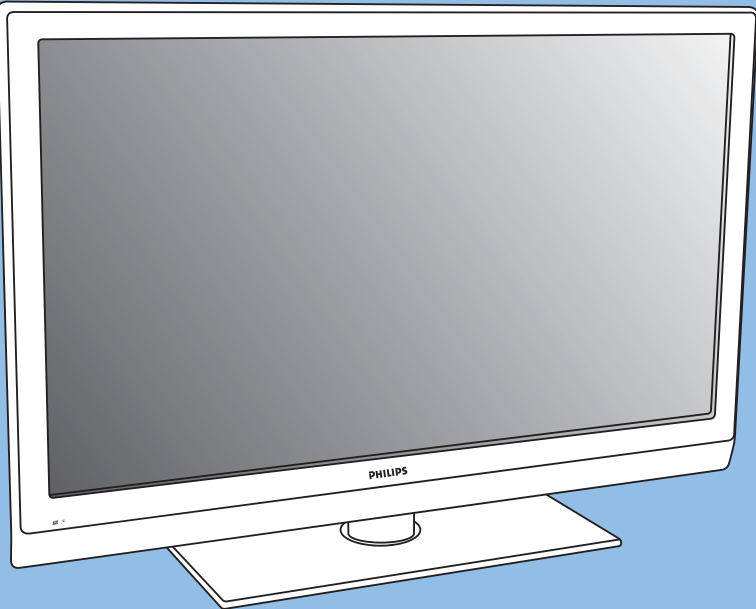


10

 Switch the TV on.
打开电视机。

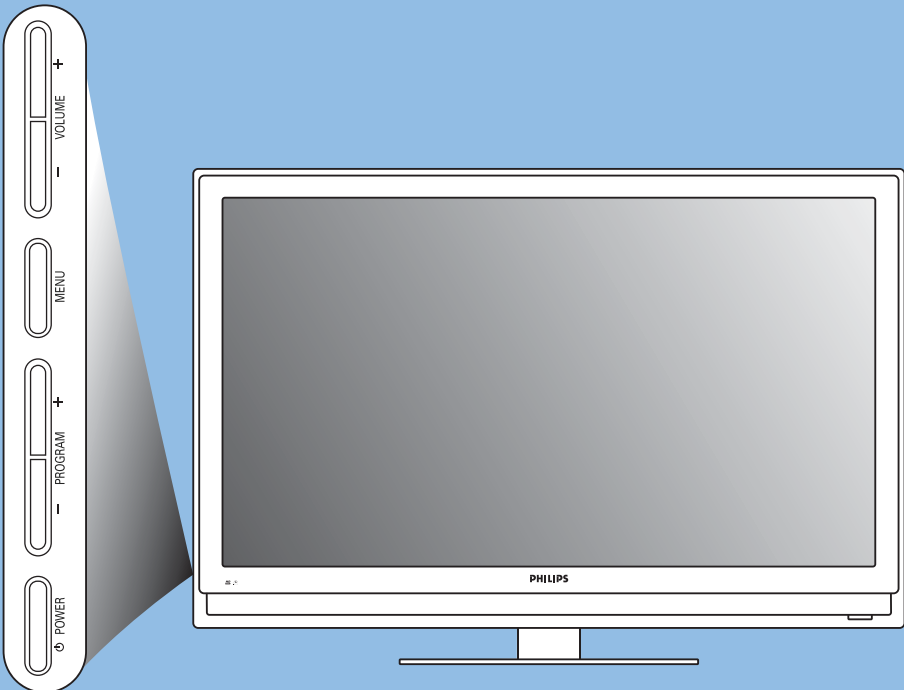

11

 Place the batteries in the remote control.
将电池放入遥控器中。

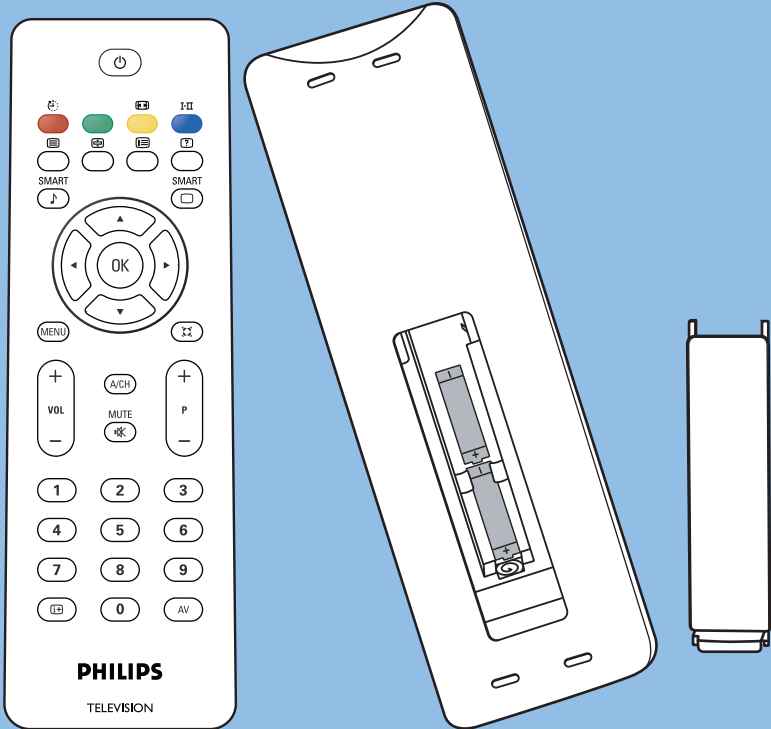


Welcome
欢迎


Read me
阅读我

Auto Store 自动搜寻

Immediately after unpacking and plugging in your new television, run the auto store function to set up the TV for the antenna or cable channels available in your area. If you do not run the auto store function to set up the channels, your television may not operate properly. (See User Manual page 10.)

  在打开包装并连通这台新电视的电源后，立即进行自动搜寻功能设置电视，使其记忆您所在的地区可用的天线或有线电视频道。如果不进行自动搜寻功能设置频道，电视可能无法正常工作。（参见用户手册第10页。）

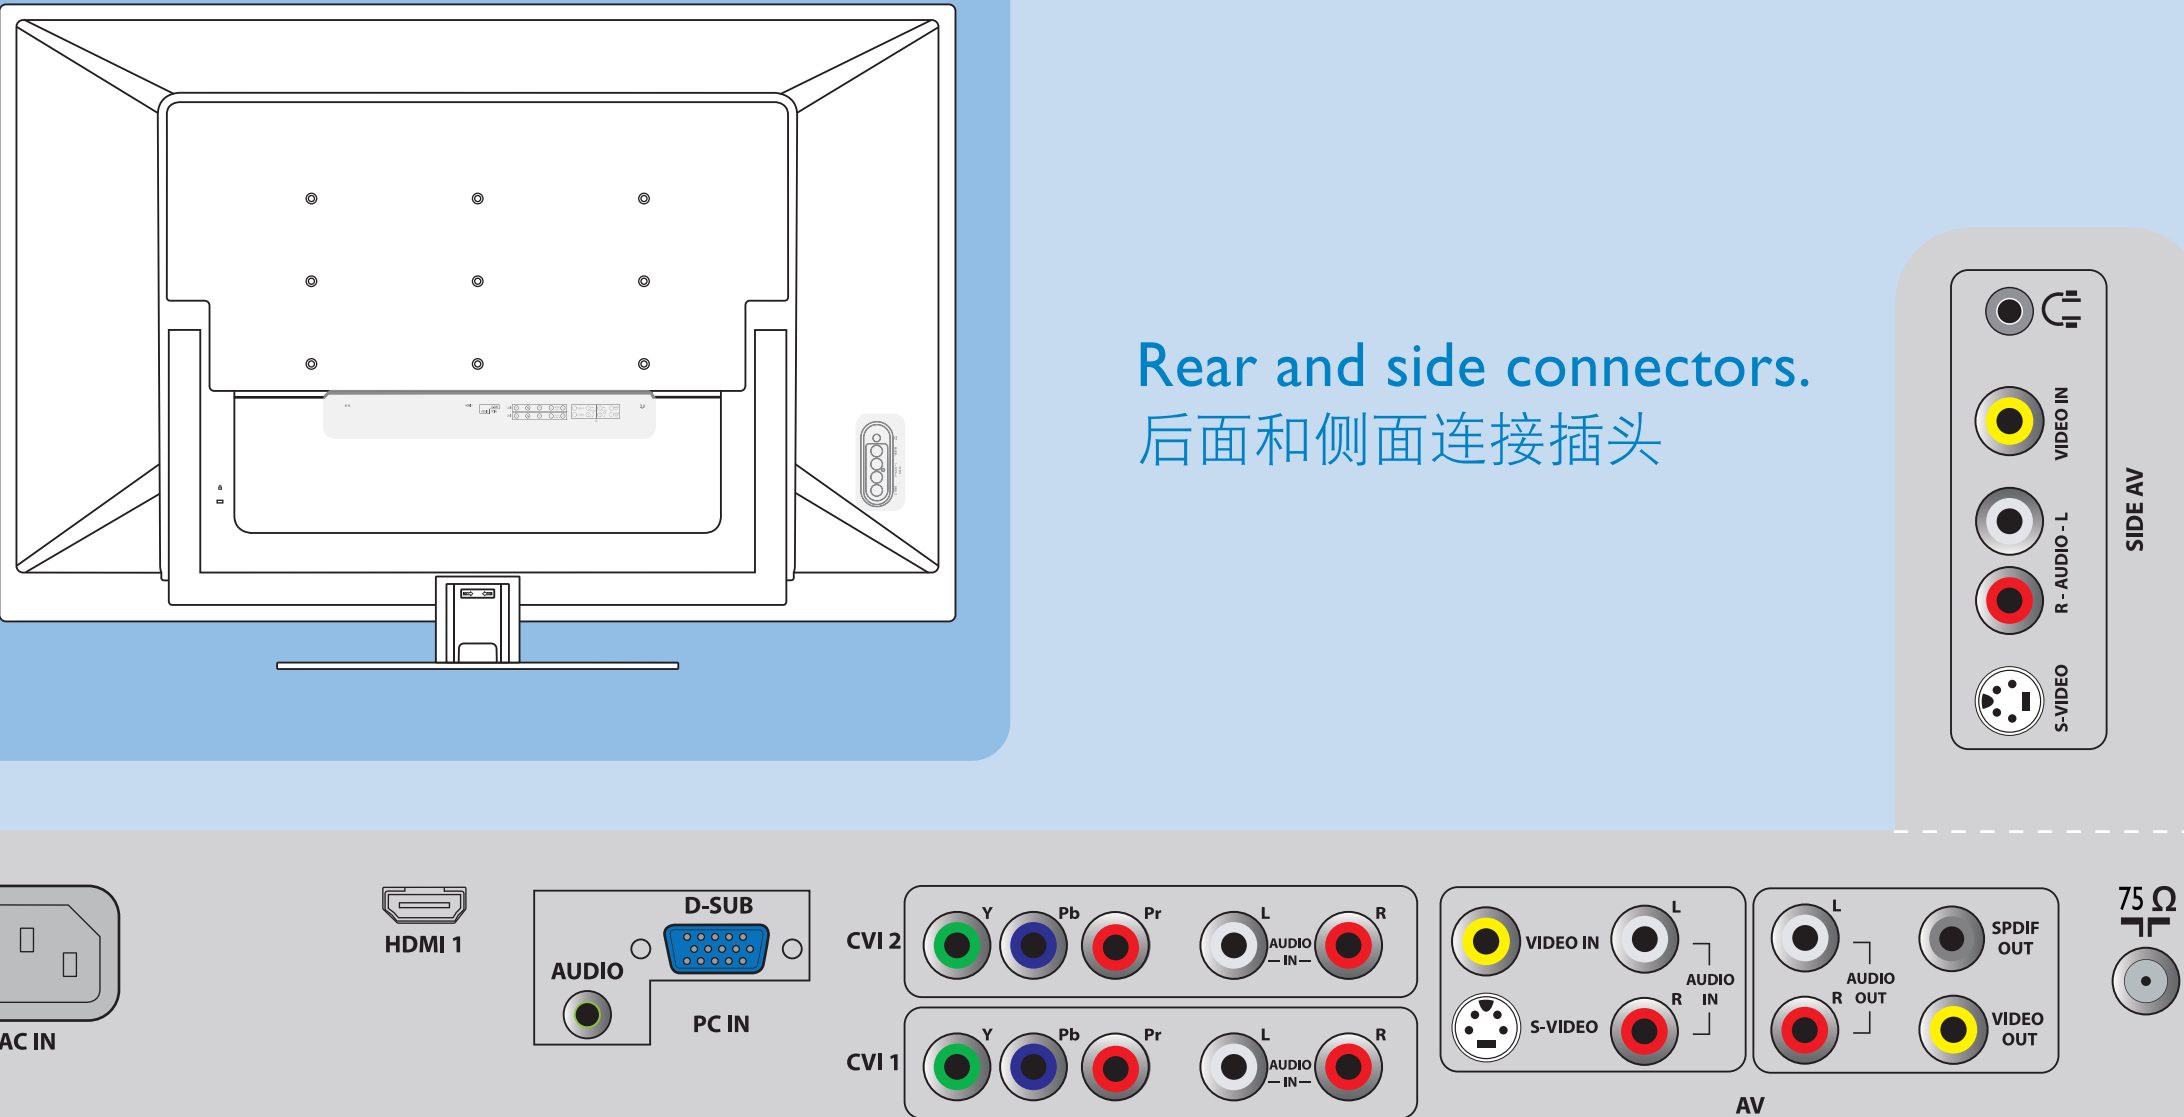

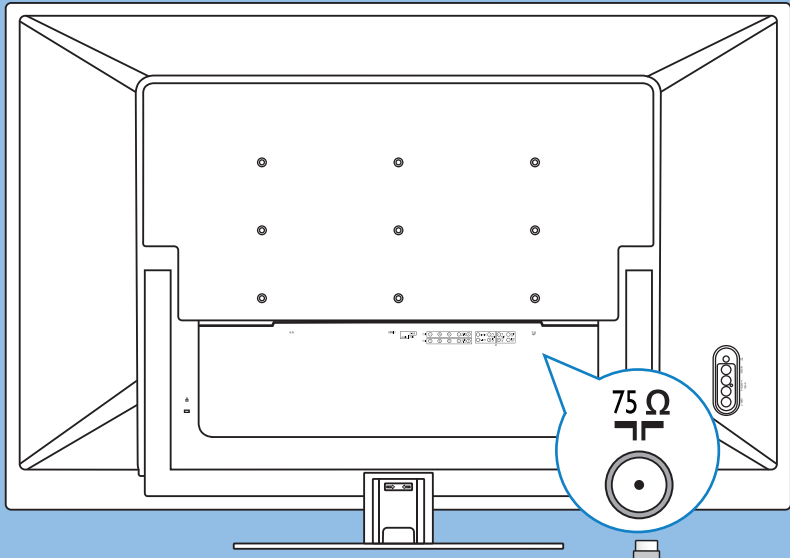

Antenna or Cable

The manufacture accepts no liability for damage of improper installation.
Any question, please consult your dealer or service center.
生产商对不当安装所造成的损失将不负任何责任。
如有疑问，请与销售商或服务中心联系。

Z4T7N015813 1A

Printed in China



www.philips.com

Specifications are subject to change without notice