

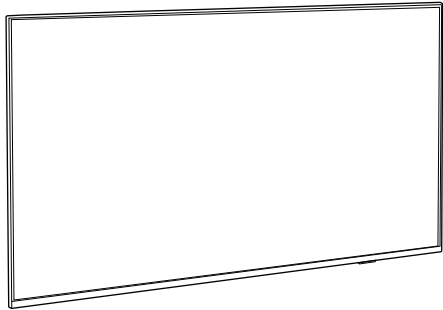
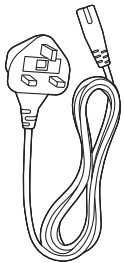
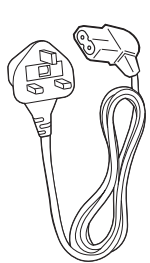



6654 系列
Quick Start Guide

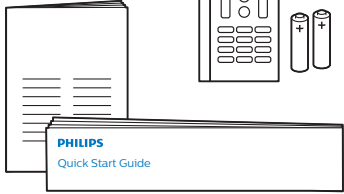


x4

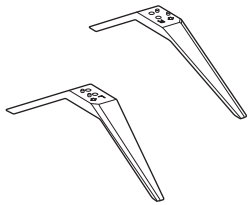


A

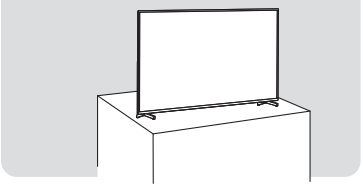

B

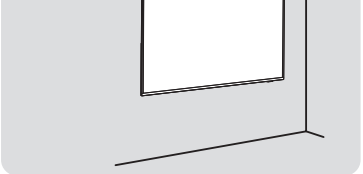


A

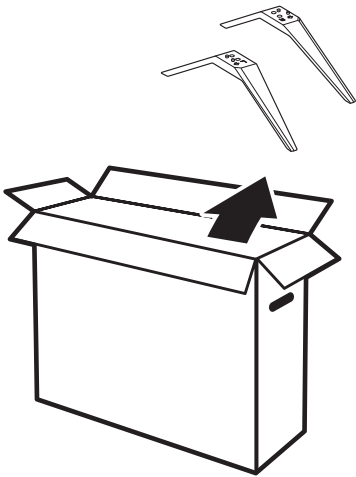


x4


1

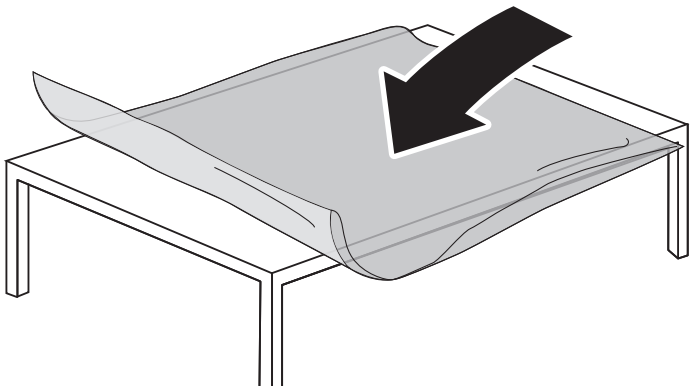


2

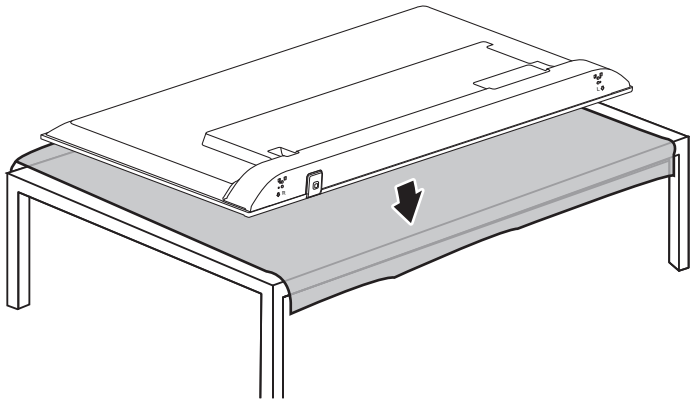


3

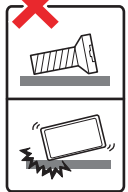


3

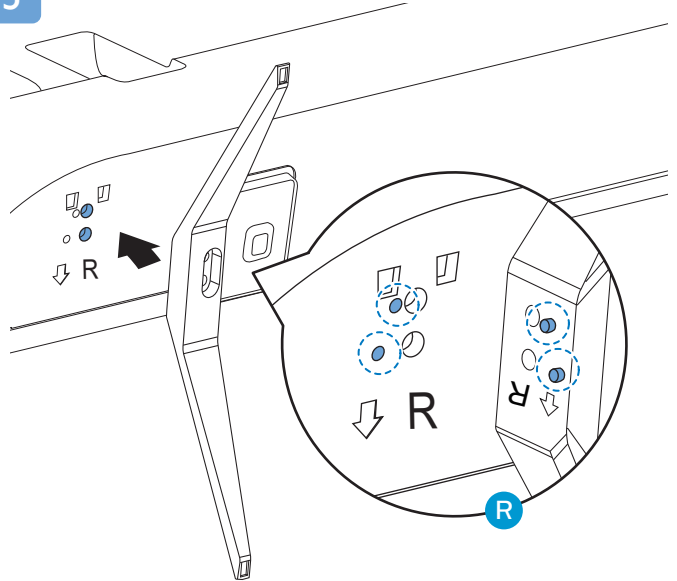


4

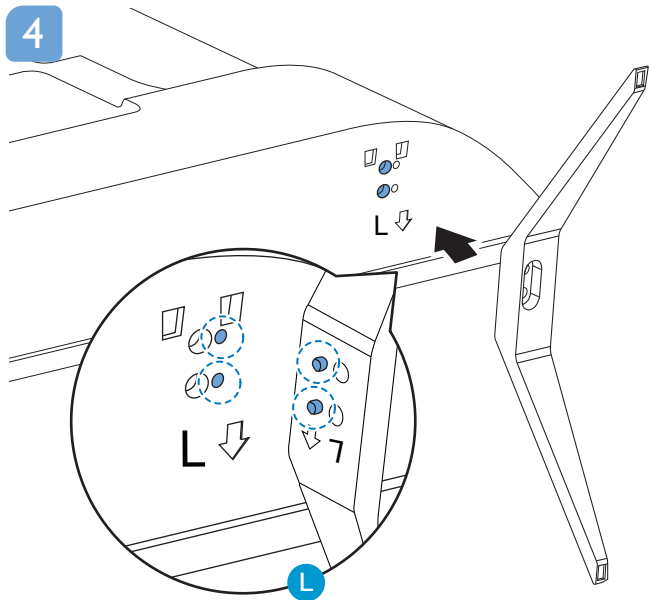


5

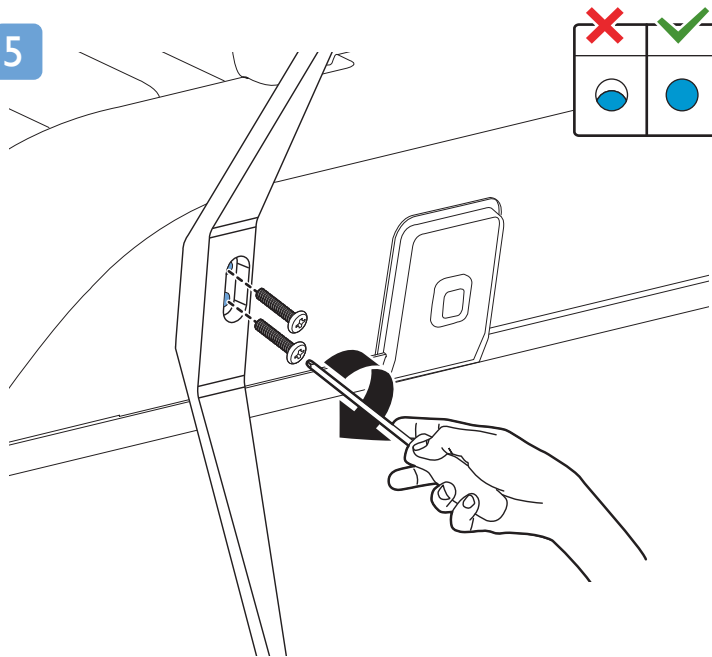

6

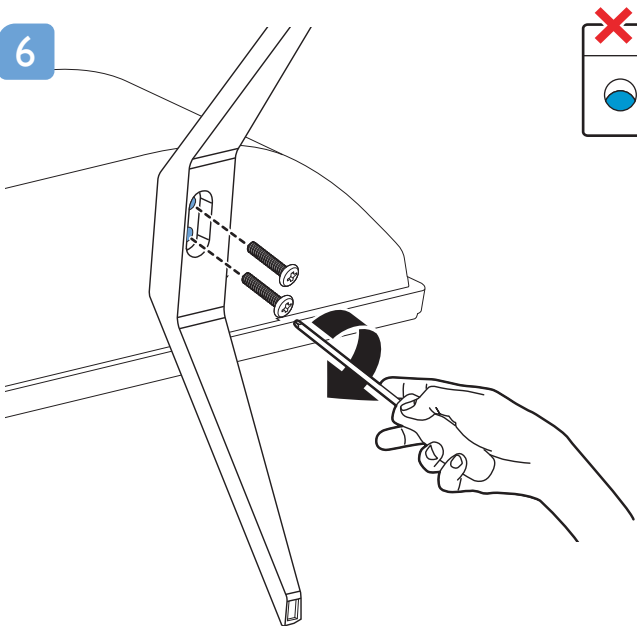

7

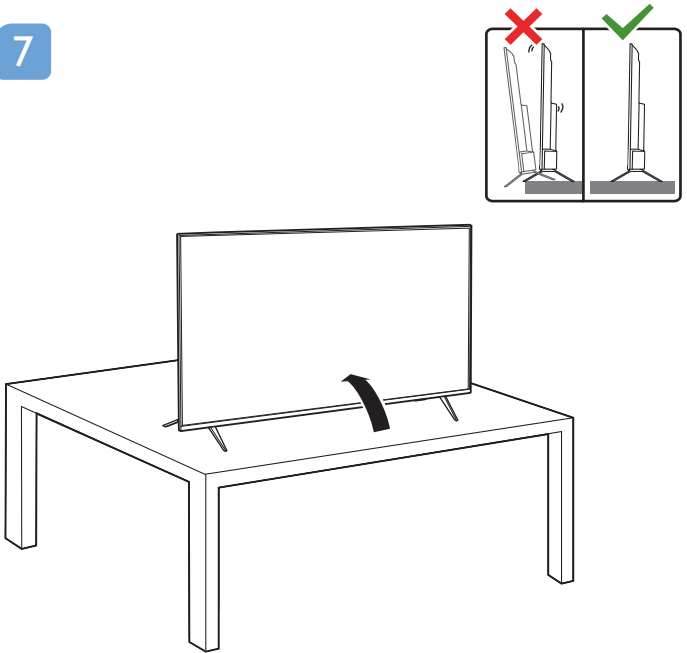




English Read the safety instructions.

繁體中文 請閱讀安全說明。




Register your product and get support at
www.philips.com/TVsupport

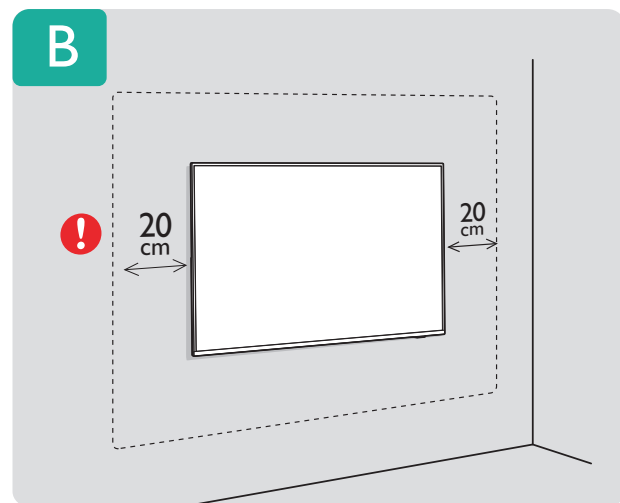




VESA (x, y)

50"	200x200mm M6	126 cm
55"	200x200mm M6	139 cm
58"	300x200mm M6	146 cm

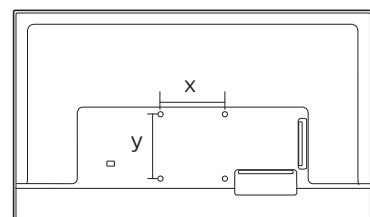

溫馨提示：壁掛安裝時，請先將機器壁掛鎖附位置的螺絲(已安裝)取出，此螺絲非標準壁掛螺絲，請勿使用。

 Kind Reminder: If you decide to wall mount your TV, kindly remove the existing screws from the TV back-cover first. These screws are not wall mounting screws and must be removed before you start any wall mount installation.

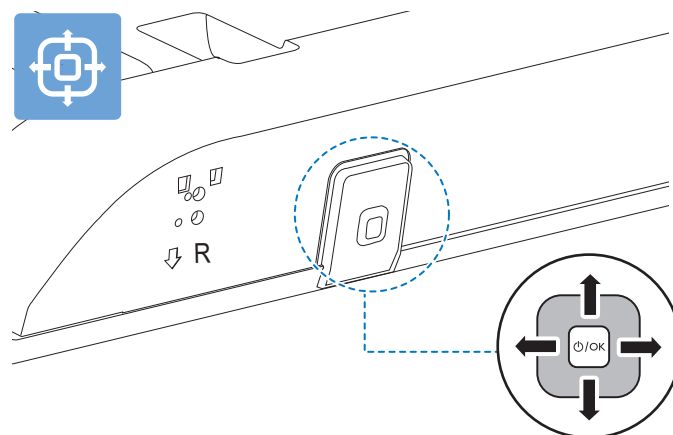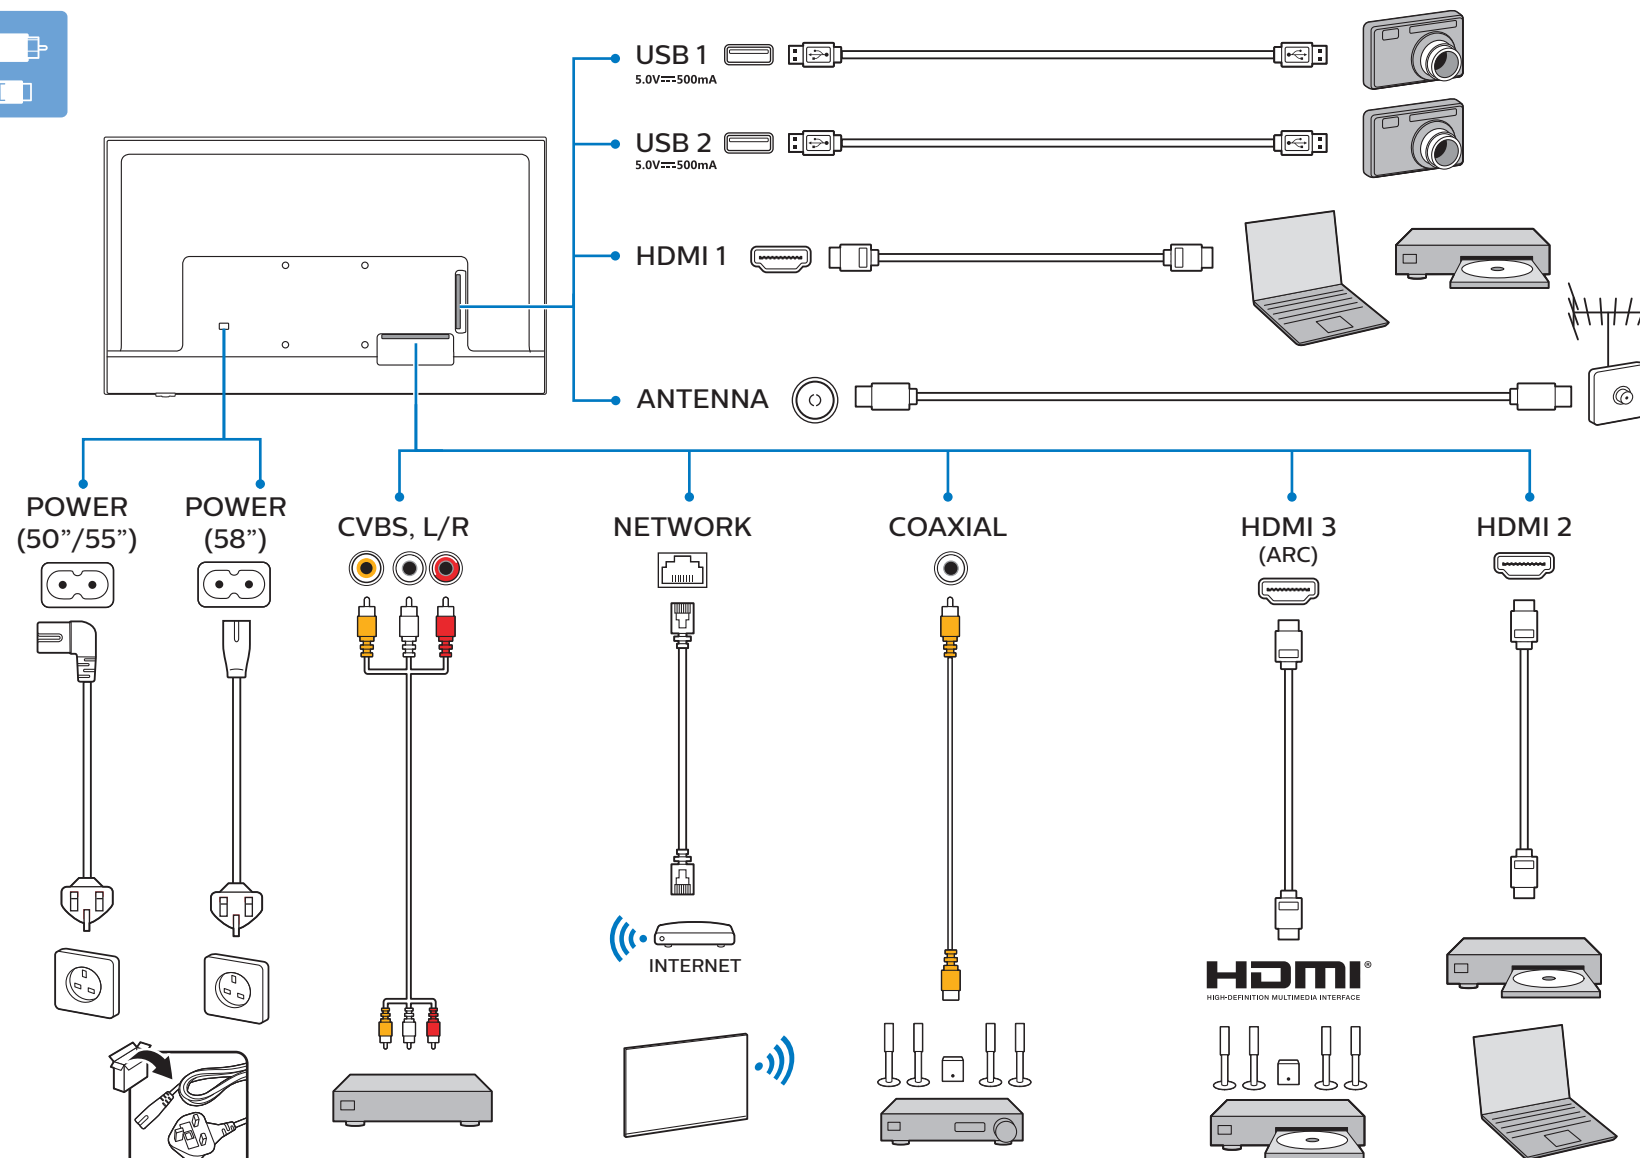

2x
AAA
1.5V

