



What's in the box 包装内的物品清单

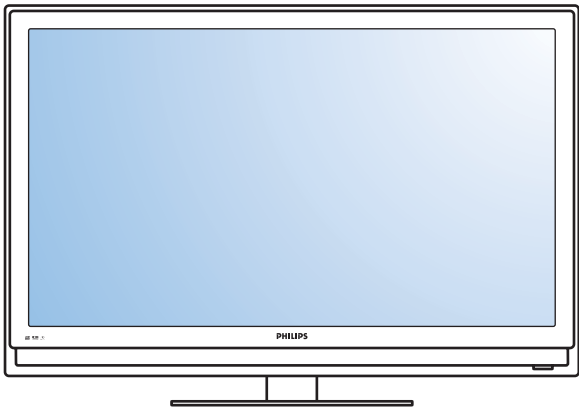


37PFL7422



Power cord
电源线

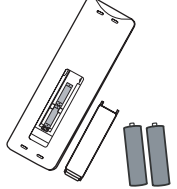

Remote Control & Batteries
遥控器和电池

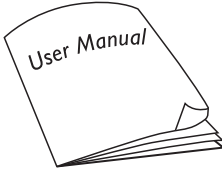


User Manual
用户手册



Warranty card
保修卡


Box I 包装盒1



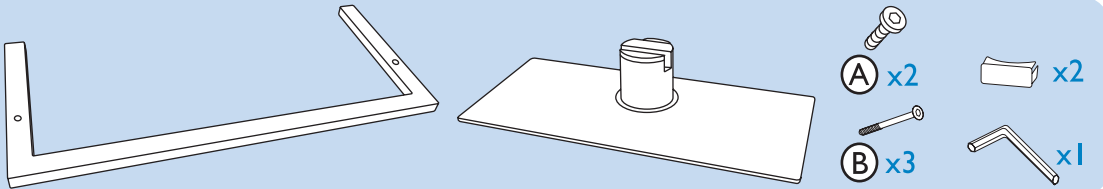

A x2
B x3

 What else you'll need 您所需要的物品




AC



X2




1 Open the box.
打开包装盒。

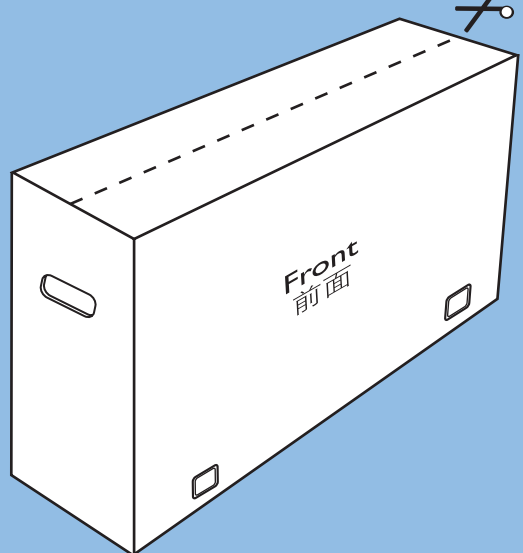


X2

2 Remove accessories from the box.
从包装盒中取出配件。

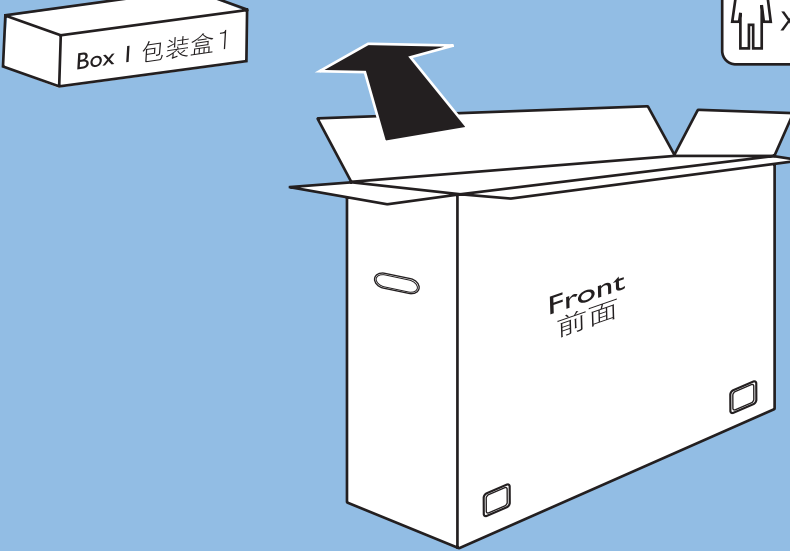


X2

3 Follow these steps to take the clips out.
按照下列步骤取下扣子。

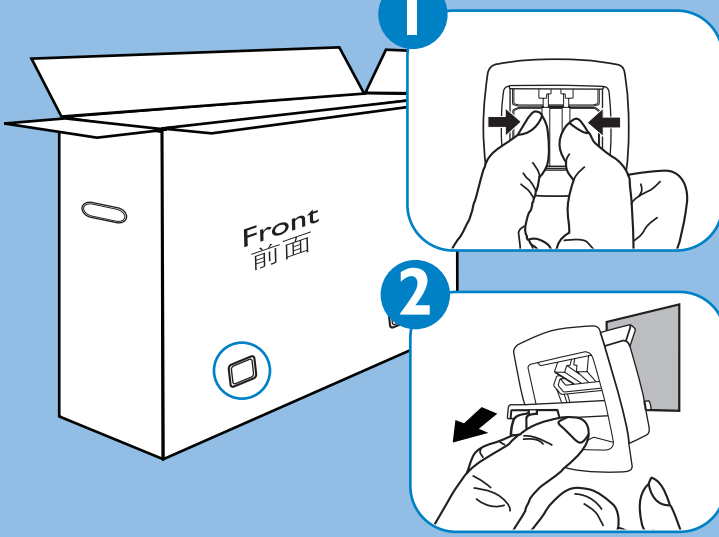

X2


4 Follow these steps to unfold the bottom of carton.
按照下列步骤展开下纸箱。

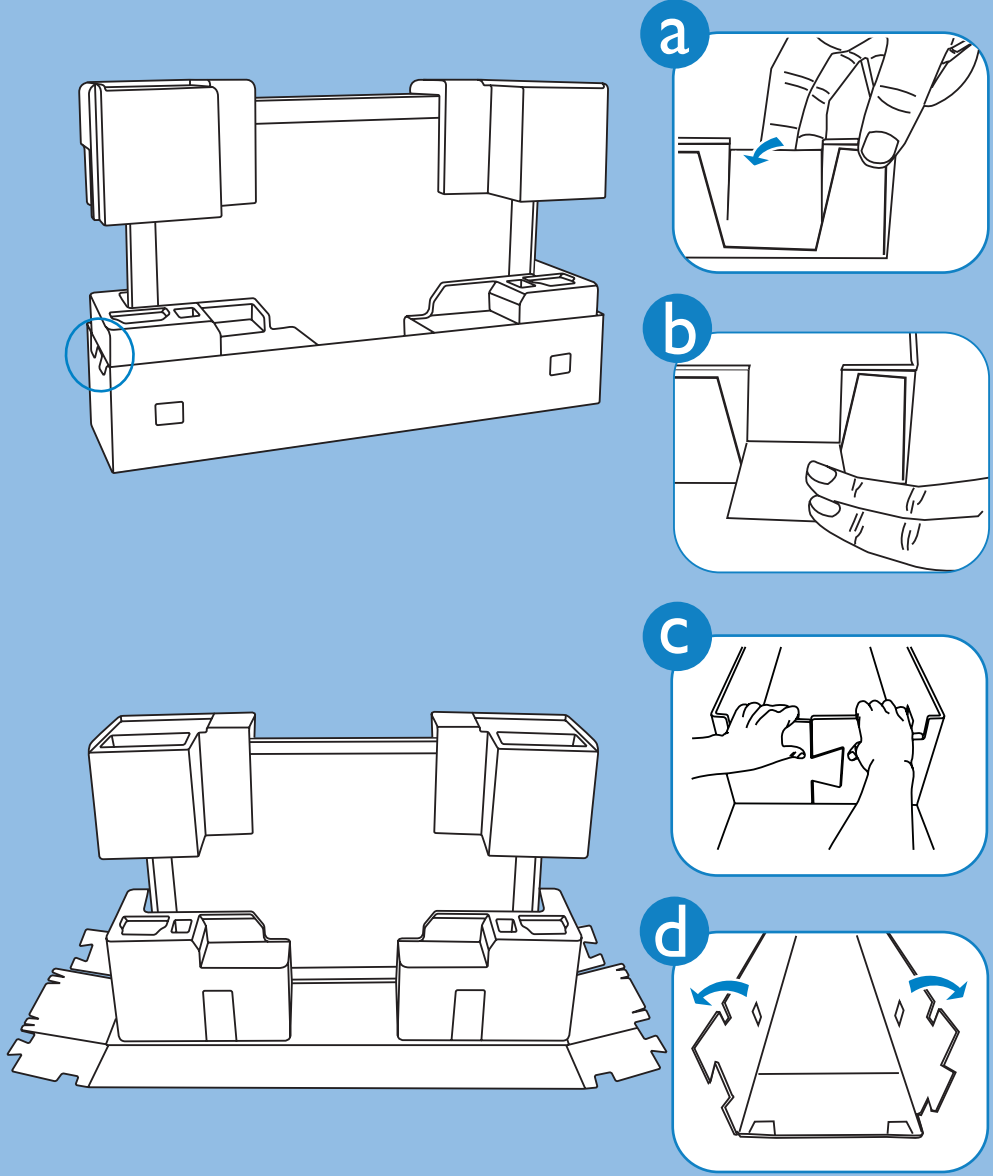

a
b
c
d

X2


5 Lie the TV down.
将电视机平放。

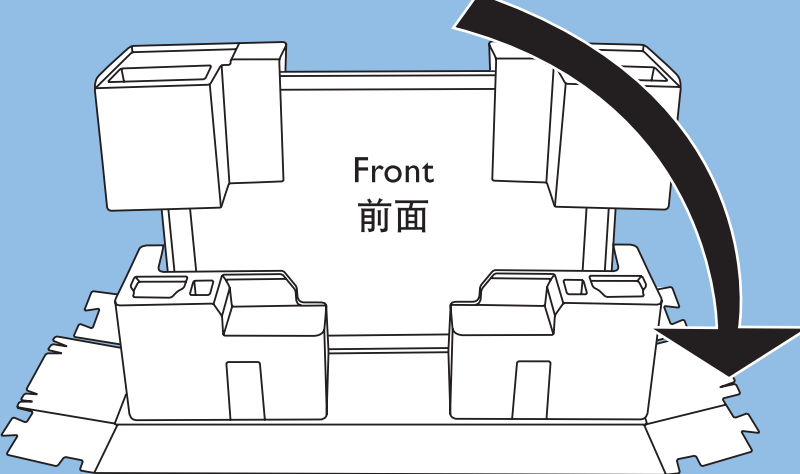

Front
前面


X2

6 Remove the cushion as picture shown.
取下图示小泡沫垫。

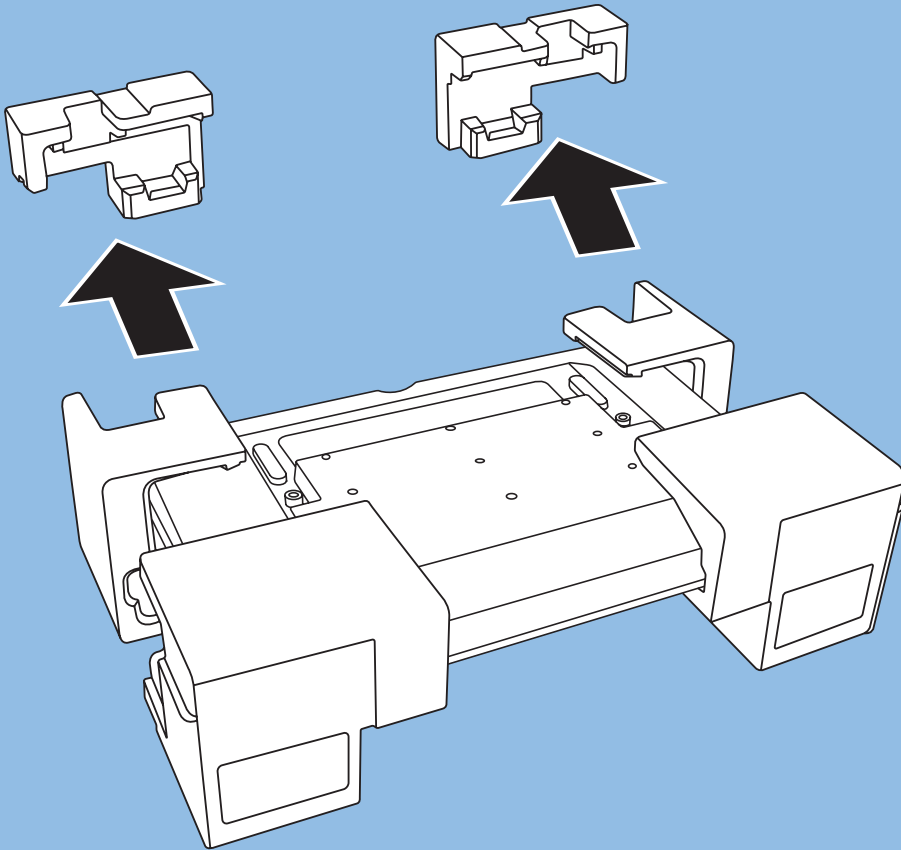

X2


7 Remove base accessories from the box and fix the frame with the base.
(For wall mounting, please turn over the page)
从包装盒取出底座配件，拴紧底座架。(墙式安装，请翻至后面。)

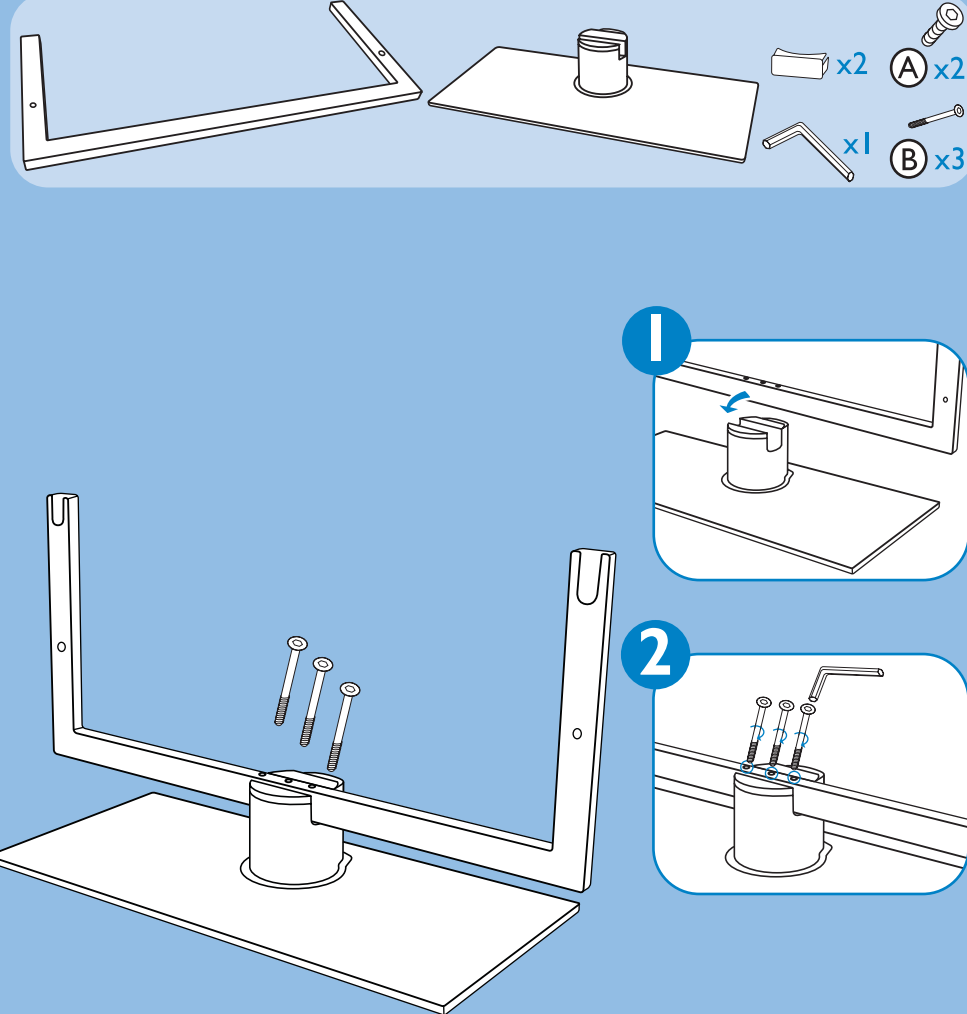

X2
B x3
A x2
B x3

1
2

8 Follow these steps to screw the base.
按照下列步骤拴紧底座架。

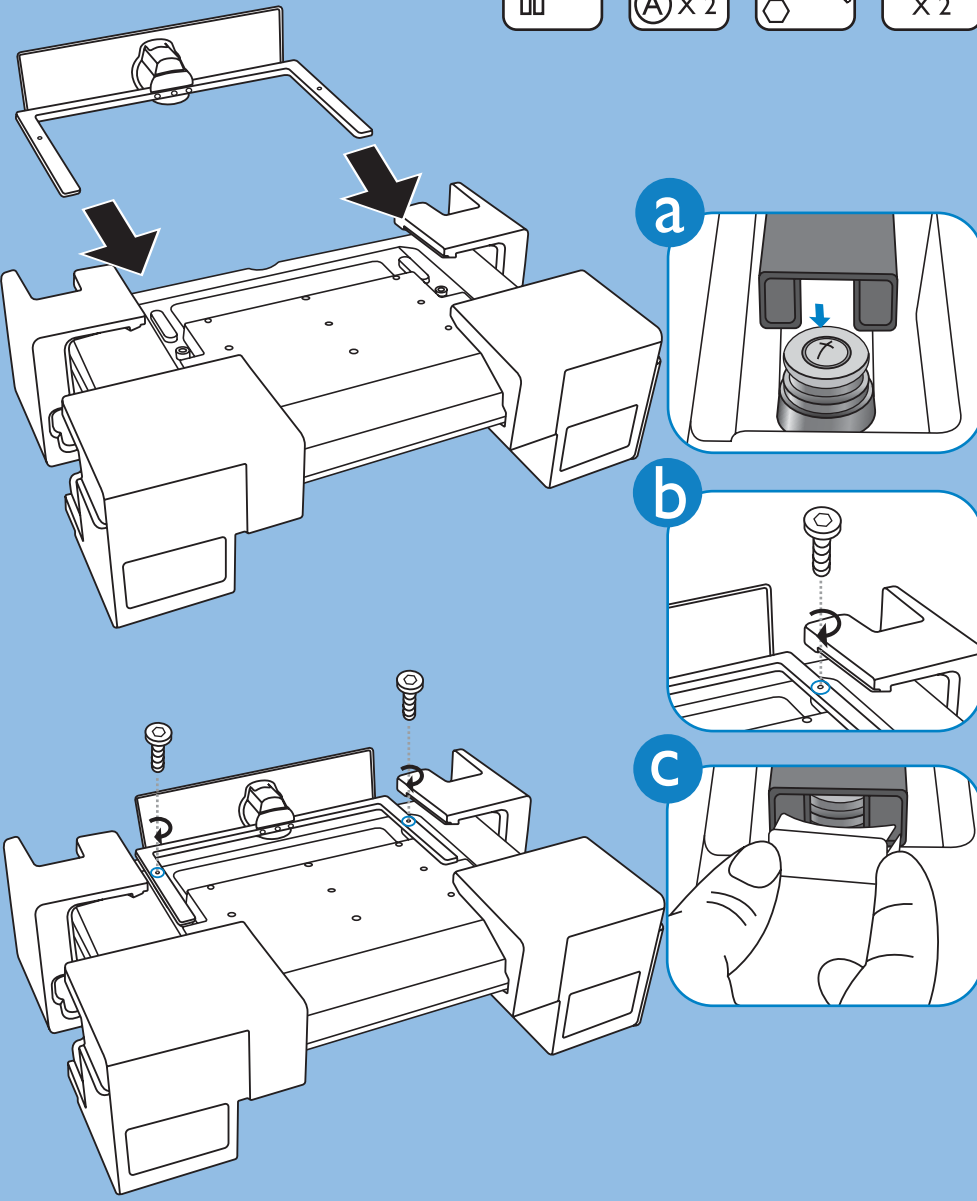


a
b
c

X2
A x2
X2


Lift the TV up
将电视机直立起。

9

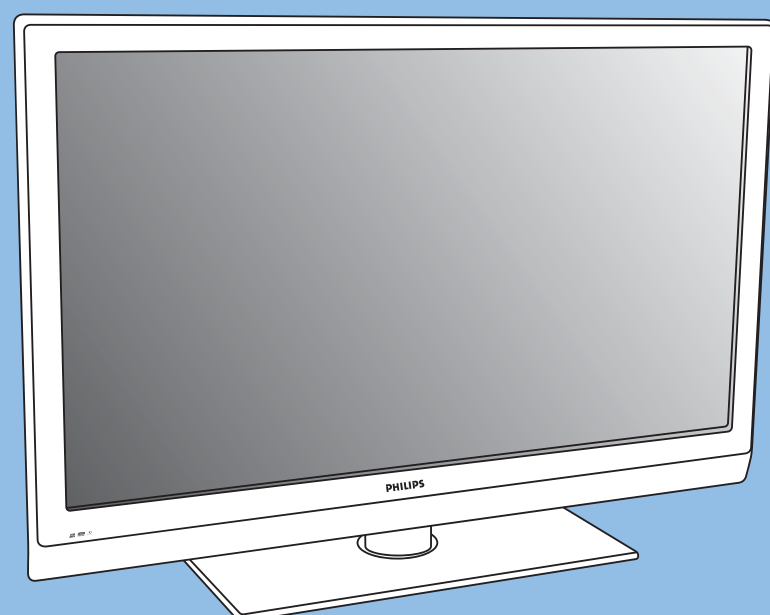


Switch the TV on.
打开电视机。

10

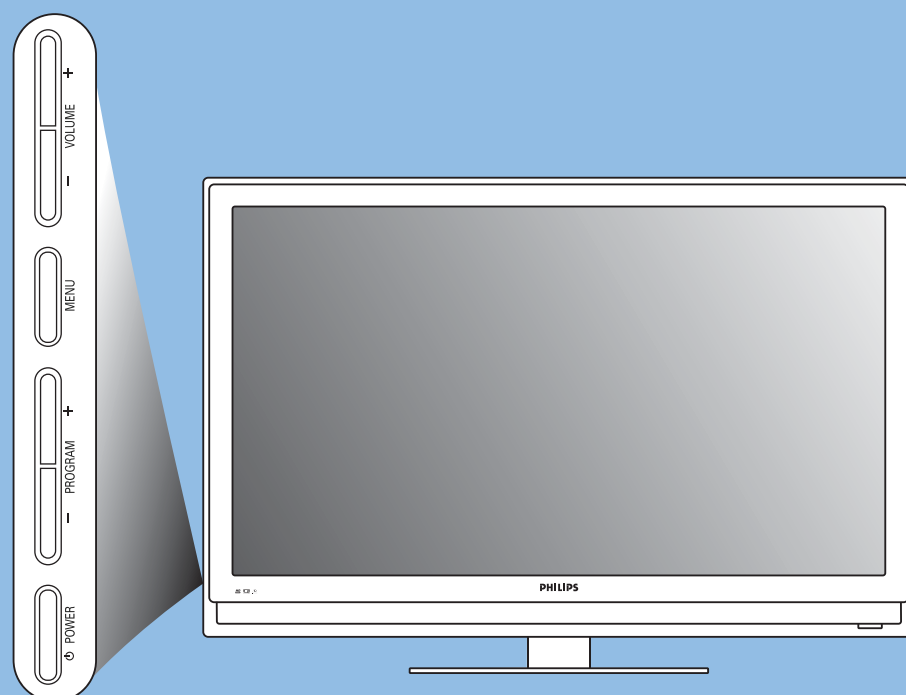

Place the batteries in the remote control.
将电池放入遥控器中。

11

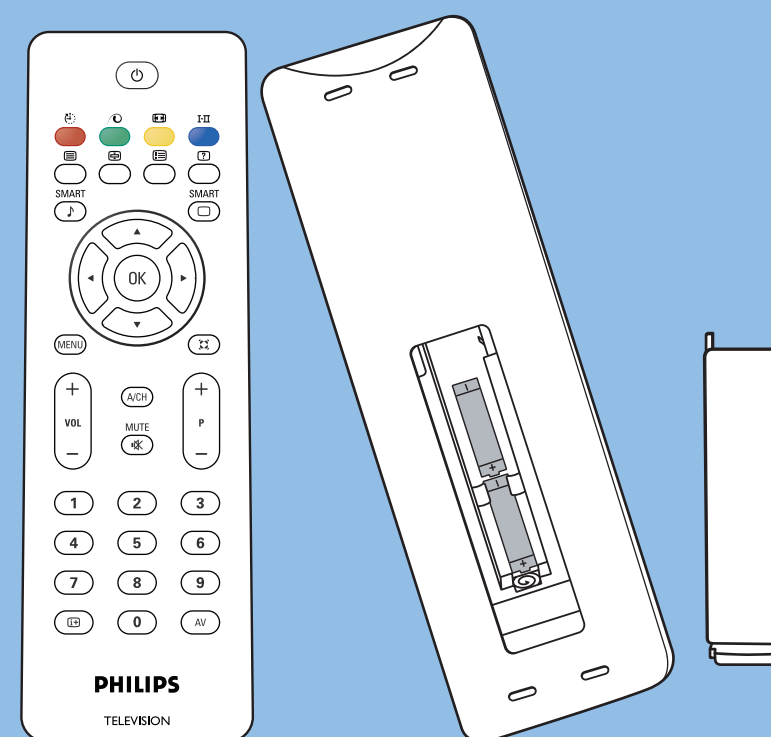

Welcome
欢迎





Read me
阅读我

Auto Store 自动搜寻

Immediately after unpacking and plugging in your new television, run the auto store function to set up the TV for the antenna or cable channels available in your area. If you do not run the auto store function to set up the channels, your television may not operate properly. (See User Manual page 10.)

在打开包装并连通这台新电视的电源后，立即进行自动搜寻功能设置电视，使其记忆您所在的地区可用的天线或有线电视频道。如果不进行自动搜寻功能设置频道，电视可能无法正常工作。（参见用户手册第10页。）

Rear and side connectors. 后面和侧面连接插头

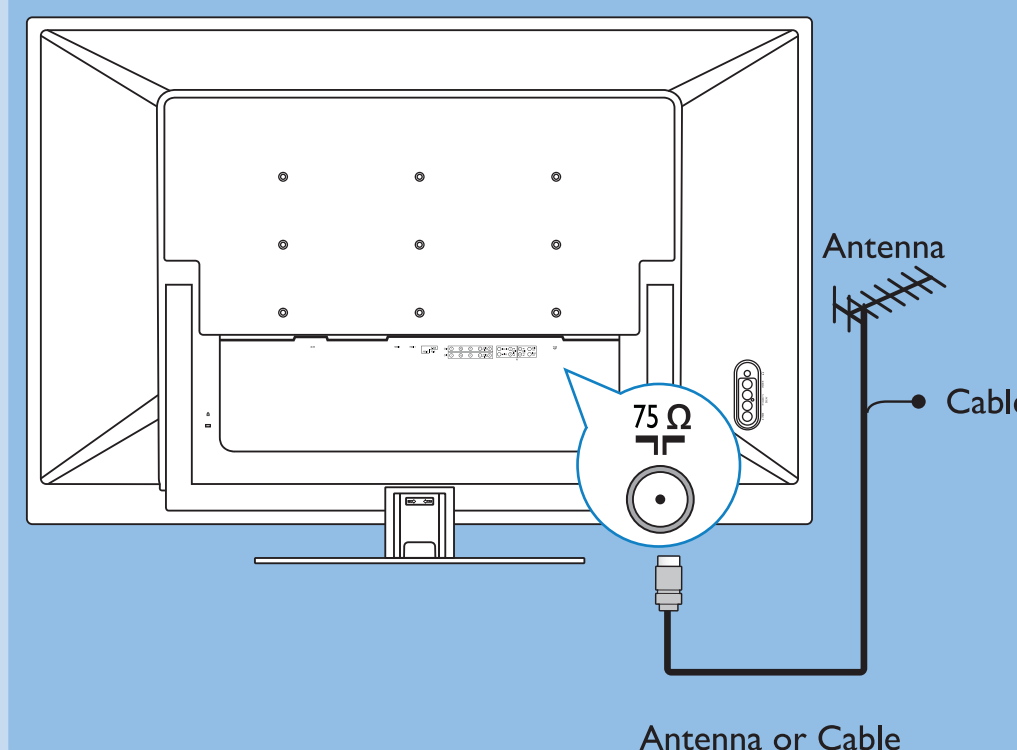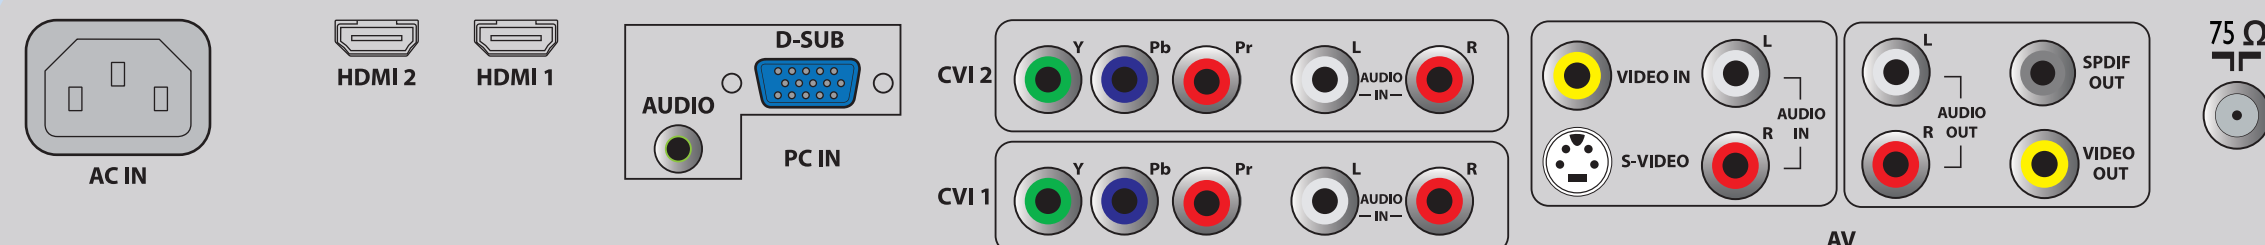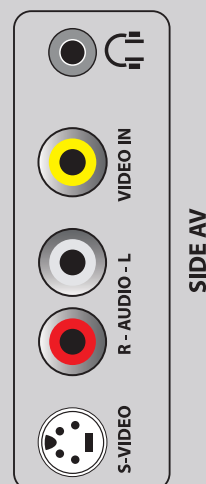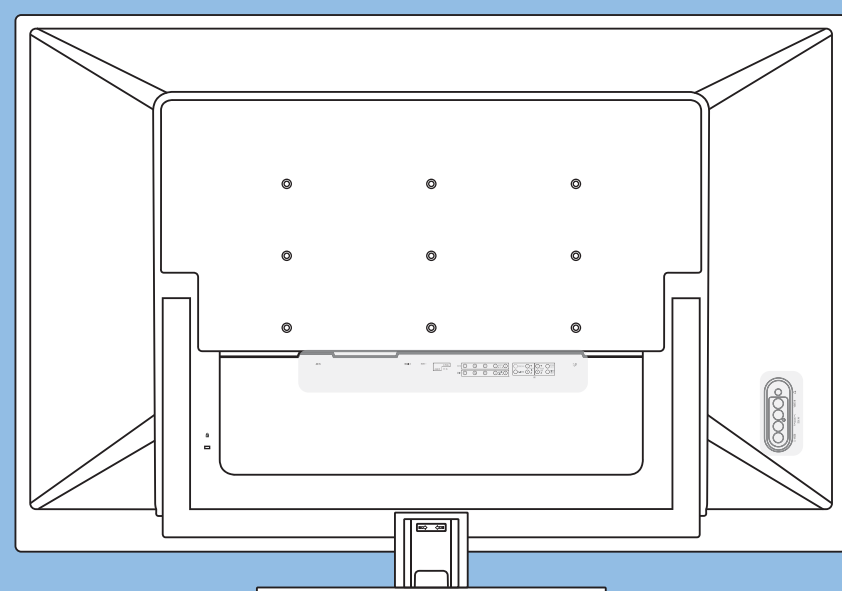

The manufacture accepts no liability for damage of improper installation. Any question, please consult your dealer or service center. 生产商对不当安装所造成的损失将不负任何责任。如有疑问，请与销售商或服务中心联系。

PA1101SB13 1/A



Printed in China

www.philips.com

Specifications are subject to change without notice