



What's in the box 包装内的物品清单

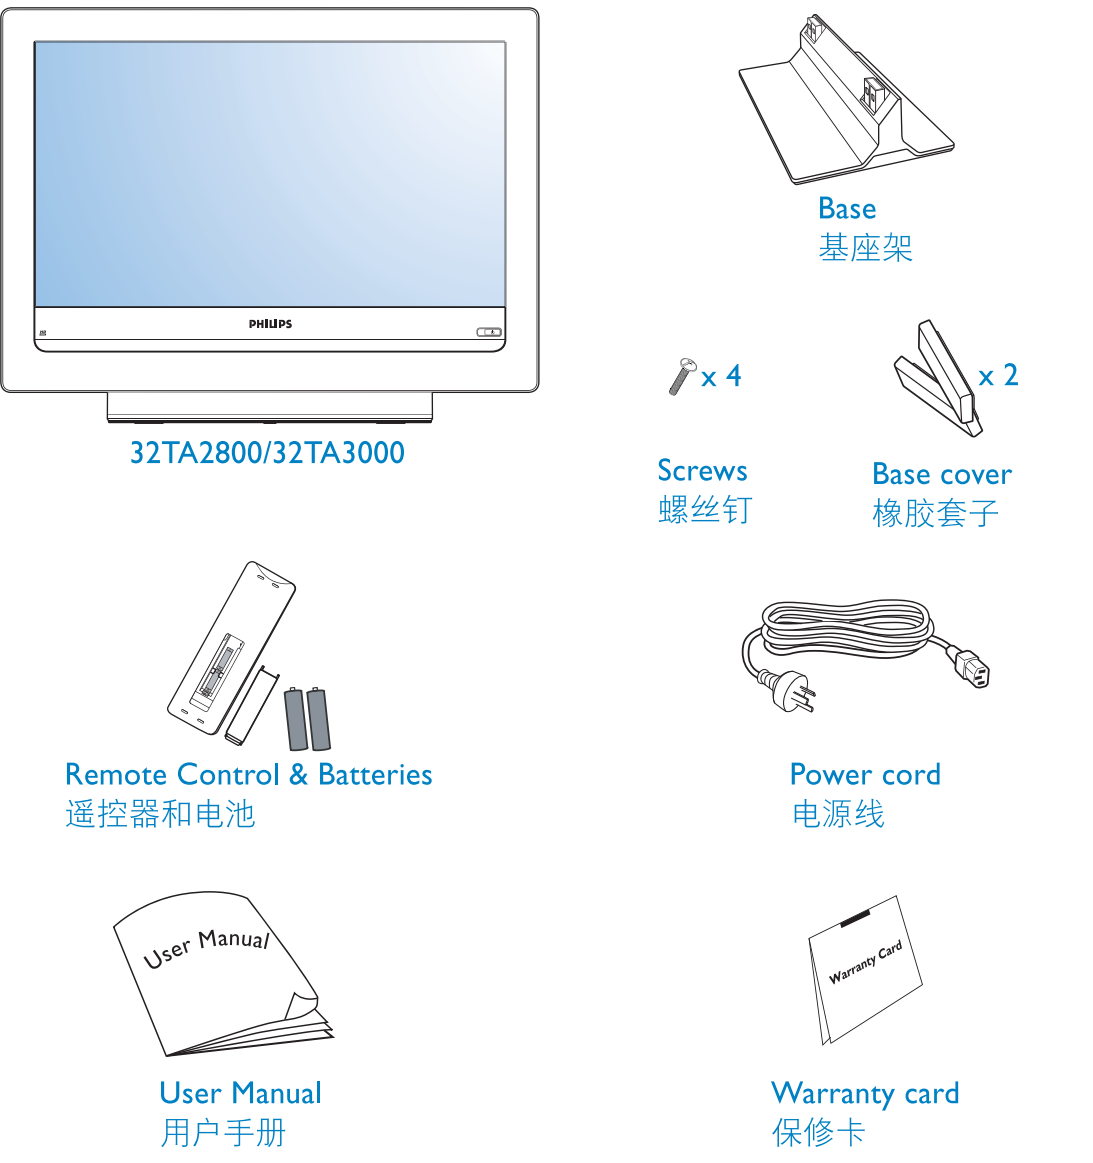

What else you'll need 您所需要的物品

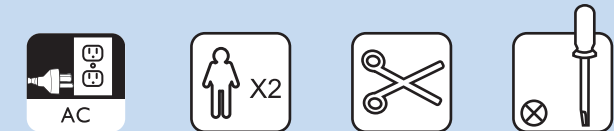

1 Open the box.
打开包装盒。

2 Remove accessories from the box.
从包装盒中取出配件。

3 Take the cushion out.
取出小泡沫垫。

4 Remove the base.
取出底座架。

5 Remove the TV from the box.
从包装盒中取出电视机。

6 Put the TV face down on a soft and smooth surface, such as newspaper or PE bag. 将电视机面朝下放在柔软且平滑的表面上，如报纸或珍珠袋。

7 Follow these steps to screw the base.
按照下列步骤拧紧底座架。


a

b

8 Tear off the protective film and switch the TV on.
揭开保护胶片和打开电视机。

⚠ A special film protects the frame of your TV during transit and installation. Please don't remove the protective film until the TV is set up.
在运输及安装过程中使用了一个特殊的胶片来保护电视机。在未安装好电视机前，请勿将保护胶片揭开。

9 Place the batteries in the remote control.
将电池放入遥控器中。

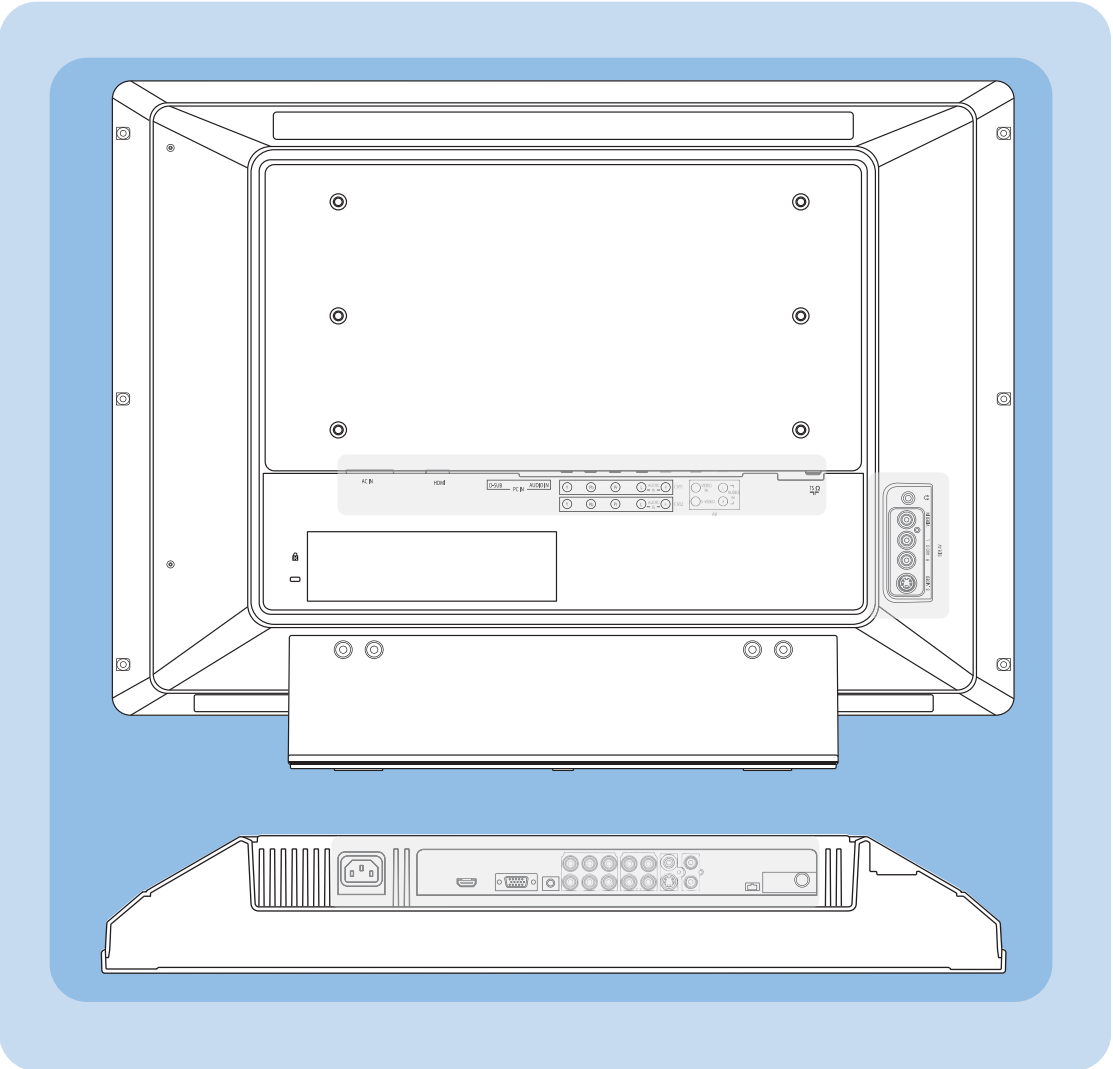


Rear and side connectors.
后面和侧面连接插头



Auto Store 自动搜寻

Immediately after unpacking and plugging in your new television, run the auto store function to set up the TV for the antenna or cable channels available in your area. If you do not run the auto store function to set up the channels, your television may not operate properly. (See User Manual page 10.)

在打开包装并连通这台新电视的电源后，立即进行自动搜寻功能设置电视，使其记忆您所在的地区可用的天线或有线电视频道。如果不进行自动搜寻功能设置频道，电视可能无法正常工作。(参见用户手册第10页。)

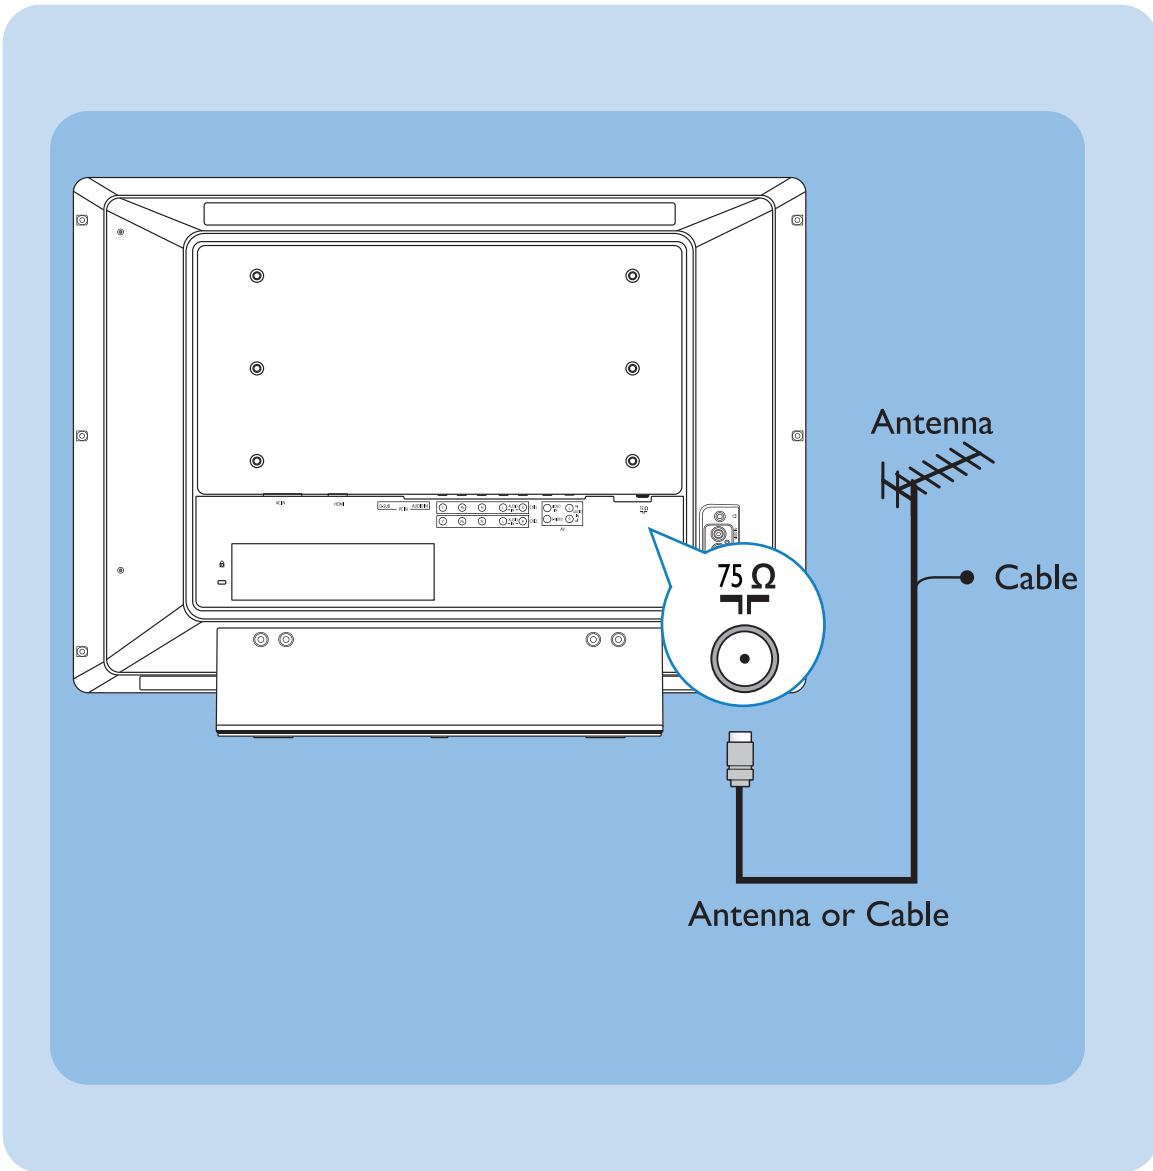

Welcome
欢迎

Read me
阅读我

Wall mounting 墙式安装

When installing the LCDTV on the wall, please consult a professional technician for proper installing. The manufacture accepts no liability for installations not performed by professional technician.

将液晶电视挂在墙上时，请咨询专业技术人员以了解正确的安装方式。制造商对于非专业人士进行的安装不承担任何责任。

The manufacture accepts no liability for damage of improper installation. Any question, please consult your dealer or service center.
生产商对不当安装所造成的损失将不负任何责任。如有疑问，请与销售商或服务中心联系。

