


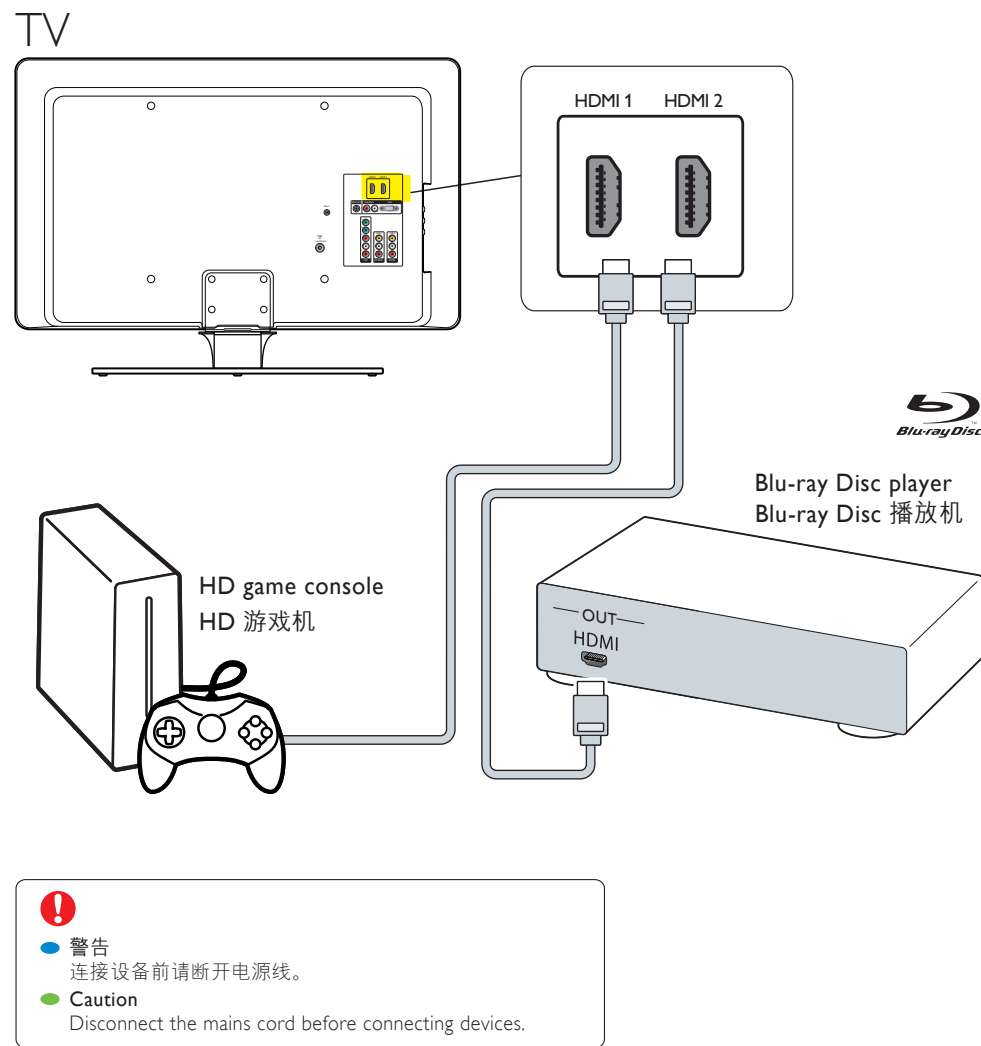

Blu-ray Disc player, HD game console

● Blu-ray Disc 播放机、HD 游戏机




Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners.
2008 © Koninklijke Philips Electronics N.V. All rights reserved.
www.philips.com

3139 725 40B51




DVD player, home theatre system, other audio system

● DVD 播放器、家庭影院系统、其它音频系统

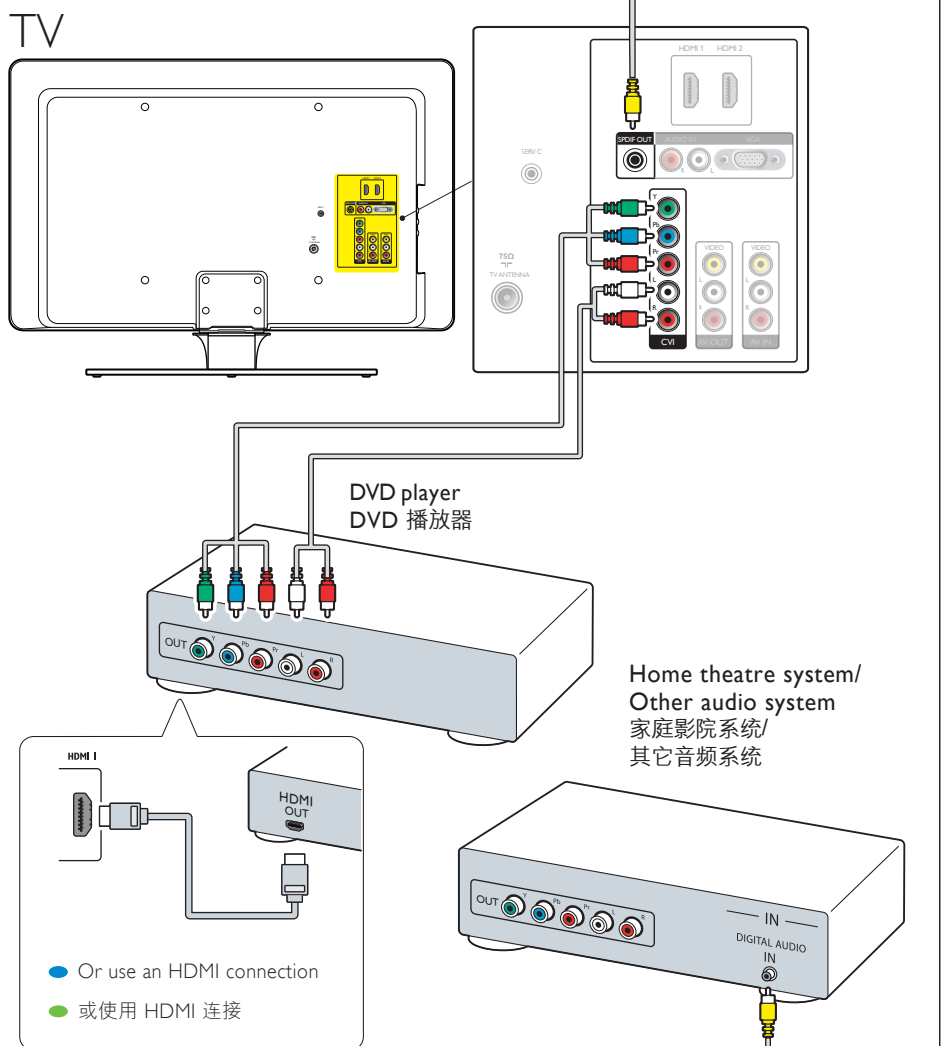


DVD recorder, cable receiver

● DVD 录放机、有线接收机

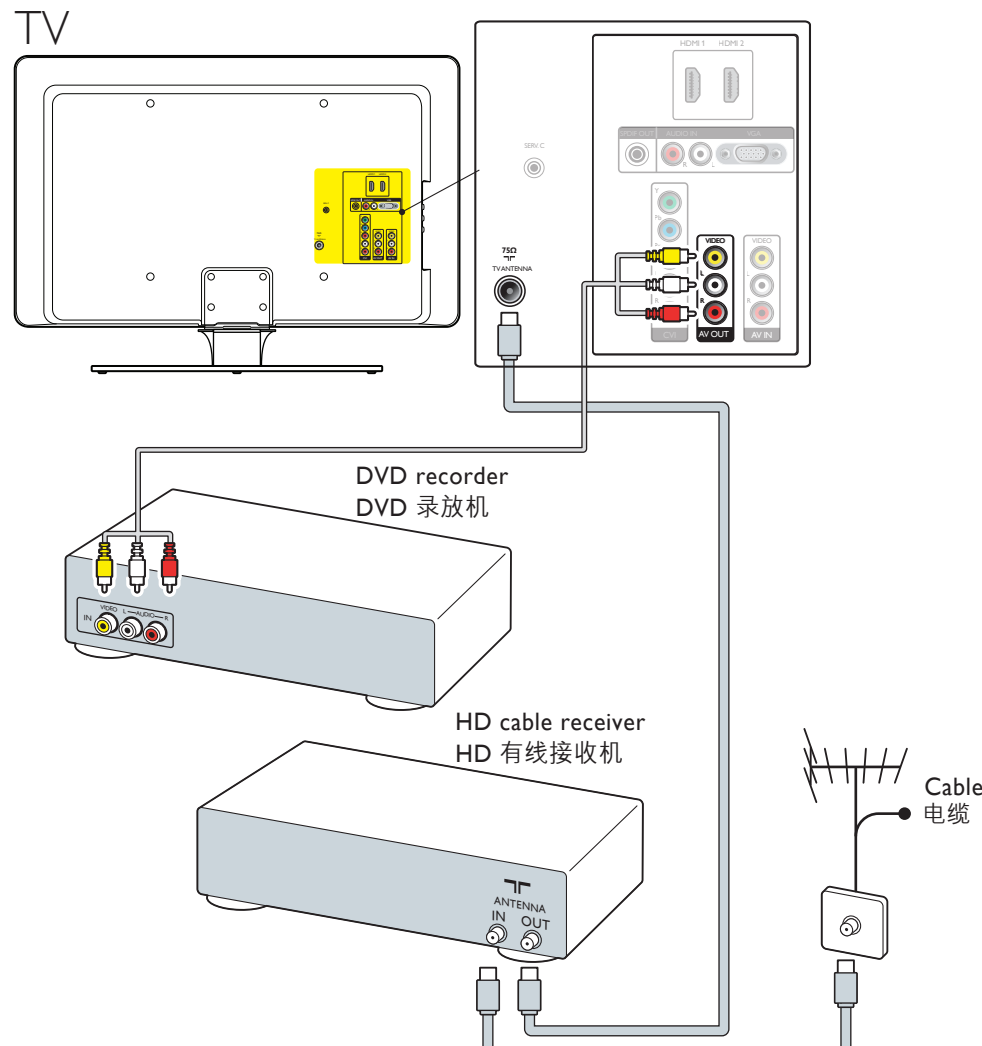

HD camcorder, headphones, game console, camcorder, PC

● HD 摄录机、耳机、游戏机、摄录机、PC

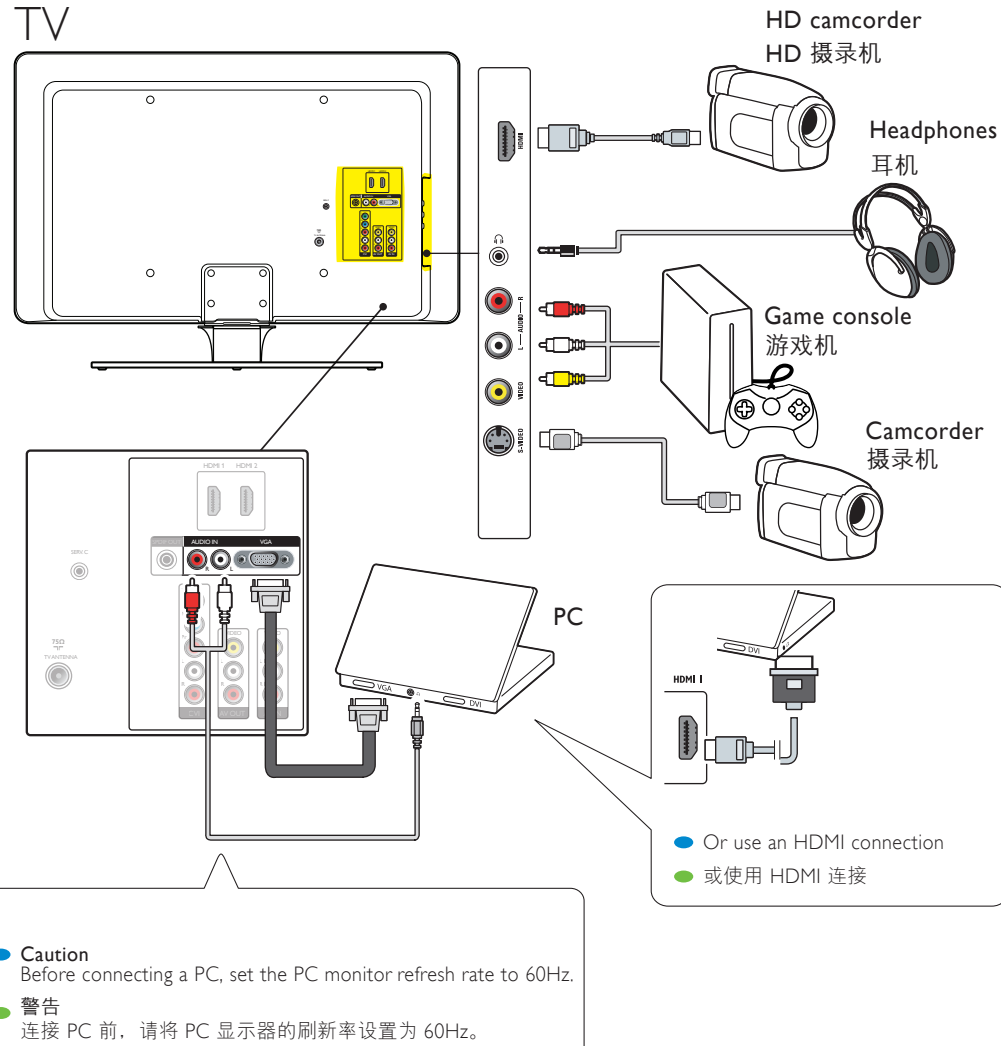

Register your product and get support at:
www.philips.com/welcome

Quick Start


EN Installation

ZH 设定

PHILIPS


What's in the box

● 包装清单

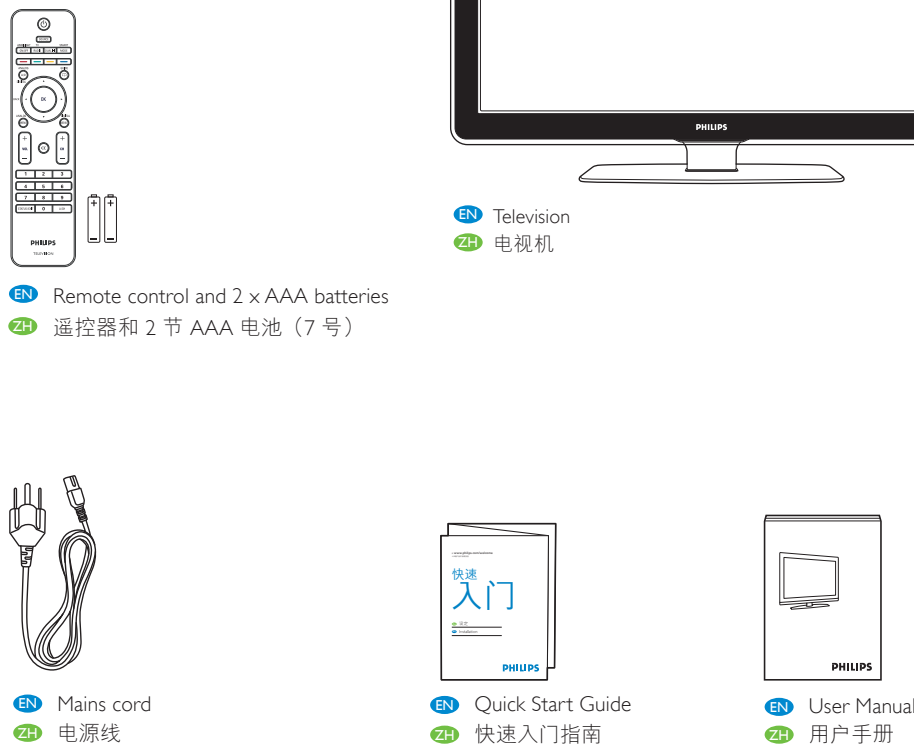


Remove the swivel lock

● 移除旋转锁

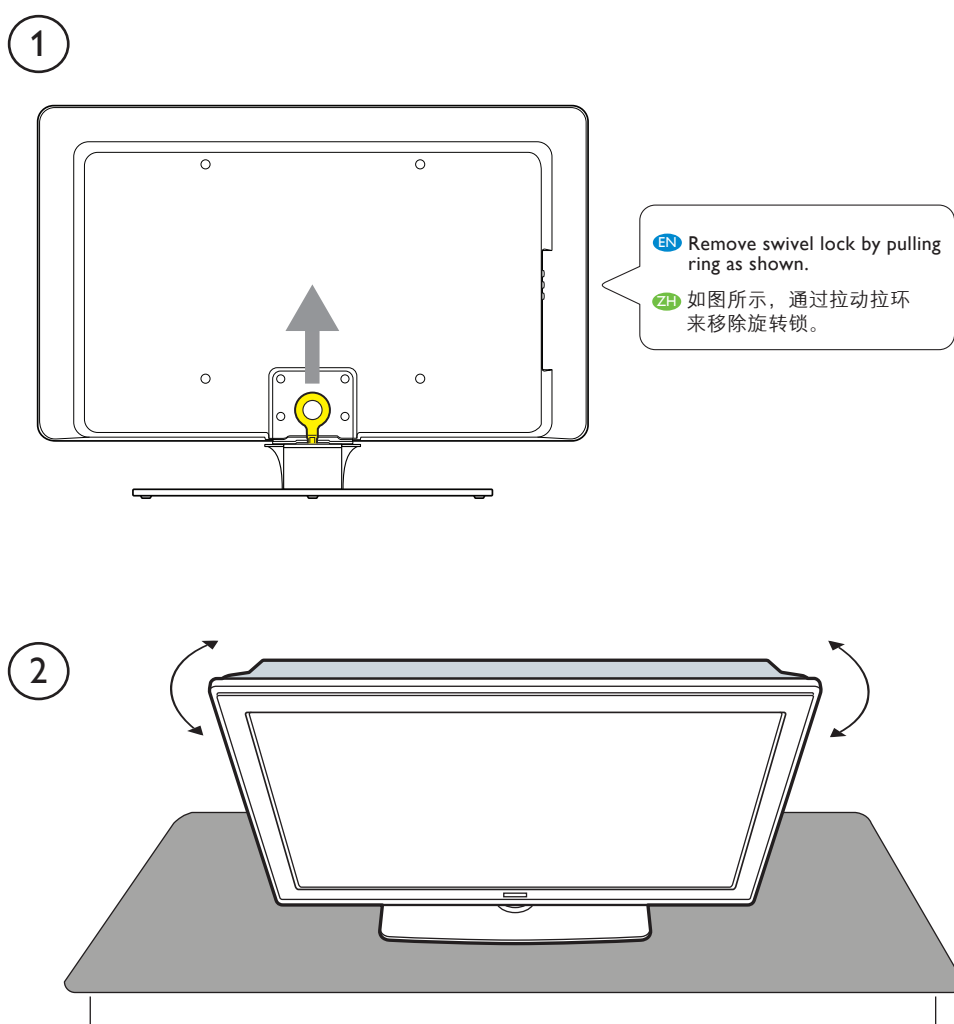

Connect the mains* and antenna


● 连接电源*和天线

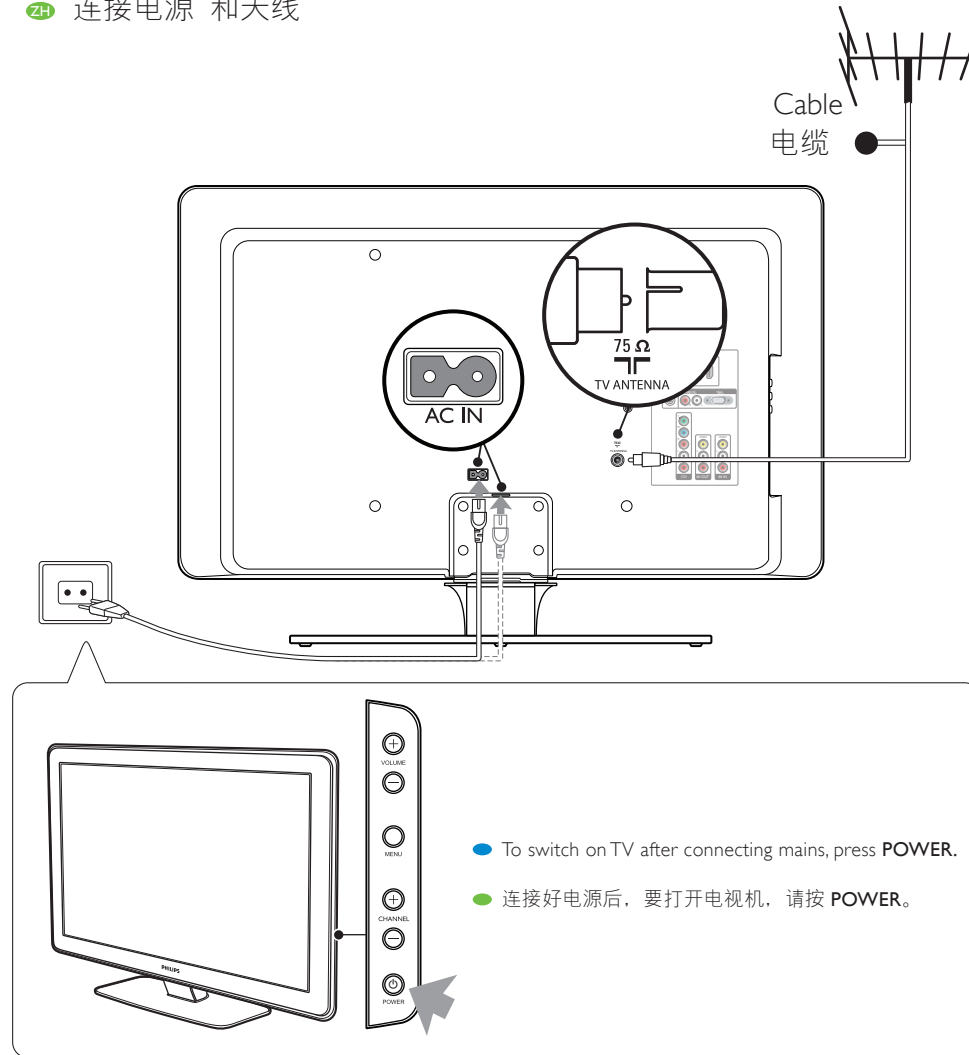

*
● Position of AC IN varies according to TV model
● AC IN 的位置因电视机型号而异


Ambilight setup

● 流光溢彩设置

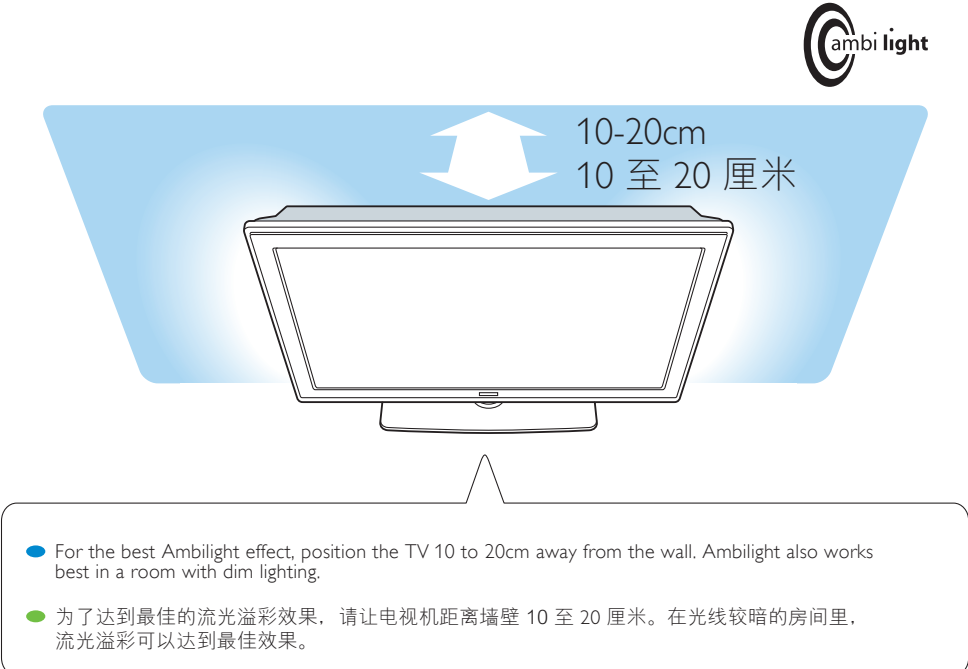

Use the remote control

● 使用遥控器

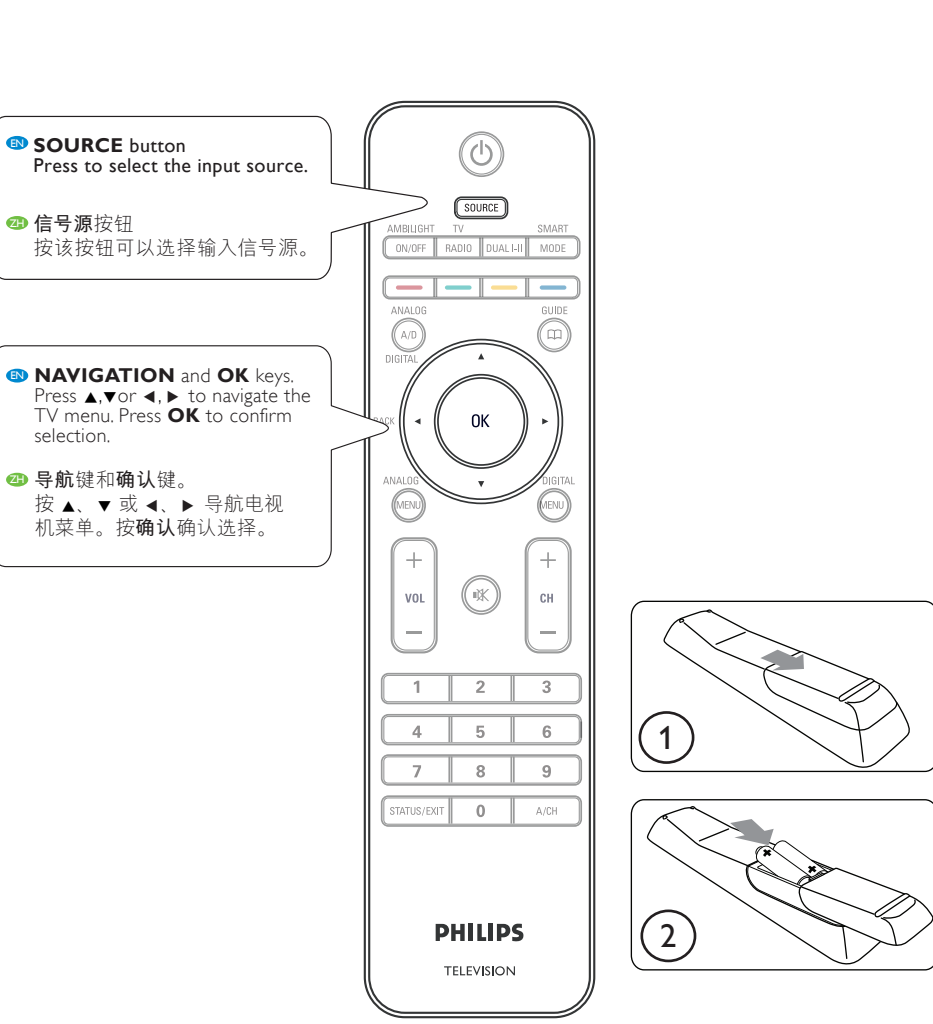

Install for the first time

● 第一次安装

