Register your product and get support at ... www.philips.com/welcome




# Quick Start

Installation





# What's in the box

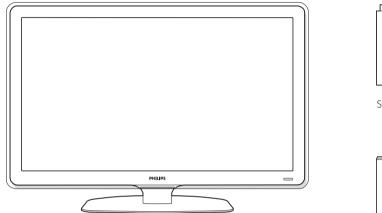

Television and stand



Start guide



User manual



Warranty information



Remote Control




Power cord and antenna cable





Scart - Cinch adaptor


# 1 Swivel stand

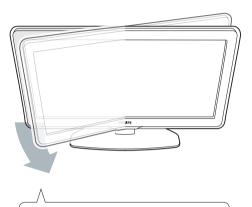


Remove the yellow brake at the back of the stand to allow the TV to swivel.

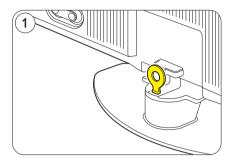


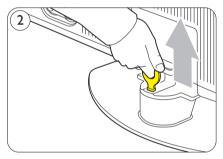

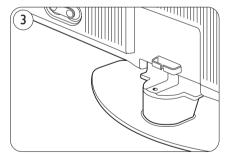

## 2 Remote control

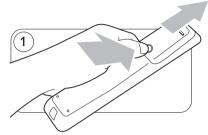

 

#### Navigation and OK key


Press  $\blacktriangle$ ,  $\checkmark$  or  $\triangleleft$ ,  $\triangleright$  to navigate the TV menu. Press the **OK** key to confirm your choice.




#### Colour coded keys


Press a colour key to select a task or choice shown on screen.




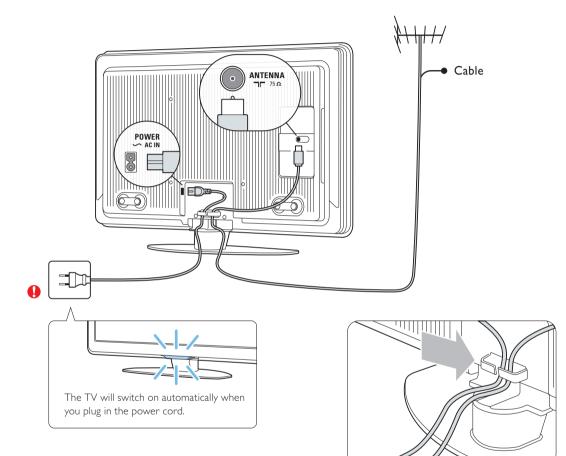

# 4 Installation

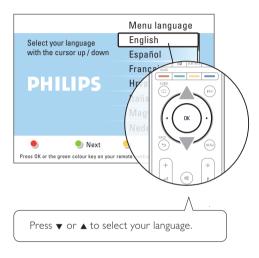

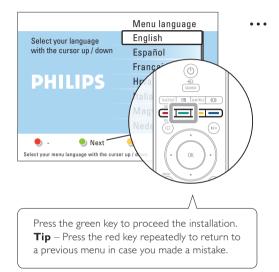

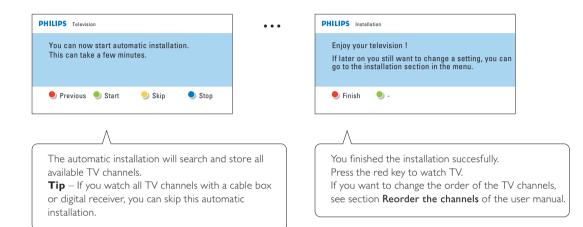


## Blu-ray Disc player, HD game console


#### 0

Caution


Disconnect the TV mains power before you connect your devices.

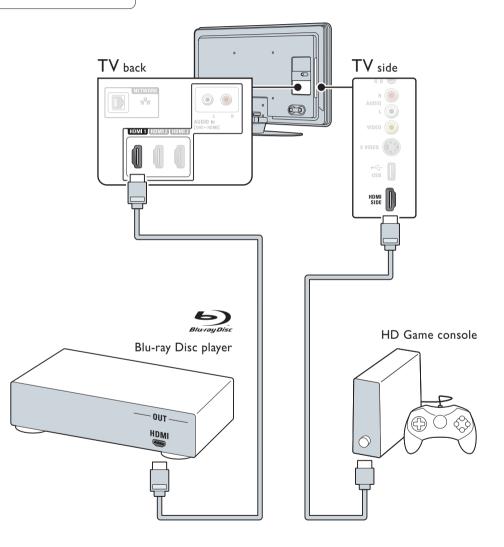


## DVD Home Theatre System

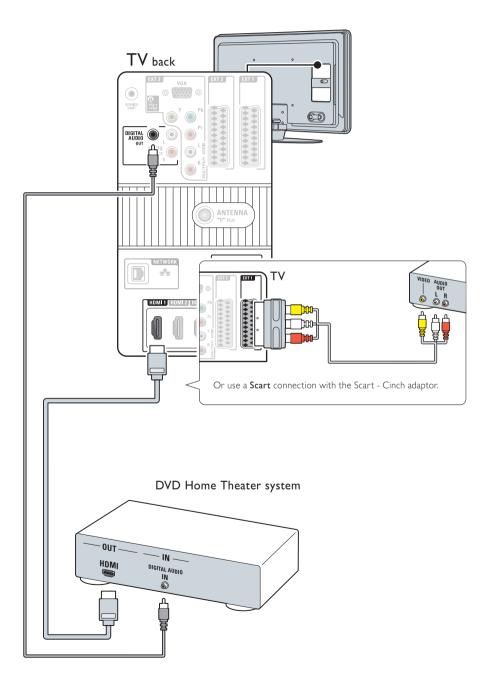

## DVD recorder and HD cable receiver

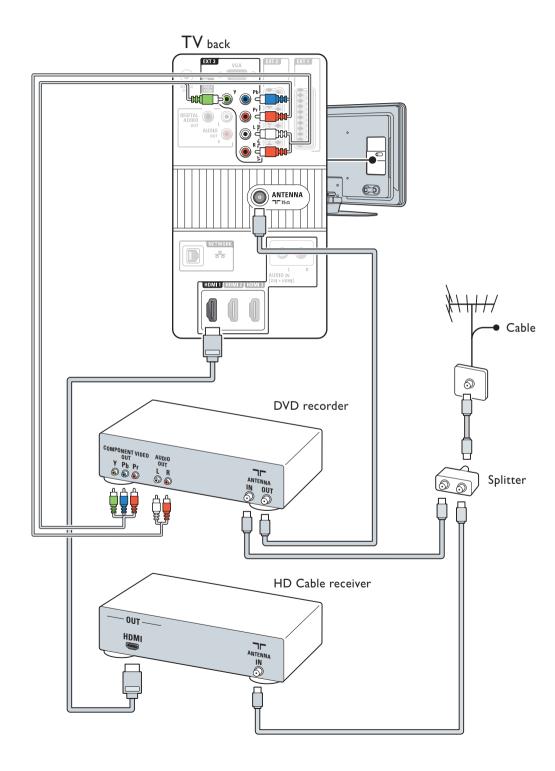

#### Photo camera, camcorder, game, ...

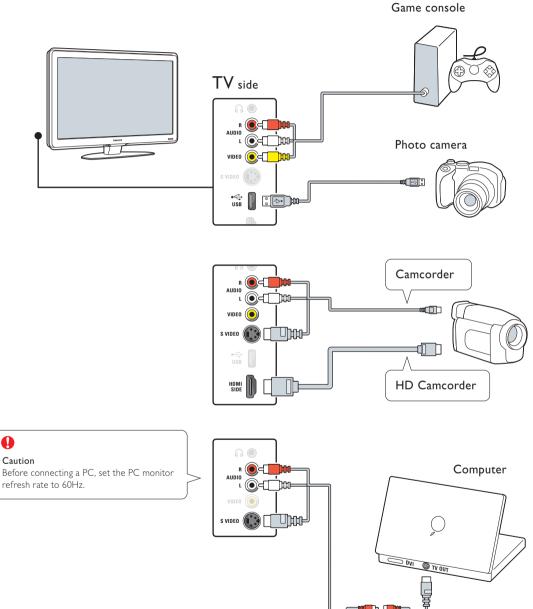

0

# Need help?

User manual See the User manual that came with your TV.

Online help www.philips.com/support



Australia 1300 363 391

Please, have the Model and Serial Number ready before you call.

You can find these numbers on the packaging label or on the back of your TV.



Specifications are subject to change without notice Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners 2008 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com