5800 Series

Register your products and get support at www.philips.com/welcome

Quick start guide





English

Before using your product, read all accompanying safety information. (The relevant parameters of instructions are variable, without prior notice, if there is any discrepancy, please in accordance with actual object.)



 
English

What's in the box

(32"/43")















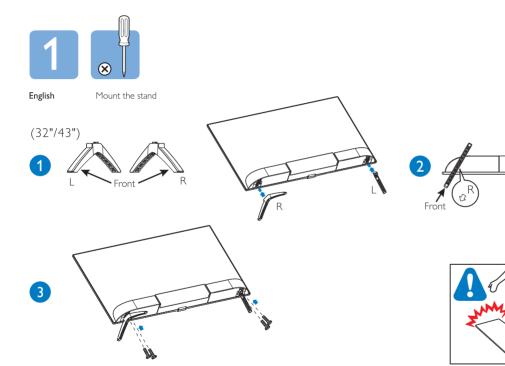




English

Connect

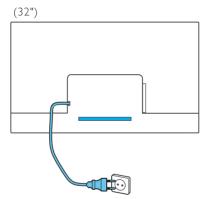






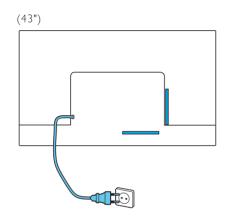






⊚ NIDEO




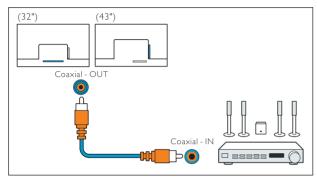


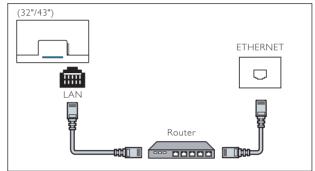


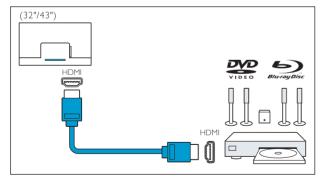


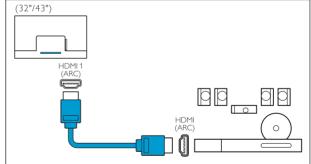


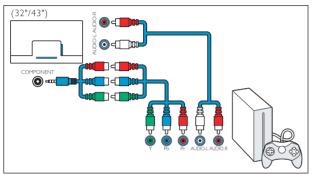

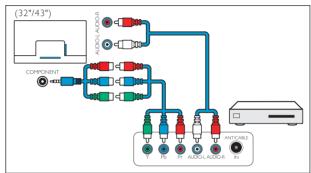

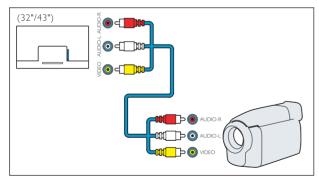

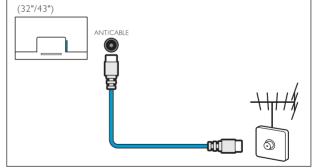


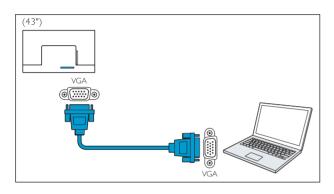






English

Insert batteries

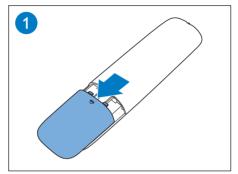

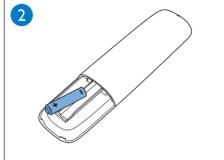


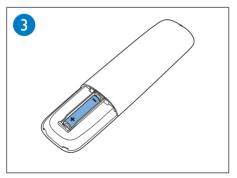


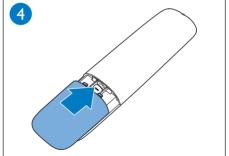



English To wall mount, purchase a suitable bracket.

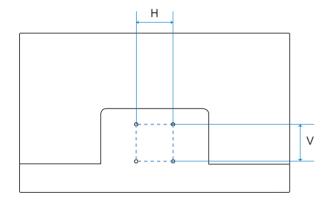

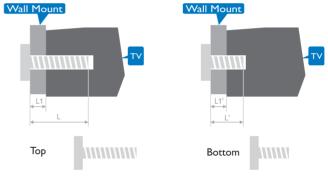


L1=Wall Mount thickness L1'=Wall Mount thickness


TV	Н	٧	Required Mounting Screws (Recommended screw length)
80 cm / 32"	100 mm	100 mm	Top and Bottom: 4 x M4 (L= 6+L1)mm
108 cm / 43"	400 mm	200 mm	Top: 2 x M6 (L = 23+L1)mm
			Top: 2 x M6 (L = 23+L1)mm Bottom: 2 x M6 (L' = 6+L1')mm



(32")

English Press the O key on the back of the TV or on the remote control to turn on the TV.

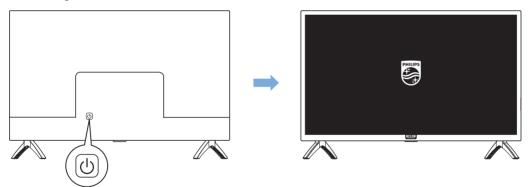

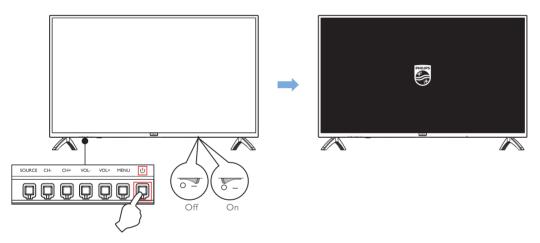



English

Please refer to the User's Manual and the Philips support website for more operating instructions.









All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips' shield emblem are trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

2018 ©TPVision Europe B.V. All rights reserved. philips.com

