

Register your product and get support at ...

www.philips.com/welcome

Quick Start




Installation



310431575552

PHILIPS


What's in the box

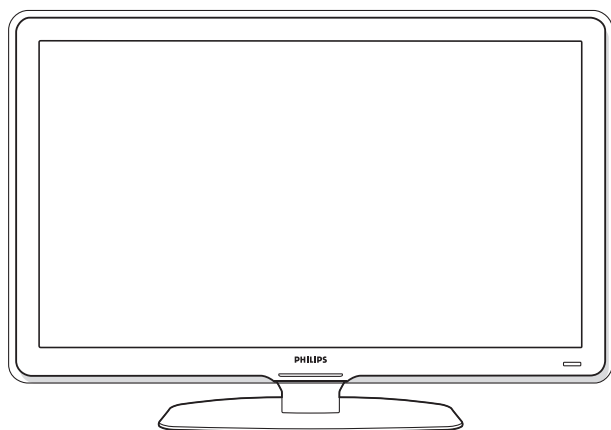

Television and stand



 
Start guide




User manual



 
Warranty information



Remote Control

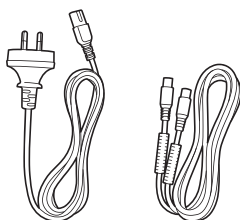


Power cord and antenna cable

 


Scart - Cinch adaptor

1 Swivel stand


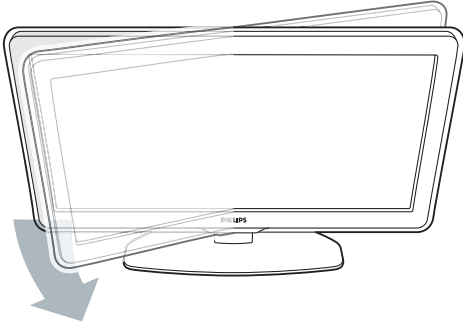


Remove the yellow brake at the back of the stand to allow the TV to swivel.

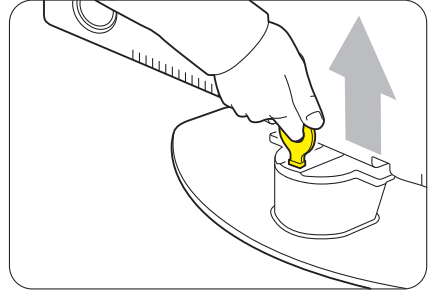

Mount the TV stand (for 32" TV's only)

Mount the 32" TV stand as shown below.
Lay the TV down on a level surface covered with a soft cloth.
Fix the 4 screws tightly.

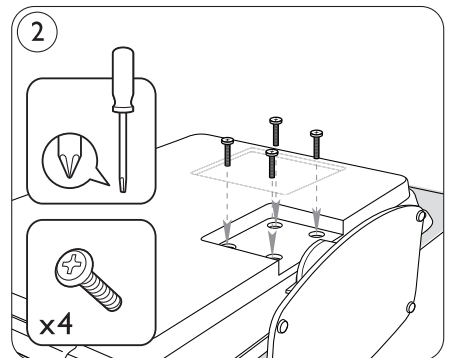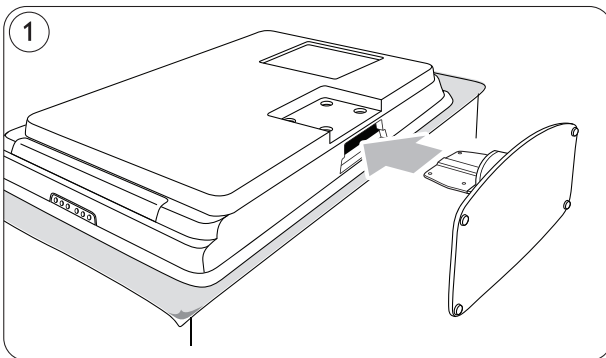



Wall mounting



Please find the wall mounting and / or VESA compliant mounting instructions in the User manual.

VESA, FDMI and the VESA Mounting Compliant logo are trademarks of the Video Electronics Standards Association.

2 Power & antenna

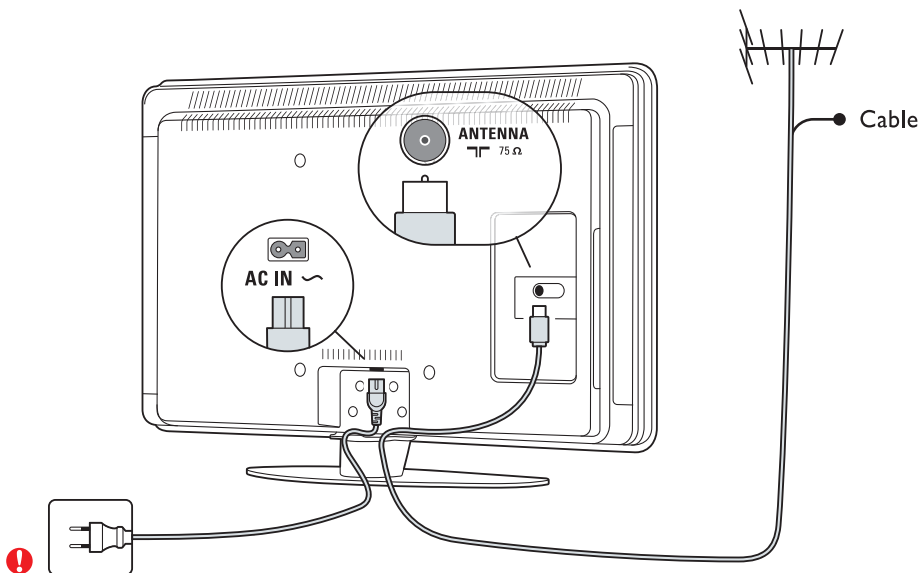


Switch on the TV with the  Power switch at the side of the TV.

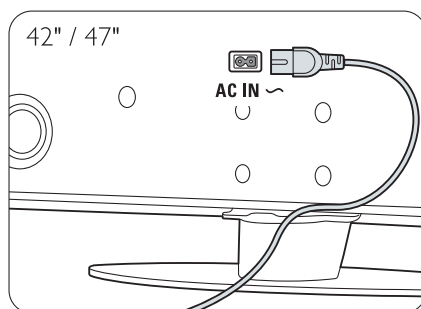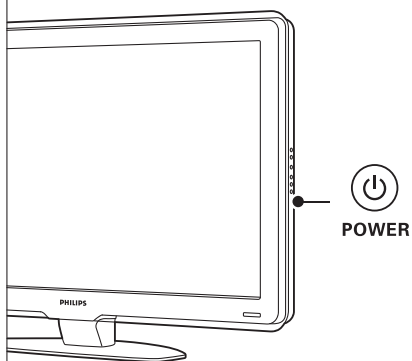

3

Remote control

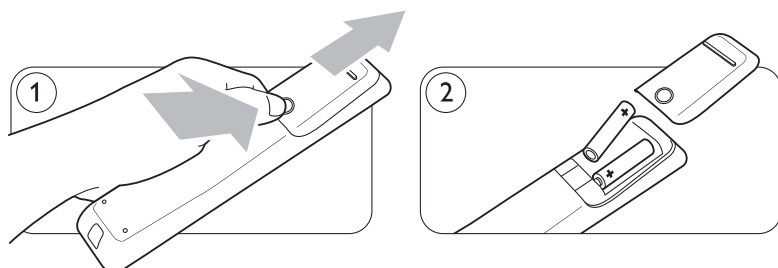

Navigation and OK key

Press ▲, ▼ or ◀, ▶ to navigate the TV menu. Press the **OK** key to confirm your choice.


Colour coded keys

Press a colour key to select a task or choice shown on screen.




4


Installation

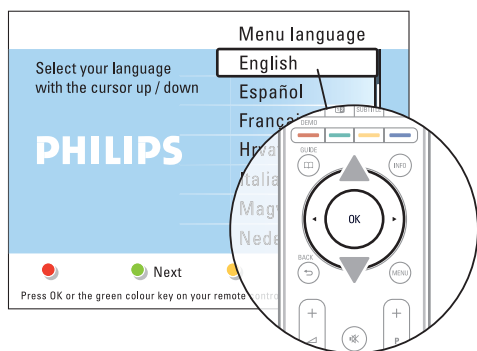

Press ▼ or ▲ to select your language.

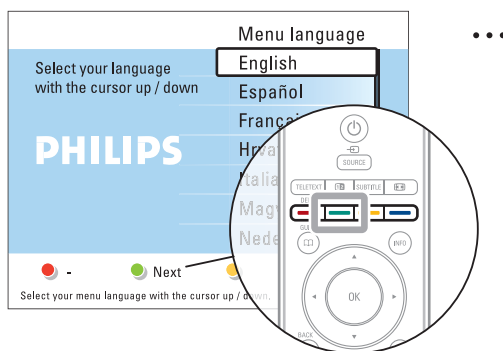

Press the green key to proceed the installation.
Tip – Press the red key repeatedly to return to a previous menu in case you made a mistake.

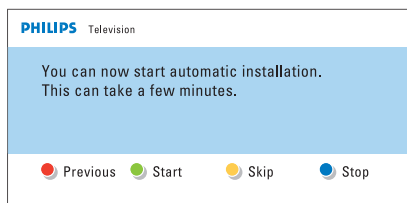

...



The automatic installation will search and store all available TV channels.

Tip – If you watch all TV channels with a cable box or digital receiver, you can skip this automatic installation.

You finished the installation successfully.


Press the red key to watch TV.

If you want to change the order of the TV channels, see section **Reorder the channels** of the user manual.


Blu-ray Disc player, HD game console



Caution
Disconnect the TV mains power
before you connect your devices.

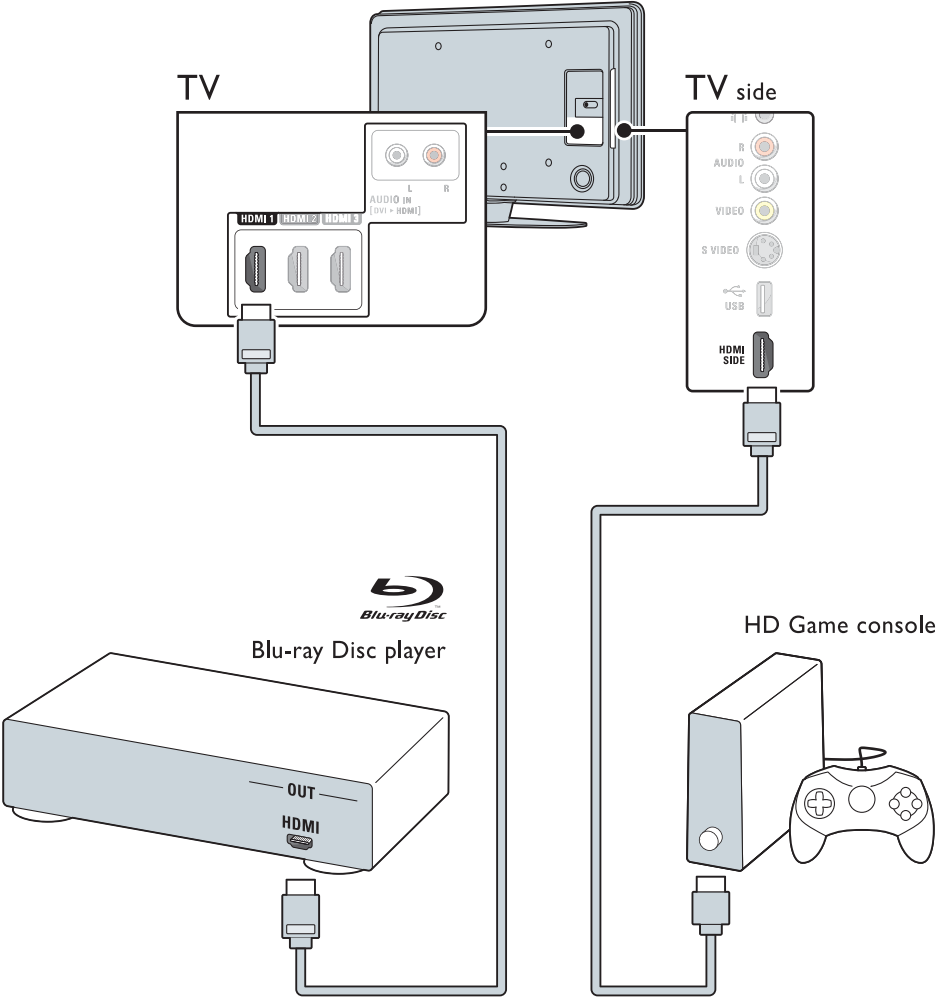

DVD Home Theatre System

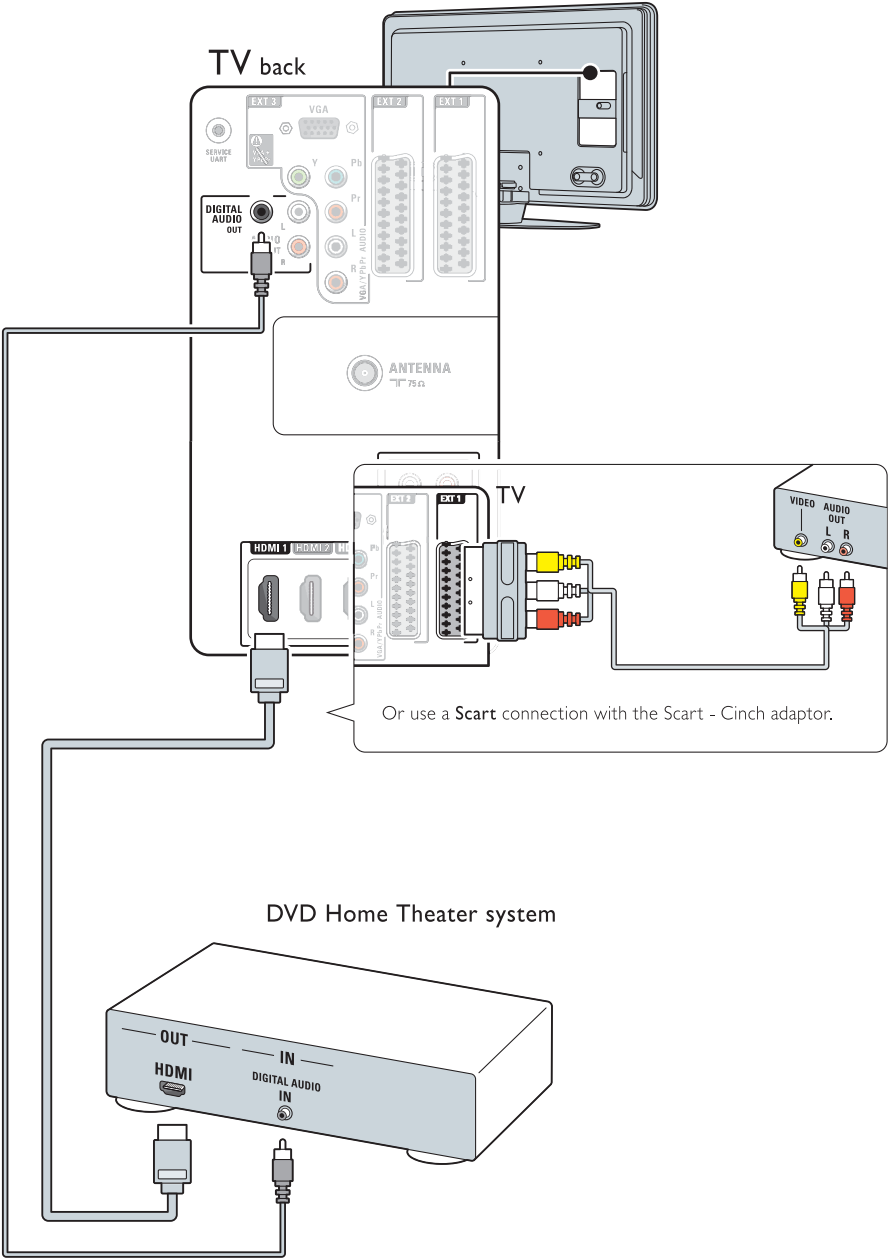

DVD recorder and HD cable receiver




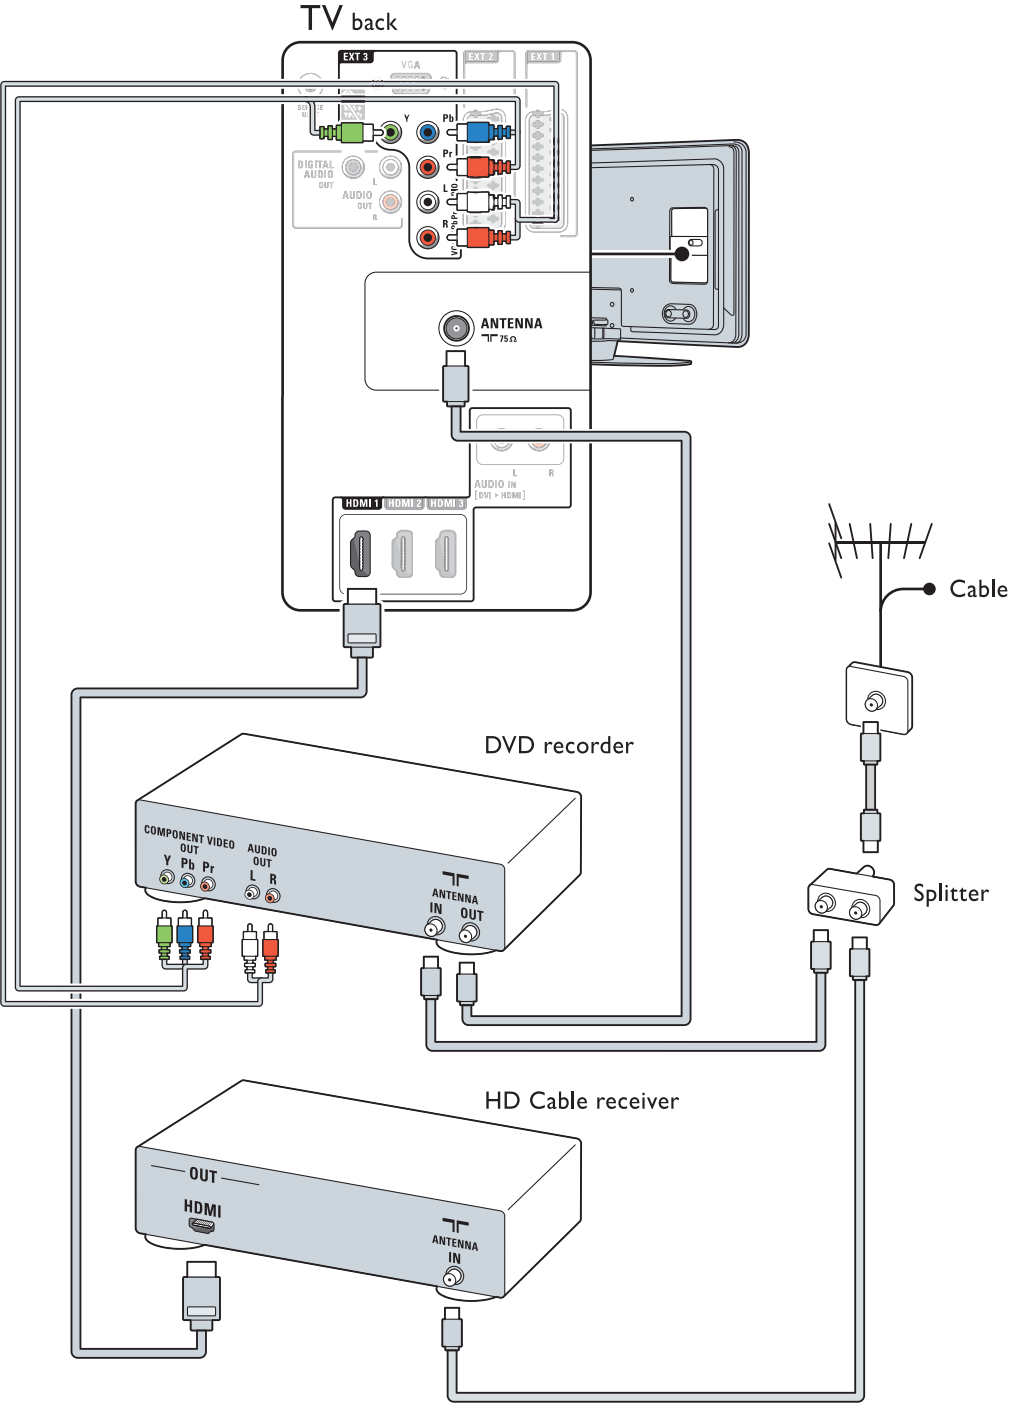


Photo camera, camcorder, game, PC, ...

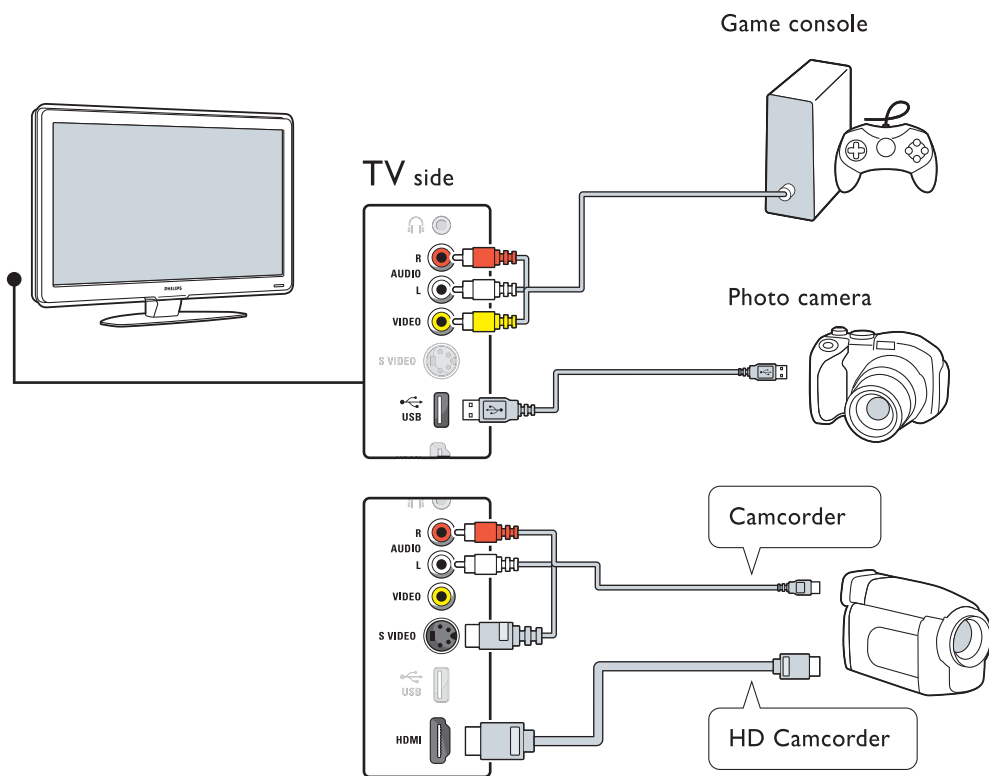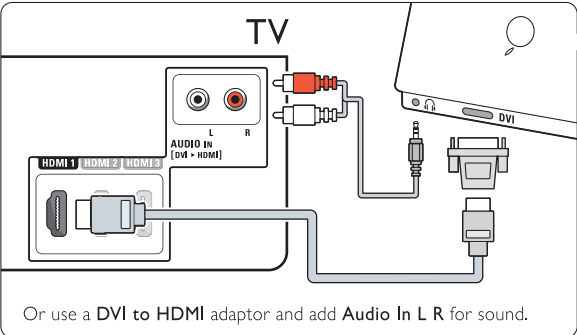

Caution
Before connecting a PC, set the PC monitor refresh rate to 60Hz.

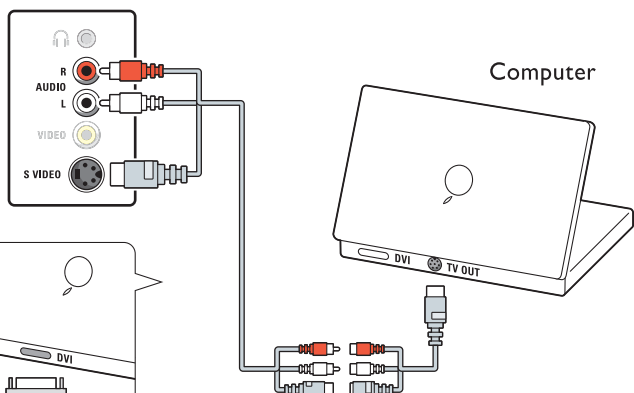

Or use a DVI to HDMI adaptor and add Audio In L R for sound.

Need help?

User manual

See the User manual that came with your TV.

Online help

www.philips.com/support



Consumer Care

Australia

1300 363 391

Please, have the Model and Serial Number ready before you call.

You can find these numbers on the packaging label or on the back of your TV.



Specifications are subject to change without notice
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners
2008 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com



Printed in Belgium

3104 315 7555.2