

Register your product and get support at
www.philips.com/welcome

6212 series

User Manual

55PUG6212

PHILIPS

Contents

1 My new TV	4
1.1 Smart TV	4
1.2 App gallery	4
1.3 Rental videos	4
1.4 Ultra HD TV	4
1.5 Social Networks	4
1.6 Pause TV and recordings	4
2 Setting up	5
2.1 Read safety	5
2.2 TV stand and wall mounting	5
2.3 Tips on placement	5
2.4 Power cable	5
2.5 Antenna cable	5
3 Network	6
3.1 Network and Internet	6
4 Connect devices	9
4.1 About Connections	9
4.2 HDMI Ports	9
4.3 Y Pb Pr - Component	10
4.4 CVBS - Audio L R	10
4.5 Audio Out - Optical	11
4.6 Receiver - Set-Top Box	11
4.7 Home Theater System - HTS	11
4.8 Smartphones and Tablets	12
4.9 Blu-ray Disc Player	12
4.10 DVD Player	13
4.11 Headphones	13
4.12 Game Console	13
4.13 USB Hard Drive	14
4.14 USB Keyboard	15
4.15 USB Flash Drive	15
4.16 Photo Camera	15
4.17 Camcorder	16
4.18 Computer	16
5 Switching On and Off	17
5.1 On or standby	17
5.2 Keys on TV	17
5.3 Sleep timer	17
6 Remote control	18
6.1 Key overview	18
6.2 IR sensor	19
6.3 Batteries	19
6.4 Cleaning	19
7 Channels	20
7.1 Install Channels	20
7.2 Switch channels	20
7.3 Channel lists	20
7.4 Watching channels	21
7.5 Favorite Channels	22
7.6 Closed captioning (CC) and language	23
8 TV guide	24
8.1 What you need	24
8.2 TV guide data	24
8.3 Using the TV guide	24
9 Recording and Pause TV	26
9.1 Recording	26
10 Home menu	28
10.1 About the Home menu	28
10.2 Open the Home menu	28
11 Utilities	29
11.1 About Utilities	29
12 Netflix	30
12.1 About Netflix	30
13 Sources	31
13.1 Switch to a device	31
13.2 Options for TV Input	31
13.3 Scan connections	31
13.4 Game or computer	31
14 Internet	32
14.1 Start Internet	32
14.2 Internet Options	32
15 Movies, photos and music	33
15.1 From a USB connection	33
15.2 From a computer	33
15.3 Menu bar and sorting	33
15.4 Play your movie	33
15.5 View your photos	33
15.6 Play your music	34
16 Smartphones and tablets	35
16.1 Miracast	35
16.2 MHL	36
16.3 Smart TV	36
17 Ambilight	40
17.1 Ambilight style	40
17.2 Ambilight off	40
17.3 Ambilight settings	40
17.4 Advanced Ambilight settings	40
18 Multi room	42
18.1 About Multi room	42
18.2 What you need	42
18.3 Using Multi room	42
19 Settings	43
19.1 Quick settings	43
19.2 Picture	43
19.3 Sound	47
19.4 Eco settings	49
19.5 General settings	50
19.6 Clock and language	52
19.7 Universal Access	53
20 Networks	55
21 Channel installation	56
21.1 Antenna/cable installation	56
21.2 Channel list copy	56
21.3 Digital Channel Installation	57
21.4 Service Navigation	57
22 Software	58
22.1 Update software	58
22.2 Software version	58
22.3 Local updates	58
22.4 Open source software	58
22.5 Open source license statement	59
22.6 Open-source license	59

23 Specifications	70
23.1 Environmental	70
23.2 Power	70
23.3 Reception	71
23.4 Display	71
23.5 Dimensions and Weights	71
23.6 Connectivity	71
23.7 Sound	71
23.8 Multimedia	71
24 Troubleshooting and support	73
24.1 Register your TV	73
24.2 Help	73
24.3 Troubleshooting	73
24.4 Online help	75
24.5 Consumer care/Repair	75
25 Safety and care	77
25.1 Safety	77
25.2 Screen care	78
26 Terms of use, copyrights and licenses	79
26.1 Terms of use	79
27 Copyrights	80
27.1 Dolby	80
27.2 MHL	80
27.3 HDMI	80
27.4 DTS 2.0 + Digital Out™	80
27.5 ANATEL	80
27.6 Microsoft	80
27.7 Wi-Fi Alliance	80
27.8 Kensington	81
27.9 Other trademarks	81
28 Disclaimer regarding services and/or software offered by third parties	82
Index	83

My new TV

Smart TV

Connect this **Philips Smart LED TV** to the Internet and discover a new world of television. You can install a wired connection to your router or you can link up wirelessly with Wi-Fi.

With the TV connected to your home network, a smartphone can show a photo on TV, you can play videos stored on your computer or control the TV with your tablet.

With your TV connected to the Internet, you can watch a rental video from an online video store, read the online TV guide or record your favorite TV show on a USB Hard Drive.

The Smart TV Apps add to the fun with all sorts of entertainment and convenient services.

In **Help**, press **— Keywords** and look up **Smart TV** for more information.

App gallery

Open the **App gallery** in Smart TV to browse the Apps, the collection of tailored websites for TV.

There are Apps for renting videos from an online video store and Apps for watching programs you missed.

If the App gallery does not have what you are looking for, try the World Wide Web and surf the Internet on TV.

In **Help**, press **— Keywords** and look up **App gallery** for more information.

Rental videos

You don't need to leave your home to watch a **rental video**. Simply rent the latest movie from your regional online video store.

Start Smart TV and add the video store App to the Smart TV start page.

Open the video store App, create your personal account, select the movie and press play. No fuss with downloading, you can watch the movie immediately*.

In **Help**, press **— Keywords** and look up **Rental videos** for more information.

* Depending on the video streaming service of the selected video store.

Ultra HD TV

This TV has an **Ultra HD** display. Its resolution is four times higher than normal HD displays. Ultra HD means 8 million pixels for the most refined and lifelike picture on a TV.

On top of this, the new **Ultra Pixel HD Engine** continuously converts any incoming TV signal into Ultra HD resolution. So you can enjoy this stunning picture quality the moment you switch on the TV. Or you can watch native Ultra HD videos through an HDMI connection. Ultra HD offers TV viewing that is crisp and sharp even on a big screen.



Social Networks

No need to get up to check your friend's messages on your computer.

On this TV, you get the messages from your **social networks** on your TV screen. You can send a return message from your couch.

For more information, in **Help**, press the color key **— Keywords** and look up **Apps**.

Pause TV and recordings

If you connect a **USB Hard Drive**, you can pause and record a broadcast from a digital TV channel.

Pause your TV and answer that urgent phone call or simply take a break during a sports match, while the TV stores the broadcast on the USB Hard Drive. You can watch it again later.

With a USB Hard Drive connected, you can also record digital broadcasts. You can record while you are watching a program or schedule a recording of an upcoming program.

For more information, in **Help**, press the color key **— Keywords** and look up **Pause TV** or **Recording**.

Setting up

2.1

Read safety

Read the safety instructions first before you use the TV.

To read the instructions, in **Help**, press the color key **— Keywords** and look up **Safety instructions**.


2.2

TV stand and wall mounting

You can find the instructions for mounting the TV stand in the Quick Start Guide that came with the TV.

Your TV is also prepared for a VESA-compliant wall mount bracket (sold separately).

Use the following VESA code when purchasing the wall mount . . .

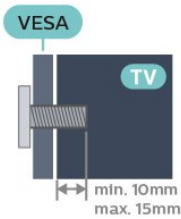

- VESA MIS-F 400x200, M6


Caution

Wall mounting the TV requires special skills and should only be performed by qualified personnel. The TV wall mounting should meet safety standards according to the TV's weight. Also read the safety precautions before positioning the TV.

2.3

Tips on placement


- Position the TV where light does not shine directly on the screen.
- Position the TV up to 6 inches away from the wall.
- The ideal distance to watch TV is 3 times its diagonal screen size. When seated, your eyes should be level with the center of the screen.

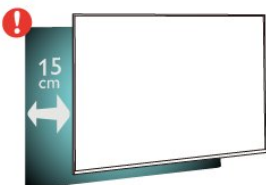

2.4

Power cable

- Insert the power cable into the **POWER** connector on the back of the TV.
- Make sure the power cable is securely inserted in the connector.
- Make sure that the power plug, in the wall socket, is accessible at all times.
- When you unplug the power cable, always pull the plug, never pull the cable.

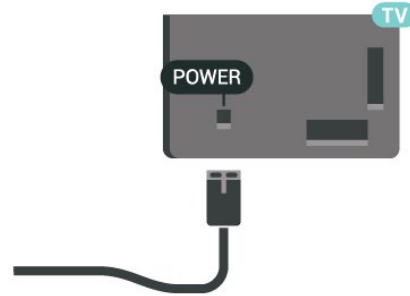

Although this TV has a very low standby power consumption, unplug the power cable to save energy if you do not use the TV for a long period of time.


For more information, in **Help**, press the color key **— Keywords** and look up **Switching on** for more information.

2.5

Antenna cable

Insert the antenna plug firmly into the **Antenna** socket at the back of the TV.

You can connect your own antenna or an antenna signal from an antenna distribution system. Use an IEC Coax 75 Ohm RF antenna connector.

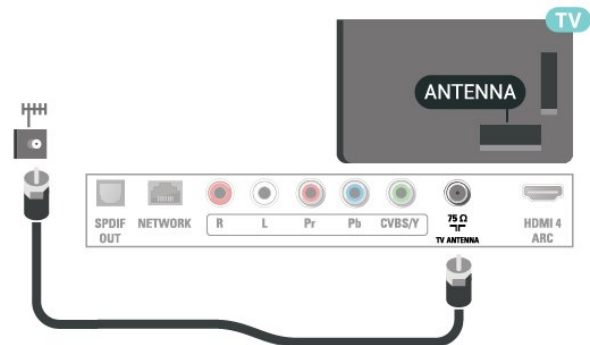

Network

3.1

Network and Internet

Home network

To enjoy the full capabilities of your TV, your TV must be connected to the Internet.

Connect the TV to a home network with a high-speed Internet connection. You can connect your TV wirelessly or wired to your network router.

Connect to network

Wireless connection

What you need

To connect the TV to the Internet wirelessly, you need a Wi-Fi router with a connection to the Internet.


Use a high-speed (broadband) Internet connection.



Make the connection

To make a wireless connection...

Step 1 - Make sure that the router of your wireless network is turned on.

Step 2 - Press , select **Network** and press **>** (right) to enter the menu.

Step 3 - Select **Connect to network > Start now** and press **OK**.

Step 4 - Select **Connect** and press **OK**.

Step 5 - Select **Wireless** and press **OK**.

Step 6 - Select **Scan** to scan for your wireless network. If you have a router with WPS (Wi-Fi Protected Setup), you can select **WPS**. Select your choice and press **OK**.

• Scan

Select **Scan** to scan for your wireless network (your wireless router). The TV might find several wireless networks in your proximity.

• WPS

If your router has WPS, you can directly connect to the router without scanning. Go to the router, press the WPS button and return to the TV within 2 minutes. Then press **Connect** to make the connection.

If you have devices in your wireless network that use the WEP security encryption system, you cannot use WPS.

If you must use the **WPS PIN** code to connect, select **Scan** instead of WPS.

Step 7 - From the list of networks found, select your wireless network and press **OK**.

If your network is not in the list because the network name is hidden (you turned off the SSID broadcast of the router), select **Manual entry** to enter the network name yourself.

Step 8 - Depending on the type of router, you can now enter your encryption key (WEP, WPA or WPA2). If you have entered the encryption key for this network before, you can select **Next** to make the connection immediately.

If your router supports WPS or WPS PIN, you select **WPS**, **WPS PIN** or **Standard**. Select your choice and press **OK**.

• Standard

Select **Standard** to enter the encryption key (password, passphrase, or security key) manually. You can use the keyboard on the remote control to enter the encryption key. Once you have entered the key, press **Connect**.

• WPS PIN

To make a secured WPS connection with a PIN code, select **WPS PIN** and press **OK**. Write down the 8-digit PIN code shown and enter it in the router software on your PC. Return to the TV and press **Connect**. Consult the router manual on where to enter the PIN code in the router software.

Step 9 - A message will be shown when the connection is successful.

Problems

Wireless network not found or distorted

- Microwave ovens, DECT phones or other Wi-Fi 802.11b/g/n devices in your proximity might disturb the wireless network.
- Make sure that the firewalls in your network allow access to the TV's wireless connection.
- If the wireless network does not work properly in your home, try the wired network installation.

Internet does not work

- If the connection to the router is OK, check the router connection to the Internet.

The PC and Internet connection are slow

- Look in your wireless router's user manual for

information on indoor range, transfer rate and other factors of signal quality.


• Use a high-speed (broadband) Internet connection for your router.

Wired connection

What you need

To connect the TV to the Internet, you need a network router with an internet connection.

Use a high-speed (broadband) Internet connection.

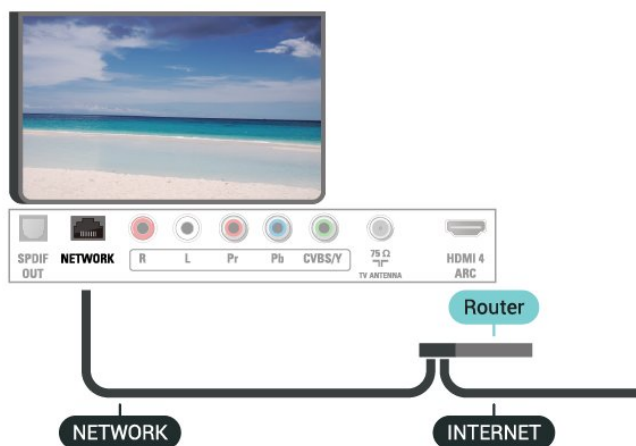

Make the connection

To make a wired connection...

- 1 - Connect the router to the TV with a network cable (Ethernet cable**).
- 2 - Make sure that the router is turned on.
- 3 - Press **⚙️**, select **Network** and press **➤** (right) to enter the menu.
- 4 - Select **Connect to network > Start now** and press **OK**.
- 5 - Select **Connect** and press **OK**.
- 6 - Select **Wired** and press **OK**. The TV constantly searches for the network connection.
- 7 - A message will be shown when the connection is successful.

If the connection fails, you can check the DHCP setting of the router. DHCP should be switched on.

Network settings

View network settings

You can view all current network settings here. The IP and MAC address, signal strength, speed, encryption method, etc.

To view the current network settings...

1 - Press **⚙️**, select **Network** and press **➤** (right) to enter the menu.

2 - Select **View network settings** and press **OK**.

3 - Select **Close** to close the menu.

Network configuration

If you are an advanced user and want to install your network with Static IP addressing, set the TV to **Static IP**.

To set the TV to Static IP...

- 1 - Press **⚙️**, select **Network** and press **➤** (right) to enter the menu.
- 2 - Select **Network configuration** and press **OK**.
- 3 - Select **Static IP** and press **OK** to enable **Static IP configuration**.
- 4 - Select **Static IP configuration** and configure the connection.
- 5 - You can set the number for **IP address**, **Netmask**, **Gateway**, **DNS 1**, or **DNS 2**.
- 6 - Press **⬅** (left) repeatedly if necessary, to close the menu.

Switch On with Wi-Fi (WoWLAN)

You can switch this TV on from your smartphone or tablet if the TV is on Standby. The setting **Switch On with Wi-Fi (WoWLAN)** must be switched on.

To switch on WoWLAN...

- 1 - Press **⚙️**, select **Network** and press **➤** (right) to enter the menu.
- 2 - Select **Switch on with Wi-Fi (WoWLAN)** and press **OK**.
- 3 - Select **On** and press **OK**.
- 4 - Press **⬅** (left) repeatedly if necessary, to close the menu.

Digital Media Renderer - DMR

If your media files do not play on your TV, make sure that the Digital Media Renderer is turned on. As a factory setting, DMR is turned on.




To switch on DMR...

- 1 - Press **⚙️**, select **Network** and press **➤** (right) to enter the menu.
- 2 - Select **Digital Media Renderer - DMR** and press **OK**.
- 3 - Select **On** and press **OK**.
- 4 - Press **⬅** (left) repeatedly if necessary, to close the menu.

Switch on Wi-Fi connection

You can switch the Wi-Fi connection on your TV on or off.




To switch on Wi-Fi...


- 1 - Press , select **Network** and press  (right) to enter the menu.
- 2 - Select **Wi-Fi On/Off** and press **OK**.
- 3 - Select **On** and press **OK**.
- 4 - Press  (left) repeatedly if necessary, to close the menu.

Switch on Wi-Fi Miracast

Enable Wi-Fi Miracast to share the screen of your smartphone, tablet, or computer on the TV.

To switch on Miracast...




- 1 - Press , select **Network** and press  (right) to enter the menu.
- 2 - Select **Wi-Fi Miracast** and press **OK**.
- 3 - Select **On** and press **OK**.
- 4 - Press  (left) repeatedly if necessary, to close the menu.

For more information, in **Help**, press the color key  **Keywords** and look up **Miracast™**, switch on.

Reset Wi-Fi Miracast connections

Clear the list of connected and blocked devices that are used with Miracast.




To clear Miracast connections...

- 1 - Press , select **Network** and press  (right) to enter the menu.
- 2 - Select **Reset Wi-Fi Miracast connections** and press **OK**.
- 3 - Select **Clear all** and press **OK**.
- 4 - Press  (left) repeatedly if necessary, to close the menu.

Wi-Fi smart screen

To watch digital TV channels on your smartphone, you must switch on Wi-Fi Smart Screen. Some scrambled channels might not be available on your mobile device.



 
To switch on the Wi-Fi Smart Screen...

- 1 - Press , select **Network** and press  (right) to enter the menu.
- 2 - Select **Wi-Fi smart screen** and press **OK**.
- 3 - Select **On** and press **OK**.
- 4 - Press  (left) repeatedly if necessary, to close the menu.

TV network name

If you have more than one TV in your home network, you can give the TV a unique name.




To change the TV name...

- 1 - Press , select **Network** and press  (right) to enter the menu.
- 2 - Select **TV network name** and press **OK**.
- 3 - Enter the name with the on-screen keyboard.
- 4 - Select **Done** to confirm the change.
- 5 - Press  (left) repeatedly if necessary, to close the menu.

Netflix settings

 With **Netflix settings**, you can view the ESN number or deactivate a Netflix device.




To enter **Netflix settings**...

- 1 - Press , select **Network** and press  (right) to enter the menu.
- 2 - Select **Netflix settings** and press **OK**.
- 3 - Press  (left) repeatedly if necessary, to close the menu.

Clear Internet memory

With **Clear Internet Memory**, you can clear all Internet files and logins stored on your TV, such as passwords, cookies, and history.

 To clear the Internet memory...

- 1 - Press , select **Network** and press  (right) to enter the menu.
- 2 - Select **Clear Internet memory** and press **OK**.
- 3 - Select **OK** to confirm.
- 4 - Press  (left) repeatedly if necessary, to close the menu.

File sharing

The TV can connect to other devices in your wireless network, like your computer or smartphone. You can use a computer with Microsoft Windows or Apple OS X.

On this TV, you can open photos, music and videos stored on your computer.

Connect devices

About Connections

Connectivity Guide

Always connect a device to the TV with the highest quality connection available. Also, use high quality cables to ensure good transfer of picture and sound.


When you connect a device, the TV recognizes its type and gives each device a correct type name. You can change the type name if you wish. If a correct type name for a device is set, the TV automatically switches to the ideal TV settings when you switch to this device in the Sources menu.

If you need help to connect several devices to the TV, you can visit the Philips TV connectivity guide. The guide offers information on how to connect and which cables to use.

Go to www.connectivityguide.philips.com

Antenna Port

If you have a Set-top box (a digital receiver) or Recorder, connect the antenna cables to run the antenna signal through the Set-top box and/or Recorder first before it enters the TV. In this way, the antenna and the Set-top box can send possible additional channels to the Recorder to record.

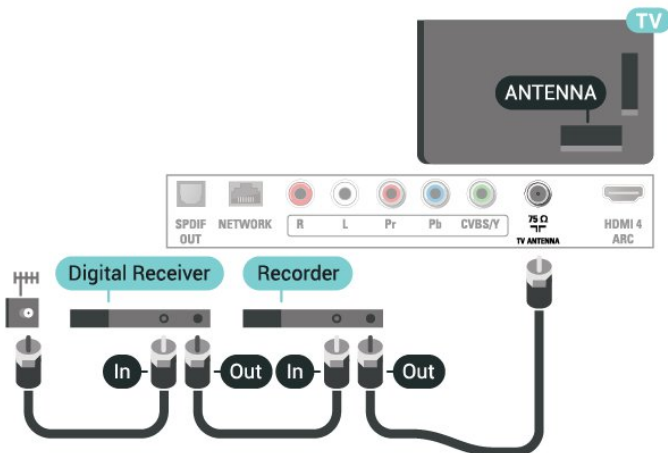


HDMI Ports

HDMI Quality

An HDMI connection has the best picture and sound quality. One HDMI cable combines video and audio signals. Use an HDMI cable for TV signal.

For best signal quality transfer, use a High speed HDMI cable and do not use an HDMI cable longer than 5 m.

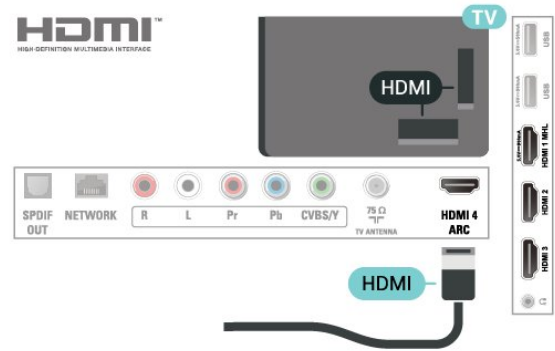

Copy protection

HDMI cables support HDCP (High-bandwidth Digital Content Protection). HDCP is a copy protection signal that prevents copying content from a DVD disc or Blu-ray Disc. Also referred to as DRM (Digital Rights Management).

HDMI ARC

Only HDMI 4 on the TV has HDMI ARC (Audio Return Channel).

If the device, typically a Home Theater System (HTS), also has the HDMI ARC connection, connect it to the HDMI 4 connection on this TV. With the HDMI ARC connection, you do not need to connect the extra audio cable that sends the TV sound to the HTS. The HDMI ARC connection combines both signals.

HDMI MHL

With HDMI MHL, you can send what you see on your Android smartphone or tablet to a TV screen.

The HDMI 1 connection on this TV incorporates MHL 2.0 (Mobile High-Definition Link).

This wired connection offers great stability and bandwidth, low latency, no wireless interference and good quality sound reproduction. On top of that, the MHL connection will charge the battery of your smartphone or tablet. Although connected, your mobile device will not be charging when the TV is on

standby.


Inform yourself regarding which passive MHL cable is suited for your mobile device. In particular, with the HDMI connector for the TV on one side, the type of connector you need to connect to your smartphone or tablet.

MHL, Mobile High-Definition Link and the MHL Logo are trademarks or registered trademarks of the MHL, LLC.



HDMI CEC - EasyLink

An HDMI connection has the best picture and sound quality. One HDMI cable combines video and audio signals. Use an HDMI cable for High Definition (HD) or TV signals. For best signal quality transfer, use a High speed HDMI cable and do not use an HDMI cable longer than 16.4 ft (5 m).

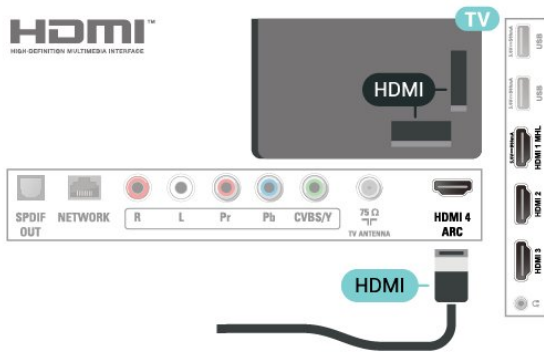

EasyLink HDMI CEC

If your devices are connected with HDMI and have EasyLink, you can operate them with the TV remote control. EasyLink HDMI CEC must be switched On on the TV and the connected device.

With EasyLink you can operate a connected device with the TV remote control. EasyLink uses HDMI CEC (Consumer Electronics Control) to communicate with the connected devices. Devices must support HDMI CEC and must be connected with an HDMI connection.

EasyLink setup

The TV comes with EasyLink switched on. Make sure that all HDMI CEC settings are properly set up on the connected EasyLink devices. EasyLink might not work with devices from other brands.

HDMI CEC on other brands

The HDMI CEC functionality has different names on different brands. Some examples are: Anynet, Aquos

Link, Bravia Theater Sync, Kuro Link, Simplink and Viera Link. Not all brands are fully compatible with EasyLink.

Example HDMI CEC branding names are property of their respective owners.

Copy Protection

DVI and HDMI cables support HDCP (High-bandwidth Digital Content Protection). HDCP is a copy protection signal that prevents copying content from a DVD disc or Blu-ray Disc. Also referred to as DRM (Digital Rights Management).


4.3

Y Pb Pr - Component

Y Pb Pr - Component Video is a high quality connection.

The YPbPr connection can be used for High Definition (HD) TV signals. Next to the Y, Pb and Pr signals, add the Audio Left and Right signals for sound.

Match the YPbPr (green, blue, red) connector colors with the cable plugs when you make the connections. Use an Audio L/R cinch cable if your device also has sound.

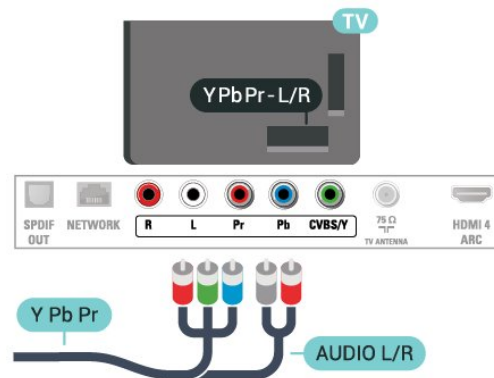


4.4

CVBS - Audio L R

CVBS - Composite Video is a high quality connection. Next to the CVBS signal, add the Audio Left and Right signals for sound.

- Y shares the same jack with CVBS.
- Component and Composite share audio jacks.

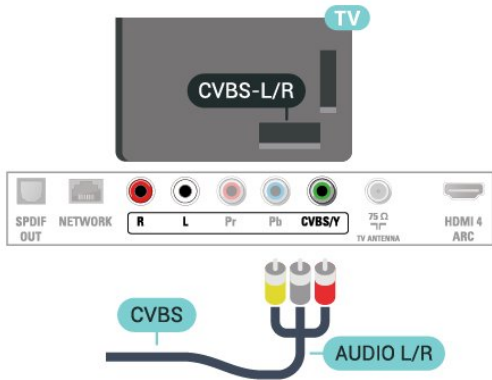


4.5 Audio Out - Optical

Audio Out - SPDIF is a high quality sound connection. This optical connection can carry 5.1 audio channels. If your device, typically a Home Theater System (HTS), has no HDMI ARC connection, you can use this connection with the SPDIF connection on the HTS. The SPDIF connection sends the sound from the TV to the HTS.

You can set the type of the audio out signal to fit the audio capabilities of your Home Theater System. For more information, in **Help**, press the color key **Keywords** and look up **Audio out settings**.


If the sound does not match the video on screen, you can adjust the audio to video synchronization. For more information, in **Help**, press the color key **Keywords** and look up **Audio to video sync**.

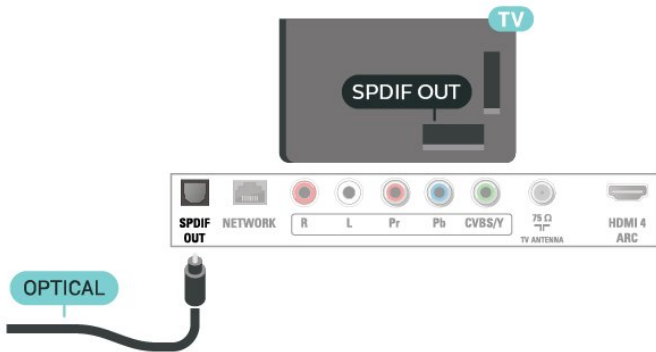


4.6 Receiver - Set-Top Box

Cable Box

Use 2 antenna cables to connect the antenna to the Set-top box (a digital receiver) and the TV.

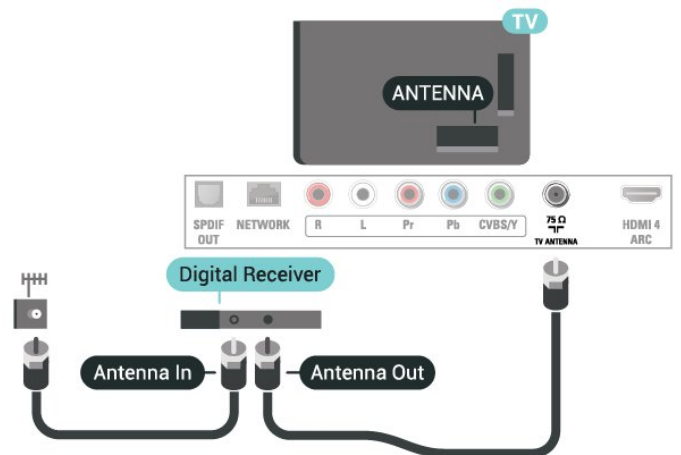

Next to the antenna connections, add an HDMI cable to connect the Set-top box to the TV.

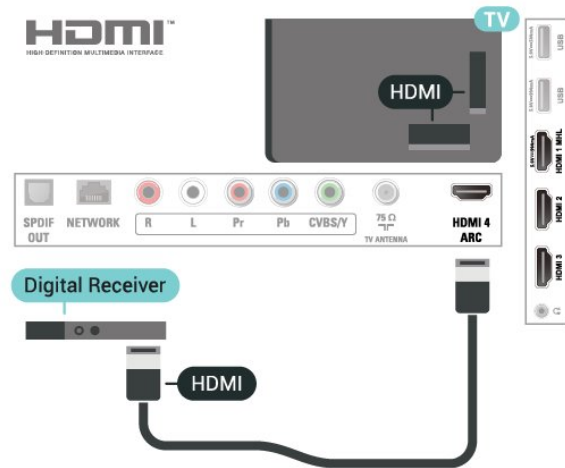

Switch Off Timer

Switch off this automatic timer if you only use the remote control for the Set-top box. Switching this timer off prevents the TV from switching off automatically after a 4-hour period without a key press on the TV's remote control.

For more information, in **Help**, press the color key **Keywords** and look up **Switch off timer** for more information.

4.7 Home Theater System - HTS


Connect with HDMI ARC

Use an HDMI cable to connect a Home Theater System (HTS) to the TV. You can connect an HTS with a built-in disc player.

HDMI ARC

If your Home Theater System has an HDMI ARC connection, you can use HDMI 4 on the TV to connect. With HDMI ARC, you do not need to connect the extra audio cable. The HDMI ARC connection combines both signals.

HDMI 4 on the TV can offer the Audio Return Channel (ARC) signal, but once you have connected the Home Theater System, the TV can only send the ARC signal to this HDMI connection.

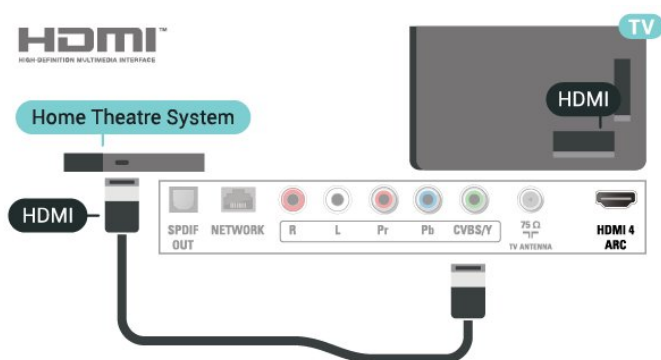

Audio to video synchronization (sync)


If the sound does not match the video on screen, you can set a delay on most Home Theater Systems with a disc player to match the sound with the video.

For more information, in **Help**, press the color key **— Keywords** and look up **Audio to video sync**.

Connect with HDMI

Use an HDMI cable to connect a Home Theater System (HTS) to the TV. You can connect an HTS with a built-in disc player.

If the Home Theater System has no HDMI ARC connection, add an SPDIF cable to send the TV's sound to the Home Theater System.

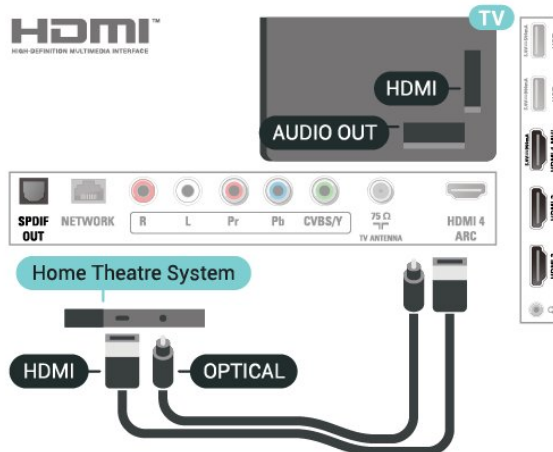

Audio to video synchronization (sync)

If the sound does not match the video on screen, you can set a delay on most Home Theater Systems with a disc player to match the sound with the video.

For more information, in **Help**, press the color key **— Keywords** and look up **Audio to video sync**.

Problems with HTS sound

Sound with loud noise

If you watch a video from a connected USB flash drive or computer, the sound from your Home Theater System might be distorted. This noise is heard when the audio or video file has DTS sound, but the Home Theater System has no DTS sound processing. You can fix this by setting the **Audio out format** of the TV to **Stereo**.

Press **⚙** for **Sound > Advanced > Audio out format**.

No sound

If you cannot hear the sound from the TV on your Home Theater System, check if you connected the HDMI cable to a **HDMI4 ARC** connection on the Home Theater System.

4.8

Smartphones and Tablets

To connect a smartphone or tablet to the TV, you can use a wired connection.


Wired

For a wired connection, use the **HDMI 1 MHL** connection on the back of the TV. In **Help**, press the color key **— Keywords** and look up **HDMI MHL** for more information.

4.9

Blu-ray Disc Player


Use a High speed HDMI cable to connect the Blu-ray Disc player to the TV.

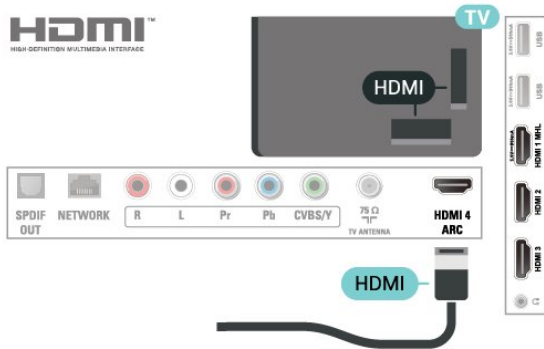

4.10


DVD Player


Use an HDMI cable to connect the DVD player to the TV.

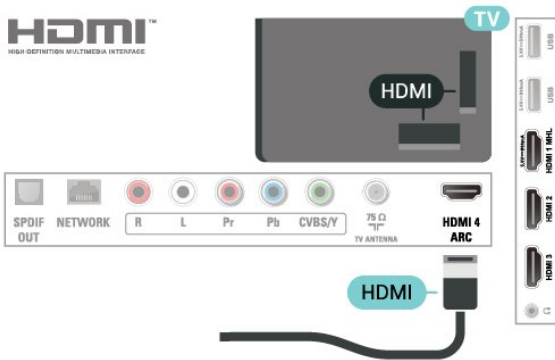


 


4.11

Headphones

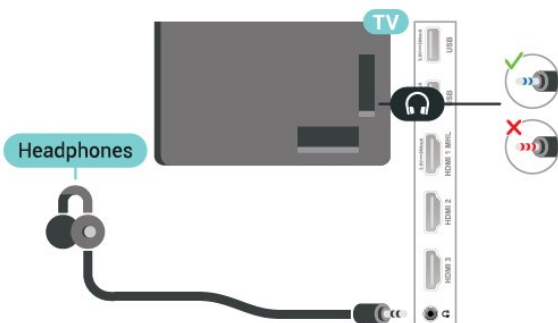You can connect a set of headphones to the  connection on the back of the TV. The connection is a mini-jack 3.5mm. You can adjust the volume of the headphones separately.



To adjust the volume...


- 1 - Press , select Sound > Headphones volume and press OK.
- 2 - Press the arrows  (up) or  (down) to adjust the value.
- 3 - Press  (left) repeatedly if necessary, to close the menu.

4.12

Game Console


HDMI

For best quality, connect the game console with a high-speed HDMI cable to the TV.

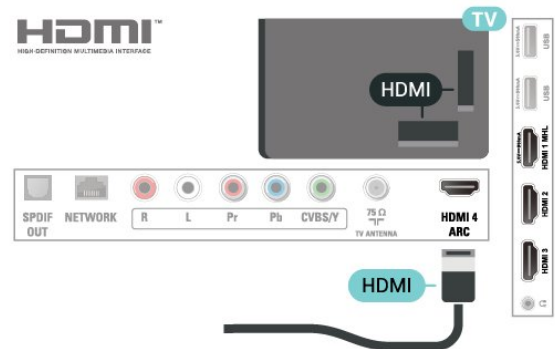

Y Pb Pr - Component


Connect the game console with a component video cable (Y Pb Pr) and an audio L/R cable to the TV.

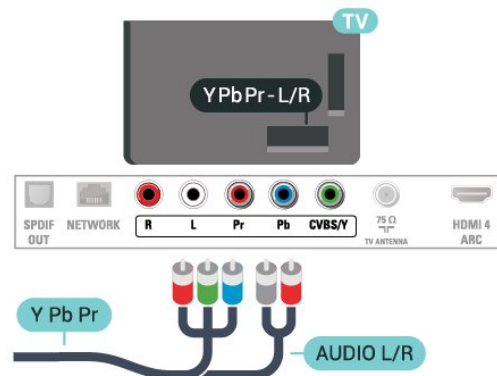

CVBS - Audio L R

CVBS - Composite Video is a high quality connection. Next to the CVBS signal, add the Audio Left and Right signals for sound.

- Y shares the same jack with CVBS.
- Component and Composite share audio jacks.

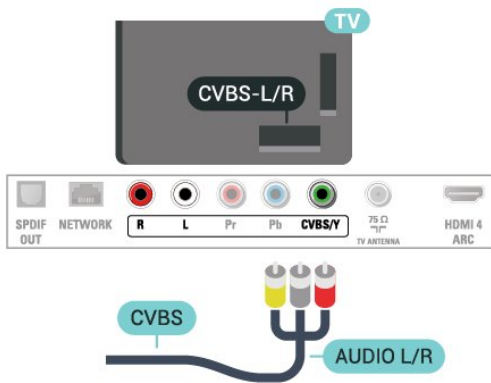

Best Setting

Before you start playing a game from a connected game console, we suggest you set the TV to the ideal **Game** setting.

When you finish playing a game and start watching TV again, remember to switch the **Game** or **Computer** setting back to **Off**.

To set the TV to the ideal setting...

- 1 - Press **⚙️**, select **Picture** and press **➤** (right) to enter the menu.
- 2 - Select **Advanced > Game or Computer**, and select the device type you want to use. To switch back to TV, select **Off**.
- 3 - Press **⬅️** (left) repeatedly if necessary, to close the menu.

4.13

USB Hard Drive

What You Need

If you connect a USB Hard Drive, you can pause or record a TV broadcast. The TV broadcast must be a digital broadcast (DVB broadcast or similar).

To Pause

To pause a broadcast, you need a USB-compatible Hard Drive with a minimum of 4GB of disk space.

To Record

To pause and record a broadcast, you need a minimum of 250GB disk space. If you want to record a broadcast with TV guide data from the Internet, you need to have the Internet connection installed on your TV before you install the USB Hard Drive.

For more information on how to install a USB Hard Drive, in **Help**, press the color key **🔴** **Keywords** and look up **USB hard drive, installation**.


Installation

Before you can pause or record a broadcast, you must connect and format a USB Hard Drive. Formatting removes all files from the USB Hard Drive.

- 1 - Connect the USB Hard Drive to one of the **USB** connections on the TV. Do not connect another USB device to the other USB ports when formatting.
- 2 - Switch on the USB Hard Drive and the TV.
- 3 - When the TV is tuned to a digital TV channel, press **⏸** (Pause). Trying to pause will start the formatting.

Follow the instructions on screen.

When the USB Hard Drive is formatted, leave it connected permanently.

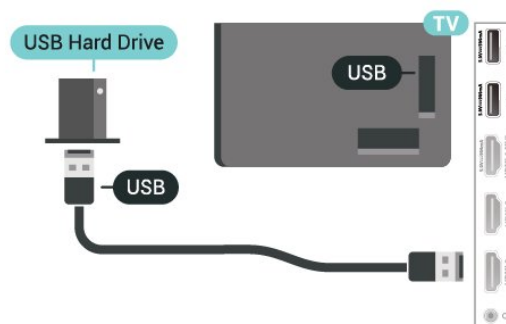

Warning

The USB Hard Drive is formatted exclusively for this TV, you cannot use the stored recordings on another TV or PC. Do not copy or change recording files on the USB Hard Drive with any PC application. This will corrupt your recordings. When you format another USB Hard Drive, the content on the former will be lost. A USB Hard Drive installed on your TV will need reformatting for use with a computer.

Formatting

Before you can pause or record a broadcast, you must connect and format a USB Hard Drive. Formatting removes all files from the USB Hard Drive.

Warning

The USB Hard Drive is formatted exclusively for this TV, you cannot use the stored recordings on another TV or PC. Do not copy or change recording files on the USB Hard Drive with any PC application. This will corrupt your recordings. When you format another USB Hard Drive, the content on the former will be lost. A USB Hard Drive installed on your TV will need reformatting for use with a computer.

To format a USB Hard Drive...

- 1 - Connect the USB Hard Drive to one of


the **USB** connections on the TV. Do not connect another USB device to the other USB ports when formatting.

2 - Switch on the USB Hard Drive and the TV.

3 - When the TV is tuned to a digital TV channel, press **||** (Pause). Trying to pause will start the formatting. Follow the instructions on screen.

4 - The TV will ask if you want to use the USB Hard Drive to store apps. Select **Agree** if you do.

5 - When the USB Hard Drive is formatted, leave it connected permanently.

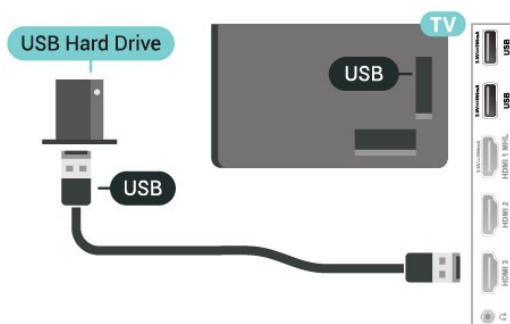


4.14

USB Keyboard

Connect

Connect a USB keyboard (USB-HID type) to enter text on your TV.

Use one of the **USB** connections to connect.

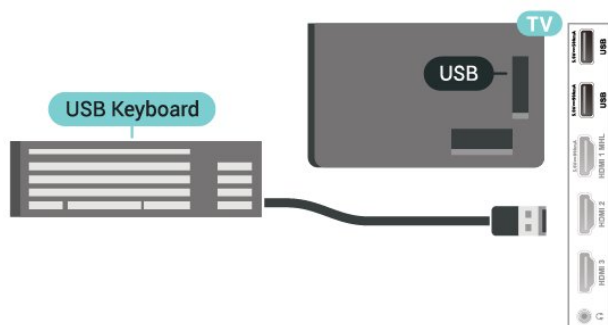

Configure

To install the USB keyboard, switch on the TV and connect the USB keyboard to one of the **USB** connections on the TV. When the TV detects the keyboard for the first time, you can select your keyboard lay-out and test your selection. If you select a Cyrillic or Greek keyboard layout first, you can select a secondary Latin keyboard layout.

To change the keyboard layout setting when a layout was selected...

1 - Press **⚙**, select **General settings** and press **➤** (right) to enter the menu.

2 - Select **USB keyboard settings**, and press **OK** to start the keyboard setup.

Special Keys

Keys for entering text

- Enter key = **OK**
- Backspace = delete character before cursor
- Arrow keys = navigate within a text field
- To switch between keyboard layouts, if a secondary layout is set, press the **Ctrl + Spacebar** keys simultaneously.

Keys for apps and Internet pages


- Tab and Shift + Tab = Next and Previous
- Home = scroll to the top of the page
- End = scroll to the bottom of the page
- Page Up = jump one page up
- Page Down = jump one page down
- + = zoom in one step
- - = zoom out one step
- * = fit the web page to the screen width

4.15

USB Flash Drive

You can view photos or play your music and movie from a connected USB flash drive.

Insert a USB flash drive in one of the **USB** connections on the TV while the TV is switched on.

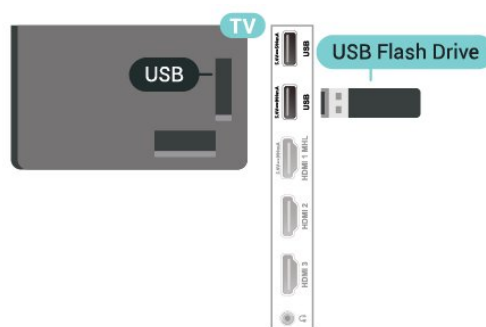

The TV detects the flash drive and opens a list showing its content.

If the contents list does not appear automatically, press **SOURCES** and select **USB**.

To stop watching the USB flash drive content, press **EXIT** or select another activity.

To disconnect the USB flash drive, you can pull out the flash drive anytime.

For more information on watching or playing content from a USB flash drive, in **Help**, press the color key **—** **Keywords** and look up **Photos**, **movie** and **music**.

Photo Camera

To view photos stored on your digital photo camera, you can connect the camera directly to the TV.

Use one of the **USB** connections on the TV to connect. switch on the camera after you have made the connection.


If the contents list does not appear automatically, press **SOURCES** , and select **USB**. Your camera might need to be set to transfer its content with PTP (Picture Transfer Protocol). Read the user manual of the digital photo camera.

For more information on viewing photos, in **Help**, press the color key **— Keywords** and look up **Photos**, movie and music.

Camcorder


HDMI

For best quality, use an HDMI cable to connect the camcorder to the TV.

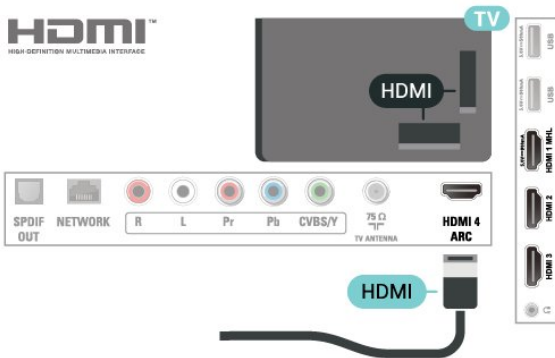

Audio Video LR

You can use an HDMI or YPbPr connection to connect your camcorder.

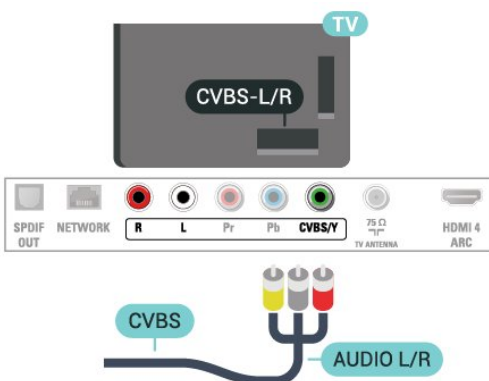


Computer

Connect

You can connect your computer to the TV and use the TV as a PC monitor.

With HDMI

Use an HDMI cable to connect the computer to the TV.

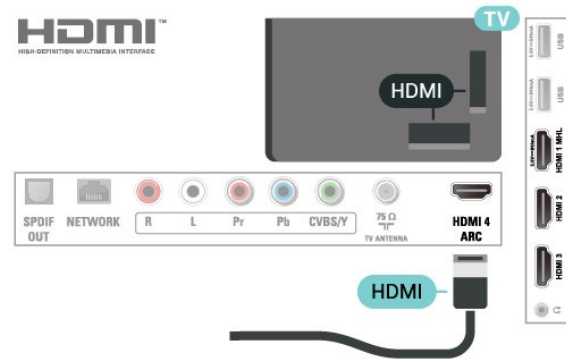

Ideal Setting

If you connect a computer, we advise you to give the connection, to which the computer is connected, the correct device type name in the Source menu. If you then switch to **Computer** in the Source menu, the TV is automatically set to the ideal settings for a computer.

You can manually switch the ideal setting to **Off** for watching TV or **Game** for playing a game from a connected game console (remember to switch back to **Off** when you stop playing a game).

If you switch to a source and change the **Game** or **Computer** setting, it will be stored for this selected source.

To set the TV to the ideal setting...

- 1 - Press **⚙**, select **Picture** and press **➤** (right) to enter the menu.
- 2 - Select **Advanced > Game or computer**, and press **OK**.
- 3 - Select **Game** (for gaming) or select **Computer** (for watching a movie).
- 4 - Press **⬅** (left) repeatedly if necessary, to close the menu.

Remember to set **Game** or **computer** setting to **Off** when you stop playing the game.

Switching On and Off

On or standby

Before you switch on the TV, make sure you plugged the **POWER** connector into the mains power connector on the back of the TV.



With the TV in Standby, press **⏻** on the remote control to switch the TV on. You can also press the small joystick key on the back of the TV to switch the TV on in case you can't find the remote control or its batteries are empty.

Switch to standby

To switch the TV to standby, press **⏻** on the remote control. You can also press the small joystick key on the back of the TV.

In standby mode, the TV is still connected to the mains power but consumes very little energy.

To switch off the TV completely, disconnect the power plug.

When disconnecting the power plug, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

Keys on TV

If you lost the remote control or its batteries are empty, you can still do some basic TV operations.

To open the basic menu...

- 1 - With the TV switched on, press the joystick key on the back of the TV to bring up the basic menu.
- 2 - Press left or right to select **🔊** Volume, **≡** Channel or **📺** Sources. Select **🎬** Demo, to start a demo movie.
- 3 - Press up or down to adjust the volume or tune to the next or previous channel. Press up or down to go through the list of sources, including the tuner selection. Press the joystick key to start the demo

movie.

4 - The menu will disappear automatically.

To switch the TV on standby, select **⏻** and press the joystick key.



Sleep timer

With the **Sleep Timer**, you can set the TV to switch to Standby automatically after a preset time.

To set the Sleep Timer...

- 1 - Press **⚙️**, select **General settings > Sleep timer** and press **OK**.
- 2 - With the slider bar you can set the time up to 180 minutes in 5-minute increments. If set to 0 minutes, the Sleep Timer is switched off. You can always switch off your TV earlier or reset the time during the countdown.
- 3 - Press **⬅️ BACK** to close the menu.

Remote control

Key overview

Top



1 - Standby / On

To switch the TV On or back to Standby.

2 - Playback and Record

- Play , to playback.
- Pause , to pause playback
- Stop , to stop playback
- Rewind , to rewind
- Forward , to fast forward
- Record , to start recording

3 - Picture Format

To open or close the Picture Format menu.

4 - TV GUIDE

To open or close the TV Guide.

5 - Search

To open the searches page.

6 - SETTINGS

To open the Settings menu.

7 - SOURCES

To open the Sources menu.

8 - LIST

To open or close the channel list.

Middle



1 - Home

To open the Home menu.

2 - SMART TV

To open the Smart TV start page.

3 - Color keys

Direct selection of options. Blue key , opens Help.

4 - INFO

To open or close program info.

5 - BACK

To switch back to the previous channel you selected.

To close a menu without changing a setting.

To go back to the previous App/Internet page.

6 - EXIT

To switch back to watch TV.

7 - OPTIONS

To open or close the Options menu.

8 - OK key

To confirm a selection or setting. To open the channel list while watching TV.


9 - Arrow / navigation keys

To navigate up, down, left or right.

10 - MULTI VIEW

To open another small TV channel screen in the corner of the TV screen. This function enables users to watch a TV channel while TV is in a Smart TV App or on the Internet.

Bottom

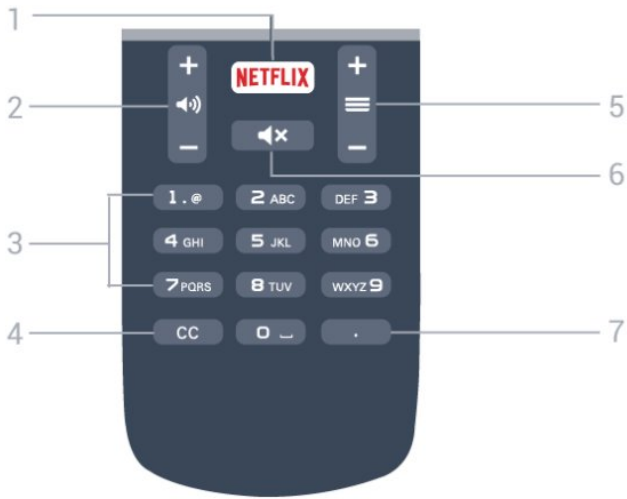

- 1 - **NETFLIX**
To open the Netflix App directly. With the TV switched on or from standby.
- 2 - **Volume**
To adjust the volume level.
- 3 - **Number keys**
To select a channel directly.
- 4 - **CC**
To switch cc on, off, or to show automatically.
- 5 - **Channel**
To switch to the next or previous channel in the channel list. To start the next or previous chapter on a disc.
- 6 - **Mute**
To mute the sound or to restore it.
- 7 - **(Dot)**
To enter digital sub-channels.

6.2

IR sensor

The TV can receive commands from a remote control that uses infrared (IR) to send commands. If you use this kind of remote control, always point it at the infrared sensor on the front of the TV.

Warning

Do not put any objects in front of IR sensor of the TV as it may block the IR signal.

6.3

Batteries

If the TV does not react on a key press on the remote control, the batteries might be empty.

To replace the batteries, open the battery compartment on the back of the remote control.

- 1 - Slide the battery door in the direction shown by the arrow.
- 2 - Replace the old batteries with 2 type **AAA-RO3-1.5V** batteries. Make sure the + and - ends of the batteries line up correctly.
- 3 - Reposition the battery door and slide it back until it clicks.

Remove the batteries if you are not using the remote control for a long time.

Safely dispose of your old batteries according to the end of use directions.

For more information, in **Help**, press the color key **Keywords** and look up **End of use**.

6.4

Cleaning

Your remote control is treated with a scratch-resistant coating.

To clean the remote control, use a soft damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the remote control.

Channels

7.1

Install Channels

For more information, in **Help**, press the color key **Red** **Keywords** and look up **Channel, Antenna installation** or **Channel, Cable installation**.

7.2

Switch channels

- To watch TV channels, press **EXIT**. The TV tunes to the TV channel you last watched.
- Alternatively, press **Home** to open the Home menu and select **Channels** and press **OK**.
- To switch channels, press **≡ +** or **≡ -**. If you know the channel number, type in the number with the number keys. Press **OK** after you entered the number to switch channels.
- To switch back to the previous channel, press **← BACK**.

To switch to a channel from a channel list

While watching a TV channel, press **≡ LIST** to open the channel lists.

The channel list can have several pages with channels. To view the next or previous page, press **≡ +** or **≡ -**.

To close the channel lists without switching channels, press **≡ LIST** again.

Radio channels

If digital broadcasting is available, digital radio stations are installed during installation. Switch to a radio channel just like you switch to a TV channel.

7.3

Channel lists

About channel lists

After a channel installation, all channels appear the channel list. Channels are shown with their name and logo if this information is available.

For each type of tuner - Antenna or Cable - there is a channel list with all installed channels. You can filter this list to only show TV or only Radio channels.

With a channel list selected, you can only tune to the channels in that list when using **≡ +** or **≡ -** keys.

Channel icons

If you lock a channel, it will be marked with a **🔒** (lock).

Radio stations

If digital broadcasting is available, digital radio stations are installed during installation. Switch to a radio channel just like you switch to a TV channel.

Open a Channel List

Next to the list with all channels for each tuner, Antenna or Cable, you can select a filtered list or you can select one of the favorite lists you created.

To open the current channel list...

- 1 - Press **EXIT** to switch to TV.
- 2 - Press **≡ LIST** to open the current channel list.
- 3 - Press **≡ LIST** again to close the channel list.

Alternatively, you can select the list name at the top of the channel list and press **OK** to open the list menu.

Filter a Channel List

You can filter a list with all channels. You can set the channel list to show only Digital TV channels or only Analog channels.

To set a filter on a list with all channels...

- 1 - Press **EXIT**.
- 2 - Press **≡ LIST** to open the current channel list.
- 3 - Press **≡ OPTIONS**.
- 4 - Select **Digital + Analog** and press **OK**.
- 5 - Select the list you want to filter.
- 6 - In the **Options** menu, select the filter you want and press **OK** to activate. The name of the filter appears as part of the channel list name on top of the channel list.
- 7 - Press **←** (left) to go back one step or press **← BACK** to close the menu.

Search for a Channel

You can search for a channel to find it in a long list of channels.

The TV can search for a channel within one of the channel lists - the Antenna or Cable channel list.

To search for a channel...

- 1 - Press **≡ LIST** to open the current channel list and select **All**.
- 2 - Press **≡ OPTIONS**.
- 3 - Select **Digital + Analog** and press **OK**.

- 4 - Select the list you want to filter and press **OK**.
- 5 - Press the color key **■** (green) to open **Find Channel** and press **OK** to open a text field.
- 6 - Enter a number, a name, or part of a name, select **Done** and press **OK**. The TV will search for matching channel names in the list you selected.

Search results are listed as a channel list - see the list name at the top. The search results disappear once you select another channel list or close the list with search results.

7.4

Watching channels

Tune to a channel

To start watching TV channels, press **EXIT**. The TV tunes to the channel you last watched.

Switch Channels

To switch channels, press **≡ +** or **≡ -**. If you know the channel number, type in the number with the number keys. Press **OK** after you entered the number to switch immediately.

Previous channel

To switch back to the previously tuned channel, press **← BACK**.

Child Lock/Lock a channel

Lock and unlock a channel

To prevent children from watching a channel, you can lock a channel. To watch a locked channel, you must enter the 4 digit **Child Lock** PIN code first. You cannot lock programs from connected devices.

To lock a channel...

- 1 - Press **EXIT**.
- 2 - Press **≡ LIST** to open the channel list. Change the channel list if necessary.
- 3 - Select the channel you want to lock.
- 4 - Press **≡ OPTIONS** and select **Channel lock** and press **OK**.
- 5 - Enter your 4 digit PIN code if the TV asks for it. A locked channel is marked with a **🔒** (lock).
- 6 - Press **←** (left) to go back one step or press **←** to close the menu.

To unlock a channel...

- 1 - Press **EXIT**.
- 2 - Press **≡ LIST** to open the channel list. Change the channel list if necessary.
- 3 - Select the channel you want to unlock.

- 4 - Press **≡ OPTIONS** and select **Unlock Channel** and press **OK**.
- 5 - Enter your 4 digit PIN code if the TV asks for it.
- 6 - Press **←** (left) to go back one step or press **←** to close the menu.

If you lock or unlock channels in a channel list, you only have to enter the PIN code just once until you close the channel list.

For more information, in **Help**, press the color key **■ Keywords** and look up **Child Lock** for more information.

Age Ratings

To prevent children from watching a program not suitable for their age, you can set an age rating.

Digital channels may have age-rated programs. When the age rating of a program is equal to or higher than the age rating you set for your child, the program will be locked. To watch a locked program, you must enter the **Child Lock** code first.

To set an age rating...

- 1 - Press **⚙️**, select **Child Lock > Age ratings lock** and press **OK**.
- 2 - Enter a 4-digit Child lock code. If you have not yet set a code, select **Set code** in **Child lock**. Enter a 4-digit Child lock code and confirm. You can now set an age rating.
- 3 - Back in **Age ratings lock**, select the age and press **OK**.
- 4 - Press **←** (left) repeatedly if necessary, to close the menu.

To switch off the parental age rating, select **Free**. However, in some countries you must set an age rating.

For some broadcasters/operators, the TV only locks programs with a higher rating. The parental age rating is set for all channels.

Content ratings


To set a content rating that will lock rated programs...

- 1 - Press **⚙️**, select **Child lock** and press **➤** (right) to enter the menu.
- 2 - Select **Content ratings lock**.
- 3 - Set the content and press **OK**. The selected content is blocked.
- 4 - Press **←** (left) repeatedly if necessary, to close the menu.

Set code/ Change code

The Child Lock PIN code is used to lock or unlock channels or programs.


To set the lock code or to change the current code...

- 1 - Press , select **Child Lock** and press **>** (right) to enter the menu.
- 2 - Select **Set code** or **Change code** and press **OK**.
- 3 - Enter a 4 digit code of your choice. If a code is set already, enter the current Child Lock code and then enter the new code twice.
- 4 - Press **<** (left) repeatedly if necessary, to close the menu.

The new code is set.

Forgotten your Child Lock PIN code?

If you forgot your PIN code, you can override the current code and enter a new code.

- 1 - Press , select **Child lock** and press **>** (right) to enter the menu.
- 2 - Select **Change code** and press **OK**.
- 3 - Enter the overriding code **8888**.
- 4 - Now enter a new Child Lock PIN code and enter it again to confirm.
- 5 - Press **<** (left) repeatedly if necessary, to close the menu.

The new code is set.

Channel options

Open options


While watching a channel, you can set some options.

Depending on the type of channel you are watching (analog or digital) or depending on your TV settings, some options are available.


To open the options menu...

- 1 - While watching a channel, press  **OPTIONS**.
- 2 - Press  **OPTIONS** again to close.

Closed caption


Switch **Closed Caption** **On** or **Off** with this options. Select **On During Mute** to show closed captions only when the sound is muted with .

Caption service


Select the correct type of closed-caption services. For more information, in **Help**, press  **Keywords** and look up **Closed Caption**.

Audio language

For digital broadcast, you can select an available audio language temporarily if none of your preferred languages are available.

For more information, in **Help**, press  **Keywords** and look up **Audio language**.


DTV Applications

Display the list of Digital TV interactive applications. For more information, in **Help**, press  **Keywords** and look up **DTV**.

Status

You can view the technical characteristics of a particular channel, like digital or analog, sound type, etc.



To view the technical information on a channel...

- 1 - Tune to the channel.
- 2 - Press  **OPTIONS**, select **Status** and press **OK**.
- 3 - To close this screen, press **OK**.

Mono / Stereo

You can switch the sound of an analog channel to Mono or Stereo.

To switch to Mono or Stereo...

- 1 - Tune to an analog channel.
- 2 - Press  **OPTIONS**, select **Mono/Stereo** and press **>** (right).
- 3 - Select **Mono** or **Stereo** and press **OK**.
- 4 - Press **<** (left) to go back one step or press  **BACK** to close the menu.

Share

Enables the user to share their activity with their social networks.

7.5

Favorite Channels

About favorite Channels

In a favorite channel list, you can collect the channels you like.

With a Favorites List selected, you can only tune to the channels in that list when using the **≡ +** or **≡ -** keys.

Set up your Favorites List

You can create a favorite channel list that only holds the channels you want to watch. With the Favorite channel list selected, you will only see your favorite channels when you switch through channels.

Create your favorite channel list

- 1 - While watching a TV channel, press **≡ LIST** to open the channel list.
- 2 - Select **All** to view all channels.
- 3 - Select the channel, and press **—** to mark as favorite.
- 4 - The selected channel is marked with a **★**.
- 5 - To finish, press **← BACK**. The channels are added to the Favorites list.

To remove a channel from the favorites list, select the channel with **★**, then press **—** again to unmark as favorite.

press **OK**.

Menu Language

To change the language of the TV menus and messages...

- 1 - Press **⚙**, select **General settings > Language > Menu language** and press **OK**.
- 2 - Select the language you want and press **OK**.
- 3 - Press **←** (left) repeatedly if necessary, to close the menu.

7.6

Closed captioning (CC) and language

Closed Caption

You can display closed captions at all times or only when the TV is muted.

To open **Closed Caption**, press **CC**.

Note:

• Not all TV programs, commercials, and features include closed captioning information. See your local TV program listings for channels with closed captions. The captioned programs are typically listed with service marks, such as "CC," in the TV listings.

Switch on closed caption

- 1 - While you watch TV, press **≡ OPTIONS**.
- 2 - Select **Closed Caption > On** and press **OK**.

Select type of closed caption

- 1 - While you watch TV, press **≡ OPTIONS**.
- 2 - Select **Caption Service**.
- 3 - Select the correct type of closed captions and

TV guide

8.1

What you need

With the TV Guide you can view a list of the current and scheduled TV programs of your channels. Depending on where the TV guide information (data) is coming from, analog and digital channels or only digital channels are shown. Not all channels offer TV Guide information.

The TV can collect TV Guide information for the channels that are installed on the TV. The TV cannot collect the TV Guide information for channels viewed from a digital receiver or decoder.

8.2

TV guide data

The TV Guide receives information (data) from broadcasters or from the Internet. In some regions and for some channels, TV Guide information might not be available. The TV can collect TV Guide information for the channels that are installed on the TV. The TV cannot collect the TV Guide information from channels viewed from a digital receiver or decoder.


The TV comes with the information set to **From the broadcaster**.

If TV Guide information comes from the Internet, the TV Guide can also list analog channels next to the digital channels. The TV Guide menu also shows a small screen with the current channel.

From the Internet

If the TV is connected to the Internet, you can set the TV to receive the TV Guide information from the Internet.

To set the TV Guide information...

- 1 - Press , select **General Settings** > **TV Guide** > **From the Internet** and press **OK**.
- 2 - Press **←** (left) repeatedly if necessary, to close the menu.

Alternatively, you can access the **TV Guide** via **Utilities**.

Missing recordings

When some recordings seem to have disappeared from the list of recordings, the TV Guide info (data) might have changed. Recordings made with the setting **From the broadcaster** become invisible in the list if you switch the setting to **From the**

Internet or vice versa. The TV might have switched to **From the Internet** automatically.

To make the recordings available in the list of recordings, switch to the setting that was selected when the recordings were made.

8.3

Using the TV guide

Open the TV guide

To open the TV Guide, press  **TV GUIDE**. The TV Guide shows the channels of the selected tuner.

Press  **TV GUIDE** again to close.

The first time you open the TV Guide, the TV scans all TV channels for program information. This may take several minutes. TV Guide data is stored on the TV.

Tune to a program

From the TV Guide, you can tune to a current program.

To switch to the program (channel), select the program and press **OK**.



View program details

 
To call up the details of the selected program...

- 1 - Press  **INFO**.
- 2 - Press  **BACK** to close.

Change day


 
The TV guide can show scheduled programs for the upcoming days (maximum up to 8 days).

If the TV guide information comes from the broadcaster, you can press  + to view the schedule of one of the next days. Press  - to go back to the previous day.

Alternatively, you can press  **OPTIONS** and select **Change day**.

Select **Previous day**, **Today**, or **Next day** and press **OK** to select the day of the schedule.

The TV guide can show scheduled programs for the upcoming days (maximum up to 8 days).

If the TV guide information comes from the broadcaster, you can press  + to view the schedule for one of the next days. Press  - to go back to the previous day.

To change the day...

- 1 - Press  **TV GUIDE**.
- 2 - Press  **OPTIONS**.

- 3 - Select **Change day**, select **Previous day**, **Today** or **Next day** and press **OK**.
- 4 - Press **← BACK** to close the menu.

Set a reminder

You can set reminders that alert you of the start of a program with a message on screen.

- To set a reminder, select the program in the schedule and press **■** for **Set reminder**. The program is marked with a clock.
- To cancel the reminder, press the **■** for **Clear reminder**.
- To view a list of all reminders you have set, press **≡ OPTIONS**, and select **All reminders**.

Search by genre

If the information is available, you can look up scheduled programs by genre like movies, sports, etc.

To search for programs by genre...

- 1 - Press **≡ TV GUIDE**.
- 2 - Press **≡ OPTIONS**.
- 3 - Select **Search by genre** and press **OK**.
- 4 - Select the genre you want and press **OK**. A list with the found programs appears.
- 5 - You can set reminders or schedule a recording on a selected program.
- 6 - Press **← BACK** to close the menu.

Set a recording

You can set a recording in the TV Guide*.

To see the recording list, press **■ Recordings**, a program set to be recorded is marked with a **●** (red dot) before the program's name.

To record a program...

- 1 - Press **≡ TV GUIDE** and select a future or ongoing program.
- 2 - Press the color key **■ Record**.
- 3 - Press **← BACK** to close the menu.

To cancel a recording...

- 1 - Press **≡ TV GUIDE** and select the program set for recording.
- 2 - Press the color key **■ Clear Recording**.
- 3 - Press **← BACK** to close the menu.

Recording and Pause TV

Recording

What you need

You can record a digital TV broadcast and watch it later.

To record a TV program you need...

- a connected USB Hard Drive formatted on this TV
- digital TV channels installed on this TV
- to receive channel information for the on-screen TV Guide
- a reliable TV clock setting. If you reset the TV clock manually, recordings may fail.

You cannot record when you are using Pause TV.

Some digital TV operators do not allow the recording of channels.

For more information on installing a USB Hard Drive, in **Help**, press the color key **Keywords** and look up **USB hard drive, installation**.

Record a program

Record now

To record the program you are watching, press **Record** (Record) on the remote control.

If you receive TV guide information from the Internet, you can adjust the end time of the recording in the pop-up window before you confirm the recording.

If you receive TV guide information from the broadcaster, the recording starts immediately. You can adjust the end time of the recording in the list of recordings.

To stop recording, press **Stop**.

Schedule a recording

You can schedule a recording of an upcoming program for today or a few days from today (maximum of 8 days away).

1 - To schedule a recording, press **TV Guide**. On the TV guide page, select the channel and program you wish to record. You can enter the channel number to jump to the channel in the list.

Press **Right** or **Left** to scroll through the programs of a channel.

To change the date of the list, press **OPTIONS** and select **Select day**. In the list, select the day you want and press **OK**. If the TV guide comes from the Internet, you can select the date at the top of the page and press **OK**.

2 - With the program highlighted, press **Record** or press **OPTIONS** and select **Record**. The TV adds some time buffer at the end of the program. You can add some extra buffer if needed.

3 - Select **Schedule** and press **OK**. The program is scheduled for recording. A warning will appear automatically when overlapping recordings are scheduled.

If you plan to record a program in your absence, remember to leave the TV switched to standby and the USB Hard Drive turned on.

List of recordings

To view the list of recordings and scheduled recordings, press **Home**, select **Utilities** > **Recordings** and press **OK**.

In this list, you can select a recording to watch, remove recorded programs, adjust the end time of an ongoing recording or check the free disk space. Also in this list, if the TV guide comes from the Internet, you can schedule a recording for which you set the beginning and end time yourself, as a timed recording not linked to a program. To set a timed recording, select **Schedule recording** at the top of the page and press **OK**. Set the channel, date, and time span. To confirm the recording, select **Schedule** and press **OK**.

Remove a scheduled recording

Select the scheduled recording, press **Remove** and press **OK**.

Specifics

- While recording a program, you can watch a previously recorded program.
- While recording, you cannot switch TV channels.
- While recording, you cannot pause the TV broadcast.
- To Record, broadcasters need a reliable clock setting. If you reset the TV clock manually, recordings may fail.

Watch a recording

To watch a recording . . .

- 1 - Press **Home** , select **Utilities > Recordings** and press **OK**.
- 2 - In the list, select the recording and press **▶** (Play) to start the playback. You can use the **▶▶** (Forward), **◀◀** (Rewind), **||** (Pause) or **■** (Stop) keys on the remote control.

Expired recording

Broadcasters can limit the number of days a recording can be viewed. A recording in the list can show the number of days before it expires.

Failed recording

When a scheduled recording was prevented by the broadcaster or when the broadcast was interrupted, a recording is marked as **Failed**.

Delete a recording

To delete an existing recording, select the recording in the list, press **Remove** and press **OK**.

For more information, press **Keywords** and look up **Record a program**.

Pause TV

You can pause a TV broadcast and resume watching it later. Only digital TV channels can be paused. You must connect a USB Hard Drive to buffer the broadcast. You can pause a broadcast for a maximum time span of 90 minutes.

For more information, press **Keywords** and look up **USB hard drive**.

Pause or resume a broadcast

To pause a broadcast, press **||** (Pause). A progress bar appears briefly on screen.

To call up the progress bar, press **||** (Pause) again.

To resume watching, press **▶** (Play). The icon on screen indicates you are watching a paused broadcast.

Back to the actual TV broadcast

To switch back to the actual TV broadcast, press **■** (Stop).

The moment you switch to a digital channel, the USB Hard Drive starts buffering the broadcast. When you switch to another digital channel, the broadcast of the new channel is buffered and the broadcast of the previous channel is cleared. When you switch to a connected device (a Blu-ray Disc player or digital receiver) the USB Hard Drive stops buffering and the broadcast is cleared. Also when you switch the TV to standby the broadcast is cleared.

While recording a program on the USB Hard Drive, you cannot pause a broadcast.

Instant replay

While watching a broadcast from a digital TV channel, you can easily instant replay the broadcast.

To replay the last 10 seconds of a broadcast, press **||** (Pause) and press **◀** (Left).

You can press **◀** repeatedly until you reach the start of the broadcast buffer or the maximum time span.

Progress bar

With the progress bar on screen, press **◀◀** (Rewind) or press **▶▶** (Forward) to select from where you want to start viewing the paused broadcast. Press these keys repeatedly to change speed.

Home menu

About the Home menu

Channels

This row contains all channels.

Sources

This row contains available sources on this TV.

Utilities

This row contains TV functions available to the user.

Quick settings

This row contains settings available to the user.

Open the Home menu

To open the Home menu and open an item...

- 1 - Press **Home** .
- 2 - Select an item and press **OK** to open or start it.
- 3 - Press **BACK** to close the Home menu without starting anything.

Utilities

About Utilities

Smart TV

Open Smart TV page.

TV guide

For more information, in **Help**, press the color key **— Keywords** and look up **TV guide**.

Recordings

For more information, in **Help**, press the color key **— Keywords** and look up **Recording**.

Channels

View channel list.

Update software

For more information, in **Help**, press the color key **— Keywords** and look up **Update software**.

Demo Me

View Demo Me for demo on this TV.

Help

Use Help function to diagnose and get more information about your TV.

Netflix

About Netflix

If you have a Netflix subscription, you can enjoy Netflix on this TV. Your TV must be connected to the Internet.

To open Netflix, press **NETFLIX** to open the Netflix App. You can open Netflix immediately from a TV in standby.

www.netflix.com

Sources

13.1

Switch to a device

From the list of Sources, you can switch to any of the connected devices. You can switch to a tuner to watch TV, open the content of a connected USB Flash Drive or see the recordings you made on a connected USB Hard Drive. You can switch to your connected devices to watch their programs, or to a digital receiver, or Blu-ray Disc player.

To switch to a connected device...

- 1 - Press **SOURCES** to open the Sources menu.
- 2 - Select one of the items in the source list and press **OK**. The TV will show the program or content of the device.
- 3 - Press **SOURCES** again to close the menu.

One Touch Play

With the TV on standby, you can switch on a disc player with your TV remote control.

To switch on both the disc player and TV from standby and start playing the disc immediately, press **▶** (Play) on the TV remote control. The device must be connected with an HDMI cable and both the TV and the device must have HDMI CEC switched on.

13.2

Options for TV Input

Some TV input devices offer specific settings.

To set the options for a specific TV input...

- 1 - Press **SOURCES**.
- 2 - Select the TV input from the list and press **OK**.
- 3 - Press **≡** **OPTIONS**. You can set the options for the selected TV input here.
- 4 - Press **≡** **OPTIONS** again to close the Options menu.

Possible options...

Controls

With this option you can operate the connected device with the TV remote control. The device must be connected with an HDMI cable and both the TV and the device must have HDMI CEC switched on.

Scan connections

To rescan connections and update the Sources menu, press **↻** **Scan connections**. (if **↻** key is available on the bottom of the screen.)

13.4

Game or computer

The device type determines picture and sound styles, resolution values and other specifics. You don't have to worry about the ideal settings.

For some devices the device type is unclear. A game console can have a built-in Blu-ray Disc player, so the type is set to Player because it is used as a disc player most of the time. For this kind of device, you can temporarily switch to the ideal settings for gaming. Or alternatively, switch to the ideal settings for a connected computer.

You can only use the setting **Game or Computer** when you switch to a connected device in the Sources menu. The Game or Computer setting is stored for the selected device.

To switch to the ideal settings for gaming or computer manually...

- 1 - Press **⚙**, select **Picture > Advanced** and press **OK**.
- 2 - Select **Game or Computer** and press **OK**.
- 3 - Select **Game**, **Computer** or **Off**.
- 4 - Press **◀** (left) to go back one step or press **←** **BACK** to close the menu.

Remember to set this setting back to **Off** when you stop playing the game.

Internet



14.1

Start Internet

You can browse the Internet on your TV. You can view any Internet website but most of them are not prepared for a TV screen.

- Some plug-ins (e.g., to view pages or videos) are not available on your TV.
- You cannot send or download files.
- Internet pages are shown one page at a time and full screen.

To start the Internet browser...



- 1 - Press  SMART TV > Open Internet and press OK.
- 2 - Enter an Internet address and press OK.
- 3 - To close Internet, press  Home or EXIT.

14.2

Internet Options

Some extras are available for the Internet.

To open the extras...

- 1 - With the website open, press  OPTIONS.
 - 2 - Select one of the items and press OK.
 - 3 - Press  (left) repeatedly if necessary, to close the menu.
- Add to Speed Dial
 - Add to Bookmarks
 - Page Security
 - New Private Tab
 - Settings
 - Help
 - Exit Internet Browser

Movies, photos and music

15.1

From a USB connection

You can view your photos or play your music and videos from a connected USB flash drive or USB Hard Drive.

With the TV turned on, plug in a USB flash drive or a USB Hard Drive to one of the USB connections. The TV detects the device and will list your media files.

If the list of files does not appear automatically...

- 1 - Press **SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Devices** and press **>** (right) to select the desired USB device.
- 3 - You can browse your files in the folder structure you have organized on the drive.
- 4 - To stop playing videos, photos and music, press **EXIT**.

Warning

If you try to pause or record a program with a USB Hard Drive connected, the TV will ask you to format the USB Hard Drive. This formatting will delete all current files on the USB Hard Drive.

15.2

From a computer

If the TV and the computer are in the same network, the TV can browse and play files stored on your computer.

On your computer, you need to install media server software like Twonky™ to share your files with the TV. The TV shows your files and folders as they are organized on your computer.

To browse the files on your computer, press **SOURCES**, select **Network** and press **OK**.

15.3

Menu bar and sorting

With a USB device connected, the TV sorts the files by type. Navigate to the menu bar and select the type of file you are looking for.

If you browse files from a computer, you can only browse the files and folders as they are organized on the computer.

The menu bar

Navigate to the menu bar and select the type of file you want to watch or play.

Select **Photos**, **Music** or **Movie**. Alternatively, you can open the **Folders** view and browse your folders to look for a file.

Sorting

To browse your photos by date, month, year, or alphabetically by name, press **Sort**.

To browse your music by album, artist, genre, or alphabetically by name, press **Sort**.

Videos are sorted alphabetically.

15.4

Play your movie

Play movie

- To play a video, select **Movie** in the menu bar, select a video and press **OK**.
- If there are more videos in the same folder, press **Play all** to play all videos in this folder.
- To jump to the next or previous video, press **≡ +** or **≡ -**.
- To pause the video, press **OK**. Press **OK** again to continue.
- To make a 10-second jump forwards or backwards in a video, press **>** or **<**.
- To rewind or fast forward, press **⏮** or **⏭**. Press the keys several times to speed up to 2x, 4x, 8x, 16x, 32x.
- To stop the video playback, press **■** (Stop).

Info

To view info on a video (playhead position, duration, title, date, etc.), select the video and press **INFO**. Press again to hide the info.






Movie options

During the video playback, press **≡** **OPTIONS** to...


- Subtitles
- Subtitle language
- Audio language
- Character set
- Status
- Repeat
- Subtitle settings

View your photos

View photos

To view photos, select  **Photos** in the menu bar, select a photo thumbnail and press **OK**.
 If there are several photos in the same folder, select a photo and press  **Slide show** to start a slide show of all photos in this folder.
 To jump to the next or previous photo, press  + or  - .
 To stop the slide show or close the photo, press  (Stop).

Info

To view photo info (size, creation date, file path, etc.), select a photo and press  **INFO** .
 Press again to hide the info.

Slideshow with music

You can watch a slideshow of your photos and listen to your music at the same time. You must start the music before you start the photo slideshow.

To play music with the slide show...





- 1 - Select a song or a folder with songs and press **OK**.
- 2 - Press  **INFO** to hide the browser list.
- 3 - Press  **BACK** .
- 4 - Now use the navigation arrows to select the folder with photos.
- 5 - Select the folder with photos and press  **Play All**.
- 6 - To stop the slideshow, press  **BACK** .










Photo options

With a photo on screen, press  **OPTIONS** to...


- **Shuffle** – Play your files in a random order.
- **Repeat** – Play the slide show once or continuously.
- **Slide show speed** – Set the speed of the slide show.
- **Slide show transition** – Set the style of the photo transitions.

Play your music

Play music

- To play music, select  **Music** in the menu bar, select a song and press **OK**.
- If there are more songs in the same folder, press  **Play all** to play all songs in this folder.
- To jump to the next or previous song, press  + or  - .
- To pause the music, press **OK**. Press **OK** again to continue.
- To make a 10-second jump forward or back in a song, press  or .
- To rewind or fast forward, press  or . Press the keys several times to speed up - 2x, 4x, 8x, 16x, 32x.
- To stop the music playback, press  (Stop).

Info

To view song info (title, artist, duration, etc.), select the song and press  **INFO** .
 Press again to hide the info.

Music options

Options for playing music...

- **Repeat** – Play all songs in this folder once or continuously.

Smartphones and tablets

16.1

Miracast

About Wi-Fi Miracast

You can view your photos or play your music and videos from a mobile device on your TV with Wi-Fi Miracast™. The mobile device and the TV should be within range, which usually means being in the same room.

Check if your mobile device is ready for Miracast.

Your TV is a **Wi-Fi CERTIFIED Miracast™** device. With Miracast™, you can watch and share the screen of your smartphone, tablet or computer on your TV screen wirelessly. You can stream videos (audio and video), and share photos or anything else that's on the device screen. No need to connect the device to your home network. Both the TV and the device must be Wi-Fi CERTIFIED Miracast™ devices and have Miracast switched on.

Miracast on this TV is subject to the HDCP protocol and cannot display copy-protected premium content sent by a device. The maximum video resolution supported is 720p for 2.4GHz Wi-Fi or 1080p for 5GHz Wi-Fi.

For more information on Wi-Fi CERTIFIED Miracast™ go to www.wi-fi.org

Wi-Fi®, the Wi-Fi CERTIFIED logo, the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. **Wi-Fi CERTIFIED Miracast™**, **Miracast™** are trademarks of the Wi-Fi Alliance.

Switch on Miracast

Make sure Wi-Fi Miracast is switched on.

- 1 - Press **⚙**, select **Network** and press **➤** (right) to enter the menu.
- 2 - Select **Wi-Fi Miracast** and press **OK**.
- 3 - Select **On** and press **OK**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Share a screen on TV

To share the screen of your smartphone, tablet or computer on the TV...

- 1 - Switch on the TV.
- 2 - On the device, in the settings menu, set the device to cast or mirror its display. Miracast uses Wi-Fi Direct™.
- 3 - On the device, scan for the available Miracast devices and select the TV to connect.
- 4 - On the TV, agree to the request to connect. You might be asked to enter a PIN code from the device on the TV. Enter the numbers with the digit keys on the remote control. Alternatively, you might be asked to enter a PIN code on the device. If the connection is made, the TV will show the device's screen.
- 5 - On the device, select the videos, photos or files you want to watch on TV.

* Miracast is supported by WiDi 3.5 onwards.

You might find the Wi-Fi connection (e.g. "DIRECT_tvname") also in lists of available networks on other network devices, e.g. your laptop computer. However, this connection can only be used by Wi-Fi Miracast devices.

Stop sharing

You can stop sharing a screen from the TV or the mobile device.

From the device

With the application you use to start Miracast, you can disconnect and stop watching the screen of the device on TV. The TV will switch back to the last selected program.

From the TV

To stop watching the screen of the device on TV, you can . . .

- press **EXIT** to watch a TV broadcast
- press **🏠 Home** to start another activity on the TV
- press **SOURCES** to open the Sources menu and select a connected device.

Block a device

The first time you receive a request to connect from a device, you can block the device. The request from this device and all its requests in the future, will be ignored.



To block a device...

Select **Block...** and press **OK**.

Unblock all devices

All previously connected and also blocked devices are stored in the Wi-Fi Miracast list of connections. If you clear this list, all blocked devices will be unblocked.

To unblock all blocked devices...

- 1 - Press , select **Network** and press OK.
- 2 - Select **Reset Wi-Fi Miracast connections** and press OK. The list is cleared.
- 3 - Press  (left) repeatedly if necessary, to close the menu.

Blocking a previously connected device

If you want to block a device that you previously connected, you need to clear the Wi-Fi Miracast connections list first. If you clear this list, you will have to confirm or block the connection for every device again.

Screen delay

The normal delay when sharing a screen with Miracast is about 1 second. The delay might be longer if you are using older devices with less processing power.

16.2

MHL

This TV is MHL™ compliant.

If your mobile device is also MHL compliant, you can connect your mobile device with a MHL cable to the TV. With the MHL cable connected you can share what's on your mobile device on the TV screen. Your mobile device charges its battery at the same time. The MHL connection is ideal for watching movies or playing games from your mobile device on TV for a longer time.

Charging


With the MHL cable connected, your device will charge while the TV is switched on (not in standby).

MHL Cable

You need a passive MHL cable (HDMI to Micro USB) to connect your mobile device to the TV. You might need an extra adapter to connect to your mobile device. To connect the MHL cable to the TV use the **HDMI 1 MHL** connection.



MHL, Mobile High-Definition Link and the MHL Logo are trademarks or registered trademarks of the MHL, LLC.

In **Help**, press  **Keywords** and look up HDMI MHL for more information.

16.3

Smart TV

About Smart TV

Connect this TV to the Internet and discover a new world of television. You can install a wired connection to your router or you can link up wirelessly with Wi-Fi.

With the TV connected to your home network, a smartphone can show a photo on TV, you can play videos stored on your computer or control the TV with your tablet.

With your TV connected to the Internet, you can watch a rental video from an online video store, read the online TV guide or record your favorite TV show on a USB Hard Drive. The Smart TV Apps add to the fun with all sorts of entertainment and convenient services.


What you need

To enjoy **Smart TV Apps**, you must connect the TV to a router with a high-speed (broadband) internet connection. You can use a home network connected to the Internet. You do not need a computer.

 
For more information, press  **Keywords** and look up **Network**.

Tip

To enter text or to navigate an Internet page more easily, you can consider connecting a USB keyboard and a USB mouse to the TV.

For more information, press  **Keywords** and look up **USB keyboard** or **USB mouse**.

Setup Smart TV

The first time you open Smart TV, you need to configure your connection. Read and agree to the terms and conditions to continue. If you do not want to set up Smart TV, press  **BACK**.

Parental control

To lock Adult 18+ rated apps . . .

- 1 - Turn on Smart TV parental control by selecting **Enable** and then press **OK**.
 - 2 - Enter an unlock PIN code of your choice.
 - 3 - Confirm your PIN code.
- Adult 18+ rated apps are now locked. To open a locked app, select the app and press **OK**. The TV will

ask you to enter your 4-digit code.

Smart TV Apps

Open Smart TV

The Smart TV start page is your link to the Internet. You can rent movies online, read newspapers, watch videos, listen to music, shop online, open your social network page, or watch TV programs whenever you want with Online TV.

To do this, you use Apps, which are Internet sites tailored for TV. With your TV connected to the Internet, you can open Smart TV.

Open Smart TV

To open the Smart TV start page, press **Smart TV**. Alternatively, you can press **Home** > **Utilities**, select **Smart TV** and press **OK**.

The TV connects to the Internet and opens the Smart TV start page. This may take a few seconds.

Close Smart TV

To close the Smart TV start page, press **Home** and select another activity.

TP Vision Europe B.V. bears no responsibility regarding the content and the quality of the content provided by the content service providers.

Smart TV start page

- 1 - Now on your TV
- 2 - Your Apps
- 3 - App gallery
- 4 - Internet
- 5 - Recommended Apps
- 6 - Search
- 7 - Color keys for control

Your Apps

You start Apps from the Smart TV start page. If the start page does not hold any Apps yet, you can add Apps from the App gallery.

App gallery

In the App gallery you find all available Apps.

Internet

The Internet App opens the World Wide Web on your TV.

On your TV, you can view any Internet website but most of them are not tailored for a TV screen.

- Some plug-ins (e.g. to view pages or videos) are not available on your TV.

- Internet pages are shown one page at a time and full screen.

Recommended Apps

In this window, Philips presents a range of recommended Apps for your country, Apps for Online TV or a selection of rental movies from Video stores. You can select and open them from the Recommended Apps window.

Search

With Search, you can search the App gallery for relevant Apps.

Enter a keyword in the text field, select **Search** and press **OK** to start searching. You can enter names, titles, genres, and description keywords to search. Alternatively, you can leave the text field empty and search for the most popular searches/keywords for a range of categories. In the list of found keywords, select a keyword and press **OK** to search for items with that keyword.

Open an App

To open an App, you must add it to your list of Apps in the Smart TV start page first. You can add Apps to your list from the App gallery.

The list of your Apps on the Smart TV start page can be several pages long. Use the arrow keys to go to the next or previous page.

Open an App

To open an App . . .

- 1 - Press **Home** > **Utilities** > **Smart TV**.
- 2 - On the start page, select an App icon and press **OK**.

In an App, press **BACK** to go back one step or page.

Close an App

To close an App and return to the Smart TV start page, press **Smart TV**.

Reload an App page

If an App page did not load properly, press **OPTIONS** and select **Reload** to reload the page.

Zoom

To zoom in on an App page . . .


- 1 - Press **OPTIONS** and select **Zoom page**.
- 2 - Use the slider bar to set the zoom level.
- 3 - Return to normal view by resetting the slider bar.

View security info

You can check the security level of an App page.

On an App page, press **OPTIONS** and select **Security info**. If a lock **lock** is shown next to the loading animation on the bottom of the screen while loading a page, the transfer is secured.


Feedback on an App

Select the App and press  **Feedback** to select a 'like' or 'dislike' button and send a suggestion or comment to us. You can also report an App malfunction.


Manage your Apps

From the list of Apps on the Smart TV start page you can . . .


• Remove an App

To remove an App from the list, select the App icon and press  **Remove** . The App is still available in the App gallery.

• Move an App

To reposition an App in the list, select the App icon, press  **Move** and use the arrow keys to reposition the App. Press **OK** to confirm the position.

• Manage an App

To manage an App from the list, select the App icon and press  **Manage** .

App gallery

Open the **App gallery** in Smart TV to browse the Apps, the collection of tailored websites for TV.

Find the App for YouTube videos, a national newspaper, an online photo album, etc. There are Apps to rent a video from an online video store and Apps for watching programs you missed. If the App gallery does not have what you are looking for, try the World Wide Web and surf the Internet on your TV.

Rental video Apps


 
With the video store Apps in Smart TV, you can rent your favorite movie from an online rental video store. You can pay securely with your credit card.

Rent a movie

1 - Open a Video store App in your list of Apps, or select a recommended video on the Smart TV start page.

2 - Select a movie.

3 - Make the online payment.

4 - Start watching. You can use the  (Play) and  (Pause) keys.

Most Video stores ask you to create a login account.

Streaming video

With this TV, you can watch rental movies sent as a streaming video format. You can almost instantly watch the movie. You might need a USB Hard Drive to store some video buffer. If you have a USB Hard Drive connected, you can also download rental movies from video stores that offer movie

downloading only. You can pause or restart a downloaded rental movie. Consult the video store regarding the rental duration of rental movies.

Internet traffic

Streaming or downloading many videos may exceed your monthly Internet traffic limit.

Online TV


 
With the Online TV App on the Smart TV start page*, you can watch TV programs you missed or watch programs whenever it suits you best.

Open Online TV


To open the Online TV App . . .

1 - Press  **Smart TV** .

2 - On the start page, select the  **Online TV** icon and press **OK**.

3 - Select a program on the page and press **OK** to start watching. You can use the  (Play) and  (Pause) keys.

List per broadcaster

To view Online TV programs ordered by broadcaster, press  **All broadcasters** . Select a broadcaster and press **OK**.

* If available in your region.

 

Multi View

While you are on a Smart TV App or the Internet, you can watch the current TV channel. **Multi View** opens a small screen for the TV channel next to the Smart TV screen.

To open Multi view...

1 - Press  **SMART TV** to open Smart TV.

2 - Press  **MULTI VIEW** to open the small screen.



3 - Press  + or  - to change the TV channel in the small screen.

Reset Smart TV

To reset your connection with Smart TV, clear the Internet memory on the TV.

You will clear your Philips Smart TV registration and parental rating setting, your video store app logins, all Smart TV app favorites, Internet bookmarks and history.

To clear the Internet memory...

1 - Press  , select **Network** and press  (right) to enter the menu.

2 - Select **Clear Internet memory** and press **OK**.

3 - Select **OK** to confirm.

4 - Press ◀ (left) repeatedly if necessary, to close the menu.

Ambilight

Ambilight style

Follow video

You can set Ambilight to follow the video dynamics or to show a preset color style. Alternatively, you can switch Ambilight off.

If you select **Follow video**, you can select one of the styles that follow the dynamics of the picture on your TV screen.

To set the Ambilight Style...

- 1 - Press **⚙**.
- 2 - Select **Ambilight** and press **➤** (right) to enter the menu.
- 3 - Select **Follow video** and press **OK**.
- 4 - Select the style you want and press **OK**.
- 5 - Press **◀** (left) to go back one step or press **← BACK** to close the menu.

The available **Follow video** styles are...

- **Standard** - Ideal for day-to-day TV watching
- **Natural** - Follows the picture or sound as truthfully as possible
- **Immersive** - Ideal for action movies
- **Vivid** - Ideal for daylight viewing
- **Game** - Ideal for gaming
- **Comfort** - Ideal for a quiet evening
- **Relax** - Ideal for a lounge feeling

Follow color

You can set Ambilight to follow the video dynamics or to show a preset color style. Alternatively, you can switch Ambilight off.

If you select **Follow color**, you can select one of the preset color styles.

To set the Ambilight Style...

- 1 - Press **⚙**.
- 2 - Select **Ambilight** and press **➤** (right) to enter the menu.
- 3 - Select **Follow color** and press **OK**.
- 4 - Select the style you want and press **OK**.
- 5 - Press **◀** (left) to go back one step or press **← BACK** to close the menu.

The available **Follow color** styles are...

- **Hot lava** - Red color variations
- **Deep water** - Blue color variations
- **Fresh nature** - Green color variations

- **Warm white** - Static color
- **Cool white** - Static color

Ambilight off

To switch off Ambilight...

- 1 - Press **⚙**.
- 2 - Select **Ambilight** and press **➤** (right) to enter the menu.
- 3 - Select **Off** and press **OK**.
- 4 - Press **◀** (left) to go back one step or press **← BACK** to close the menu.

Ambilight settings

Ambilight brightness

With Ambilight **Brightness**, you can set the level of brightness of the Ambilight.

To adjust the level...

- 1 - Press **⚙**.
- 2 - Select **Ambilight** and press **➤** (right) to enter the menu.
- 3 - Select **Brightness** and press **OK**.
- 4 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.
- 5 - Press **◀** (left) repeatedly if necessary, to close the menu.

Ambilight saturation

With Ambilight **Saturation**, you can set the level of color saturation of the Ambilight.

To adjust the level...




- 1 - Press **⚙**.
- 2 - Select **Ambilight** and press **➤** (right) to enter the menu.
- 3 - Select **Saturation** and press **OK**.
- 4 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.
- 5 - Press **◀** (left) repeatedly if necessary, to close the menu.

Advanced Ambilight settings

Wall color

With **Wall Color**, you can neutralize the influence of a colored wall on the Ambilight colors. Select the color of the wall behind the TV and the TV will modify the Ambilight colors to appear as they are intended.




To select the color of the wall .

- 1 - Press .
- 2 - Select **Ambilight** and press  (right) to enter the menu.
- 3 - Select **Advanced** > **Wall color** and press **OK**.
- 4 - In the color palette, select the color that matches the color of the wall behind the TV.
- 5 - Press  (left) repeatedly if necessary, to close the menu.

TV turn off

With **TV switch off**, you can set Ambilight to switch off immediately or slowly fade out when you switch off the TV. The slow fade out gives you some time to switch on the lights in your living room.

To select the way in which Ambilight switches off...

- 1 - Press .
- 2 - Select **Ambilight** and press  (right) to enter the menu.
- 3 - Select **Advanced** > **TV switch off** and press **OK**.
- 4 - Select **Fade out to off** or **Immediate switch off**.
- 5 - Press  (left) repeatedly if necessary, to close the menu.

Multi room

18.1

About Multi room

With Multi Room you can watch a TV program that comes from another TV in your home. The program is streamed from one TV to the other. You can stream a program to a TV that has no antenna connection or has no Smart card subscription of its own. You can also stream a recorded program from a TV with a connected Hard Drive.


The TV that streams the program to the other TV must be switched on and must tune to the channel or play the recording.

Streaming a TV program with Multi Room will reduce the picture resolution to 720p maximum. You cannot stream radio channels. Some broadcasters protect their programs to prevent this kind of streaming.

18.2




What you need

To stream a TV program from one TV to another, the program must come from a digital TV channel.

Both TVs must be connected to your home wireless network. For more information, press  **Keywords** and look up **Wireless Network**.

Make sure that both TVs have the setting **Switch on with Wi-Fi (WoWLAN)** enabled in the TV setup.

To check this setting on this TV...

- 1 - Press , select **Network** and press  (right) to enter the menu.
- 2 - Select **Switch on with Wi-Fi (WoWLAN)** and press **OK**.
- 3 - Select **On** and press **OK**.
- 4 - Press  (left) repeatedly if necessary, to close the menu.

18.3

Using Multi room

First time use





When you start Multi room for the first time, turn on both TVs.

Once this TV has connected to the other TV, the other TV will appear automatically in the **Browse network** menu, even when it is in standby.

Stream a TV channel

With Multi Room, you can watch the current TV channel or open the channel list of the other TV. If you select a channel from the list, the other TV will also switch to the channel you selected. If the other TV has a built-in satellite tuner with installed channels or a connected Hard Disk Drive (HDD) with recordings*, you can also watch these on this TV. You cannot switch channels while the other TV is recording or in Pause TV mode.


 
 
To watch a TV channel from the other TV . . .

- 1 - Make sure the other TV is switched on.
- 2 - On this TV, press **SOURCES**, select **Browse network** and press **OK**.
- 3 - If the TV is not yet connected to your home network, the network installation will start automatically. If the TV is already connected, go to step 4.
- 4 - In the **Browse network** menu, select the name of the other TV and press **OK**. If you have several TVs in your home, you might want to change the name of the other TV. You can do that on the TV itself.
- 5 - Select what you want to watch from the other TV . . .
 - To watch the current channel of the other TV, select **Current channel** and press **OK**.
 - To open the channel list of the other TV, select **Watch TV** and press  (Right).
 - To open the list of recordings* on the other TV, select **Watch recordings** and press  (Right).
 - You can switch channels with  + and  -. You cannot switch channels when the other TV is recording or in Pause TV mode.

TV network name

If you have more than one TV in your home network, you can give the TV a unique name.

To change the TV name...

- 1 - Press , select **Network** and press  (right) to enter the menu.
- 2 - Select **TV network name** and press **OK**.
- 3 - Enter the name with the on-screen keyboard.
- 4 - Select **Done** to confirm the change.
- 5 - Press  (left) repeatedly if necessary, to close the menu.

Settings

Quick settings

Eco settings

For more information, in **Help**, press the color key **— Keywords** and look up **Eco settings**.

Picture style

For more information, in **Help**, press the color key **— Keywords** and look up **Picture style**.

Picture format

For more information, in **Help**, press the color key **— Keywords** and look up **Picture format**.

Sound style

For more information, in **Help**, press the color key **— Keywords** and look up **Sound style**.

Ambilight style

For more information, in **Help**, press the color key **— Keywords** and look up **Ambilight style**.

Headphones volume

For more information, in **Help**, press the color key **— Keywords** and look up **Headphones volume**.

Speakers

For more information, in **Help**, press the color key **— Keywords** and look up **TV speakers**.

Clock

For more information, in **Help**, press the color key **— Keywords** and look up **Clock**.

Sleep timer

For more information, in **Help**, press the color key **— Keywords** and look up **Sleep timer**.

Picture

Picture style

Select a style

For easy picture adjustment, you can select a preset Picture style.

- 1 - While watching a TV channel, press **⚙**.
- 2 - Select **Picture > Picture style**, and select one of the styles in the list.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

The available styles are...

- **Personal** - The picture preferences you set during the first start up.
 - **Vivid** - Ideal for daylight viewing
 - **Football** - Ideal for football game viewing
 - **Standard** - Most energy conscious setting - Factory setting
 - **Movie** - Ideal for watching movies
 - **Photo** - Ideal for viewing photos
-

Customize a style

Any picture setting you adjust, such as Color or Contrast, is stored in the currently selected **Picture style**. This allows you to customize each style. Only the **Personal** style can save settings for each connected device in the Sources menu.

Restore a style

The selected style will store the changes you made. We recommend that you adjust the picture settings for the style **Personal** only. The Picture Style - Personal can save its settings for each individual connected device in Sources menu.

To restore the style to its original setting...

- 1 - While watching a TV channel, press **⚙**.
- 2 - Select **Picture > Picture style**, and select the

style you want to restore.

3 - Press the color key **Restore style**, and press OK. The style is restored.

4 - Press **<** (left) repeatedly if necessary, to close the menu.

Home or Store

If the **Picture style** is switched back to **Vivid** every time you switch on the TV, the TV location is set to **Shop**, a setting meant for in-store promotion.

To set the TV for Home use...

1 - Press **⚙️**, select **General settings**, and press **>** (right) to enter the menu.

2 - Select **Location > Home** and press OK.

3 - Press **<** (left) repeatedly if necessary, to close the menu.

Picture settings

Color

With **Color**, you can adjust the color saturation of the picture.

To adjust the color...

1 - Press **⚙️**, select **Picture** and press **>** (right) to enter the menu.

2 - Select **Color** and press **>** (right).

3 - Press the **▲** (up) or **▼** (down) arrows to adjust the value.

4 - Press **<** (left) repeatedly if necessary, to close the menu.

Contrast

With **Contrast**, you can adjust the contrast of the picture.

To adjust the contrast...

1 - Press **⚙️**, select **Picture** and press **>** (right) to enter the menu.

2 - Select **Contrast** and press **>** (right).

3 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.

4 - Press **<** (left) repeatedly if necessary, to close the menu.

Sharpness

With **Sharpness**, you can adjust the level of sharpness in fine detail of the picture.

To adjust the sharpness...

1 - Press **⚙️**, select **Picture** and press **>** (right) to

enter the menu.

2 - Select **Sharpness** and press **>** (right).

3 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.

4 - Press **<** (left) repeatedly if necessary, to close the menu.

Advanced picture settings

Game or computer

When you connect a device, the TV recognizes its type and gives each device a correct type name. You can change the type name if you wish. If a correct type name for a device is set, the TV automatically switches to the ideal TV settings when you switch to this device in the Sources menu.

If you have a game console with a built-in Blu-ray Disc player, the type name may have been set to Blu-ray Disc. With **Game or computer** you can switch to the ideal settings for gaming manually. Don't forget to switch the Game or Computer setting off when you go back to watching TV.

To switch to the ideal settings for gaming or computer manually...

1 - Press **⚙️**, select **Picture > Advanced** and press OK.

2 - Select **Game or computer** and press OK.

3 - Select **Game**, **Computer** or **Off**.

4 - Press **<** (left) to go back one step or press **← BACK** to close the menu.

Color settings

Tint

With **Tint**, you can adjust the level of tint in fine detail of the picture. (NTSC M only)

To adjust the tint...

1 - Press **⚙️**, select **All Settings** and press OK.

2 - Select **Picture** and press **>** (right) to enter the menu.

3 - Select **Advanced > Color** and press OK.

4 - Select **Tint**, and press **>** (right).


5 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.

6 - Press **<** (left) repeatedly if necessary, to close the menu.

Color enhancement

With **Color enhancement**, you can enhance the color intensity and the details in bright colors.


To adjust the level...

- 1 - Press , select **Picture** and press **>** (right) to enter the menu.
- 2 - Select **Advanced > Color > Color enhancement** and press **OK**.
- 3 - Select **Maximum, Medium, Minimum** or **Off**.
- 4 - Press **<** (left) repeatedly if necessary, to close the menu.

Color temperature

With **Color temperature**, you can set the picture to a preset color temperature or select **Custom** to set a temperature setting yourself with **Custom color temperature**. Color Temperature and Custom Color Temperature are settings intended for expert users.


To select a preset...

- 1 - Press , select **Picture** and press **>** (right) to enter the menu.
- 2 - Select **Advanced > Color > Color temperature** and press **OK**.
- 3 - Select **Normal, Warm** or **Cool**. Or select **Custom** if you want to customize a color temperature yourself.
- 4 - Press **<** (left) repeatedly if necessary, to close the menu.

Custom color temperature

With **Custom color temperature**, you can set the color temperature yourself. To set a custom color temperature, first select **Custom** in the Color Temperature menu. Custom Color Temperature is a setting intended for expert users.

To set a custom color temperature...


- 1 - Press , select **Picture** and press **>** (right) to enter the menu.
- 2 - Select **Advanced > Color > Custom color temperature** and press **OK**.
- 3 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.
- 4 - Press **<** (left) repeatedly if necessary, to close the menu.

Contrast settings

Contrast modes

With **Contrast Mode**, you can set the level at which power consumption can be reduced by dimming the intensity of the screen. Choose for the best power consumption or for the picture with the best intensity.

To adjust the level...


- 1 - Press , select **Picture** and press **>** (right) to enter the menu.

- 2 - Select **Advanced > Contrast > Contrast mode** and press **OK**.
- 3 - Select **Standard, Best power, Best picture**, or **Off**.
- 4 - Press **<** (left) repeatedly if necessary, to close the menu.

Dynamic contrast

With **Dynamic Contrast**, you can set the level at which the TV automatically enhances the details in the dark, middle and light areas of the picture.


To adjust the level...

- 1 - Press , select **Picture** and press **>** (right) to enter the menu.
- 2 - Select **Advanced > Contrast > Dynamic contrast** and press **OK**.
- 3 - Select **Maximum, Medium, Minimum** or **Off**.
- 4 - Press **<** (left) repeatedly if necessary, to close the menu.

Brightness

With **Brightness**, you can set the level of brightness of the picture signal. Brightness is a setting intended for expert users. We recommend non-expert users to adjust the brightness of the picture with the **Contrast** setting.


To adjust the level...

- 1 - Press , select **Picture** and press **>** (right) to enter the menu.
- 2 - Select **Advanced > Contrast > Brightness**, and press **OK**.
- 3 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.
- 4 - Press **<** (left) repeatedly if necessary, to close the menu.

Video contrast

With **Video Contrast**, you can decrease the range of the video contrast.

To adjust the level...

- 1 - Press , select **Picture** and press **>** (right) to enter the menu.
- 2 - Select **Advanced > Contrast > Video contrast**, and press **OK**.
- 3 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.
- 4 - Press **<** (left) repeatedly if necessary, to close the menu.

Gamma

With **Gamma**, you can set a non-linear setting for picture luminance and contrast. Gamma is a setting intended for expert users.

To adjust the level...

- 1 - Press **⚙️**, select **Picture** and press **➤** (right) to enter the menu.
- 2 - Select **Advanced > Contrast > Gamma**, and press **OK**.
- 3 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Sharpness settings

Ultra Resolution

With **Ultra Resolution**, you switch on a superior sharpness in line edges and contours.

To switch on or off...

- 1 - Press **⚙️**, select **Picture** and press **➤** (right) to enter the menu.
- 2 - Select **Advanced > Sharpness > Ultra Resolution**, and press **OK**.
- 3 - Select **On** or **Off**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Noise reduction

With **Noise reduction**, you can filter out and reduce the level of image noise.

To adjust the noise reduction...

- 1 - Press **⚙️**, select **Picture** and press **➤** (right) to enter the menu.
- 2 - Select **Advanced > Sharpness > Noise reduction**, and press **➤** (right) to enter the menu.
- 3 - Select **Maximum, Medium, Minimum** or **Off**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

MPEG artifact reduction

With **MPEG artifact reduction**, you can smooth the digital transitions in the picture. MPEG artifacts are mostly visible as small blocks or jagged edges in images.

To reduce the MPEG artifacts...

- 1 - Press **⚙️**, select **Picture** and press **➤** (right) to enter the menu.
- 2 - Select **Advanced > Sharpness > MPEG**

artifact reduction, and press **➤** (right) to enter the menu.

3 - Select **On** and press **OK**.

4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Motion settings

Natural motion

With **Natural motion**, you can reduce the motion judder, visible in movies on TV. Natural Motion makes any movement smooth and fluent.

To adjust the motion judder...

- 1 - Press **⚙️**, select **Picture** and press **⏏** (right) to enter the menu.
- 2 - Select **Advanced > Motion > Natural motion**, and press **OK**.
- 3 - Select **Maximum, Medium, Minimum** or **Off**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Picture format

Fill the screen settings

If the picture is not filling the whole screen, if black bars are showing on the top or bottom or at both sides, you can adjust the picture to fill the screen completely.

To select one of the basic settings to fill the screen...

- 1 - Press **⚙️**, select **Picture** and press **➤** (right) to enter the menu.
- 2 - Select **Picture format** and press **➤** (right).
- 3 - Select **Fill screen, Fit to screen** or **Wide screen**, and press **OK**.
- 4 - Press **← BACK** to close the menu.

- **Fill screen** – automatically enlarges the picture to fill the screen. Picture distortion is minimal, subtitles remain visible. Not suitable for PC input. Some extreme picture formats may still show black bars.
- **Fit to screen** – automatically zooms in the picture to fill the screen without distortion. Black bars may be visible. Not suitable for PC input.


Advanced

If the two basic settings are inadequate to format the picture you want, you can use the advanced settings. With the advanced settings you manually format the picture on your screen.

You can zoom, stretch and shift the picture until it shows what you need – e.g. missing subtitles or

scrolling text banners. If you format the picture for a specific Source – like a connected game console – you can return to this setting the next time you use the game console. The TV stores your last settings for each connection.

To format the picture manually...

- 1 - Press , select **Picture** and press **➤** (right) to enter the menu.
- 2 - Select **Picture format** and press **➤** (right).
- 3 - Press **— Advanced** and press **OK**.
- 4 - Use **Shift**, **Zoom**, **Stretch** or **Original** to adjust the picture. Select **Undo** to return to the setting the picture had when you opened **Picture Format**.
 - **Last setting** – Select to return to the last setting.
 - **Shift** – Select on the arrows to shift the picture. You can only shift the picture when it is zoomed in.
 - **Zoom** – Select on the arrows to zoom in.
 - **Stretch** – Select on the arrows to stretch the picture vertically or horizontally.
 - **Original** – Shows the original format of the incoming picture. This is a 1:1 pixel on pixel format. Expert mode for HD and PC input.
 - **Undo** – Select to return to the picture format you started with.


19.3

Sound

Sound style

Select a style

For easy sound adjustment, you can select a preset setting with Sound Style.

- 1 - While watching a TV channel, press .
- 2 - Select **Sound** and press **➤** (right) to enter the menu.
- 3 - Select **Sound style**, and select one of the styles in the list.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

The available styles are...


- **Personal** - The sound preferences you set during the first start up.
- **Original** - Most neutral sound setting
- **Movie** - Ideal for watching movies
- **Music** - Ideal for listening to music
- **Game** - Ideal for gaming
- **News** - Ideal for speech

Restore a style

With a Sound Style selected, you can adjust any sound setting in **Setup > Sound...**

The selected style will store the changes you made. We recommend that you adjust the sound settings for the style **Personal** only. The Sound Style - Personal can save settings for each individual connected device in the Sources menu.

To restore the style to its original setting...


- 1 - While watching a TV channel, press .
- 2 - Select **Sound** and press **➤** (right) to enter the menu.
- 3 - Select **Sound style**, and select the Sound Style you want to restore.
- 4 - Press the color key **— Restore style**. The style is restored
- 5 - Press **◀** (left) repeatedly if necessary, to close the menu.

Sound settings

Bass

With **Bass**, you can adjust the level of low tones in the sound.


To adjust the level...

- 1 - Press , select **Sound** and press **➤** (right) to enter the menu.
- 2 - Select **Bass** and press **➤** (right).
- 3 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Treble

With **Treble**, you can adjust the level of high tones in the sound.


To adjust the level...

- 1 - Press , select **Sound** and press **➤** (right) to enter the menu.
- 2 - Select **Treble** and press **➤** (right).
- 3 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Surround mode

With **Surround Mode**, you can set the sound effect of the TV speakers.

To set the surround mode...

- 1 - Press , select **Sound** and press **➤** (right) to enter the menu.
- 2 - Select **Surround mode** and press **➤** (right) to enter the menu.

- 3 - Select **Stereo** or **Incredible surround**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Advanced sound settings

Auto volume leveling

With **Auto Volume Leveling**, you can set the TV to automatically level out sudden volume differences, typically at the beginning of adverts or when you are switching channels.

To switch on or off...

- 1 - Press **⚙**, select **Sound** and press **▶** (right) to enter the menu.
- 2 - Select **Advanced** and press **▶** (right) to enter the menu.
- 3 - Select **Auto volume leveling** and press **▶** (right) to enter the menu.
- 4 - Select **On** or **Off**.
- 5 - Press **◀** (left) repeatedly if necessary, to close the menu.

Delta volume

With **Delta volume**, you can set the TV to automatically level out sudden volume differences.

To adjust the value...

- 1 - Press **⚙**, select **Sound** and press **▶** (right) to enter the menu.
- 2 - Select **Advanced** and press **▶** (right) to enter the menu.
- 3 - Select **Delta volume** and press **▶** (right) to enter the menu.
- 4 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.
- 5 - Press **◀** (left) repeatedly if necessary, to close the menu.

TV speakers

You can send the TV sound to a connected audio device - a Home Theater System or audio system.

You can select where you want to hear the TV sound and how you want to control it.

- If you select **TV speakers > Off**, you permanently switch off the TV speakers.
- If you select **TV speakers > On**, the TV speakers are always on.

Clear sound

With **Clear Sound**, you improve the sound for speech. Ideal for news programs. You can switch the speech improvement on or off.

To switch on or off...

- 1 - Press **⚙**, select **Sound** and press **▶** (right) to enter the menu.
- 2 - Select **Advanced > Clear sound** and press **OK**.
- 3 - Select **On** or **Off**, then press **OK**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Audio out format

If you have a Home Theater System (HTS) with multichannel sound processing capabilities like Dolby Digital, DTS® or similar, set the Audio Out Format to Multichannel. With Multichannel, the TV can send the compressed multichannel sound signal from a TV channel or connected player to the Home Theater System. If you have a Home Theater System without multichannel sound processing, select Stereo.

To set **Audio out format**...

- 1 - Press **⚙**, select **Sound** and press **▶** (right) to enter the menu.
- 2 - Select **Advanced > Audio out format** and press **OK**.
- 3 - Select **Multichannel**, **Stereo** or **Multichannel (by pass)**, then press **OK**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Audio out leveling

Use the Audio Out Leveling setting to level the volume (loudness) of the TV and the Home Theater System when you switch over from one to another. Volume differences can be caused by differences in sound processing.


To level the difference in volume...

- 1 - Press **⚙**, select **Sound** and press **▶** (right) to enter the menu.
- 2 - Select **Advanced > Audio out leveling** and press **OK**.
- 3 - Select **More**, **Medium**, or **Less**, then press **OK**.
- 4 - If the volume difference is large, select **More**. If the volume difference is small, select **Less**.
- 5 - Press **◀** (left) repeatedly if necessary, to close the menu.

Audio Out Leveling affects both the Audio Out - Optical and HDMI ARC sound signals.

HDMI 4 - ARC


To switch on or off...

- 1 - Press , select **Sound** and press **➤** (right) to enter the menu.
- 2 - Select **Advanced > HDMI 4 - ARC** and press **OK**.
- 3 - Select **On** or **Off**, then press **OK**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Audio out delay

If you set an Audio sync delay on your Home Theater System, to synchronize the sound with the picture, you must switch off **Audio Out Delay** on the TV.


To switch off Audio Out Delay...

- 1 - Press , select **Sound** and press **➤** (right) to enter the menu.
- 2 - Select **Advanced > Audio out delay** and press **OK**.
- 3 - Select **Off**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Audio out offset

If you cannot set a delay on the Home Theater System, you can set a delay on the TV with **Audio Out Offset**.


To synchronize the sound on the TV...

- 1 - Press , select **Sound** and press **➤** (right) to enter the menu.
- 2 - Select **Advanced > Audio out offset** and press **OK**.
- 3 - Use the slider bar to set the sound offset and press **OK**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Headphone volume


With **Headphones Volume**, you can set the volume of connected headphones separately.

To adjust the volume...

- 1 - Press , select **Sound** and press **➤** (right) to enter the menu.
- 2 - Select **Headphones volume** and press **OK**.
- 3 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

TV placement


As part of the first installation, this setting is set to either **On a TV stand** or **Hung on the wall**. If you have changed the placement of the TV since then, adjust this setting accordingly for best sound reproduction.

- 1 - Press , select **Sound** and press **➤** (right) to enter the menu.
- 2 - Select **TV placement** and press **OK**.
- 3 - Select **On a TV stand** or **On the wall**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

19.4

Eco settings


Energy saving

Eco settings  bundles the settings that help the environment.

Energy Saving

If you select **Energy Saving**, the TV switches to **Picture Style - Standard** automatically, the most ideal energy conscious setting for the picture.


To set the TV in **Energy Saving**...

- 1 - Press , select **Eco settings** and press **➤** (right) to enter the menu.
- 2 - Select **Energy saving**, the **Picture style** is set to **Standard** automatically.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

Screen off

If you only listen to music, you can switch off the TV screen to save energy.

To only switch off the TV screen...

- 1 - Press , select **Eco settings** and press **➤** (right) to enter the menu.
- 2 - Select **Screen off**.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.


To switch the screen back on, press any key on the remote control.


Switch off timer

If the TV receives a TV signal, but you don't press a key on the remote control during a 4 hour period, the TV switches off automatically to save energy. Also, if the TV does not receive a TV signal or a remote control command for 10 minutes, the TV switches off automatically.

If you use the TV as a monitor or use a digital receiver to watch TV (a Set-Top Box - STB) and you do not use the remote control of the TV, you should deactivate this automatic switch off.

To deactivate the Switch Off Timer ...


- 1 - Press , select **Eco settings** and press **➤** (right) to enter the menu.
- 2 - Select **Switch off timer** and press **OK**.
- 3 - Press the arrows **▲** (up) or **▼** (down) to adjust the value. The value **0** deactivates the automatic switch off.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

For more information on environmentally friendly TV settings, in **Help**, press the color key  **Keywords** and look up **Eco settings**.


19.5

General settings


Languages

In **Help**, press  **Keywords** and look up **Language settings** for more information.


Clock

In **Help**, press  **Keywords** and look up **Clock settings** for more information.

Sleep timer

For more information, in **Help**, press the color key  **Keywords** and look up **Sleep timer**.


Switch off timer

For more information, in **Help**, press the color key  **Keywords** and look up **Switch off timer**.

EasyLink


EasyLink

To switch off EasyLink completely...

- 1 - Press , select **General settings**, and press **➤** (right) to enter the menu.
- 2 - Select **EasyLink**, press **➤** (right) and select **EasyLink** one step further.
- 3 - Select **Off**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

EasyLink remote control


To switch off EasyLink remote control...

- 1 - Press , select **General settings**, and press **➤** (right) to enter the menu.
- 2 - Select **EasyLink > Easylink remote control**, and press **OK**.
- 3 - Select **Off**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Pixel Plus Link

Some devices, a DVD or Blu-ray Disc player, might have their own picture quality processing. To avoid bad picture quality caused by interference with the TV processing, the picture processing of these devices should be disabled. The TV comes with Pixel Plus link turned on and disables the picture quality processing of recent Philips devices connected to the TV.

To switch off Pixel Plus link...

- 1 - Press , select **General settings**, and press **➤** (right) to enter the menu.
- 2 - Select **EasyLink > Pixel Plus link**, and press **OK**.
- 3 - Select **Off**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Auto turn off devices

You can set the TV to turn off the connecting HDMI-CEC compliant devices if they are not the active source. The TV turns the connected device to standby after 5 minutes of inactivity.

HDMI Ultra HD

This TV can display Ultra HD signals. Some devices, connected via HDMI, do not recognize a TV with Ultra HD and might not work correctly or might show distorted picture or sound. To keep such devices from malfunctioning, you can set the signal quality to a level that the device can handle. If the device is not using Ultra HD signals, you can switch off Ultra HD for this HDMI connection.

The setting **UHD 4:4:4/4:2:2** allows UHD YCbCr 4:4:4 / 4:2:2 signals. The setting **UHD 4:2:0** allows UHD YCbCr 4:2:0 signals.

To set the signal quality...

- 1 - Press **⚙️**, select **General settings** and press **➤** (right) to enter the menu.
- 2 - Select **HDMI Ultra HD > HDMI 1 & 2** and press **OK**.
- 3 - Select **UHD 4:4:4/4:2:2**, **UHD 4:2:0** or **UHD Off** and press **OK**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

USB keyboard settings

To install the USB keyboard, switch on the TV and connect the USB keyboard to one of the **USB** connections on the TV. When the TV detects the keyboard for the first time, you can select your keyboard lay-out and test your selection. If you select a Cyrillic or Greek keyboard layout first, you can select a secondary Latin keyboard layout.

To change the keyboard layout setting when a layout was selected...

- 1 - Press **⚙️**, select **General settings** , and press **➤** (right) to enter the menu.
- 2 - Select **USB keyboard settings**, and press **OK** to start the keyboard setup.

Mouse settings

To adjust the motion speed of the USB mouse....

- 1 - Press **⚙️**, select **General settings** , and press **➤** (right) to enter the menu.
- 2 - Select **Mouse settings**, and press **OK** to start the mouse speed setup.

Home or Store

If the TV is installed in a shop, you can set the TV to display an in store promotion banner. **Picture style** is set to **Vivid** automatically. **Switch off timer** is switched off.

To set the TV to Store location...

- 1 - Press **⚙️**, select **General settings** , and press **➤** (right) to enter the menu.
- 2 - Select **Location > Store**, and press **OK**.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

If you use the TV at home, set the TV in Home location.

Shop setup

If the TV is set to **Store**, you can set the availability of a specific demo for in store use.

- 1 - Press **⚙️**, select **General settings** , and press **➤** (right) to enter the menu.
- 2 - Select **Shop setup** and press **➤** (right) to enter the menu.
- 3 - Select **banner**, and select **Commercial banner** or **Promotional banner** as in store demo.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

TV guide

For more information, in **Help**, press the color key **■** **Keywords** and look up **TV guide, data and information**.

Channel logos

In some countries, the TV can show the channel logos.


If you do not want these logos to appear, you can switch them off.

To switch off the logos...

- 1 - Press **⚙️**, select **General settings** , and press **➤** (right) to enter the menu.
- 2 - Select **Channel logos** and press **➤** (right) to enter the menu.
- 3 - Select **Off** and press **OK**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Samba TV


Samba TV makes TV better by cleverly recognizing on-screen content. By enabling, you accept and acknowledge Samba TV's Terms of Services and Privacy Policy.

- 1 - Press , select **General settings** and press **➤** (right) to enter the menu.
- 2 - Select **Samba TV** and press **➤** (right) to enter the menu.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

Factory settings

You can set the TV back to the original TV settings (factory settings).


To switch back to the original settings...

- 1 - Press , select **General settings** and press **➤** (right) to enter the menu.
- 2 - Select **Factory settings** and press **OK**.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.


Reinstall TV

You can redo the full TV installation. The TV is completely reinstalled.


To redo the full TV installation...

- 1 - Press , select **General settings** and select **Reinstall TV**.
- 2 - Follow the instructions on screen. The installation may take a few minutes.

Channel list copy

For more information, in **Help**, press the color key  **Keywords** and look up **Channel List Copy, copy**.

Universal Access

For more information, in **Help**, press the color key  **Keywords** and look up **Universal access**.

19.6

Clock and language


Clock

Date and time


☒ In some countries, digital broadcasts do not send UTC - Coordinated Universal Time information. The daylight saving change might be ignored and the TV might show an incorrect time.

When you record programs scheduled in the TV Guide, we recommend that you do not change the time and date manually. In some countries, for some network operators, the **Clock** setting is hidden to avoid an incorrect clock setting.

To correct the TV clock automatically...


- 1 - Press , select **General settings** > **Clock** > **Auto clock mode**.
- 2 - Select **Automatic** and press **OK**.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

To set the TV clock manually...

- 1 - Press , select **General settings** > **Clock** > **Auto clock mode**, and select **Manual**.
- 2 - Select **Date** and **Time** to adjust.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.


Time zone

To set the time zone...

- 1 - Press , select **General settings** > **Clock** > **Time zone**, and press **OK**.
- 2 - Select one of the time zones.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

Menu language

To change the language of the TV menus and messages...

- 1 - Press , select **General settings** > **Language** > **Menu language** and press **OK**.
- 2 - Select the language you want and press **OK**.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

CC

To switch on closed captions, press **CC**.

You can switch subtitles **On**, **Off** or **On during mute**.

Or to show subtitles automatically when the broadcasted program is in a different language (the language set for the TV) select **Automatic**. This setting will also show Subtitles automatically when you mute the sound.

19.7

Universal Access

Switch on

With **Universal access** switched on, the TV is prepared for use for the deaf, hard of hearing, blind, or visually impaired people.

Switch on

If you did not switch on **Universal access** during the installation, you can still enable it in **Universal access** menu.

To switch on Universal access...

- 1 - Press **⚙**, select **Universal access** and press **➤** (right) to enter the menu.
- 2 - Select **Universal access** one step further.
- 3 - Select **On** and press **OK**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

With **Universal access** switched on, the option **Universal access** is added in the Options menu.

Audio description

Switch on

Digital TV channels can broadcast special audio commentary describing what is happening on screen.

To be able to set audio and effects for the visually impaired, you must first enable **Audio description**. Also, before you can switch on **Audio description**, you have to enable **Universal access** in setup menu.

With **Audio description**, a narrator's commentary is added to the normal audio.

To switch on the commentary (if available)...

To switch on **Audio description**...

- 1 - Press **⚙**, select **Universal access** and press **➤** (right) to enter the menu.
- 2 - Select **On** and press **OK**.

3 - Select **Audio description** and press **➤** (right) to enter the menu.

4 - Select **Audio description** one step further

2 - Select **On** and press **OK**.

6 - Press **◀** (left) repeatedly if necessary, to close the menu.

You can check if an audio commentary is available. In the Options menu, select **Audio language** and look for an audio language marked with an **AD**.

Speakers/headphones

With **Speakers/headphones**, you can select where you want to hear the audio commentary.

On the TV speakers only, on the headphones only or on both.

To set Speakers/headphones...

- 1 - Press **⚙**, select **Universal access** and press **➤** (right) to enter the menu.
- 2 - Select **Audio Description** > **Speakers/headphones** and press **OK**.
- 3 - Select **Speakers**, **Headphones** or **Speakers + Headphones** and press **OK**.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Mixed volume

You can mix the volume of the normal audio with the audio commentary.

To mix the volume...

- 1 - Press **⚙**, select **Universal access** and press **➤** (right) to enter the menu.
- 2 - Select **Audio Description** > **Mixed volume** and press **OK**.
- 3 - Press the arrows **▲** (up) or **▼** (down) to adjust the value.
- 4 - Press **◀** (left) repeatedly if necessary, to close the menu.

Audio effect

Some audio commentary can hold extra audio effects, like stereo or fading sound.




To switch on **Audio effects** (if available)...

- 1 - Press **⚙**, select **Universal access** and press **➤** (right) to enter the menu.
- 2 - Select **Audio description** > **Audio effects** > **On** and press **OK**.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

Speech

The audio commentary can also hold subtitles for the words which are spoken.

To switch on these subtitles (if available) . . .

- 1 - Press , select **Universal access** and press  (right) to enter the menu.
- 2 - Select **Audio description** > **Speech** and press **OK**.
- 3 - Select **Descriptive** or **Subtitles** and press **OK**.
- 4 - Press  (left) repeatedly if necessary, to close the menu.

Networks

For more information, in **Help**, press the color key **— Keywords** and look up **Network**, for more information on connecting the TV to a network.

Channel installation


Antenna/cable installation

Update channels

Manual channel update

You can always start a channel update yourself.

To start a channel update manually...

- 1 - Press , select **Antenna/cable installation** and press **OK**.
- 2 - Enter your PIN code if necessary.
- 3 - Select **Search for channels** and press **OK**.
- 4 - Select **Start now** and press **OK**.
- 5 - Select **Update channels** and press **OK**.
- 6 - Press **← BACK** to close the menu.


Reinstall channels

Reinstall all channels

You can reinstall all channels and leave all other TV settings untouched.

If a PIN code is set, you will need to enter this code before you can reinstall channels.


To reinstall channels...

- 1 - Press , select **Antenna/cable installation** and press **OK**.
- 2 - Enter your PIN code if necessary.
- 3 - Select **Search for channels** and press **OK**.
- 4 - Select **Start now** and press **OK**.
- 5 - Select **Reinstall channels**, select **Next** and press **OK**.
- 6 - Select your country and press **OK**.
- 7 - Select **Antenna** or **Cable**.
- 8 - Select **Start** and press **OK** to update channels. This can take a few minutes.
- 9 - Press **← BACK** to close the menu.

Reinstall TV

You can redo the full TV installation. The TV is completely reinstalled.

To redo the full TV installation...

- 1 - Press , select **General settings > Reinstall TV** and press **OK**.
- 2 - Enter your PIN code if necessary.
- 3 - Select **Yes** and press **OK** to confirm.
- 4 - The TV will perform a complete reinstallation. All

settings will be reset and installed channels will be replaced. The installation can take a few minutes.

5 - Press **← BACK** to close the menu.

Channel list copy

Introduction

Channel List Copy is intended for dealers and expert users.


With Channel List Copy, you can copy the channels installed on one TV onto another Philips TV of the same range. With Channel List Copy, you avoid the time-consuming channel search by uploading a predefined channel list on a TV. Use a USB flash drive of minimum 1 GB.

Conditions

- Both TVs must be from the same year range.
- Both TVs have the same hardware type. Check the hardware type on the TV type plate on the back of the TV. Typically noted as Q . . . LA
- Both TVs have compatible software versions.


Current software version

To check the current version of the TV software...

- 1 - Press , select **Update Software** and press **➤ (right)** to enter the menu.
- 2 - Select **Current Software Info** and press **OK**.
- 3 - The version, release notes, and creation date are shown. Also, the Netflix ESN Number is shown, if available.
- 4 - Press **← (left)** repeatedly if necessary, to close the menu.

Copy a channel list


To copy a channel list...

- 1 - Switch on the TV. This TV should have channels installed.
- 2 - Plug in a USB flash drive.
- 3 - Press , select **General settings > Channel List Copy** and press **OK**.
- 4 - Select **Copy to USB** and press **OK**. You might be asked to enter the Child Lock PIN code to copy the channel list.
- 5 - When copying is done, unplug the USB flash drive.
- 6 - Press **← (left)** repeatedly if necessary, to close the menu.

Now you can upload the copied channel list onto another Philips TV.

Channel list version

Check the current version of the channel list...


- 1 - Press , select **General settings** > **Channel List Copy** and press **OK**.
- 2 - Select **Current version**, then press **OK**.
- 3 - Press **←** (left) repeatedly if necessary, to close the menu.

Upload a channel list

To TVs that are not installed

Depending on whether your TV is already installed or not, you must use a different method to upload a channel list.


To a TV that is not yet installed

- 1 - Plug in the power plug to start the installation and select language and country. You can skip the channel search. Finish the installation.
- 2 - Plug in the USB flash drive that holds the channel list of the other TV.
- 3 - To start the channel list upload, press , select **General settings** and press **OK**.
- 4 - Select **Channel List Copy** > **Copy to TV** and press **OK**. Enter your PIN code if necessary.
- 5 - The TV notifies you if the channel list is copied to the TV successfully. Unplug the USB flash drive.

To installed TVs

Depending on whether your TV is already installed or not, you must use a different method to upload a channel list.


To an already installed TV

- 1 - Verify the country setting of the TV. (To verify this setting, see chapter Reinstall All Channels. Start this procedure until you reach the country setting. Press **← BACK** to cancel the installation.)
If the country is correct continue with step 2.
If the country is not correct, you will need to start a reinstallation. See chapter Reinstall All Channels and start the installation. Select the correct country and skip the channels search. Finish the installation. When done, continue with step 2.
- 2 - Plug in the USB flash drive that holds the channel list of the other TV.
- 3 - To start the channel list upload, press , select **General settings** and press **OK**.
- 4 - Select **Channel List Copy** > **Copy to TV** and press **OK**. Enter your PIN code if necessary.
- 5 - The TV notifies you if the channel list is copied to the TV successfully. Unplug the USB flash drive.

21.3

Digital Channel Installation


If you know the channel frequency of the channels you want to install, you can search and store digital channels one by one. For best results, contact the service provider.

- 1 - Press .
- 2 - Enter the PIN code if asked.
- 3 - Select **Antenna/cable installation** and press **OK**.
- 4 - Select **Digital: Reception Test** > **Search** and press **OK**.
- 5 - Press the numbered buttons to enter the channel frequency.
- 6 - Select **Search** and press **OK**.
- 7 - When the channel is found, select **Done** and press **OK**.

21.4

Service Navigation

To switch off...

- 1 - Press , select **Antenna/cable installation** and press **OK**.
- 2 - Enter your PIN code if necessary.
- 3 - Select **Service navigation** and press **OK**.
- 4 - Select **Off** and press **OK**.
- 5 - Press **← BACK** to close the menu.

Software

22.1


Update software

Update from Internet



If the TV is connected to the Internet, you may receive a message to update the TV software. You need a high-speed (broadband) Internet connection. If you receive this message, we recommend you to carry out the update.

With the message on screen, select **Update** and follow the instructions on screen.

You can also look for a software update yourself.

During the software update, there is no picture and the TV will switch off and on again. This might happen several times. The update can take a few minutes. Wait until the TV picture comes back up. Do not press the power switch  on the TV or on the remote control during the software update.


To look for a software update yourself...

- 1 - Press  and press **OK**.
- 2 - Select **Update Software > Search for Updates** and press **OK**.
- 3 - Select **Internet** and press **OK**.
- 4 - The TV will look for an update on the Internet.
- 5 - If an update is available, you can update the software right away.
- 6 - A software update can take several minutes. Do not press the  key on the TV or remote control.
- 7 - When the update is done, the TV will return to the channel you were watching.

Update from USB

It might be necessary to update the TV software. You need a computer with a high-speed Internet connection and a USB flash drive to upload the software on the TV. Use a USB flash drive with at least 500MB free space. Make sure that write protection is switched off.

To update the TV software...

- 1 - Press  and press **OK**.
- 2 - Select **Update Software > Search for Updates** and press **OK**.
- 3 - Select **USB** and press **OK**.


Identify the TV

- 1 - Insert the USB flash drive into one of the USB connections of the TV.
- 2 - Select **Write to USB** and press **OK**. An identification file is written on the USB flash drive.

Download the software

- 1 - Insert the USB flash drive into your computer.
- 2 - On the USB flash drive, locate the file **update.htm** and double click it.
- 3 - Click **Send ID**.
- 4 - If new software is available, download the .zip file.
- 5 - After the download, unzip the file and copy the file **autorun.upg** onto the USB flash drive. Do not place this file in a folder.

Update the TV software

- 1 - Insert the USB Flash Drive into the TV again. The update starts automatically.
- 2 - A software update can take several minutes. Do not press the  key on the TV or remote control. Do not remove the USB flash drive.
- 3 - When the update is done, the TV will return to the channel you were watching.



If a power cut occurs during the update, never remove the USB flash drive from the TV. When the power returns, the update will continue.

To prevent an accidental update of the TV software, delete the autorun.upg file from the USB flash drive.

22.2

Software version



To view the current TV software version...

- 1 - Press , select **Update Software > Current Software Info** and press **OK**.
- 2 - The version, **Release Version** is shown. Also, the Netflix ESN Number is shown, if available.
- 3 - Press  (left) repeatedly if necessary, to close the menu.

22.3

Local updates

For dealers and expert users...

- 1 - Press , select **Update Software > Local updates** and press **OK**.
- 2 - Follow the on-screen instruction.
- 3 - Press  (left) repeatedly if necessary, to close the menu.

22.4

Open source software

This television contains open-source software. TP Vision Europe B.V. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such

offer is requested by the respective licenses.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain the source code, please write in English to .

open.source@tpvision.com

22.5

Open source license statement

Acknowledgements and License Texts for any open source software used in this Philips TV.

This is a document describing the distribution of the source code used on the Philips TV, which fall either under the GNU General Public License (the GPL), or the GNU Lesser General Public License (the LGPL), or any other open-source license. Instructions to obtain source code for this software can be found in the user manual.

PHILIPS MAKES NO WARRANTIES WHATSOEVER, EITHER EXPRESS OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, REGARDING THIS SOFTWARE. Philips offers no support for this software. The preceding does not affect your warranties and statutory rights regarding any Philips product(s) you purchased. It only applies to this source code made available to you.

22.6

Open-source license

Freetype (2.4.3)

FreeType is a software font engine that is designed to be small, efficient, highly customizable, and portable while capable of producing high-quality output (glyph images).

This piece of software is made available under the terms and conditions of the FreeType Project license, which can be found below.

Source: <http://freetype.sourceforge.net>

zlib (1.2.3)

The 'zlib' compression library provides in-memory compression and decompression functions, including integrity checks of the uncompressed data.

This piece of software is made available under the terms and conditions of the zlib license, which can be found below.

Source: <http://www.zlib.net/>

Fraunhofer AAC Ecnoder (3.3.3)

AAC Ecnoder.

Source: Android JB source code

unicode (3.2)

This library is used to perform UNICODE string manipulation.

This piece of software is made available under the terms and conditions of the ICU license, which can be found below.

Source: <http://www.icu-project.org/>

libpng (1.2.43)

PNG decoder.

This piece of software is made available under the terms and conditions of the libpng license, which can be found below.

Source: <http://www.libpng.org/pub/png/libpng.html>

libjpng (6b)

This library is used to perform JPEG decoding tasks.

This piece of software is made available under the terms and conditions of the libjpng license, which can be found below.

Source: <http://www.ijg.org/>

libmng (1.0.10)

libmng -THE reference library for reading, displaying, writing and examining Multiple-Image Network Graphics.MNG is the animation extension to the popular PNG image-format.

This piece of software is made available under the terms and conditions of the libmng license, which can be found below.

Source:

<http://sourceforge.net/projects/libmng/files/>

u-Boot loader (1.3.4)

Used by boot loader and only linked with boot loader, GPL license.

This piece of software is made available under the terms and conditions of the u-Boot loader license, which can be found below.

Source: <http://sourceforge.net/projects/u-boot/files/u-boot/U-Boot-1.1.4/u-boot-1.1.4.tar.bz2/download>

Libcurl (7.21.7)

HTTP client;libcurl is a free and easy-to-use client-side URL transfer library, supporting FTP, FTPS, HTTP, HTTPS, SCP, SFTP, TFTP, TELNET, DICT, LDAP, LDAPS, FILE, IMAP, SMTP, POP3 and RTSP. libcurl supports SSL certificates, HTTP POST, HTTP PUT, FTP uploading, HTTP form based upload, proxies, cookies, user+password authentication (Basic, Digest, NTLM, Negotiate, Kerberos4), file transfer resume, http proxy tunneling and more!

This piece of software is made available under the terms and conditions of the Libcurl license, which can be found below.

Source: <http://curl.haxx.se/>

c-ares (1.7.4)

c-ares is a C library that performs DNS requests and name resolves asynchronously. This piece of software is made available under the terms and conditions of the c-ares license, which can be found below.
Source: <http://c-ares.haxx.se/c-ares-1.7.1.tar.gz>

openssl (1.0.0d)

OpenSSL is an open source implementation of the SSL and TLS protocols. The core library (written in the C programming language) implements the basic cryptographic functions and provides various utility functions. Wrappers allowing the use of the OpenSSL library in a variety of computer languages are available. This piece of software is made available under the terms and conditions of the 1.7.4 license, which can be found below.
Source: <http://www.openssl.org/source/openssl-1.0.0.tar.gz>

Expat (2.01)

xml parser; Expat is an XML parser library written in C. It is a stream-oriented parser in which an application registers handlers for things the parser might find in the XML document (like start tags). An introductory article on using. This piece of software is made available under the terms and conditions of the Expat license, which can be found below.
Source: <http://expat.sourceforge.net/>

DirectFB include SAWMAN (1.4.0)

It is a software library for GNU/Linux/UNIX based operating system with a small memory footprint that provides graphics acceleration, input device handling and abstraction layer, and integrated windowing system with support for translucent windows and multiple display layers on top of the Linux framebuffer without requiring any kernel modifications. This piece of software is made available under the terms and conditions of the DirectFB license, which can be found below.
Source: http://sourceforge.net/projects/jointspace/files/remote_applications_SDK/remote_applications_SDK_v1.3.1/DirectFB141_source_1.3.1.7z/download

SAWMAN

SquashFS is a compressed read-only file system for Linux. SquashFS compresses files, inodes and directories, and supports block sizes up to 1 MB for greater compression. SquashFS is also the name of free/open software, licensed under the GPL, for accessing SquashFS filesystems.
Source: <http://squashfs.sourceforge.net/>

Linux Kernel (3.0)

The Linux kernel is an operating system kernel used

by the Linux family of Unix-like operating systems. This piece of software is made available under the terms and conditions of the Linux Kernel license, which can be found below.
Source: <http://www.kernel.org>

SQLite (3.7.2)

SQLite is a in-process library that implements a self-contained, serverless, zero-configuration, transactional SQL database engine. This piece of software is made available under the terms and conditions of the SQLite license, which can be found below.
Source: <http://www.sqlite.org/download.html>

SquashFS (3.4)

SquashFS is a compressed read-only file system for Linux. SquashFS compresses files, inodes and directories, and supports block sizes up to 1 MB for greater compression. SquashFS is also the name of free/open software, licensed under the GPL, for accessing SquashFS filesystems. This piece of software is made available under the terms and conditions of the SquashFS license, which can be found below.
Source: <http://squashfs.sourceforge.net/>

glibc (2.6.1)

Any Unix-like operating system needs a C library: the library which defines the "system calls" and other basic facilities such as open, malloc, printf, exit...The GNU C library is used as the C library in the GNU system and most systems with the Linux kernel. This piece of software is made available under the terms and conditions of the glibc license, which can be found below.
Source: <http://www.gnu.org/software/libc/>

mtd-utils (1)

The aim of the system is to make it simple to provide a driver for new hardware, by providing a generic interface between the hardware drivers and the upper layers of the system. Hardware drivers need to know nothing about the storage formats used, such as FTL, FFS2, etc., but will only need to provide simple routines for read, write and erase. Presentation of the device's contents to the user in an appropriate form will be handled by the upper layers of the system. This piece of software is made available under the terms and conditions of the mtd-utils license, which can be found below.
Source: <http://www.linux-mtd.infradead.org/index.html>

libusb (1.0.6)

This is the home of libusb, a library that gives user level applications uniform access to USB devices across many different operating systems. libusb is an open source project licensed under the GNU Lesser General Public License version 2.1. Many participants

in the libusb community have helped and continue to help with ideas, implementation, support and improvements for libusb.

This piece of software is made available under the terms and conditions of the libusb license, which can be found below.

Source:

<http://libusb.wiki.sourceforge.net>

<http://www.libusb.org/>

libusb-compat (0.1.3)

Library to enable user space application programs to communicate with USB devices.

This piece of software is made available under the terms and conditions of the libusb-compat license, which can be found below.

Source:

<http://libusb.wiki.sourceforge.net/LibusbCompat0.1>

NTFS-3G Read/Write Driver (2010.5.22)

NTFS-3G is an open source cross-platform implementation of the Microsoft Windows NTFS file system with read-write support. NTFS-3G often uses the FUSE file system interface, so it can run unmodified on many different operating systems. It is runnable on Linux, FreeBSD, NetBSD, OpenSolaris, BeOS, QNX, WinCE, Nucleus, VxWorks, Haiku, MorphOS, and Mac OS X. It is licensed under either the GNU General Public License or a proprietary license. It is a partial fork of ntfsprogs and is under active maintenance and development.

This piece of software is made available under the terms and conditions of the NTFS-3G Read/Write Driver license, which can be found below.

Source: <http://www.tuxera.com>

WPA Supplicant (0.5.10 & 0.6.7)

These packages are used to provide WiFi access. The supplier for these tools is Atheros. These pieces of software are made available under the terms and conditions of the GPL v2 license, which can be found below.

This piece of software is made available under the terms and conditions of the WPA Supplicant license, which can be found below.

Source: http://hostap.epitest.fi/wpa_supplicant/

ntfsprogs (2.0.0)

Some useful tool for ntfs file system.

This piece of software is made available under the terms and conditions of the ntfsprogs license, which can be found below.

Source: <http://sourceforge.net/projects/linux-ntfs>

fuse (2.8.4)

Fuse is a simple interface for userspace programs to export a virtual filesystem to the linux kernel.

This piece of software is made available under the terms and conditions of the fuse license, which can be found below.

Source: <http://fuse.sourceforge.net/>

libiconv (1.11.1)

This library provides an iconv() implementation, for use on systems which don't have one, or whose implementation cannot convert from/to Unicode. . . This piece of software is made available under the terms and conditions of the libiconv license, which can be found below.

Source: <http://ftp.gnu.org/pub/gnu/libiconv>

electric-fence (2.1.13)

Used for memory corruption detection.

This piece of software is made available under the terms and conditions of the electric-fence license, which can be found below.

Source: http://perens.com/FreeSoftware/ElectricFence/electric-fence_2.1.13-0.1.tar.gz

liveMedia

When Wifi Display or streaming RtspPlayer are enabled.

This piece of software is made available under the terms and conditions of the electric-fence license, which can be found below.

Source: www.live555.com

QT (4.7.0)

Netflix skype besttv pandora picasa? will use QT.

This piece of software is made available under the terms and conditions of the QT license, which can be found below.

Source: <http://qt.nokia.com/>

e2fsprogs (1.41.14)

e2fsprogs provides the filesystem utilities for use with the ext2 filesystem, it also supports the ext3 and ext4 filesystems.

This piece of software is made available under the terms and conditions of the e2fsprogs license, which can be found below.

Source: <http://e2fsprogs.sourceforge.net/>

alsa (1.0.24.1)

Advanced Linux Sound Architecture (ALSA).

This piece of software is made available under the terms and conditions of the alsa license, which can be found below.

Source: <http://www.alsa-project.org>

lvm2 (2.02.89)

DM_VERITY.

This piece of software is made available under the terms and conditions of the lvm2 license, which can be found below.

Source:

<ftp://sources.redhat.com/pub/lvm2/releases/>

encfs (1.3.2)

A library provides an encrypted filesystem in user-

space.

Source: <http://www.arg0.net/encfs>

boost (1.15.0)

A library provides free peer-reviewed portable C++ source libraries is used for encfs.

Source: <http://www.boost.org>

rlog (1.4)

A library that provides a flexible message logging facility for C programs and libraries is used for encfs.

Source: <http://www.arg0.net/rlog>

iptables (1.4.15)

For Cross connection.

Source: <http://www.netfilter.org/projects/iptables/>

bash (3.2.48)

Bash is the shell, or command language interpreter, that will appear in the GNU operating system.

Bash is an sh-compatible shell that incorporates useful features from the Korn shell (ksh) and C shell (csh).

It is intended to conform to the IEEE POSIX P1003.2/ISO 9945.2 Shell and Tools standard.

It offers functional improvements over sh for both programming and interactive use.

In addition, most sh scripts can be run by Bash without modification.

Source: <http://www.gnu.org/software/bash/>

coreutils (6.9)

The GNU Core Utilities are the basic file, shell and text manipulation utilities of the GNU operating system.

These are the core utilities which are expected to exist on every operating system.

Source: <http://www.gnu.org/software/coreutils/>

findutils (4.2.31)

The GNU Find Utilities are the basic directory searching utilities of the GNU operating system.

These programs are typically used in conjunction with other programs to provide modular and powerful directory search and file locating capabilities to other commands.

Source: <http://www.gnu.org/software/findutils/>

gawk (3.1.5)

If you are like many computer users, you would frequently like to make changes in various text files wherever certain patterns appear, or extract data from parts of certain lines while discarding the rest.

To write a program to do this in a language such as C or Pascal is a time-consuming inconvenience that may take many lines of code.

The job is easy with awk, especially the GNU implementation: gawk.

Source: <http://www.gnu.org/software/gawk/>

grep (2.5.1a)

The grep command searches one or more input files for lines containing a match to a specified pattern. By default, grep prints the matching lines.

Source: <http://www.gnu.org/software/grep/>

gzip (1.3.12)

GNU Gzip is a popular data compression program originally written by Jean-loup Gailly for the GNU project. Mark Adler wrote the decompression part.

Source: <http://www.gnu.org/software/gzip/>

inetutils (1.4.2)

Inetutils is a collection of common network programs.

Source: <http://www.gnu.org/software/inetutils/>

iputils (s20101006)

The iputils package is set of small useful utilities for Linux networking. It was originally maintained by Alexey Kuznetsov.

Source: <http://www.skbuff.net/iputils/>

module-init-tools (3.12)

Provides developer documentation for the utilities used by Linux systems to load and manage kernel modules (commonly referred to as "drivers").

Source: https://modules.wiki.kernel.org/index.php/Main_Page

ncurses (5.7)

The Ncurses (new curses) library is a free software emulation of curses in System V Release 4.0, and more.

It uses Terminfo format, supports pads and color and multiple highlights and forms characters and function-key mapping, and has all the other SYSV-curses enhancements over BSD Curses.

Source: <http://www.gnu.org/software/ncurses/>

net-tools (1.6)

The Net-tools package is a collection of programs for controlling the network subsystem of the Linux kernel.

Source: <http://www.linuxfromscratch.org/blfs/view/6.3/basicnet/net-tools.html>

procps (ps, top) (3.2.8)

procps is the package that has a bunch of small useful utilities that give information about processes using the /proc filesystem.

The package includes the programs ps, top, vmstat, w, kill, free, slabtop, and skill.

Source: <http://procps.sourceforge.net/index.html>

psmisc (22.13)

This PSmisc package is a set of some small useful utilities that use the proc filesystem. We're not about changing the world, but providing the system administrator with some help in common tasks.

Source: <http://psmisc.sourceforge.net/>

sed (4.1.5)

sed (stream editor) isn't an interactive text editor. Instead, it is used to filter text, i.e., it takes text input, performs some operation (or set of operations) on it, and outputs the modified text.

sed is typically used for extracting part of a file using pattern matching or substituting multiple occurrences of a string within a file.

Source: <http://www.gnu.org/software/sed/>

tar (1.17)

GNU Tar provides the ability to create tar archives, as well as various other kinds of manipulation.

For example, you can use Tar on previously created archives to extract files, to store additional files, or to update or list files which were already stored.

Source: <http://www.gnu.org/software/tar/>

util-linux-ng (2.18)

Various system utilities.

Source: <http://userweb.kernel.org/~kzak/util-linux-ng/>

udhcpc (0.9.8cvs20050303-3)

Udhcpc is a very small DHCP client geared towards embedded systems.

Source: <http://udhcp.sourceforge.com/downloads/0.9.8cvs20050303-3/>

Libxml2 (2.7.8)

The "libxml2" library is used in AstroTV as a support for the execution of NCL application. This library was developed for the GNOME software suite and is available under a "MIT" license.

Source: <http://www.xmlsoft.org>

uriparser (0.7.7)

For MPEG-DASH

Source: <http://uriparser.sourceforge.net/>

xerces-c++ (3.1.1)

For MPEG-DASH

Source: <http://xerces.apache.org/>

webp (0.2.1)

For Netflix

Source: <https://code.google.com/p/webp/>

wget (1.10.2)

GNU Wget is a free software package for retrieving files using HTTP, HTTPS and FTP, the most widely-used Internet protocols.

It is a non-interactive commandline tool, so it may easily be called from scripts, cron jobs, terminals without X-Windows support, etc.

Source:

<http://ftp.gnu.org/gnu/wget/wget-1.10.2.tar.gz>

wireless_tools (0.29)

The Wireless Tools (WT) is a set of tools allowing to

manipulate the Wireless Extensions.

They use a textual interface and are rather crude, but aim to support the full Wireless Extension.

Source: http://www.hpl.hp.com/personal/Jean_Tourrilhes/Linux/Tools.html

ezxml (0.8.6)

ezXML is a C library for parsing XML documents. Used inside Philips libraries.

Source: <http://sourceforge.net/projects/ezxml/>

SQLite (3.7.7.1)

SQLite is a in-process library that implements a self-contained, serverless, zero-configuration, transactional SQL database engine.

Source: <http://www.sqlite.org/download.html>

AES (aes-src-29-04-09.zip)

Advanced Encryption Standard (AES) is a specification for the encryption of electronic data. Used inside Philips libraries.

Source: <http://gladman.plushost.co.uk/oldsite/AES/>

microhttpd (libmicrohttpd-0.9.9.tar.gz)

GNU libmicrohttpd is a small C library that is supposed to make it easy to run an HTTP server as part of another application.

The original download site for this software is :

<http://www.gnu.org/software/libmicrohttpd/>This piece of software is made available under the terms and conditions of the LGPL v2.1 license

Source: <http://ftp.gnu.org/gnu/libmicrohttpd/libmicrohttpd-0.9.9.tar.gz>

yajl (lloyd-yajl-2.0.1-0-gf4b2b1a.tar.gz)

YAJL is a small event-driven (SAX-style) JSON parser written in ANSI C, and a small validating JSON generator. YAJL is released under the ISC license.

The original download site for this software is :

<http://lloyd.github.com/yajl/>This piece of software is made available under the terms and conditions of the ISC license

Source: <http://pkgs.fedoraproject.org/repo/pkgs/yajl/lloyd-yajl-2.0.1-0-gf4b2b1a.tar.gz/df6a751e7797b9c2182efd91b5d64017/lloyd-yajl-2.0.1-0-gf4b2b1a.tar.gz>

HMAC-SHA1 (0.1)

keyed-hash message authentication code (HMAC) is a specific construction for calculating a message authentication code (MAC) involving a cryptographic hash function in combination with a secret cryptographic key.

As with any MAC, it may be used to simultaneously verify both the data integrity and the authentication of a message.

Any cryptographic hash function, such as MD5 or SHA-1, may be used in the calculation of an HMAC; the resulting MAC algorithm is termed HMAC-MD5 or HMAC-SHA1 accordingly.

Source:
http://www.deadhat.com/wlancrypto/hmac_sha1.c

gSoap (2.7.15)

The gSOAP toolkit is an open source C and C++ software development toolkit for SOAP/XML Web services and generic (non-SOAP) C/C++ XML data bindings.

Part of the software embedded in this product is gSOAP software. Portions created by gSOAP are Copyright 2000-2011 Robert A. van Engelen, Genivia inc. All Rights Reserved.

Source: <http://sourceforge.net/projects/gsoap2/>

jQuery (1.10.2)

jQuery is a fast and concise JavaScript Library that simplifies HTML document traversing, event handling, animating, and Ajax interactions for rapid web development.

Source: <http://jquery.com/>

Libupnp (1.2.1)

The Linux* SDK for UPnP* Devices (libupnp) provides developers with an API and open source code for building control points, devices, and bridges that are compliant with Version 1.0 of the UPnP Device Architecture Specification.

Source: <http://upnp.sourceforge.net/>

mDNSResponder (mDNSResponder-320.10.80)

The mDNSResponder project is a component of Bonjour, Apple's ease-of-use IP networking initiative: <<http://developer.apple.com/bonjour/>> In our project, Bonjour is used for the automatic discovery of devices and services

Source: <http://developer.apple.com/bonjour/AcknowledgementsandLicenseTextsforanyopensourceusedinthisPhilipsTV>.

This is a document describing the distribution of the source code used on the Philips TV, which fall either under the GNU General Public License (the GPL), or the GNU Lesser General Public License (the LGPL), or any other open source license. Instructions to obtain source code for this software can be found in the user manual.

PHILIPS MAKES NO WARRANTIES WHATSOEVER, EITHER EXPRESS OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, REGARDING THIS SOFTWARE. Philips offers no support for this software. The preceding does not affect your warranties and statutory rights regarding any Philips product(s) you purchased. It only applies to this source code made available to you.

FreeType (2.4.3)

FreeType is a software font engine that is designed to

be small, efficient, highly customizable, and portable while capable of producing high-quality output (glyph images).

This piece of software is made available under the terms and conditions of the FreeType Project license, which can be found below.

Source: <http://freetype.sourceforge.net>

zlib (1.2.3)

The 'zlib' compression library provides in-memory compression and decompression functions, including integrity checks of the uncompressed data.

This piece of software is made available under the terms and conditions of the zlib license, which can be found below.

Source: <http://www.zlib.net/>

Fraunhofer AAC Ecnoder (3.3.3)

AAC Ecnoder.

Source: Android JB source code

unicode (3.2)

This library is used to perform UNICODE string manipulation.

This piece of software is made available under the terms and conditions of the ICU license, which can be found below.

Source: <http://www.icu-project.org/>

libpng (1.2.43)

PNG decoder.

This piece of software is made available under the terms and conditions of the libpng license, which can be found below.

Source: <http://www.libpng.org/pub/png/libpng.html>

libjpg (6b)

This library is used to perform JPEG decoding tasks. This piece of software is made available under the terms and conditions of the libjpg license, which can be found below.

Source: <http://www.ijg.org/>

libmng (1.0.10)

libmng -THE reference library for reading, displaying, writing and examining Multiple-Image Network Graphics.MNG is the animation extension to the popular PNG image-format.

This piece of software is made available under the terms and conditions of the libmng license, which can be found below.

Source:

<http://sourceforge.net/projects/libmng/files/>

u-Boot loader (1.3.4)

Used by boot loader and only linked with boot loader, GPL license.

This piece of software is made available under the terms and conditions of the u-Boot loader license, which can be found below.

Source: <http://sourceforge.net/projects/u-boot/files/u-boot/U-Boot-1.1.4/u-boot-1.1.4.tar.bz2/download>

Libcurl (7.21.7)

HTTP client; libcurl is a free and easy-to-use client-side URL transfer library, supporting FTP, FTPS, HTTP, HTTPS, SCP, SFTP, TFTP, TELNET, DICT, LDAP, LDAPS, FILE, IMAP, SMTP, POP3 and RTSP. libcurl supports SSL certificates, HTTP POST, HTTP PUT, FTP uploading, HTTP form based upload, proxies, cookies, user+password authentication (Basic, Digest, NTLM, Negotiate, Kerberos4), file transfer resume, http proxy tunneling and more!

This piece of software is made available under the terms and conditions of the Libcurl license, which can be found below.

Source: <http://curl.haxx.se/>

c-ares (1.7.4)

c-ares is a C library that performs DNS requests and name resolves asynchronously.

This piece of software is made available under the terms and conditions of the c-ares license, which can be found below.

Source: <http://c-ares.haxx.se/c-ares-1.7.1.tar.gz>

openssl (1.0.0d)

OpenSSL is an open source implementation of the SSL and TLS protocols. The core library (written in the C programming language) implements the basic cryptographic functions and provides various utility functions. Wrappers allowing the use of the OpenSSL library in a variety of computer languages are available.

This piece of software is made available under the terms and conditions of the 1.7.4 license, which can be found below.

Source: <http://www.openssl.org/source/openssl-1.0.0.tar.gz>

Expat (2.01)

xml parser; Expat is an XML parser library written in C. It is a stream-oriented parser in which an application registers handlers for things the parser might find in the XML document (like start tags). An introductory article on using.

This piece of software is made available under the terms and conditions of the Expat license, which can be found below.

Source: <http://expat.sourceforge.net/>

DirectFB include SAWMAN (1.4.0)

It is a software library for GNU/Linux/UNIX based operating system with a small memory footprint that provides graphics acceleration, input device handling and abstraction layer, and integrated windowing system with support for translucent windows and multiple display layers on top of the Linux framebuffer without requiring any kernel modifications.

This piece of software is made available under the terms and conditions of the DirectFB license, which can be found below.

Source: http://sourceforge.net/projects/jointspace/files/remote_applications_SDK/remote_applications_SDK_v1.3.1/DirectFB141_source_1.3.1.7z/download

SAWMAN

SquashFS is a compressed read-only file system for Linux. SquashFS compresses files, inodes and directories, and supports block sizes up to 1 MB for greater compression. SquashFS is also the name of free/open software, licensed under the GPL, for accessing SquashFS filesystems.

Source: <http://squashfs.sourceforge.net/>

Linux Kernel (3.0)

The Linux kernel is an operating system kernel used by the Linux family of Unix-like operating systems. This piece of software is made available under the terms and conditions of the Linux Kernel license, which can be found below.

Source: <http://www.kernel.org>

SQLite (3.7.2)

SQLite is a in-process library that implements a self-contained, serverless, zero-configuration, transactional SQL database engine.

This piece of software is made available under the terms and conditions of the SQLite license, which can be found below.

Source: <http://www.sqlite.org/download.html>

SquashFS (3.4)

SquashFS is a compressed read-only file system for Linux. SquashFS compresses files, inodes and directories, and supports block sizes up to 1 MB for greater compression. SquashFS is also the name of free/open software, licensed under the GPL, for accessing SquashFS filesystems.

This piece of software is made available under the terms and conditions of the SquashFS license, which can be found below.

Source: <http://squashfs.sourceforge.net/>

glibc (2.6.1)

Any Unix-like operating system needs a C library: the library which defines the "system calls" and other basic facilities such as open, malloc, printf, exit...The GNU C library is used as the C library in the GNU system and most systems with the Linux kernel. This piece of software is made available under the terms and conditions of the glibc license, which can be found below.

Source: <http://www.gnu.org/software/libc/>

mtd-utils (1)

The aim of the system is to make it simple to provide a driver for new hardware, by providing a generic interface between the hardware drivers and the upper

layers of the system. Hardware drivers need to know nothing about the storage formats used, such as FTL, FFS2, etc., but will only need to provide simple routines for read, write and erase. Presentation of the device's contents to the user in an appropriate form will be handled by the upper layers of the system. This piece of software is made available under the terms and conditions of the mtd-utils license, which can be found below.

Source: <http://www.linux-mtd.infradead.org/index.html>

libusb (1.0.6)

This is the home of libusb, a library that gives user level applications uniform access to USB devices across many different operating systems. libusb is an open source project licensed under the GNU Lesser General Public License version 2.1. Many participants in the libusb community have helped and continue to help with ideas, implementation, support and improvements for libusb.

This piece of software is made available under the terms and conditions of the libusb license, which can be found below.

Source:

<http://libusb.wiki.sourceforge.net>

<http://www.libusb.org/>

libusb-compat (0.1.3)

Library to enable user space application programs to communicate with USB devices.

This piece of software is made available under the terms and conditions of the libusb-compat license, which can be found below.

Source:

<http://libusb.wiki.sourceforge.net/LibusbCompat0.1>

NTFS-3G Read/Write Driver (2010.5.22)

NTFS-3G is an open source cross-platform implementation of the Microsoft Windows NTFS file system with read-write support. NTFS-3G often uses the FUSE file system interface, so it can run unmodified on many different operating systems. It is runnable on Linux, FreeBSD, NetBSD, OpenSolaris, BeOS, QNX, WinCE, Nucleus, VxWorks, Haiku, MorphOS, and Mac OS X. It is licensed under either the GNU General Public License or a proprietary license. It is a partial fork of ntfsprogs and is under active maintenance and development.

This piece of software is made available under the terms and conditions of the NTFS-3G Read/Write Driver license, which can be found below.

Source: <http://www.tuxera.com>

WPA Supplicant (0.5.10 & 0.6.7)

These packages are used to provide WiFi access. The supplier for these tools is Atheros. These pieces of software are made available under the terms and conditions of the GPL v2 license, which can be found below.

This piece of software is made available under the terms and conditions of the WPA Supplicant license, which can be found below.

Source: http://hostap.epitest.fi/wpa_supplicant/

ntfsprogs (2.0.0)

Some useful tool for ntfs file system.

This piece of software is made available under the terms and conditions of the ntfsprogs license, which can be found below.

Source: <http://sourceforge.net/projects/linux-ntfs>

fuse (2.8.4)

Fuse is a simple interface for userspace programs to export a virtual filesystem to the linux kernel.

This piece of software is made available under the terms and conditions of the fuse license, which can be found below.

Source: <http://fuse.sourceforge.net/>

libiconv (1.11.1)

This library provides an iconv() implementation, for use on systems which don't have one, or whose implementation cannot convert from/to Unicode.

This piece of software is made available under the terms and conditions of the libiconv license, which can be found below.

Source: <http://ftp.gnu.org/pub/gnu/libiconv>

electric-fence (2.1.13)

Used for memory corruption detection.

This piece of software is made available under the terms and conditions of the electric-fence license, which can be found below.

Source: http://perens.com/FreeSoftware/ElectricFence/electric-fence_2.1.13-0.1.tar.gz

liveMedia

When Wifi Display or streaming RtspPlayer are enabled.

This piece of software is made available under the terms and conditions of the electric-fence license, which can be found below.

Source: www.live555.com

QT (4.7.0)

Netflix skype besttv pandora picasa? will use QT.

This piece of software is made available under the terms and conditions of the QT license, which can be found below.

Source: <http://qt.nokia.com/>

e2fsprogs (1.41.14)

e2fsprogs provides the filesystem utilities for use with the ext2 filesystem, it also supports the ext3 and ext4 filesystems.

This piece of software is made available under the terms and conditions of the e2fsprogs license, which can be found below.

Source: <http://e2fsprogs.sourceforge.net/>

alsa (1.0.24.1)

Advanced Linux Sound Architecture (ALSA).

This piece of software is made available under the terms and conditions of the alsa license, which can be found below.

Source: <http://www.alsa-project.org>

lvm2 (2.02.89)

DM_VERITY.

This piece of software is made available under the terms and conditions of the lvm2 license, which can be found below.

Source:

<ftp://sources.redhat.com/pub/lvm2/releases/>

encfs (1.3.2)

A library provides an encrypted filesystem in user-space.

Source: <http://www.arg0.net/encfs>

boost (1.15.0)

A library provides free peer-reviewed portable C++ source libraries is used for encfs.

Source: <http://www.boost.org>

rlog (1.4)

A library that provides a flexible message logging facility for C programs and libraries is used for encfs.

Source: <http://www.arg0.net/rlog>

iptables (1.4.15)

For Cross connection.

Source: <http://www.netfilter.org/projects/iptables/>

bash (3.2.48)

Bash is the shell, or command language interpreter, that will appear in the GNU operating system.

Bash is an sh-compatible shell that incorporates useful features from the Korn shell (ksh) and C shell (csh).

It is intended to conform to the IEEE POSIX P1003.2/ISO 9945.2 Shell and Tools standard.

It offers functional improvements over sh for both programming and interactive use.

In addition, most sh scripts can be run by Bash without modification.

Source: <http://www.gnu.org/software/bash/>

coreutils (6.9)

The GNU Core Utilities are the basic file, shell and text manipulation utilities of the GNU operating system.

These are the core utilities which are expected to exist on every operating system.

Source: <http://www.gnu.org/software/coreutils/>

findutils (4.2.31)

The GNU Find Utilities are the basic directory searching utilities of the GNU operating system.

These programs are typically used in conjunction with other programs to provide modular and powerful

directory search and file locating capabilities to other commands.

Source: <http://www.gnu.org/software/findutils/>

gawk (3.1.5)

If you are like many computer users, you would frequently like to make changes in various text files wherever certain patterns appear, or extract data from parts of certain lines while discarding the rest.

To write a program to do this in a language such as C or Pascal is a time-consuming inconvenience that may take many lines of code.

The job is easy with awk, especially the GNU implementation: gawk.

Source: <http://www.gnu.org/software/gawk/>

grep (2.5.1a)

The grep command searches one or more input files for lines containing a match to a specified pattern. By default, grep prints the matching lines.

Source: <http://www.gnu.org/software/grep/>

gzip (1.3.12)

GNU Gzip is a popular data compression program originally written by Jean-loup Gailly for the GNU project. Mark Adler wrote the decompression part.

Source: <http://www.gnu.org/software/gzip/>

inetutils (1.4.2)

Inetutils is a collection of common network programs.

Source: <http://www.gnu.org/software/inetutils/>

iputils (s20101006)

The iputils package is set of small useful utilities for Linux networking. It was originally maintained by Alexey Kuznetsov.

Source: <http://www.skbuff.net/iputils/>

module-init-tools (3.12)

Provides developer documentation for the utilities used by Linux systems to load and manage kernel modules (commonly referred to as "drivers").

Source: https://modules.wiki.kernel.org/index.php/Main_Page

ncurses (5.7)

The Ncurses (new curses) library is a free software emulation of curses in System V Release 4.0, and more.

It uses Terminfo format, supports pads and color and multiple highlights and forms characters and function-key mapping, and has all the other SYSV-curses enhancements over BSD Curses.

Source: <http://www.gnu.org/software/ncurses/>

net-tools (1.6)

The Net-tools?package is a collection of programs for controlling the network subsystem of the Linux kernel.

Source: <http://www.linuxfromscratch.org/blfs/view/6.3/basicnet/net-tools.html>

procps (ps, top) (3.2.8)

procps is the package that has a bunch of small useful utilities that give information about processes using the /proc filesystem.

The package includes the programs ps, top, vmstat, w, kill, free, slabtop, and skill.

Source: <http://procps.sourceforge.net/index.html>

psmisc (22.13)

This PSmisc package is a set of some small useful utilities that use the proc filesystem. We're not about changing the world, but providing the system administrator with some help in common tasks.

Source: <http://psmisc.sourceforge.net/>

sed (4.1.5)

sed (stream editor) isn't an interactive text editor. Instead, it is used to filter text, i.e., it takes text input, performs some operation (or set of operations) on it, and outputs the modified text.

sed is typically used for extracting part of a file using pattern matching or substituting multiple occurrences of a string within a file.

Source: <http://www.gnu.org/software/sed/>

tar (1.17)

GNU Tar provides the ability to create tar archives, as well as various other kinds of manipulation.

For example, you can use Tar on previously created archives to extract files, to store additional files, or to update or list files which were already stored.

Source: <http://www.gnu.org/software/tar/>

util-linux-ng (2.18)

Various system utilities.

Source: <http://userweb.kernel.org/~kzak/util-linux-ng/>

udhcpc (0.9.8cvs20050303-3)

Udhcpc is a very small DHCP client geared towards embedded systems.

Source: <http://udhcp.sourceforge.net/downloads/0.9.8cvs20050303-3/>

Libxml2 (2.7.8)

The "libxml2" library is used in AstroTV as a support for the execution of NCL application. This library was developed for the GNOME software suite and is available under a "MIT" license.

Source: <http://www.xmlsoft.org>

uriparser (0.7.7)

For MPEG-DASH

Source: <http://uriparser.sourceforge.net/>

xerces-c++ (3.1.1)

For MPEG-DASH

Source: <http://xerces.apache.org/>

webp (0.2.1)

For Netflix

Source: <https://code.google.com/p/webp/>

wget (1.10.2)

GNU Wget is a free software package for retrieving files using HTTP, HTTPS and FTP, the most widely-used Internet protocols.

It is a non-interactive commandline tool, so it may easily be called from scripts, cron jobs, terminals without X-Windows support, etc.

Source:

<http://ftp.gnu.org/gnu/wget/wget-1.10.2.tar.gz>

wireless_tools (0.29)

The Wireless Tools (WT) is a set of tools allowing to manipulate the Wireless Extensions.

They use a textual interface and are rather crude, but aim to support the full Wireless Extension.

Source: http://www.hpl.hp.com/personal/Jean_Tourrilhes/Linux/Tools.html

ezxml (0.8.6)

ezXML is a C library for parsing XML documents. Used inside Philips libraries.

Source: <http://sourceforge.net/projects/ezxml/>

SQLite (3.7.7.1)

SQLite is a in-process library that implements a self-contained, serverless, zero-configuration, transactional SQL database engine.

Source: <http://www.sqlite.org/download.html>

AES (aes-src-29-04-09.zip)

Advanced Encryption Standard (AES) is a specification for the encryption of electronic data. Used inside Philips libraries.

Source: <http://gladman.plushost.co.uk/oldsite/AES/>

microhttpd (libmicrohttpd-0.9.9.tar.gz)

GNU libmicrohttpd is a small C library that is supposed to make it easy to run an HTTP server as part of another application.

The original download site for this software is : <http://www.gnu.org/software/libmicrohttpd/> This piece of software is made available under the terms and conditions of the LGPL v2.1 license

Source: <http://ftp.gnu.org/gnu/libmicrohttpd/libmicrohttpd-0.9.9.tar.gz>

yajl (lloyd-yajl-2.0.1-0-gf4b2b1a.tar.gz)

YAJL is a small event-driven (SAX-style) JSON parser written in ANSI C, and a small validating JSON generator. YAJL is released under the ISC license.

The original download site for this software is : <http://lloyd.github.com/yajl/> This piece of software is made available under the terms and conditions of the ISC license

Source: <http://pkgs.fedoraproject.org/repo/pkgs/yajl/lloyd-yajl-2.0.1-0-gf4b2b1a.tar.gz/df6a751e7797b9c2182efd91b5d64017/lloyd-yajl-2.0.1-0-gf4b2b1a.tar.gz>

HMAC-SHA1 (0.1)

keyed-hash message authentication code (HMAC) is a specific construction for calculating a message authentication code (MAC) involving a cryptographic hash function in combination with a secret cryptographic key.

As with any MAC, it may be used to simultaneously verify both the data integrity and the authentication of a message.

Any cryptographic hash function, such as MD5 or SHA-1, may be used in the calculation of an HMAC; the resulting MAC algorithm is termed HMAC-MD5 or HMAC-SHA1 accordingly.

Source:

http://www.deadhat.com/wlancrypto/hmac_sha1.c

gSoap (2.7.15)

The gSOAP toolkit is an open source C and C++ software development toolkit for SOAP/XML Web services and generic (non-SOAP) C/C++ XML data bindings.

Part of the software embedded in this product is gSOAP software. Portions created by gSOAP are Copyright 2000-2011 Robert A. van Engelen, Genivia inc. All Rights Reserved.

Source: <http://sourceforge.net/projects/gsoap2/>

jQuery (1.10.2)

jQuery is a fast and concise JavaScript Library that simplifies HTML document traversing, event handling, animating, and Ajax interactions for rapid web development.

Source: <http://jquery.com/>

Libupnp (1.2.1)

The Linux* SDK for UPnP* Devices (libupnp) provides developers with an API and open source code for building control points, devices, and bridges that are compliant with Version 1.0 of the UPnP Device Architecture Specification.

Source: <http://upnp.sourceforge.net/>

mDNSResponder (mDNSResponder-320.10.80)

The mDNSResponder project is a component of Bonjour,

Apple's ease-of-use IP networking

initiative: <<http://developer.apple.com/bonjour/>>

In our project, Bonjour is used for the automatic discovery of devices and services

Source: <http://developer.apple.com/bonjour/>

Specifications

23.1

Environmental

Saving energy

Energy saving

This Picture style sets the picture in the most ideal energy conscious setting.

For more information, press **Keywords** and look up **Picture style**.

Screen off

If you only listen to music, you can switch off the TV screen to save energy.

Select **Screen off** and press **OK**. To turn the screen back on, press any key on the remote control.

Switch off timer

If you do not press a key on the remote control during a 4 hour period, or if the TV receives no input signal nor remote control commands for 10 minutes, the TV turns off automatically to save energy.

If you use the TV as a monitor or use a digital receiver to watch TV (a Set-top box - STB) and you do not use the remote control of the TV, you should deactivate the automatic turn off.

In addition to the Eco settings, your TV also has environmentally friendly technology with regard to power consumption.

End of use

Descarte do produto e de pilhas antigas



Seu produto foi projetado e fabricado com materiais e componentes de alta qualidade, que podem ser reciclados e reutilizados.

Baterias e Pilhas



ADVERTÊNCIA: Cuidados com a utilização e descarte de pilhas e baterias.

- Não descarte as pilhas e baterias no lixo doméstico.
- O descarte inadequado de pilhas e baterias pode representar riscos ao meio ambiente e à saúde humana.
- Para contribuir com a qualidade ambiental e com a saúde, a Envision dispõe de pontos de coleta em suas Assistências Técnicas.
- Para evitar o vazamento de pilhas ou baterias, o que pode resultar em danos à saúde, ambientais e ao produto, recomendamos que: (i) Remova as pilhas do controle remoto se não for utilizá-lo por um longo período de tempo. (ii) Não misture pilhas (antigas com novas ou pilhas comuns com alcalinas, etc.) (iii) Não exponha o produto com pilhas/baterias em seu interior a altas temperaturas.
- Pilhas e baterias descartadas recebidas pelas Assistências Técnicas autorizadas pela Envision serão encaminhadas à destinação ambientalmente correta.
- Em caso de dúvida ou consulta, favor ligar para (11) 2938 0245 (Grande São Paulo) e 0800 701 0245 (demais regiões e estados) ou acessar o site <http://www.philips.com.br>.

DESCARTE DE PILHAS E BATERIAS



Após o uso, as pilhas e /ou baterias deverão ser entregues ao estabelecimento comercial ou rede de assistência técnica autorizada.

Linha Verde

Em caso de dúvidas relacionadas a Sustentabilidade e Meio Ambiente, favor ligar para a linha verde (92) 2126 8977. A Envision e o Meio Ambiente agradecem sua colaboração.

CUIDADO! Evite o uso prolongado do aparelho com volume superior a 85 decibéis, pois isto poderá prejudicar a sua audição.

A tabela abaixo lista alguns exemplos de situações e respectivos níveis de pressão sonora em decibéis.

Nível de Decibéis	Exemplo
30	Biblioteca silenciosa, sussurros leves.
40	Sala de estar, refrigerador, quarto longe de trânsito.
50	Trânsito leve, conversação normal, escritório silencioso.
60	Ar-condicionado a uma distância de 6m, máquina de costura.
70	Aspirador de pó, secador de cabelo, restaurante ruidoso.
80	Tráfego médio de cidade, coletor de lixo, alarme de despertador a uma distância de 60cm.
OS RUIDOS ABAIXO PODEM SER PERIGOSOS EM CASO DE EXPOSIÇÃO CONSTANTE	
90	Metrol, motocicleta, tráfego de caminhão, cortador de grama.
100	Caminhão de lixo, serra elétrica, furadeira pneumática.
120	Show de banda de rock em frente às caixas acústicas, trovão.
140	Tiro de arma de fogo, avião a jato
180	Lançamento de foguete.

• Informação cedida pela Deafness Research Foundation, por cortesia.

23.2

Power

Product specifications are subject to change without notice. For more specification details of this product, see www.philips.com/support

Power

- Mains power: AC 110–240 V +/-10%
- Ambient temperature: 5°C to 35°C
- Power saving features: Eco mode, Picture mute (for radio), Auto turn-off timer, Eco settings menu.

23.3

Reception

- Antenna input: 75 ohm coaxial (F-type)
- TV system: PAL-M, PAL-N, NTSC-M, SATVD-T, SBTVD-T
- Video playback: NTSC, PAL, SECAM

23.4

Display

Type

Diagonal screen size

- 55PUG6212: 55 inch (139 cm)

Display resolution

- 3840 x 2160p

Input resolution

Video formats

Resolution — Refresh rate

- 480i - 60 Hz
- 480p - 60 Hz
- 576i - 50 Hz
- 576p - 50 Hz
- 720p - 50 Hz, 60 Hz
- 1080i - 50 Hz, 60 Hz
- 1080p - 24 Hz, 25 Hz, 30 Hz
- 2160p - 24 Hz, 25 Hz, 30 Hz, 50 Hz, 60 Hz

Computer formats

Resolutions (among others)

- 640 x 480 - 60 Hz
- 800 x 600 - 60 Hz
- 1024 x 768 - 60 Hz
- 1280 x 768 - 60 Hz
- 1360 x 765 - 60 Hz
- 1360 x 768 - 60 Hz
- 1280 x 1024 - 60 Hz

- 1920 x 1080 - 60 Hz
- 3840 x 2160 - 60 Hz

23.5

Dimensions and Weights

55PUG6212

- without TV stand:
Width 1239.20 mm - Height 711.60 mm - Depth 90.26 mm - Weight ± 15.28 kg
- with TV stand:
Width 1239.20 mm - Height 780.30 mm - Depth 259.10 mm - Weight ± 15.60 kg

23.6

Connectivity

TV Side

- HDMI 1 in - MHL
- HDMI 2 in
- HDMI 3 in
- USB 1
- USB 2
- 1x Serv.U
- Headphones - Stereo mini-jack 3.5mm

TV Bottom

- CVBS/Y Pb Pr: CVBS/Y Pb Pr, Audio L/R
- HDMI 4 in - ARC
- SPDIF: Digital Audio Out-Optical
- Network LAN - RJ45
- Antenna (75 ohm)

23.7

Sound

- HD Stereo
- Output power (RMS): 20W
- Dolby Audio™
- DTS 2.0+ Digital out™

23.8

Multimedia

Connections

- USB 2.0/USB 3.0
- Ethernet LAN RJ-45
- Wi-Fi 802.11b/g/n (built-in)

Supported USB file systems

- FAT 16, FAT 32, NTFS

Playback formats

- Containers: 3GP, AVCHD, AVI, MPEG-PS, MPEG-TS, MPEG-4, Matroska (MKV), QuickTime (MOV, M4V,

M4A), Windows Media (ASF/WMV/WMA)

- Video Codecs: MPEG-1, MPEG-2, MPEG-4 Part 2, MPEG-4 Part 10 AVC (H.264), VC-1, WMV9
- Audio Codecs : AAC, HE-AAC (v1/v2), AMR-NB, Dolby Digital, Dolby Digital Plus, DTS 2.0 + Digital Out™, MPEG-1/2/2.5 Layer I/II/III (includes MP3), WMA (v2 to v9.2), WMA Pro (v9/v10)
- Subtitles:
 - Formats: SAMI, SubRip (SRT), SubViewer (SUB), MicroDVD (TXT), mplayer2 (TXT), Tmplayer (TXT)
- Image Codecs: JPEG
- Limitations:
 - Maximum supported total bit rate for a media file is 30Mbps.
 - Maximum supported video bit rate for a media file is 20Mbps.
 - MPEG-4 AVC (H.264) is supported up to High Profile @ L4.1.
 - VC-1 is supported up to Advanced Profile @ L3.

Wi-Fi Certified

This TV supports Miracast certified devices.

Supported media server software (DMS)

- You can use any DLNA V1.5 certified media server software (DMS class).
- You can use the Philips TV Remote app (iOS and Android) on mobile devices.

Performance may vary, depending on the capabilities of the mobile device and the software used.

Troubleshooting and support

24.1

Register your TV

Register your TV and enjoy a range of benefits including full support (including downloads), privileged access to information about new products, exclusive offers and discounts, the chance to win prizes and even participate in special surveys about new releases.

Go to www.philips.com/welcome

24.2

Help

Introduction

This TV offers help on screen.

Open Help

- 1 - Press **▲** to open the Home menu.
- 2 - Select **Help** and press **OK**.

To search for topics alphabetically, select **Keywords**.
To read the Help as a book, select **Book**.

Before you execute the Help instructions, close Help.
To close Help, press **▲**.

Direct help

Press the **■** key (blue) to open Help immediately.
Help will open on the chapter that is most relevant to what you are doing or what is selected on TV.

TV Help on your tablet, smartphone or computer

To carry out extended sequences of instructions more easily, you can download the TV Help in PDF format to read on your smartphone, tablet or computer. Alternatively, you can print the relevant Help page from your computer.
To download the Help (user manual) go to www.philips.com/support

Check the TV

The TV can play a short High-Definition (HD) video clip. During the playback, check if the picture, the sound are working OK. Switch to the TV source with the problem before you start the video clip.

Press the **■** key (blue) to open Help immediately.

Check the Network

With Check the Network, you can check your TV wirelessly or wired to your network router.

User manual

Press the **■** key (blue) to open **Help** immediately.
Help will open on the chapter that is most relevant to what you are doing or what is selected on the TV.
To look up topics alphabetically, press the color key **■** **Keywords**.

To read the **Help** as a book, select **Book**. Before you execute the Help instructions, close **Help**. To close **Help**, press the color key **■** **Close**.

TV Help on your tablet, smartphone or computer

To carry out extended sequences of instructions more easily, you can download the TV Help in PDF format to read on your smartphone, tablet or computer. Alternatively, you can print the relevant Help page from your computer.

Contact info

You can view the contact information of the local service center on this page.

24.3

Troubleshooting

Power on and remote control

The TV does not switch on

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Make sure that the power cable is securely connected.

Creaking sound at startup or power off

When you are turning the TV on, off or to standby, you hear a creaking sound from the TV chassis. The creaking sound is due to the normal expansion and contraction of the TV as it cools and warms up. This does not affect performance.

TV does not respond to the remote control

The TV requires some time to start up. During this time, the TV does not respond to the remote control or TV controls. This is normal behavior.

If the TV continues to be unresponsive to the remote control, you can check if the remote control is working by means of a mobile phone camera. Put the phone in camera mode and point the remote control to the camera lens. If you press any key on the remote control and you notice the infra-red LED flicker through the camera, the remote control is working. The TV needs to be checked.

If you do not notice the flickering, the remote control might be broken or its batteries are low.

This method of checking the remote control is not possible with remote controls which are wirelessly paired with the TV.

The TV goes back to standby after showing the Philips startup screen

When the TV is in standby, a Philips startup screen is displayed, then the TV returns to standby mode. This is normal behavior. When the TV is disconnected and reconnected to the power supply, the startup screen is displayed at the next startup. To turn on the TV from standby, press on the remote control or the TV.

The standby light keeps on blinking

Disconnect the power cable from the power outlet. Wait 5 minutes before you reconnect the power cable. If the blinking reoccurs, contact Philips TV Consumer Care.

Channels

No digital channels found during the installation

Make sure that all cables are properly connected and that the correct network is selected.

Previously installed channels are not in the channel list

Make sure that the correct channel list is selected.

Picture

No picture / distorted picture

- Make sure that the antenna is properly connected to the TV.
- Make sure that the correct device is selected as the display source.
- Make sure that the external device or source is properly connected.

Sound but no picture

- Make sure that the picture settings are set correctly.

Poor antenna reception

- Make sure that the antenna is properly connected to the TV.
- Loud speakers, unearthed audio devices, neon lights, high buildings and other large objects can

influence reception quality. If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.

- If reception on only one channel is poor, fine-tune this channel with Manual Installation.

Poor picture from a device

- Make sure that the device is connected properly.
- Make sure that the picture settings are set correctly.

Picture settings change after a while

Make sure that **Location** is set to **Home**. You can change and save settings in this mode.

A commercial banner appears

Make sure that **Location** is set to **Home**.

Picture does not fit the screen

Change to a different picture format.

Picture format keeps changing with different channels

Select a non "Auto" picture format.

Picture position is incorrect

Picture signals from some devices may not fit the screen correctly. Check the signal output of the connected device.

Computer picture is not stable

Make sure that your PC uses the supported resolution and refresh rate.

Sound


No sound or poor sound quality

If no audio signal is detected, the TV automatically switches the audio output off — this does not indicate malfunction.

- Make sure that the sound settings are correctly set.
- Make sure that all cables are properly connected.
- Make sure that the volume is not muted or set to zero.
- Make sure that the TV audio output is connected to the audio input on the Home Theater System. Sound should be heard from the HTS speakers.
- Some devices may require you to manually enable HDMI audio output. If HDMI audio is already enabled, but you still do not hear audio, try changing the digital audio format of the device to PCM (Pulse Code Modulation). Refer to the documentation accompanying your device for instructions.

HDMI and USB

HDMI

- Note that HDCP (High-bandwidth Digital Content Protection) support can delay the time taken for a TV to display content from an HDMI device.
- If the TV does not recognize the HDMI device and no picture is displayed, switch the source from one device to another and back again.
- If the picture and sound of a device connected with HDMI is distorted, check if a different **HDMI Ultra HD** setting can solve this problem. In Help, press the color key  **Keywords** and look up **HDMI Ultra HD**.
- If there are intermittent sound disruptions, make sure that output settings from the HDMI device are correct.
- If you use an HDMI-to-DVI adapter or HDMI-to-DVI cable, make sure that an additional audio cable is connected to AUDIO IN (mini-jack only), if available.

HDMI EasyLink does not work

- Make sure that your HDMI devices are HDMI-CEC compatible. EasyLink features only work with devices that are HDMI-CEC compatible.

No volume icon shown

- When an HDMI-CEC audio device is connected and you use the TV Remote Control to adjust the volume level from the device, this behavior is normal.

Photos, videos and music from a USB device do not show

- Make sure that the USB storage device is set to Mass Storage Class compliant, as described in the storage device's documentation.
- Make sure that the USB storage device is compatible with the TV.
- Make sure that the audio and picture file formats are supported by the TV.

Choppy playback of USB files

- The transfer performance of the USB storage device may limit the data transfer rate to the TV which causes poor playback.

Wi-Fi and Internet

Wi-Fi network not found or distorted

- Microwave ovens, DECT phones or other Wi-Fi 802.11b/g/n devices in your proximity might disturb the wireless network.
- Make sure that the firewalls in your network allow access to the TV's wireless connection.
- If the wireless network does not work properly in your home, try the wired network installation.

Internet does not work

- If the connection to the router is OK, check the router connection to the Internet.

The PC and Internet connection are slow

- Look in your wireless router's user manual for information on indoor range, transfer rate and other factors of signal quality.
- Use a high-speed (broadband) Internet connection for your router.

DHCP



- If the connection fails, you can check the DHCP (Dynamic Host Configuration Protocol) setting of the router. DHCP should be switched on.

Wrong menu language

Wrong menu language

Change the language back to your language.

To change the language of the TV menus and messages...

- 1 - Press , select **General settings** > **Language** > **Menu Language** and press **OK**.
- 2 - Select the language you want and press **OK**.
- 3 - Press  (left) repeatedly if necessary, to close the menu.

24.4

Online help

To solve any Philips TV related problem, you can consult our online support. You can select your language and enter your product model number.

Go to www.philips.com/support .

On the support site you can find your country's telephone number to contact us as well as answers to frequently asked questions (FAQs). In some countries, you can chat with one of our collaborators and ask your question directly or send a question by email. You can download new TV software or the manual to read on your computer.

24.5

Consumer care/Repair

For support and repair, call the Consumer Care hotline in your country. Find the telephone number in the printed documentation that came with the TV. Or consult our website www.philips.com/support .

TV model number and serial number

You might be asked to provide the TV product model number and serial number. Find these numbers on the packaging label or on the type label on the back or bottom of the TV.

 **Warning**

Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV, or void your warranty.

Safety and care

25.1

Safety

Important

Read and understand all safety instructions before you use the TV. If damage is caused by failure to follow instructions, the warranty does not apply.

Risk of electric shock or fire

- Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilled on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips TV Consumer Care to have the TV checked before use.
- Never expose the TV, remote control or batteries to excessive heat. Never place them near burning candles, naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the TV.
- Never place heavy objects on the power cord.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire. Ensure that no strain is exerted on the power cord when you swivel the TV screen.
- To disconnect the TV from the main power, the power plug of the TV must be disconnected. When disconnecting the power, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

Risk of injury or damage to the TV

- Two people are required to lift and carry a TV that weighs more than 25 kg or 55 lbs.
- If you mount the TV on a stand, only use the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the weight of the TV and the stand.
- When wall mounted, ensure that the wall mount can safely bear the weight of the TV set. TP Vision bears no responsibility for improper wall mounting that results in accident, injury or damage.
- Parts of this product are made of glass. Handle with care to avoid injury or damage.

Risk of damage to the TV!

Before you connect the TV to the power outlet,

ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.

Risk of injury to children

Follow these precautions to prevent the TV from toppling over and causing injury to children:

- Never place the TV on a surface covered by a cloth or other material that can be pulled away.
- Ensure that no part of the TV hangs over the edge of the mounting surface.
- Never place the TV on tall furniture, such as a bookcase, without anchoring both the furniture and TV to the wall or a suitable support.
- Teach children about the dangers of climbing on furniture to reach the TV.

Risk of swallowing batteries!

The remote control may contain batteries which can easily be swallowed by small children. Keep these batteries out of reach of children at all times.

Risk of overheating

Never install the TV in a confined space. Always leave a space of at least 10 cm or 4 inches around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.

Lightning storms

Disconnect the TV from the power outlet and antenna before lightning storms. During lightning storms, never touch any part of the TV, power cord or antenna cable.

Risk of hearing damage

Avoid using earphones or headphones at high volumes or for prolonged periods of time.

Low temperatures

If the TV is transported in temperatures below 5°C or 41°F, unpack the TV and wait until the TV temperature reaches room temperature before connecting the TV to the power outlet.

Humidity

In rare occasions, depending on temperature and humidity, minor condensation can occur on the inside of the TV glass front (on some models). To prevent this, do not expose the TV to direct sunlight, heat or extreme humidity. If condensation occurs, it will disappear spontaneously while the TV is playing for a few hours.

The condensation moisture will not harm the TV or cause malfunction.

25.2

Screen care

- Never touch, push, rub or strike the screen with any object.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft damp cloth and wipe gently. Avoid touching the Ambilight LEDs on the backside of the TV. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- To avoid deformations and color fading, wipe off water drops as quickly as possible.
- Avoid stationary images as much as possible.

Stationary images are images that remain on screen for extended periods of time. Stationary images include on screen menus, black bars, time displays, etc. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.

Terms of use, copyrights and licenses

Terms of use

2017 © TP Vision Europe B.V. All rights reserved.

This product was brought to the market by TP Vision Europe B.V. or one of its affiliates, hereinafter referred to as Envision, which is the manufacturer of the product. Envision is the warrantor in relation to the TV with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners. Envision reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The written material packaged with the TV and the manual stored in the memory of the TV or downloaded from the Philips website are believed to be adequate for the intended use of the system.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. TP Vision Europe B.V. warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied. TP Vision Europe B.V. cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible. Terms of warranty, Risk of injury, damage to TV or voiding of warranty! Never attempt to repair the TV yourself. Use the TV and accessories only as intended by the manufacturer. The caution sign printed on the back of the TV indicates risk of electric shock. Never remove the TV cover. Always contact Philips TV Customer Care for service or repairs. Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorized in this manual, will void the warranty. Pixel characteristics. This LCD/LED product has a high number of color pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green, or blue) may appear constantly on the screen. This is a structural property

of the display (within common industry standards) and is not a malfunction. One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the applicable at the time of producing the products. Philips is committed to developing, producing and marketing products that cause no adverse health effects. Envision confirms that, as long as its products are handled properly for their intended use, they are safe to use according to scientific evidence available today. Philips plays an active role in the development of safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Copyrights

27.1

Dolby

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.



27.2

MHL

MHL, Mobile High-Definition Link and the MHL Logo are trademarks or registered trademarks of the MHL, LLC.



27.3

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



27.4

DTS 2.0 + Digital Out™

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



ANATEL

Este produto está homologado pela ANATEL de acordo com os procedimentos regulamentados pela Resolução 242/2000, e atende aos requisitos técnicos aplicados.

Este equipamento opera em caráter secundário, isto é, não tem direito à proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.



Wi-Fi



27.6

Microsoft

Windows Media

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.



Microsoft PlayReady

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

27.7

Wi-Fi Alliance

Wi-Fi®, the Wi-Fi CERTIFIED logo, the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.



27.8

Kensington

Kensington and Micro Saver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world.



27.9

Other trademarks

All other registered and unregistered trademarks are the property of their respective owners.

Disclaimer regarding services and/or software offered by third parties

Services and/or software offered by third parties may be changed, suspended, or terminated without prior notice. TP Vision does not bear any responsibility in these sorts of situations.

Index

A

- Age Ratings 21
- Ambilight 40
- Ambilight, Advanced- TV switch off 41
- Ambilight, Advanced- Wall color 41
- Ambilight, Ambilight brightness 40
- Ambilight, Ambilight saturation 40
- Ambilight, Ambilight style- Follow color 40
- Ambilight, Ambilight style- Follow video 40
- Antenna connection 5
- App gallery 38
- Audio Commentary 53
- Audio Description 53
- Audio Out Format 48
- Audio Out Leveling 48
- Audio out, optical 11
- Auto Volume Leveling 48

B

- Backlight Contrast 44
- Bass 47
- Blu-ray Disc player, connect 13

C

- Camcorder, connect 16
- Channel 20
- Channel List Copy, copy 56
- Channel List Copy, current version 57
- Channel List Copy, upload 57
- Channel List, filter 20
- Channel List, open 20
- Channel List, search 20
- Channel logos 51
- Channel, age ratings 21
- Channel, Antenna installation 56
- Channel, Cable Installation 56
- Channel, Channel List 20
- Channel, Channel List, about 20
- Channel, Manual channel update 56
- Channel, Options 22
- Channel, Radio stations 20
- Channel, Reinstall 56
- Channel, switch to a channel 21
- Channel, TV guide 24
- Child lock 21
- Clear Internet Memory 8
- Clear Miracast connection 8
- Clear Sound 48
- Clock settings 52

C

- closed caption 23

C

- Color 44
- Color, Color enhancement 44
- Color, color temperature 45
- Color, custom color temperature 45
- Color, Tint 44
- Computer, connect 16
- Consumer Care 75
- Contact Philips 75

- Contrast 44
- Contrast, Contrast Mode 45
- Contrast, Dynamic Contrast 45
- Contrast, Gamma 46
- Contrast, Video Contrast 45

D

- Disposal of TV or batteries 70
- DMR, Digital Media Renderer 7
- DTV applications 22

E

- Eco settings 49
- End of use 70
- Environmental, Eco settings 70

G

- Game Console, connect 13
- Game or Computer 31
- Game or Computer setting 44
- Gamma 46

H

- HDMI 4 - ARC 49
- HDMI Ultra HD 51
- Headphone Volume 49
- Headphones, connect 13
- Help 73
- Help, check the TV 73
- Home Menu 28

I

- Incredible Surround 47

K

- Keys on TV 17

L

- Language settings 52

M

- Media 33
- Media files, from a computer or NAS 33
- Media files, from a USB drive 33
- Menu language 23
- Miracast™ 8
- Miracast™, switch on 35
- Motion, Natural Motion 46
- MPEG Artifact Reduction 46

N

- Natural Motion 46
- Netflix 30
- Network installation 6
- Network, Clear Wi-Fi Miracast connection 8
- Network, connect 6
- Network, problem 6
- Network, settings 7
- Network, static IP 7
- Network, Switch on Wi-Fi 8
- Network, TV Network Name 8
- Network, view settings 7
- Network, Wi-Fi Smart Screen 8
- Network, wired 7

- Network, wireless 6
- Network, WoWLAN 7
- Network, WPS 6
- Network, WPS with PIN code 6
- Noise Reduction 46

O

- On a TV stand, TV Placement 49
- On screen Help 73
- On the wall, TV Placement 49
- Open source software 58
- Options on a Channel 22

P

- Pause TV 27
- Photo camera, connect 16
- Photos, movies and music 33
- Picture Format 46
- Picture Format, advanced 46
- Picture Format, basic 46
- Picture Style 43
- Picture, Backlight Contrast 44
- Picture, Color 44
- Picture, Sharpness 44
- Pixel Plus link 50
- Placement, TV placement 5
- Placement, viewing distance 5
- Power connection 5
- Power consumption, check 70
- Problems 73
- Problems, Channels 74
- Problems, Connection, Internet 75
- Problems, Connection, Wi-Fi 75
- Problems, Menu language 75
- Problems, Picture 74
- Problems, Remote control 73
- Problems, Sound 74

R

- Record a program 26
- Recording 26
- Recording, schedule a recording 26
- Recording, TV Guide data 24
- Register your product 73
- Reinstall TV 56
- Remote control and batteries 19
- Rental videos 38
- Repair 75

S

- Safety instructions 77
- Screen off 70
- Sharpness 44
- Sharpness, MPEG Artifact Reduction 46
- Sharpness, Noise reduction 46
- Sleep Timer 17
- Smart TV 36
- Software, Update 58
- Sound Style 47
- Sound, Auto Volume Leveling 48
- Sound, Bass 47
- Sound, Clear Sound 48
- Sound, Headphone Volume 49
- Sound, surround mode 47
- Sound, Treble 47
- Sources 31
- Support, online 75
- Surround Mode 47

- Switch off timer 50

T

- Treble 47
- Turning on 17
- TV guide 24
- TV Guide, data and information 24
- TV Guide, Reminder 25
- TV Installation 56

U

- Universal Access 53
- Universal Access, Speakers/Headphones 53
- USB Hard Drive, disk space 14
- USB Hard Drive, Installation 14
- USB Keyboard 15
- USB Keyboard, connect 15
- Utilities 29

W

- Watch TV 21
- Wi-Fi 6
- Wired network 7
- Wireless network 6
- WoWLAN 7

Y

- YPbPr connection, tips 10



All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips' shield emblem are trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V. 2017 © TP Vision Europe B.V. All rights reserved.

philips.com

