 
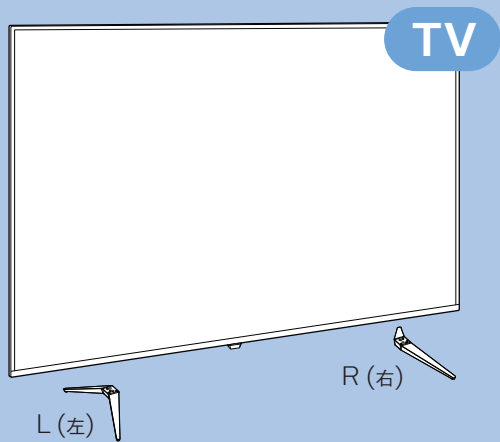 


請至以下網址註冊產品以獲得完整的資訊服務
www.philips.com/welcome

 
 
 
 
6683系列

 
 
 
 
 
 
PHILIPS

 
 
 
 
 


English - Read the safety instructions.


繁體中文 - 請閱讀安全說明。

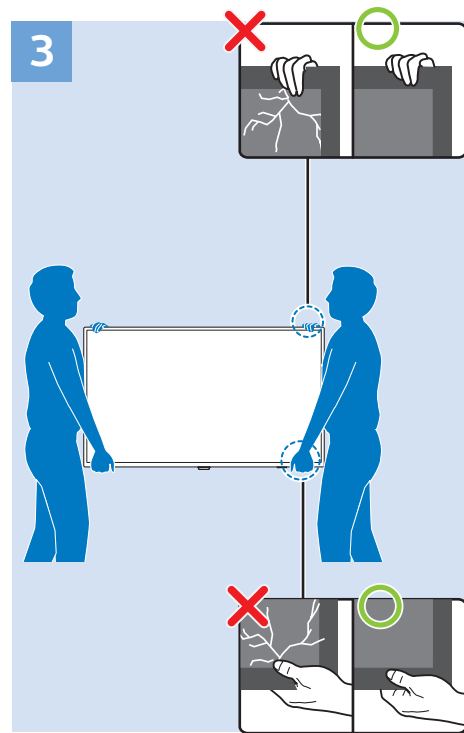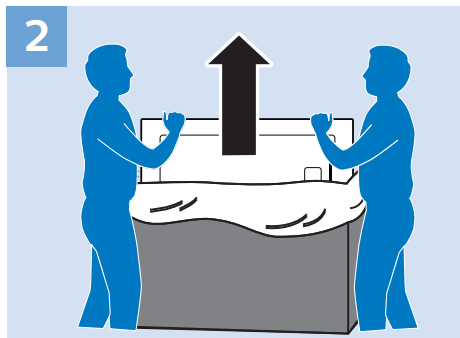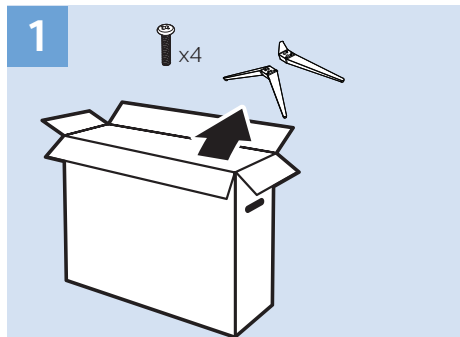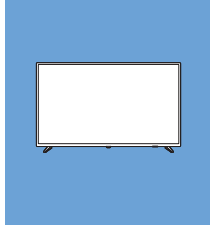

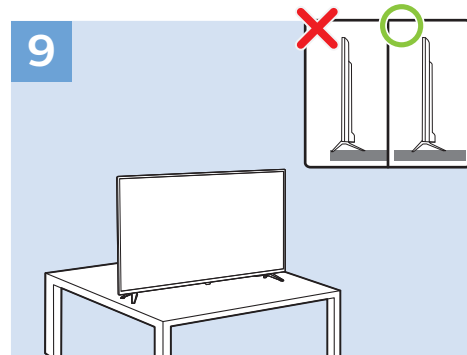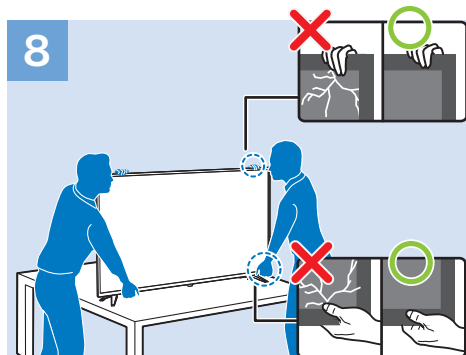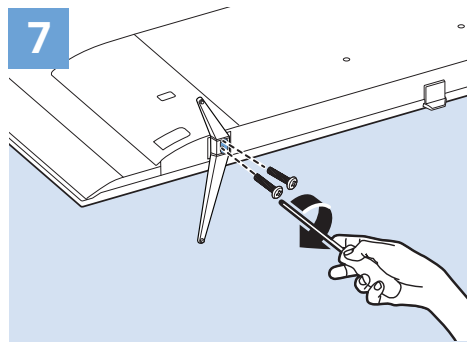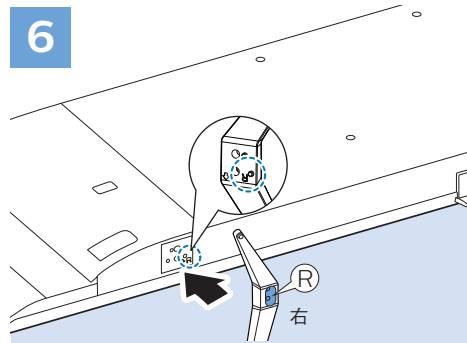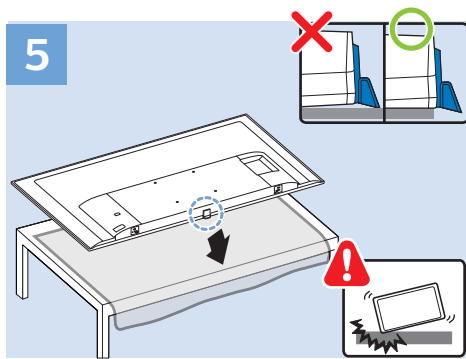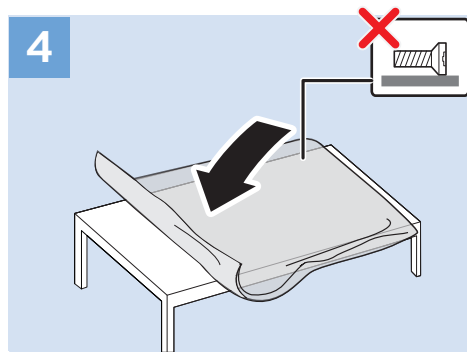


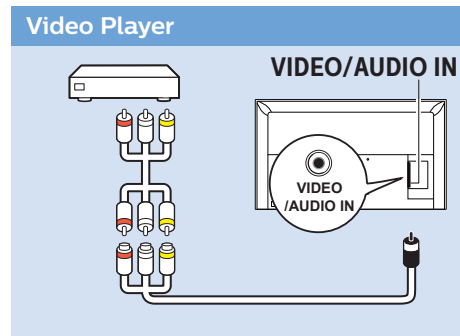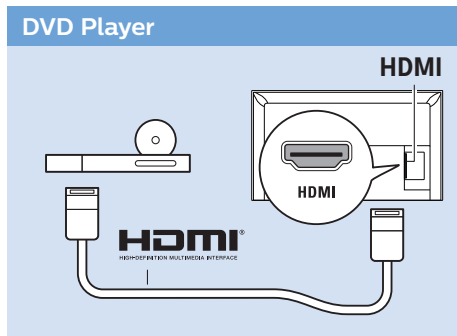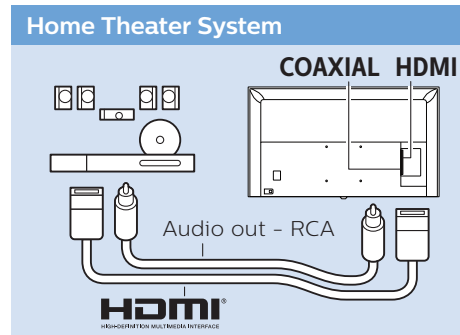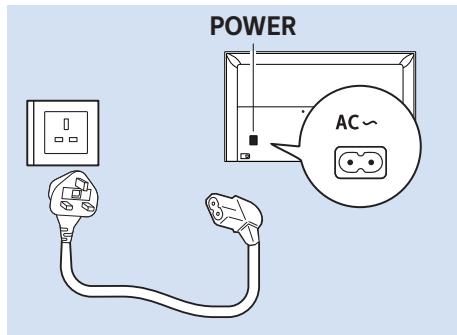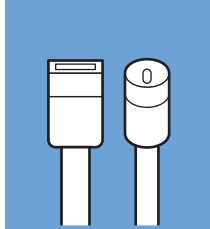


Network - Wireless

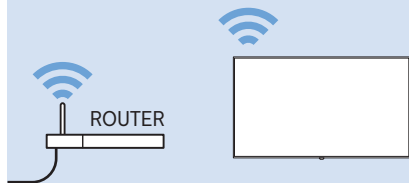 


Network - Wired

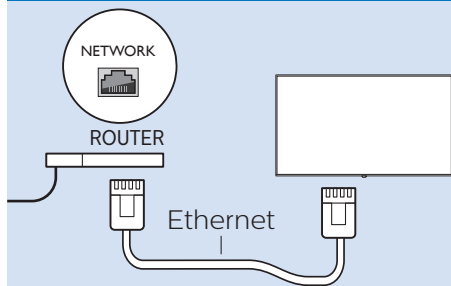 


USB Flash Drive

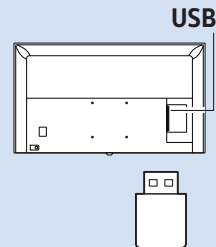 

Computer

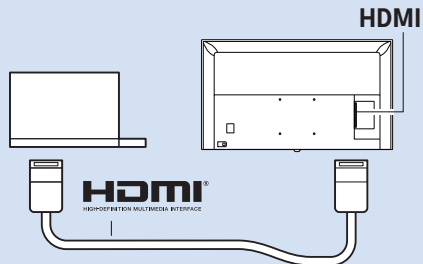 

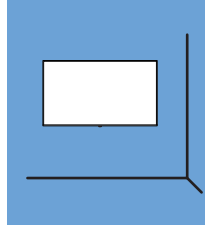 


VESA (x, y)

50" (126 cm) 200x200 mm M6

55" (139 cm) 200x200 mm M6





 
65" (164 cm) 300x200 mm M6


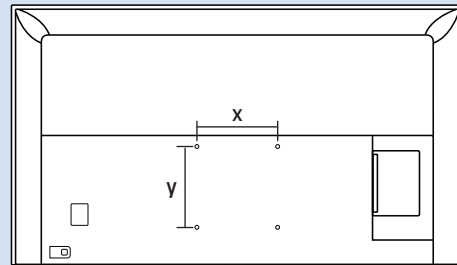


溫馨提示：壁掛安裝時，請先將機器壁掛鎖附位置的螺絲x4(已安裝)取出，此螺絲非標準壁掛螺絲，請勿使用。

Kind reminder. When mounting TV set on the wall, please remove the four pieces of screws from the backcover of TV set first.

       
Don't use these screws that are provided for wall mounting

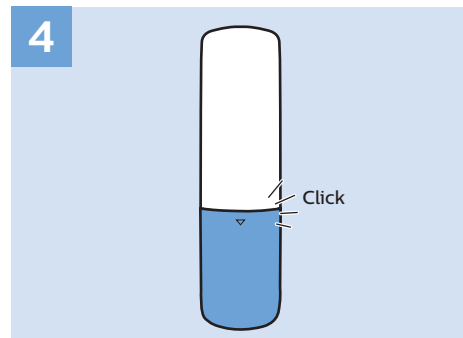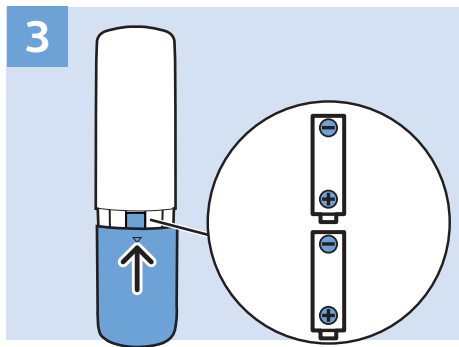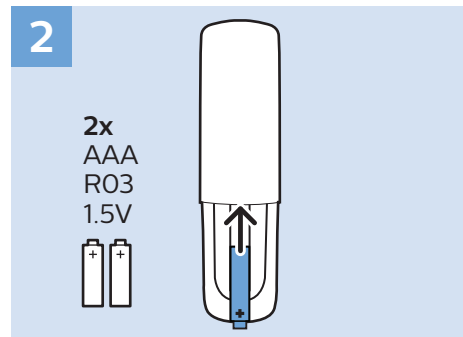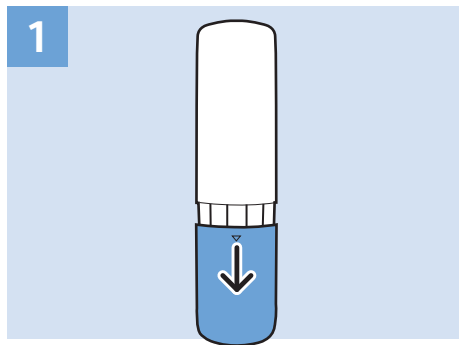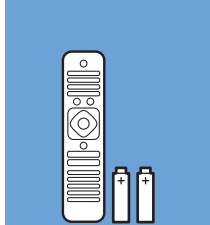

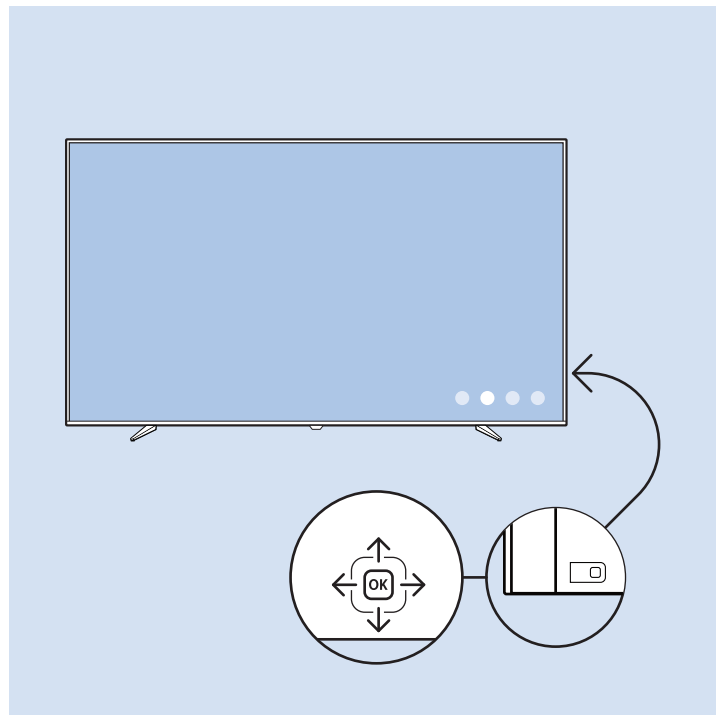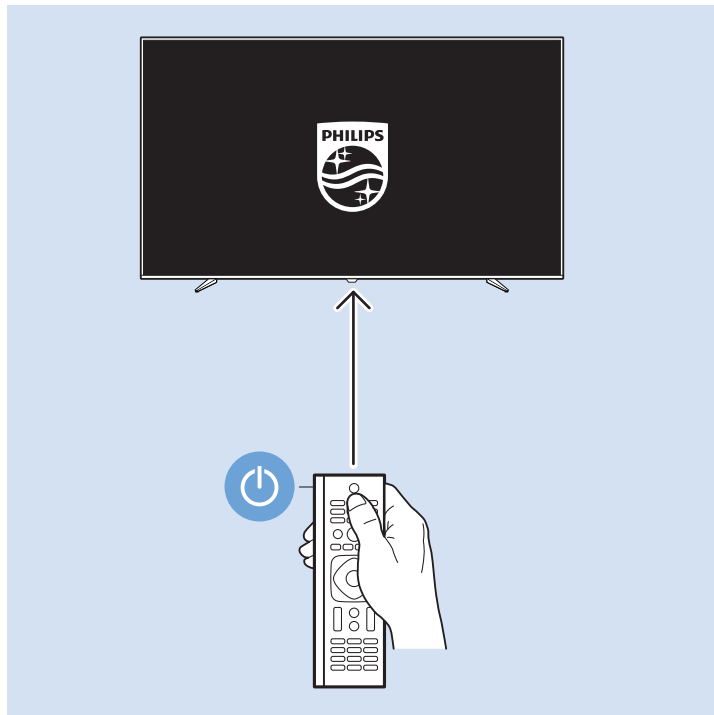



Help | 幫忙

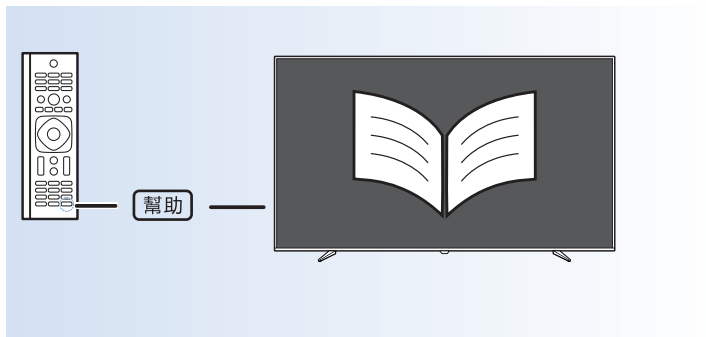 

www.philips.com/TVsupport





All registered and unregistered trademarks are the property of their respective owners.

Specifications are subject to change without notice.

Philips and the Philips' shield emblem are trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

2018 © TP Vision Europe B.V. All rights reserved.

philips.com