

Quick Start Guide

CONTENTS

INSTALLING LCD TV ON THE WALL . . . 1	TUNER MODE CONTROL 5
UNFOLD THE BASE. 1	AUTO PROGRAM (SETTING UP
TV CHANNEL INSTALLATION 2	CHANNELS) 5
PRESENTATION OF THE LCD TV 2	CABLE BOX (WITH RF In/OUTPUTS) . . 6
ACCESSORIES. 3	CABLE BOX (WITH AUDIO/VIDEO
BATTERY INSTALLATION 3	OUTPUTS) 6
REMOTE CONTROL OPERATION 3	S-VIDEO CONNECTIONS 7
ANTENNA TV 4	HD CONNECTIONS 7
BASIC CABLE TV CONNECTION 4	PC (MONITOR) INPUTS 8

IMPORTANT

NOTE: This quick setup guide is used with several different LCD TV models. Not all features (and drawings) discussed in this manual will necessarily match those found with your LCD TV set. This is normal and does not require that you contact your dealer or request service.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS UNIT TO RAIN OR EXCESSIVE.

 
 
INSTALLING LCD TV ON THE WALL

The stand of your LCD TV complies with the VESA standard, if you intend to install the LCD TV on the wall, please consult a professional technician for proper installing.

Wall Mounting of your LCD TV :


- 1 Put your LCD TV set on a safe and flat surface, then fold the base backward.
Note: To fold the base requires a degree of force.
- 2 Use for the TV set a Vesa compliant wall mount (not included).
(For 20 inch: 100x100 mm)
- 3 Use for installation by a professional technician.

Note: The manufacture accepts no liability, ensure installation is done by a professional technician.

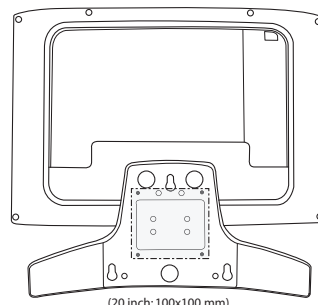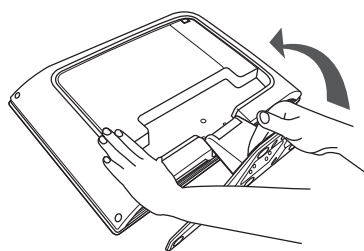


UNFOLD THE BASE

 
Expanding the base requires a degree of force; please use sufficient force to unfold the base. When unfolding the base, place the TV on a flat, sturdy surface before expanding the base.

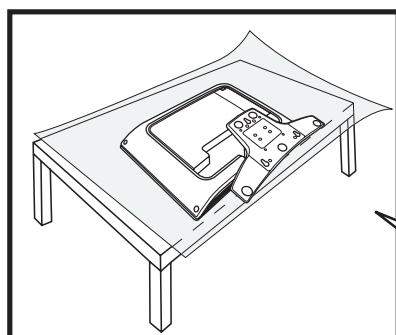

1

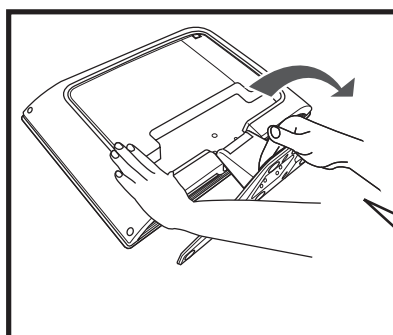 

2

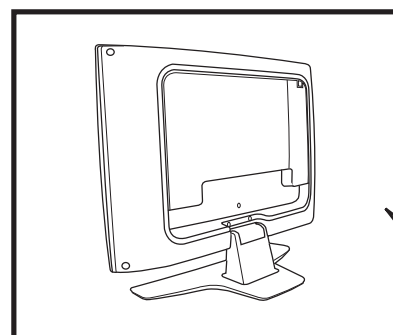 

3

 
TV CHANNEL INSTALLATION

Immediately after unpacking and plugging in your new television, run the auto program function to set up the TV for the broadcast or cable channels available in your area. If you do not run the auto program function to set up the channels, your television may not operate properly.

Please follow these steps to install TV channels:


- 1 Select a TV source via AV button on your remote control.
Press the CURSOR RIGHT button to confirm.
- 2 Press MENU button on your remote control to open the onscreen menu.
- 3 Press CURSOR DOWN to move to INSTALL, press CURSOR RIGHT on your remote control to enter INSTALL.
- 4 Press CURSOR DOWN to move to AUTO PROGRAM.
- 5 Press CURSOR RIGHT to start auto install the TV Channels.

For more detailed explanation of **AUTO PROGRAM**, please refer to **AUTO PROGRAM** section on page 5.

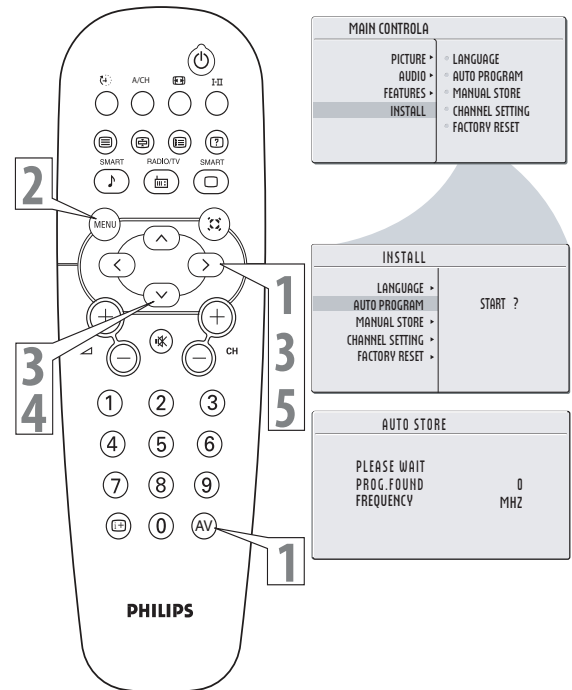


PRESENTATION OF THE LCD TV

 - 1 **Television Keys**
 - VOLUME + / - : To adjust sound level.
 - CHANNEL + / - : To select programs.
 - MENU : To access or close onscreen menu.
- 2 **Power button, LED light and infrared sensor**
 - : To switch the TV on or off.
 - Aim remote control at infrared sensors to activate TV controls.
- 3 **Rear connectors**
Remove the cable cover to access the connectors at the rear of the LCD TV.
- 4 **Bottom connectors**
Located at the bottom of the set.

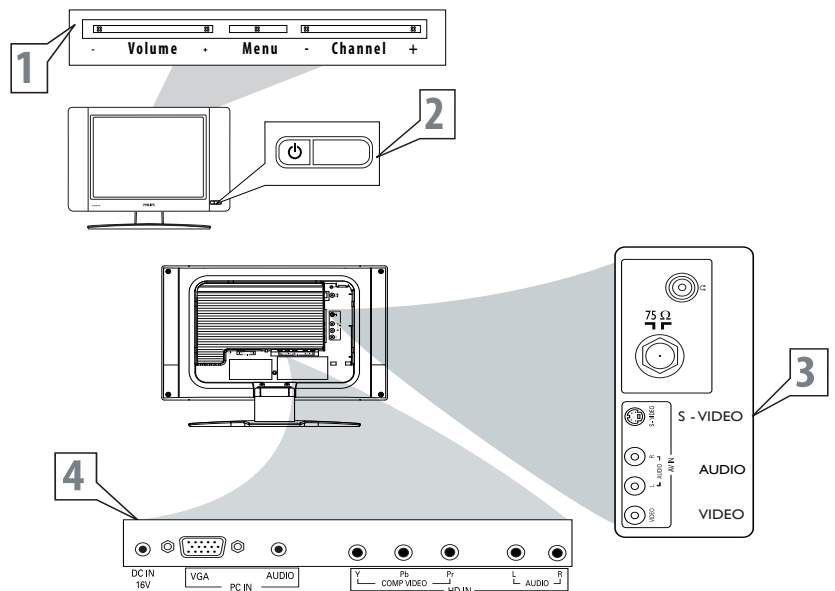


ACCESSORIES

 When you unpack this unit, make sure it includes the following:

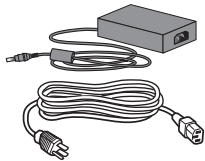


Power adapter & cable

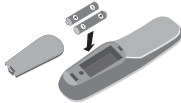 

Remote control & batteries



 Owner's Manual & Quick Start Guide

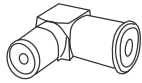


Tuner L-Adapter



Warranty Card

BATTERY INSTALLATION

 - 1 Remove the battery compartment lid from the bottom of the remote control.
- 2 Place lithium cell in the remote control. Be sure the (+) and (-) ends of the batteries line up as marked inside the battery (CR2025) compartment.
- 3 Reattach the battery compartment lid.

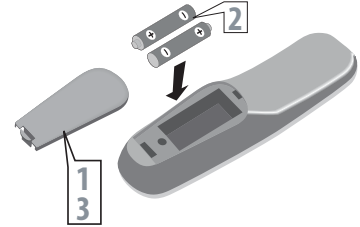

REMOTE CONTROL OPERATION

Previous Channel button

Press to go to previously selected channel.

Sleep button

Press to set the LCD TV to turn itself off within a certain time.

Unused key

Smart Sound button

Press repeatedly to select among the 4 settings; Personal, Voice, Music, or Theatre.

Menu button

Press to activate onscreen menu, back to previous level inside the onscreen menu, or press to exit the onscreen menu.

Volume button

Press to increase or decrease the sound level.

Mute button

Press to eliminate or restore the LCD TV sound. Mute will appear on the screen when the sound is muted.

Number buttons

Press the number buttons for direct access to the TV channels. For a 2 digit channel, enter the 2nd digit after enter 1st digit.

Information button

Press to see the current channel number on the TV screen.

Unused key

Power button

Press to turn the LCD TV on or off.

I-II button / Sound mode

Press repeatedly to select Mono, Stereo, Dual I, Dual II, Nicam Mono, Nicam Stereo, Nicam Dual I, Nicam Dual II.

Picture Format button

Press the FORMAT button repeatedly to toggle among the three screen format sizes; 4:3, EXPAND 4:3, COMPRESS 16:9.

Smart Picture button

Press repeatedly to select either Personal, Rich, Natural, Soft, or Multimedia picture setting.

Virtual Surround button

Adds greater depth and dimension to TV sound. Select from ON or OFF.

Cursor Buttons

(Left, Right, Up, Down)-

 
Press these buttons to highlight, select, and adjust items on the TV's on screen menu.

Channel button

Press to adjust the channel up or down.

AV button


Press to select the video input source: PC, TV, AV, S-Video, HD.

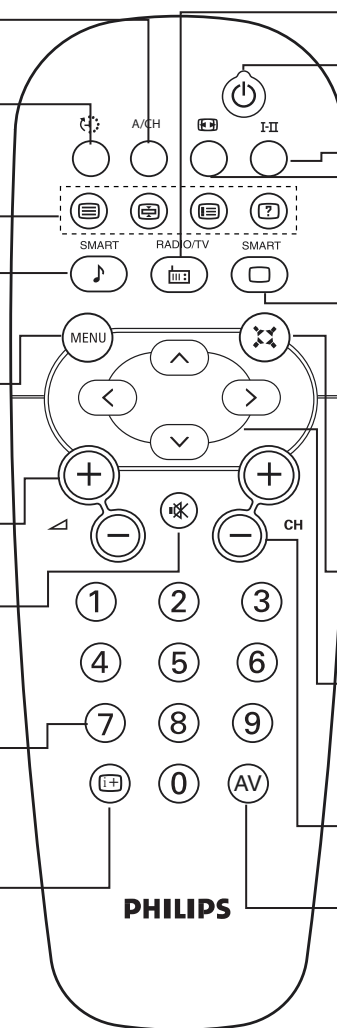

ANTENNA TV

A combination antenna receives normal broadcast channels (VHF 2–13 and UHF 14–69). Your connection is easy because there is only one 75 Ω (ohm) antenna jack on the side of your TV, and that's where the antenna goes.

 - 1** If your antenna has a round cable (75 ohm) on the end, then you're ready to connect it to the LCD TV. If your antenna has flat, twin-lead wire (300 ohm), you first need to attach the antenna wires to the screws on a 300- to 75-ohm adapter (not supplied).
- 2** Connect the antenna (or adapter) to one end of the supplied L-Adapter as shown, and connect the other end of the L-Adapter to the TV jack on the side of the LCD TV.
- 3** Plug the DC adapter into the DC IN 16V jack on the LCD TV. Plug the power cable into an outlet and switch TV set on.
- 4** Run the AUTO PROGRAM function to set up the TV for the broadcast or cable channels available in your area. If you do not run the auto program function to set up the channels, your television may not operate properly.

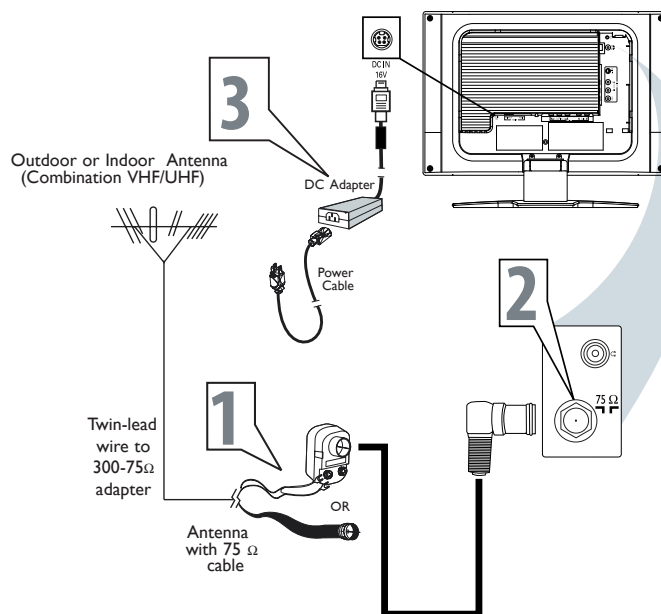

HELPFUL HINT

 
- Remember, an antenna or cable TV signal must first be connected to your LCD TV.
- Please make sure that you have selected the TV mode with AV key on your remote control, before installing TV channels.

BASIC CABLE TV CONNECTION

Your Cable TV input into your home may be a single (75 ohm) cable or use a cable box decoder. In either case the connection is very simple. Follow the steps below to connect your cable signal to your new television.

Direct cable connections:

- 1** Connect the Cable TV signal to one end of the supplied L-Adapter as shown, and connect the other end of the adapter to the TV jack on the LCD TV.
- 2** Plug the DC adapter into the DC IN 16V jack on the LCD TV. Plug the power cable into an outlet and switch TV set on.
- 3** Run the AUTO PROGRAM function to set up the TV for the broadcast or cable channels available in your area. If you do not run the auto program function to set up the channels, your television may not operate properly.

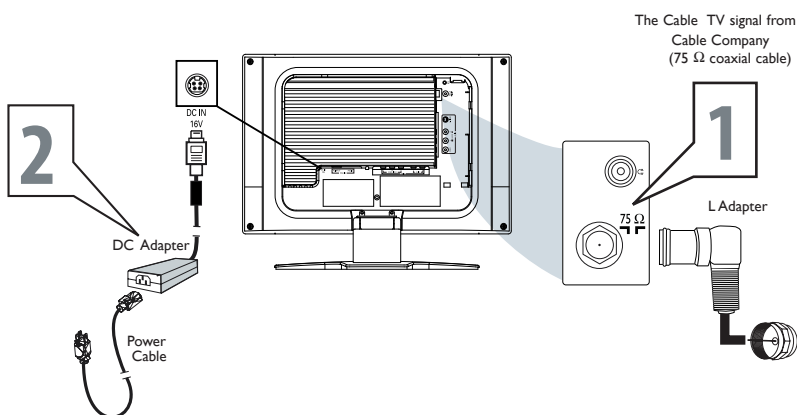


HELPFUL HINT

- Remember, an antenna or cable TV signal must first be connected to your LCD TV.
- Please make sure that you have selected the TV mode with AV key on your remote control, before installing TV channels.

AUTO PROGRAM (SETTING UP CHANNELS)

Your LCD TV can automatically set itself for local area (or cable TV) channels. This makes it easy for you to select only the TV stations in your area by pressing the CH+ or CH- button.

 - 1 Press the MENU button on the remote control to show the onscreen menu.
- 2 Press the CURSOR DOWN button to highlight the INSTALL menu.
- 3 Press the CURSOR RIGHT button to enter the INSTALL menu.
- 4 Press the CURSOR DOWN button to highlight the AUTO PROGRAM control.
- 5 Press the CURSOR RIGHT button to start the AUTO PROGRAM scanning of channels.
- 6 Press the MENU button repeatedly to clear the menu from the screen, after AUTO STORE has finished.

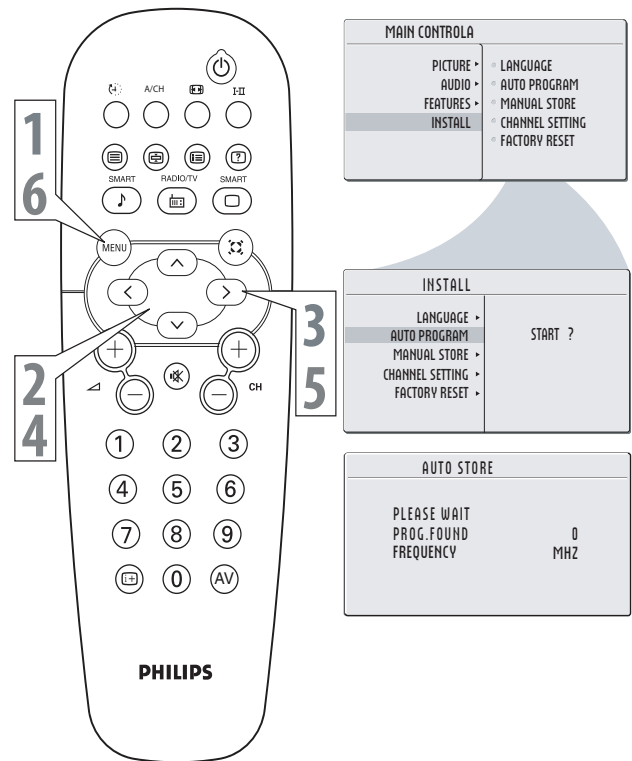


HELPFUL HINT

- Immediately after unpacking and plugging in your new television, run the auto program function to set up the TV for the broadcast or cable channels available in your area. If you do not run the auto program function to set up the channels, your television may not operate properly.
- After you've run Auto Program, check out the results. Press the CH(+) or the CH(-) button and see which channels you can select.
- Remember, an antenna or cable TV signal must first be connected to your LCD TV.

MANUAL STORE OF TV CHANNEL

You can also choose to tune your TV channels. Manual tuning allows you to store each programme manually.

 - 1 Press the MENU button on the remote control to show the onscreen menu.
- 2 Press the CURSOR DOWN button to highlight the INSTALL menu, then press CURSOR RIGHT to enter.
- 3 Select the MANUAL STORE, then press the CURSOR RIGHT button to activate auto search channel frequency or press number button to show your desired channel frequency.
- 4 After the channel frequency confirmed, select PROGRAM NO. by pressing CURSOR DOWN.
- 5 Press the number button or CURSOR RIGHT/LEFT to give the channel number.
- 6 If the channel reception is not satisfactory, press CURSOR DOWN button to highlight the FINETUNE. then press CURSOR RIGHT/LEFT to adjust. Note: If the channel reception is satisfactory, please go to step 7.
- 7 Press CURSOR DOWN to highlight STORE function. Press CURSOR RIGHT to confirm stored.
- 8 Press the MENU button repeatedly to clear the menu from the screen.

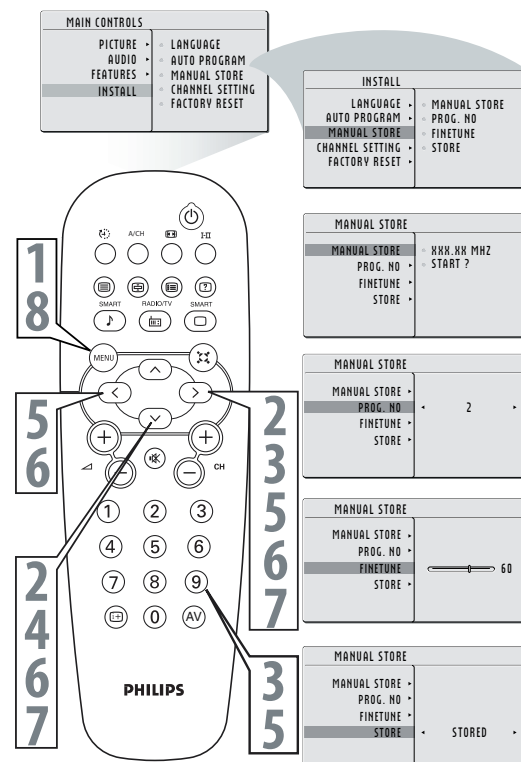


CABLE BOX (WITH RF IN / OUTPUTS):

- 1 Connect the Cable TV signal to the IN jack (or RF IN or CABLE IN) on the Cable Box.
- 2 Connect an RF coaxial cable (not supplied) to the OUT jack (or TO TV or RF OUT) of the Cable Box.
- 3 Connect the other end of the coaxial cable to one end of the supplied L-Adapter as shown, and connect the other end of the adapter to the TV jack on the LCD TV.
- 4 Plug the DC adapter into the DC IN I6V jack on the LCD TV. Plug the power cable into an outlet and switch TV set on.
- 5 Set the Channel 3/4 (or Output channel) switch of the Cable Box to 3 or 4. Set the TV to the same channel. When watching TV programming, change channels at the Cable Box, not the LCD TV.

HELPFUL HINT

 - Immediately after unpacking and plugging in your new television, run the auto program function to set up the TV for the broadcast or cable channels available in your area. If you do not run the auto program function to set up the channels, your television may not operate properly.
- Please make sure that you have selected the TV mode with AV key on your remote control, before installing TV channels.

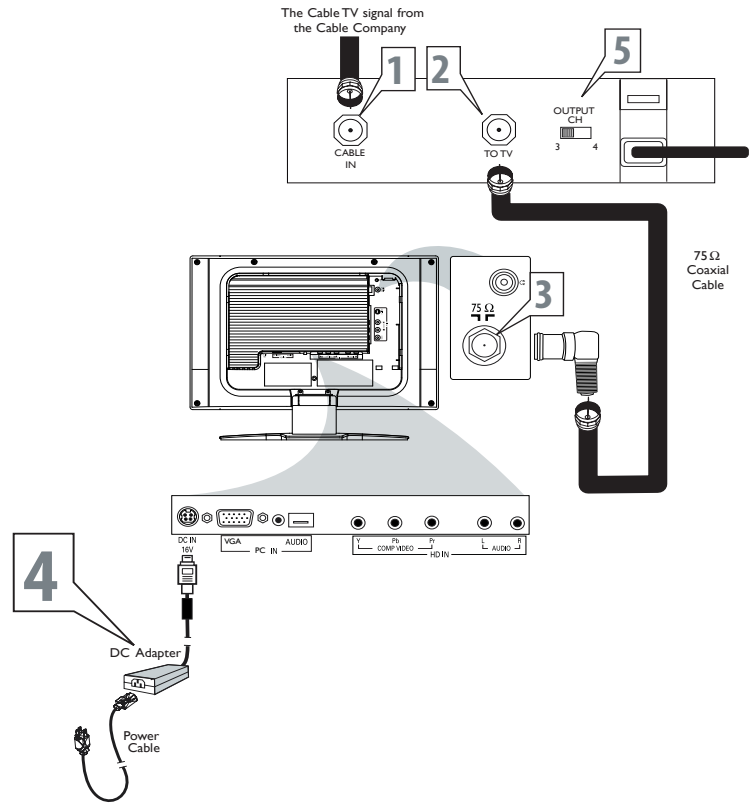


CABLE BOX (WITH AUDIO / VIDEO OUTPUTS):

This connection will supply stereo sound to the LCD TV.

- 1 Connect the Cable TV signal to the IN jack (or RF IN or CABLE IN) on the Cable Box.
- 2 Using an RCA-type video cable (not supplied) connect one end of the video cable to the Video Out jack of the Cable Box. Connect the other end of the cable to the yellow VIDEO jack on the side of the TV. Video cables are usually marked with yellow and are available from Philips or electronics retailers. Video jacks on most equipment are yellow.
- 3 Using RCA-type, stereo audio cables (not supplied), connect one end of the cables to the left and right Audio Out jacks of the Cable Box. Connect the other end of that cable to the Audio jack on the side of the LCD TV. Audio cables are usually marked with red and white and are available from Philips or electronics retailers. The right audio jack is red and the left audio jack is white. Match the cable colors to the jack colors.
- 4 Plug the DC adapter into the DC IN I6V jack on the LCD TV. Plug the power cable into an outlet and switch TV set on.

 Note: Use the AV button on the remote control to tune to the AV channel for the cable box signal. Once tuned, change channels at the cable box, not the television. When you watch programs using VCR, it's recommended to select SOFT Mode via Smart picture.

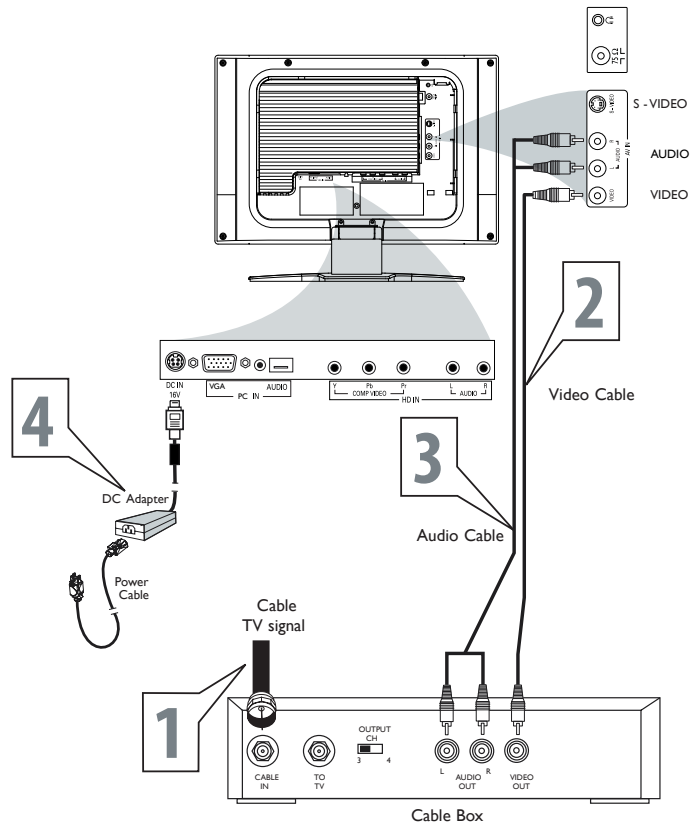


S-VIDEO CONNECTIONS

The S-Video connection on the rear of the LCD TV can provide you with better picture detail and clarity for the playback of accessory sources such as DBS (digital broadcast satellite), DVD (digital video discs), video games, and VHS VCR (video cassette recorder) tapes than the normal antenna picture connections.

- 1** Connect an S-Video cable to the S-VIDEO jack of the other equipment (DVD Player, Camcorder, etc.) and to the S-VIDEO jack on the rear of the LCD TV.
- 2** Connect RCA-style audio cables (usually red and white) to the AUDIO OUT (left and right) jacks on the other equipment. Connect the other end of the cables to the AUDIO jack on the side of the LCD TV.
- 3** Plug the DC Adapter into the DC IN 16V jack on the LCD TV. Plug the power cable into an outlet. Turn on the LCD TV and other equipment.
- 4** Press the AV buttons to set the LCD TV to its S-VIDEO mode.
- 5** Press PLAY on the other equipment to view its material on the LCD TV.

Note:

 - The Philips LCD TV remote control can not be used to operate other video/audio equipment.
- The Audio jack of AV IN is shared between Video (CVBS) and S-Video signals. If Audio and Video is connected to S-Video input, you can still hear sound if you select Video via AV select, even there appears no image on screen.

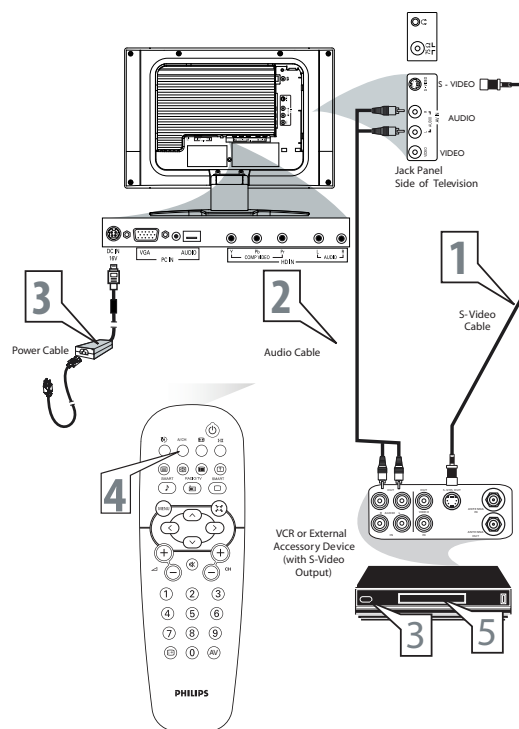


HD CONNECTIONS

HD video input provide the highest possible color and picture resolution in the playback of digital signal source material, such as with DVD players. If you are using a HD (High Definition) receiver that can transmit high definition programming, the TV can accept those signals through the HD input located on the bottom of the TV.

- 1** Connect the HD (Y, Pb, Pr) Video OUT jacks from the DVD player (or similar device) to the HD VIDEO Input jacks on the bottom of the LCD TV.
- 2** Connect the red and white AUDIO CABLES to the Audio (left and right) output jacks on the rear of the accessory device to the AUDIO IN jack. Connect the other end of the cable to the Audio jack on the rear of LCD TV.
- 3** Plug the DC Adapter into the DC IN 16 V jack on the LCD TV. Plug the power cable into an outlet. Turn on the LCD TV and other equipment.
- 4** Press the AV button on the remote control to select HD. HD will appear in the upper left corner on the TV screen.
- 5** Insert a DVD disc into the DVD player and press the PLAY button on the DVD Player.

Note:

 
- The Philips LCD TV remote control can not be used to operate other video/audio equipment.

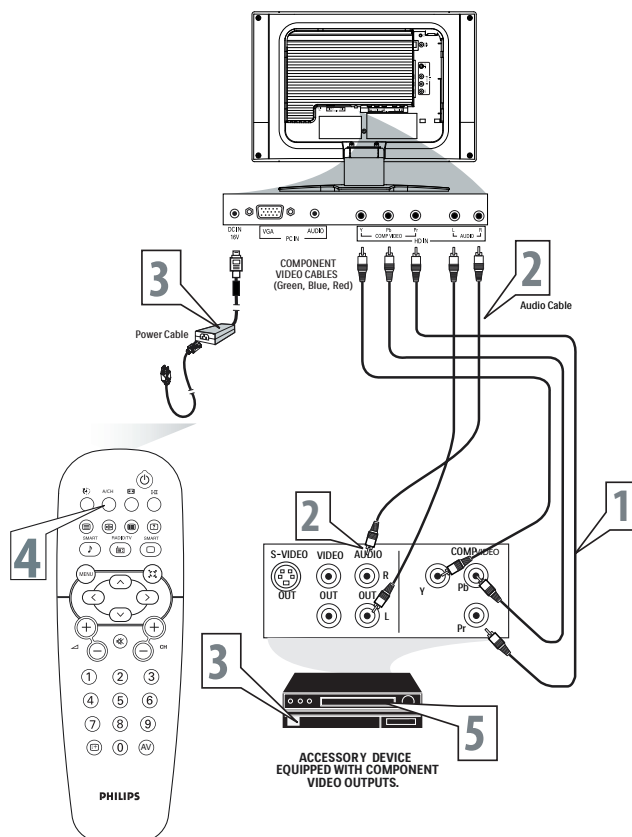

PC (MONITOR) INPUTS:

This LCD TV can be used as a PC. Your computer will have to be equipped with a VGA type video output and interface cable (not supplied). (One end with VGA type connector, the other end with DVI-I type connector.)

 - 1** Connect VGA end of the interface cable (not supplied) to the computer, while connecting the other ends to the DVI INPUT jack on the LCD TV.
- 2** Although audio connections are not required, the LCD TV can reproduce the computers audio out by an AUDIO ADAPTER to the Audio output jack on the computer (if available) while connecting the other ends of the Audio cables to the PC AUDIO Jacks on the bottom of the TV.
- 3** Plug the DC Adapter into the DC IN 16V jack on the LCD TV. Plug the power cable into an outlet. Turn on the LCD TV and PC.
- 4** Press the AV button until PC MODE appears on the screen.

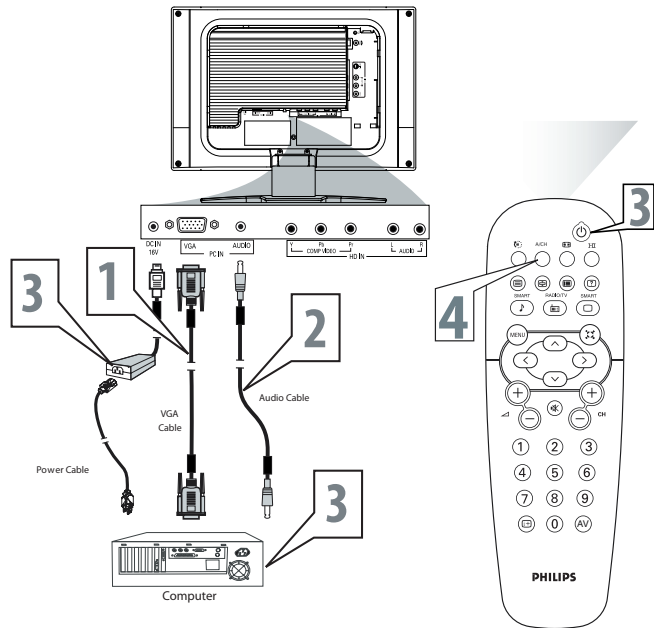

HELPFUL HINT

- For PC function, it just accepts analog input via D-Sub type connector.

快速使用和连线指南

目录

将液晶电视挂在墙上	1	基本的有线电视连接	4
展开底座	1	调谐模式控制	5
设置电视频道	2	自动搜寻 (设置频道)	5
液晶电视概览	2	分线盒 (带有 RF 输入/输出)	6
附件	3	分线盒 (带有声音/视频输出)	6
安装电池	3	S-VIDEO 连接	7
遥控器操作	3	HD 连接	7
天线电视	4	PC (显示器) 输入	8

重要事项

注意：本快速设置指南适用于多个不同的液晶电视型号。本手册中介绍的所有功能（和图例）不一定与您液晶电视的功能完全相同。这是正常现象，不需要与经销商联系或请求维修。

警告：为防止火灾或电击，不要使本产品遭受雨淋或受潮。

 
 
将液晶电视挂在墙上

本液晶电视的底座符合 VESA 标准，如果希望将其挂在墙上，请咨询专业技术人员以了解正确的安装方式。

以壁挂方式安装液晶电视：

- 1 将液晶电视放在平稳的表面上，向后折叠底座。
注意：折叠底座时需要适度用力。
- 2 使用符合 Vesa 标准的电视用壁挂装配件（未装机提供）。
（对于 20 英寸电视：100x100 mm）
- 3 委托专业技术人士进行安装。


注意：制造商对于安装不承担任何责任，务必委托专业技术人士进行安装。

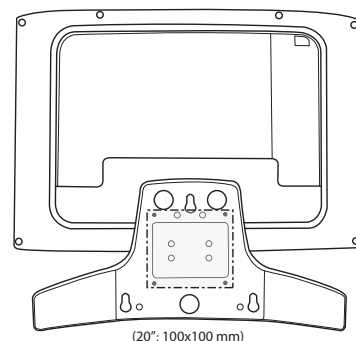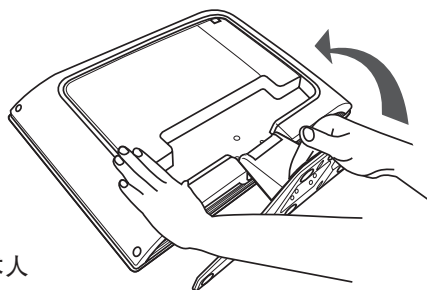


展开底座

展开底座时需要适度用力。

 
在展开底座之前，先将电视放在平稳的表面上。

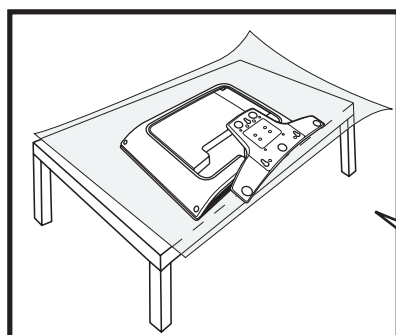

1

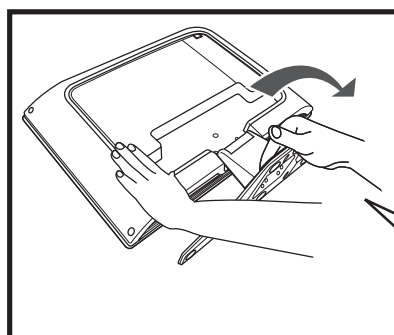 

2

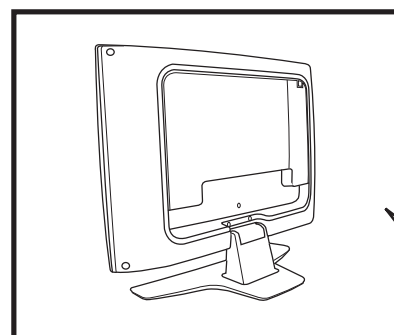 

3

 
设置电视频道

在打开包装并接通这台新电视的电源后，立即进行自动搜寻功能设置电视，使其记忆您所在地区可用的天线或有线电视频道。如果不进行自动搜寻功能设置频道，电视可能无法正常工作。

请按照下列步骤设置电视频道：


- 1 利用遥控器上的 AV 按钮选择电视信号源。
按光标向右按钮进行确认。
- 2 按遥控器上的 MENU（菜单）按钮以打开屏幕菜单。
- 3 按光标向下按钮移到“设定”，然后按遥控器上的光标向右按钮进入“设定”。
- 4 按光标向下按钮移到“自动搜寻”。
- 5 按光标向右按钮开始自动设置电视频道。

有关“自动搜寻”的详细说明，请参阅第 5 页的“自动搜寻”一节。

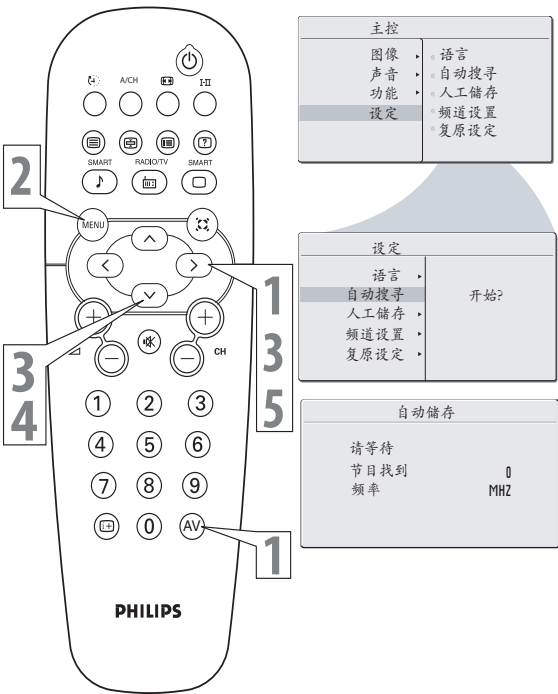

液晶电视概览

 - 1 电视按键
 - VOLUME + / -（音量增大／减小）：调节音量大小。
 - CHANNEL + / -：选择节目。
 - MENU（菜单）：访问或关闭屏幕菜单。
- 2 Power（电源）按钮、LED 指示灯和红外线传感器
 - ：打开或关闭电视的电源。
 - 将遥控器指向红外线传感器以激活电视控制。
- 3 背面连接器
卸下线缆盖后可以使用液晶电视背面的连接器。
- 4 底部连接器
位于电视底部。

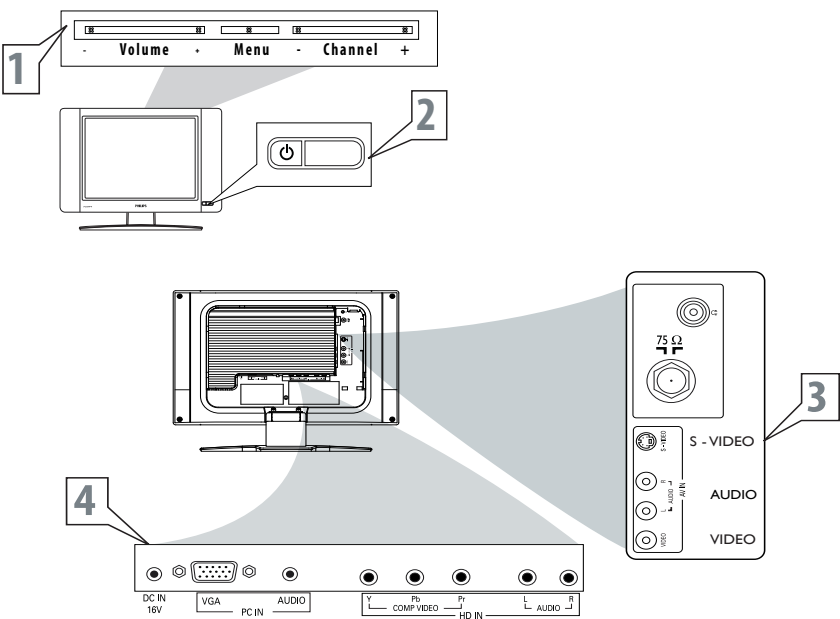


附件

打开本产品包装时，确保有下列物品：



安装电池

 - 1 卸下遥控器底部的电池仓盖。
- 2 将两个(AAA)电池放入遥控器中。
确保电池 (+) 和 (-) 两端与电池仓内侧
标记的方向一致。
- 3 重新装上电池仓盖。

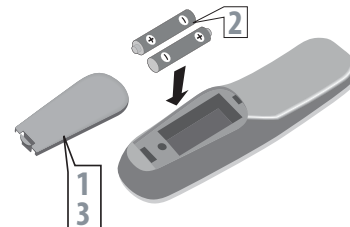

遥控器

A/CH 按钮
按此按钮可以返回此前选择的频道。

睡眠定时按钮
按此按钮可以设置液晶电视，使其在特定时间自行关闭。

未使用的按钮

灵智声音按钮
反复按此按钮可以选择 4 种设置：个人设定、对白、音乐或剧场。

MENU (菜单) 按钮
按此按钮可以激活屏幕菜单，在屏幕菜单中按此按钮可以返回上一级菜单，直至退出屏幕菜单。

光标按钮
(向左、向右、向上、向下)
按这些按钮可以高亮显示、选择和调整电视屏幕菜单中的项目。

音量按钮
按此按钮可以增大或减小音量。

静音按钮
按此按钮可以关闭或恢复液晶电视声音。声音关闭时，屏幕上会出现静音图标。

信息按钮
按此按钮可以在电视屏幕上显示当前频道号码。

未使用的按钮
屏幕格式按钮
反复按“格式”按钮可以切换三种屏幕格式尺寸：4:3、扩展 4:3、压缩 16:9。

POWER (电源) 按钮
按此按钮可以打开或关闭液晶电视的电源。

I-II 按钮 / 声音模式
反复按此按钮可以选择单声道、立体声、双声道 I、双声道 II、丽音单声道、丽音立体声、丽音双声道 I、丽音双声道 II。

 
灵智图像按钮
反复按此按钮可以选择个人设定、鲜艳、自然、柔和或多媒体等图像设置。

虚拟环绕按钮
使电视声音具有更强的深度和广度效果。可以选择“开”或“关”

频道按钮
按此按钮可以选择上一个或下一个频道。

数字按钮
按数字按钮可以直接进入电视频道。对于 2 位数频道，先输入第 1 位，然后输入第 2 位。


AV 按钮
按此按钮可以选择视频输入源：PC、TV、AV、S-Video、HD。

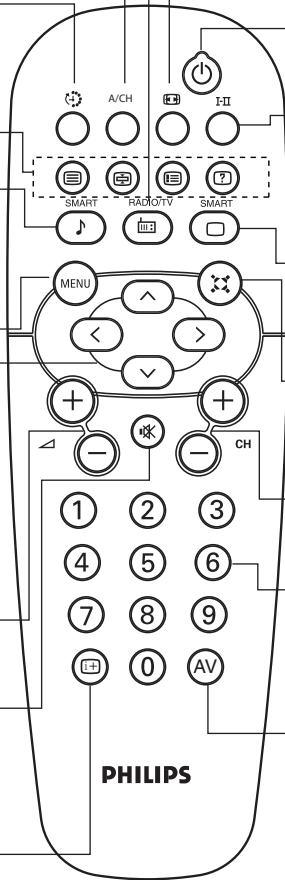

天线电视

组合天线接收正常的广播频道（VHF 2 - 13 和 UHF 14 - 69）。电视侧面只有一个 75 Ω （欧姆）天线插孔用于连接天线，因此连接非常简单。

 - 1 如果天线端头是圆形电缆（75 欧姆），则可以直接连接到液晶电视。如果天线是扁平双线（300 欧姆），则需要先将天线导线连接到 300-至75-欧姆适配器（未装机提供）的螺丝上。
- 2 将天线（或适配器）连接到装机提供的 L-适配器的一端（如图所示），将 L-适配器的另一端连接到液晶电视侧面的 TV 插孔。
- 3 将直流适配器插入液晶电视上的 DC IN 16V 插孔。将电源线插入电源插座，然后打开电视的电源。
- 4 进行自动搜寻功能在电视上设置您所在区域可用的广播或有线频道。如果不进行自动搜寻功能设置频道，电视可能无法正常工作。

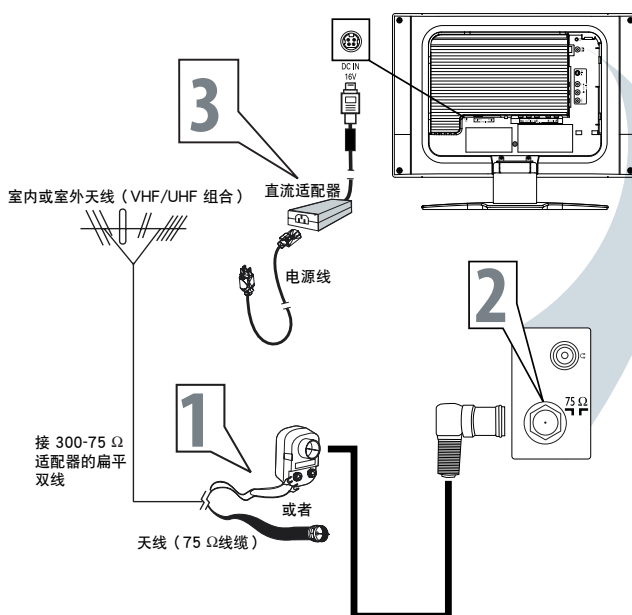

有用提示

 
- 请记住，必须首先将天线或有线电视信号连接至您的液晶电视。
- 在设定电视频道之前，请确保使用遥控器上的 AV 键选 TV 模式。

基本的有线电视连接

您家中的有线电视输入可能是单根线（75 欧姆）或使用分线盒解码器。无论在哪种情况下，连接都非常简单。按照下列步骤将有线信号连接到这台新电视。

直接连线：

- 1 将有线电视信号连接到装机提供的 L-适配器的一端（如图所示），将适配器的另一端连接到液晶电视上的 TV 插孔。
- 2 将直流适配器插入液晶电视上的 DC IN 16V 插孔。将电源线插入电源插座，然后打开电视的电源。
- 3 进行自动搜寻功能在电视上设置您所在区域可用的广播或有线频道。如果不进行自动搜寻功能设置频道，电视可能无法正常工作。

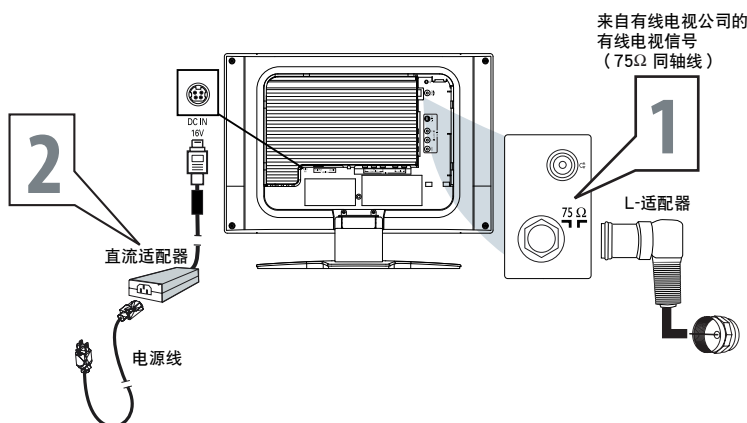

有用提示

- 请记住，必须首先将天线或有线电视信号连接至您的液晶电视。
- 在设定电视频道之前，请确保使用遥控器上的 AV 键选 TV 模式。

 
自动搜寻（设置频道）

本液晶电视可以自动设置当地（或有线电视）的频道。这样，您就可以方便地按 CH+ 或 CH- 按钮选择您所在区域的电视台。

- 1 按遥控器上的 MENU（菜单）按钮以显示屏幕菜单。
- 2 按光标向下按钮以高亮显示“设定”菜单。
- 3 按光标向右按钮以进入“设定”菜单。
- 4 按光标向下按钮以高亮显示“自动搜寻”控制。
- 5 按光标向右按钮启动“自动搜寻”以扫描频道。
- 6 “自动搜寻”完成后，反复按 MENU（菜单）按钮，直至菜单从屏幕上消失。

有用提示


- 在打开包装并接通这台新电视的电源后，立即进行自动搜寻功能设置电视，使其记忆您所在地区可用的天线或有线电视频道。如果不进行自动搜寻功能设置频道，电视可能无法正常工作。
- 进行自动搜寻功能后，检查搜寻结果。按 CH+ 或 CH- 按钮，看看您能选择哪些频道。
- 请记住，必须首先将天线或有线电视信号连接至您的液晶电视。

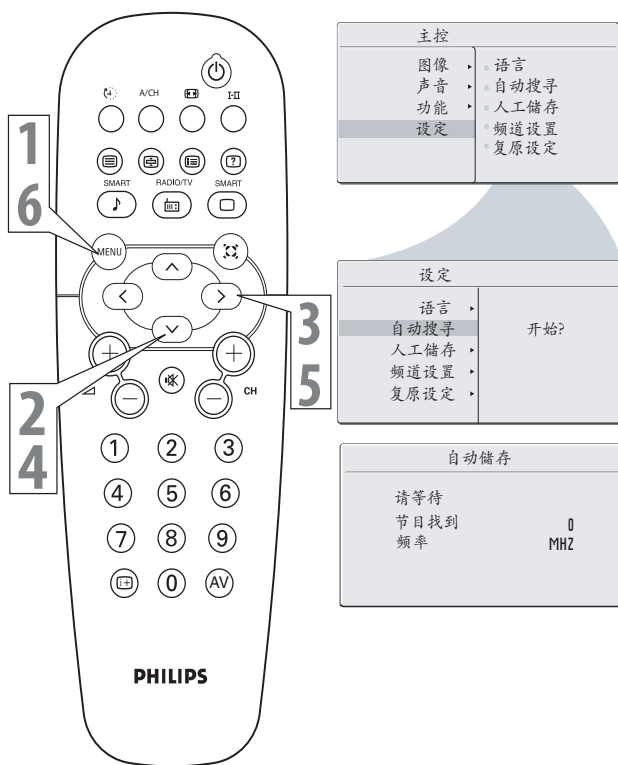

人工储存电视频道


您也可以选择手工调出电视频道。利用手工调台，您可以人工储存每个频道。

 - 1 按遥控器上的 MENU（菜单）按钮以显示屏幕菜单。
- 2 按光标向下按钮以高亮显示“设定”菜单，然后按光标向右按钮进入子菜单。
- 3 选择“人工储存”，然后按光标向右按钮启动自动搜寻频道频率，或者按数字按钮以显示所需的频道频率。
- 4 确认频道频率后，按光标向下按钮选择“节目号码”。
- 5 按数字按钮或光标向右/向左按钮指定频道号码。
- 6 如果频道接收效果不佳，可以按光标向下按钮高亮显示“微调”，然后按光标向右/左按钮进行调整。
注意：如果频道接收效果良好，请转到步骤 7。
- 7 按光标向下按钮高亮显示“储存”功能。按光标向右按钮确认储存。
- 8 反复按 MENU（菜单）按钮，直至菜单从屏幕上消失。

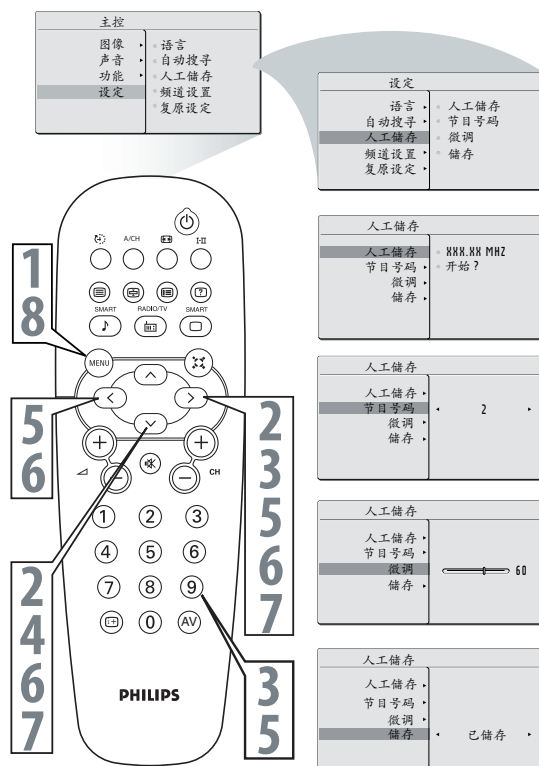

分线盒（带有 RF 输入／输出）：

 - 1 将有线电视信号连接到分线盒上的 IN 插孔（或者 RF IN 或 CABLE IN）。
- 2 将 RF 同轴线（未装机提供）连接到分线盒上的 OUT 插孔（或者 TO TV 或 RF OUT）。
- 3 将同轴线的另一端连接到装机提供的 L-适配器的一端（如图所示），将适配器的另一端连接到液晶电视上的 TV 插孔。
- 4 将直流适配器插入液晶电视上的 DC IN 16V 插孔。将电源线插入电源插座，然后打开电视的电源。
- 5 将分线盒的频道 3/4（或输出频道）开关设在 3 或 4。将电视设在同一频道。在观看电视节目时，在分线盒（或液晶电视）上更换频道。

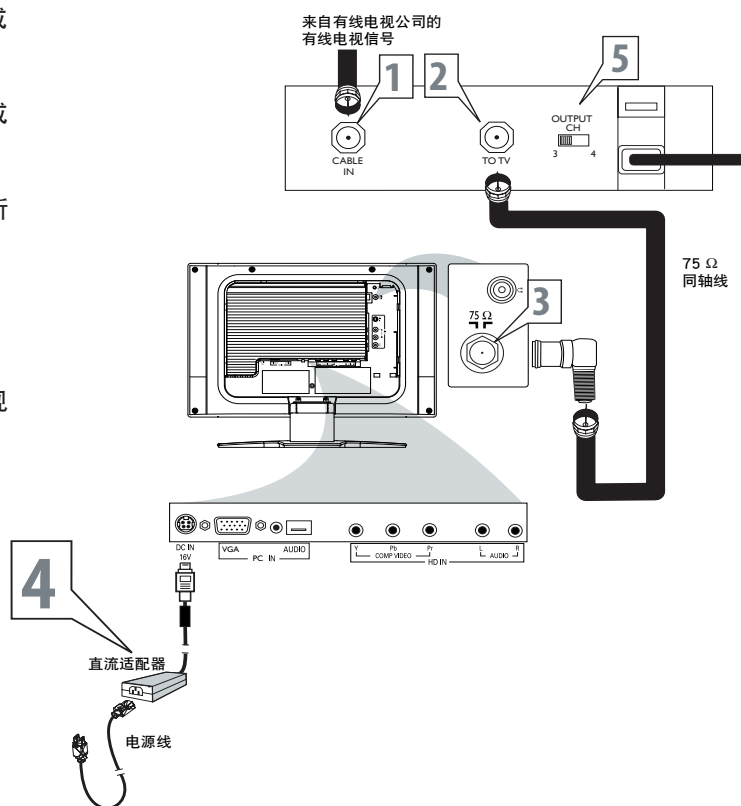

有用提示

 
- 在打开包装并接通这台新电视的电源后，立即进行自动搜寻功能设置电视，使其记忆您所在地区可用的天线或有线电视频道。如果不进行自动搜寻功能设置频道，电视可能无法正常工作。
- 在设定电视频道之前，请确保使用遥控器上的 AV 键选 TV 模式。

分线盒（带有声音／视频输出）：

此连接可以为液晶电视提供立体声声音。

- 1 将有线电视信号连接到分线盒上的 IN 插孔（或者 RF IN 或 CABLE IN）。
- 2 使用 RCA 型视频线（未装机提供）将视频线的一端连接到分线盒上的 Video Out 插孔。将视频线的另一端连接到电视侧面的黄色 VIDEO 插孔。视频线通常为黄色，在 Philips 或电子产品经销商处有售。大多数设备上的视频插孔为黄色。
- 3 使用 RCA 型立体声音频线（未装机提供）将视频线的一端连接到分线盒上的左右两个 Audio Out 插孔。将音频线的另一端连接到液晶电视侧面的 Audio 插孔。音频线通常为红色和白色，在 Philips 或电子产品经销商处有售。右边的音频插孔为红色，左边的音频插孔为白色。线缆颜色应与插孔颜色匹配。
- 4 将直流适配器插入液晶电视上的 DC IN 16V 插孔。将电源线插入电源插座，然后打开电视的电源。


注意：使用遥控器上的 AV 按钮调到分线盒信号的 AV 频道。调整后，在分线盒（而不是电视）上更换频道。
使用 VCR 观看节目时，建议您通过灵智图像功能选择柔和模式。

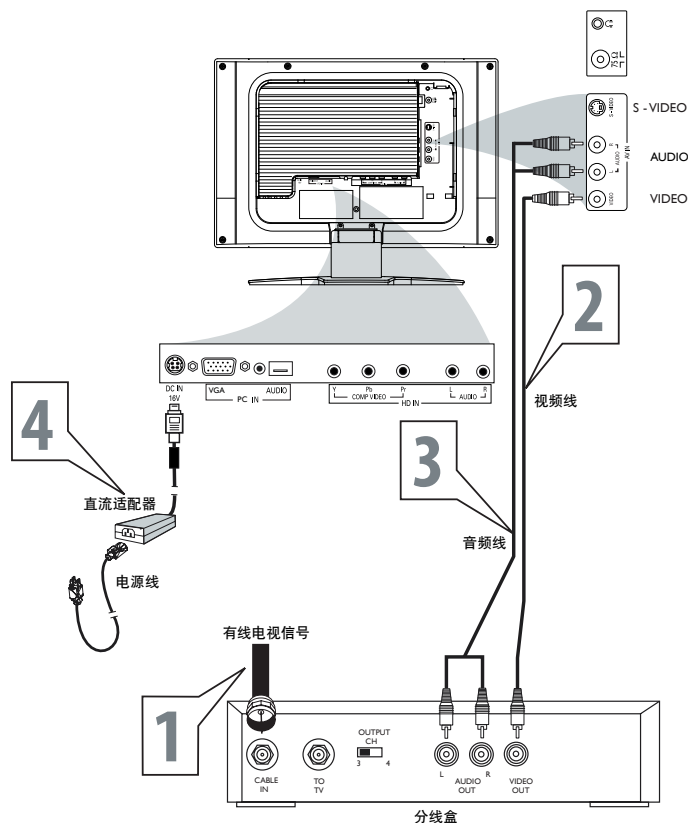

S-VIDEO 连接

与普通天线连接的图像相比，液晶电视背面的 S-Video 连接可以在播放 DBS（数字广播卫星）、DVD（数字视频光盘）、视频游戏、以及 VHS VCR（盒式磁带录像机）磁带等输入源时提供更好的图像细节和纯度。

 - 1 将 S-Video 线连接到其它设备（DVD 播放机、摄像机等）的 S-VIDEO 插孔和液晶电视背面的 S-VIDEO 插孔。
- 2 将 RCA 型音频线（通常为红色和白色）连接到其它设备上的 AUDIO OUT（左和右）插孔。将音频线的另一端连接到液晶电视侧面的 AUDIO 插孔。
- 3 将直流适配器插入液晶电视上的 DC IN 16V 插孔。将电源线插入电源插座。打开液晶电视和其它设备的电源。
- 4 按 AV 按钮将液晶电视设在 S-VIDEO 模式。
- 5 按其它设备上的 PLAY（播放）以在液晶电视上观看其内容。

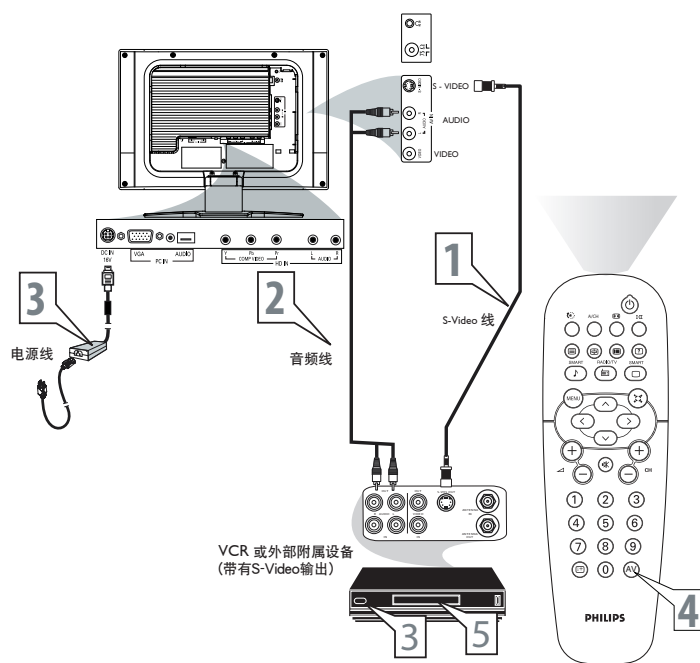


注意：

- Philips 液晶电视遥控器不能用于操控其它视频/音频设备。
- AV IN 的音频插孔由 Video (CVBS) 和 S-Video 信号共用。当音频和视频连接到 S-Video 输入时，如果您通过 AV 选择视频，即使屏幕上没有图像，仍能听到声音。

HD 连接

HD 视频输入可以在播放数字信号源（如 DVD 播放机）时提供可能的最高色彩和图像分辨率。如果您使用的是能够传送高清晰度节目的 HD（高清晰度）接收器，则电视可以通过位于电视底部的 HD 输入接收这些信号。

 - 1 连接 DVD 播放机（或类似设备）的 HD (Y, Pb, Pr) Video OUT 插孔和液晶电视底部的 HD VIDEO Input 插孔。
- 2 将红色和白色 AUDIO 线连接到附属设备背面的 Audio（左和右）输出插孔。将音频线的另一端连接到液晶电视背面的 Audio 插孔。
- 3 将直流适配器插入液晶电视上的 DC IN 16V 插孔。将电源线插入电源插座。打开液晶电视和其它设备的电源。
- 4 按遥控器上的 AV 按钮选择 HD。HD 将出现在电视屏幕的左上角。
- 5 将 DVD 光盘放入 DVD 播放机，然后按 DVD 播放机上的 PLAY（播放）按钮。

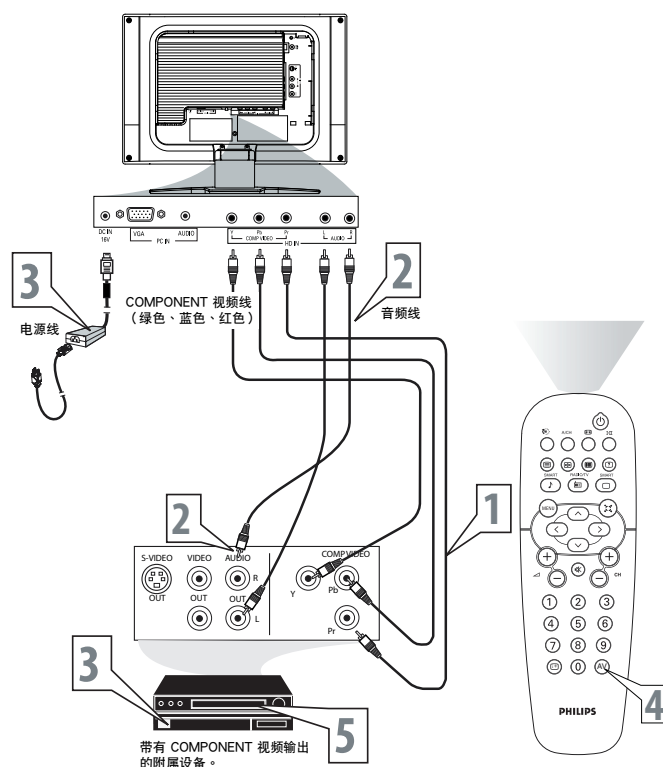


注意：

- Philips 液晶电视遥控器不能用于操控其它视频/音频设备。

PC（显示器）输入：

本液晶电视也可以用作 PC 显示器。您的计算机必须配备 VGA 型视频输出和转接线（未装机提供）。（一端为 VGA 型接头，另一端为 DVI-I 型接头）

 - 1 将转接线（未装机提供）的 VGA 端连接到计算机，将另一端连接到液晶电视上的 DVI INPUT 插口。
- 2 虽然不需要音频连接，但液晶电视仍能通过音频适配器产生计算机音频输出，方法是：使用音频适配器将音频线的一端连接到计算机上的 Audio 输出插孔（如果有），将音频线的另一端连接到电视底部的 PC AUDIO 插孔。
- 3 将直流适配器插入液晶电视上的 DC IN 16V 插孔。将电源线插入电源插座。打开液晶电视和 PC 的电源。
- 4 一直按住 AV 按钮，直至 PC 模式出现在屏幕上。

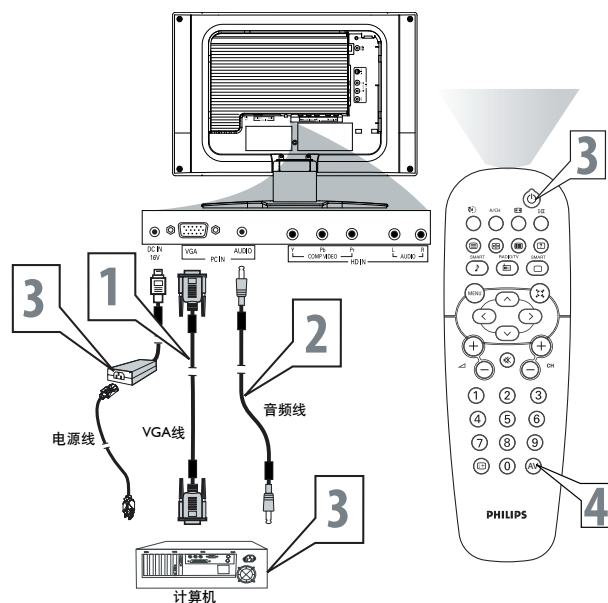

有用提示

- 对于 PC 功能，它只能接收通过 D-Sub 型接头传送的模拟信号。