

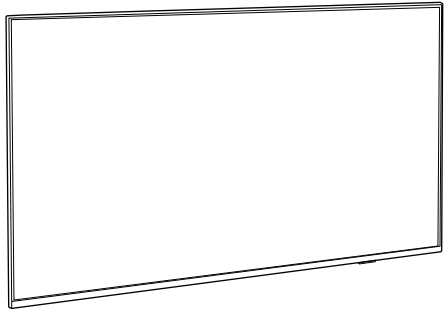
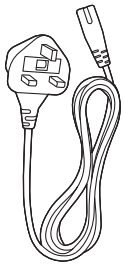
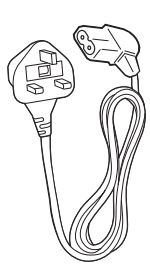



6654 系列
Quick Start Guide

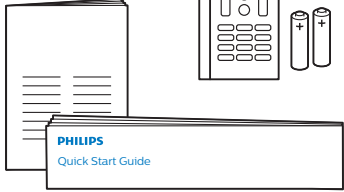

x4

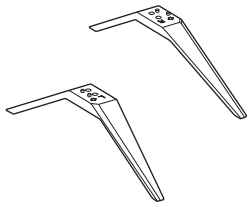


A

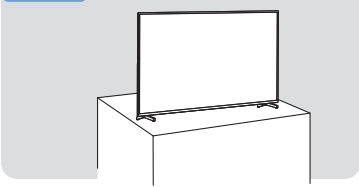


B




A

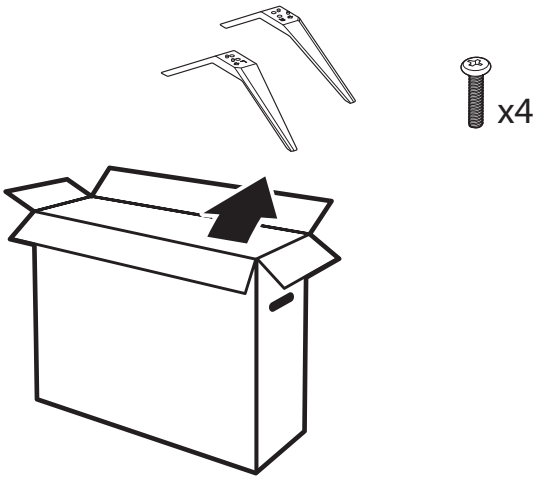


1

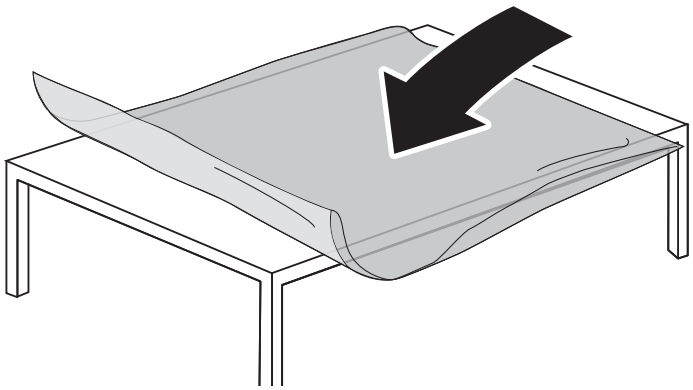


2

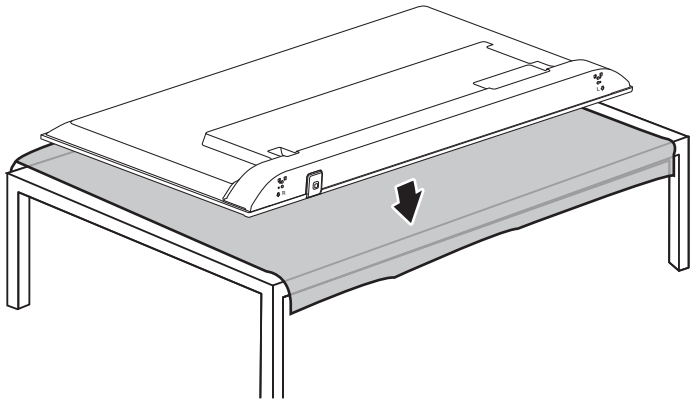


3

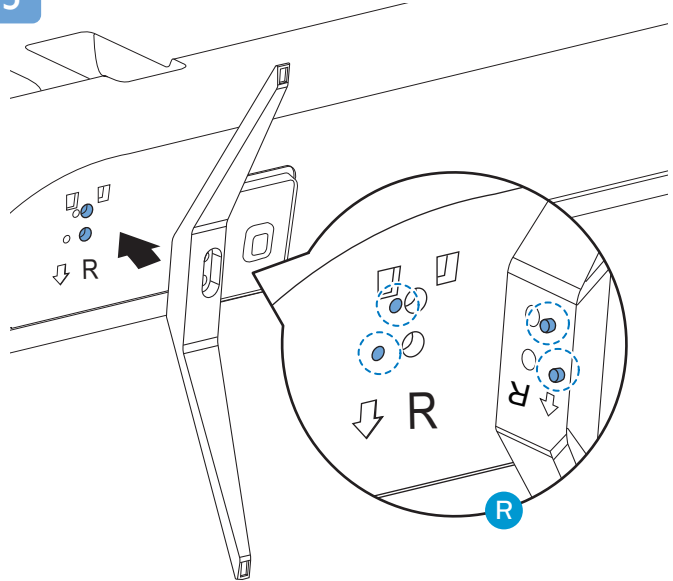


4

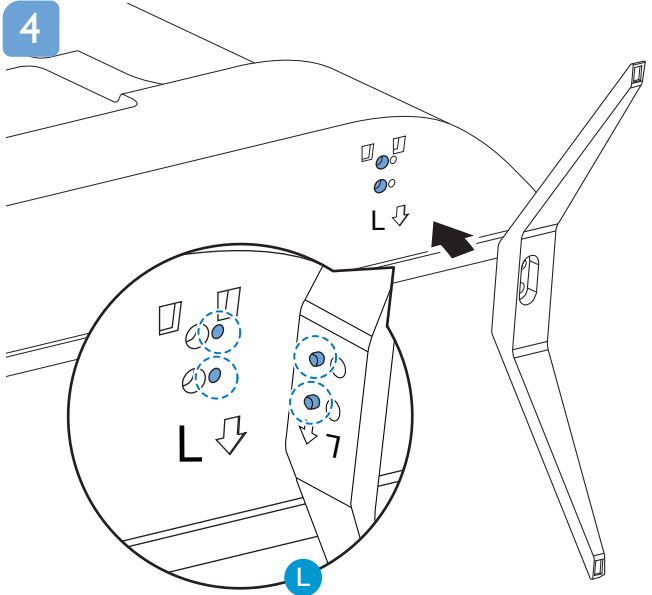


5

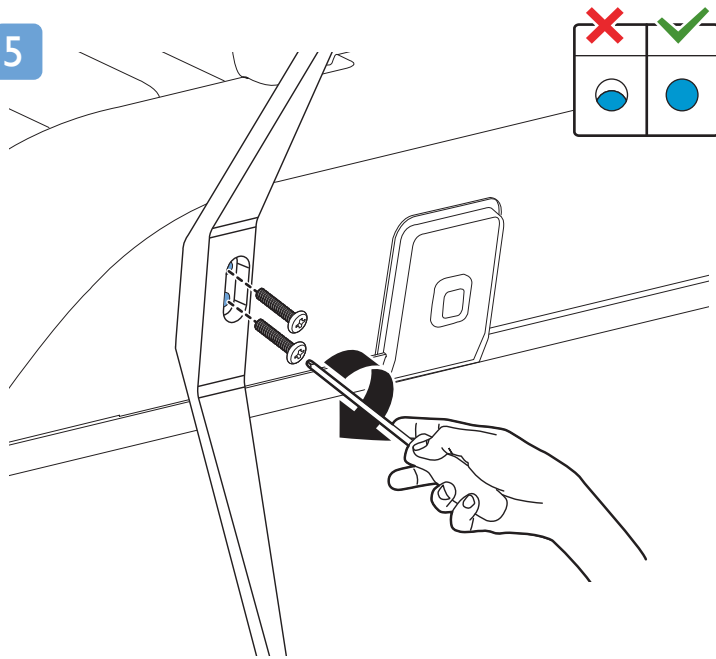

6

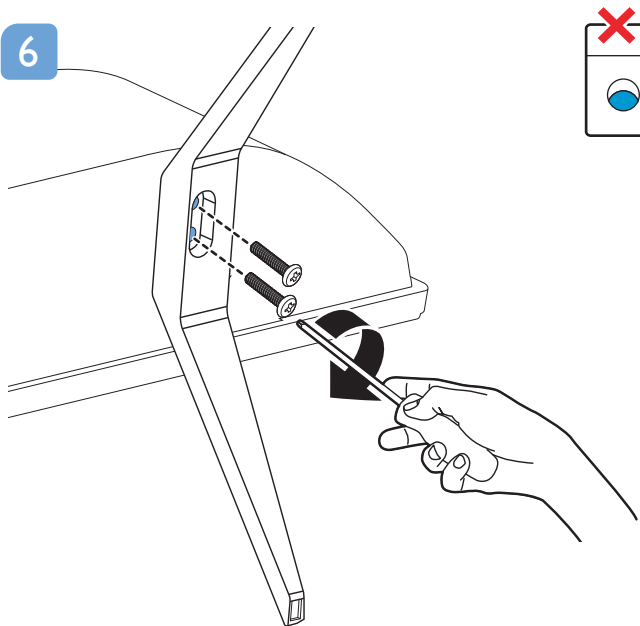

7

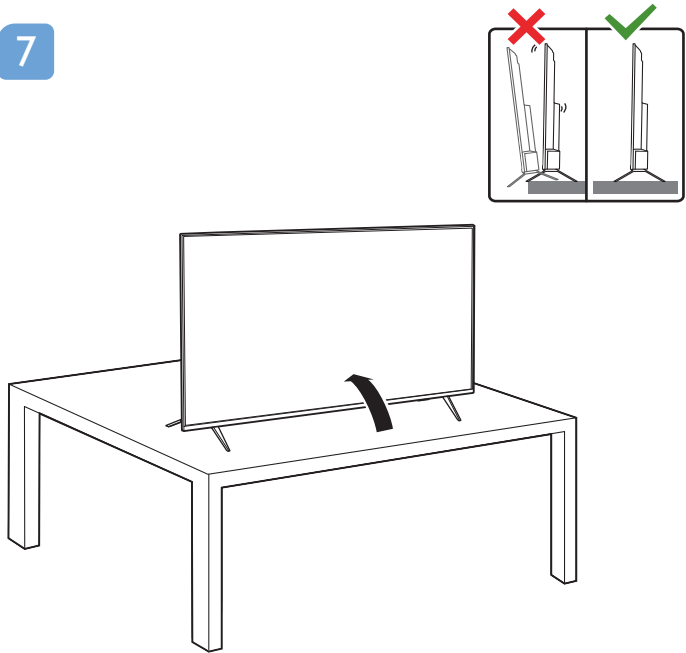




English Read the safety instructions.

繁體中文 請閱讀安全說明。







Register your product and get support at
www.philips.com/TVsupport

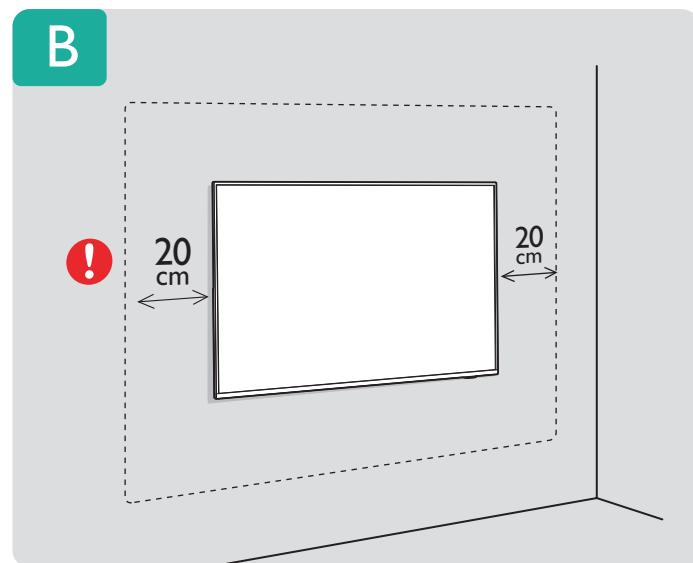

VESA (x, y)

50"	200x200mm M6		126 cm
55"	200x200mm M6		139 cm
58"	300x200mm M6		146 cm

 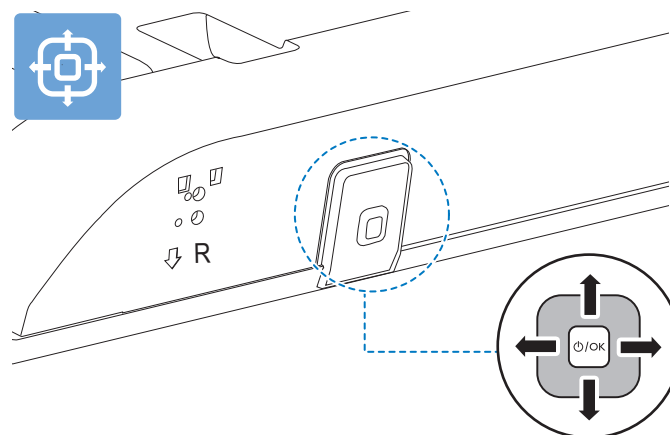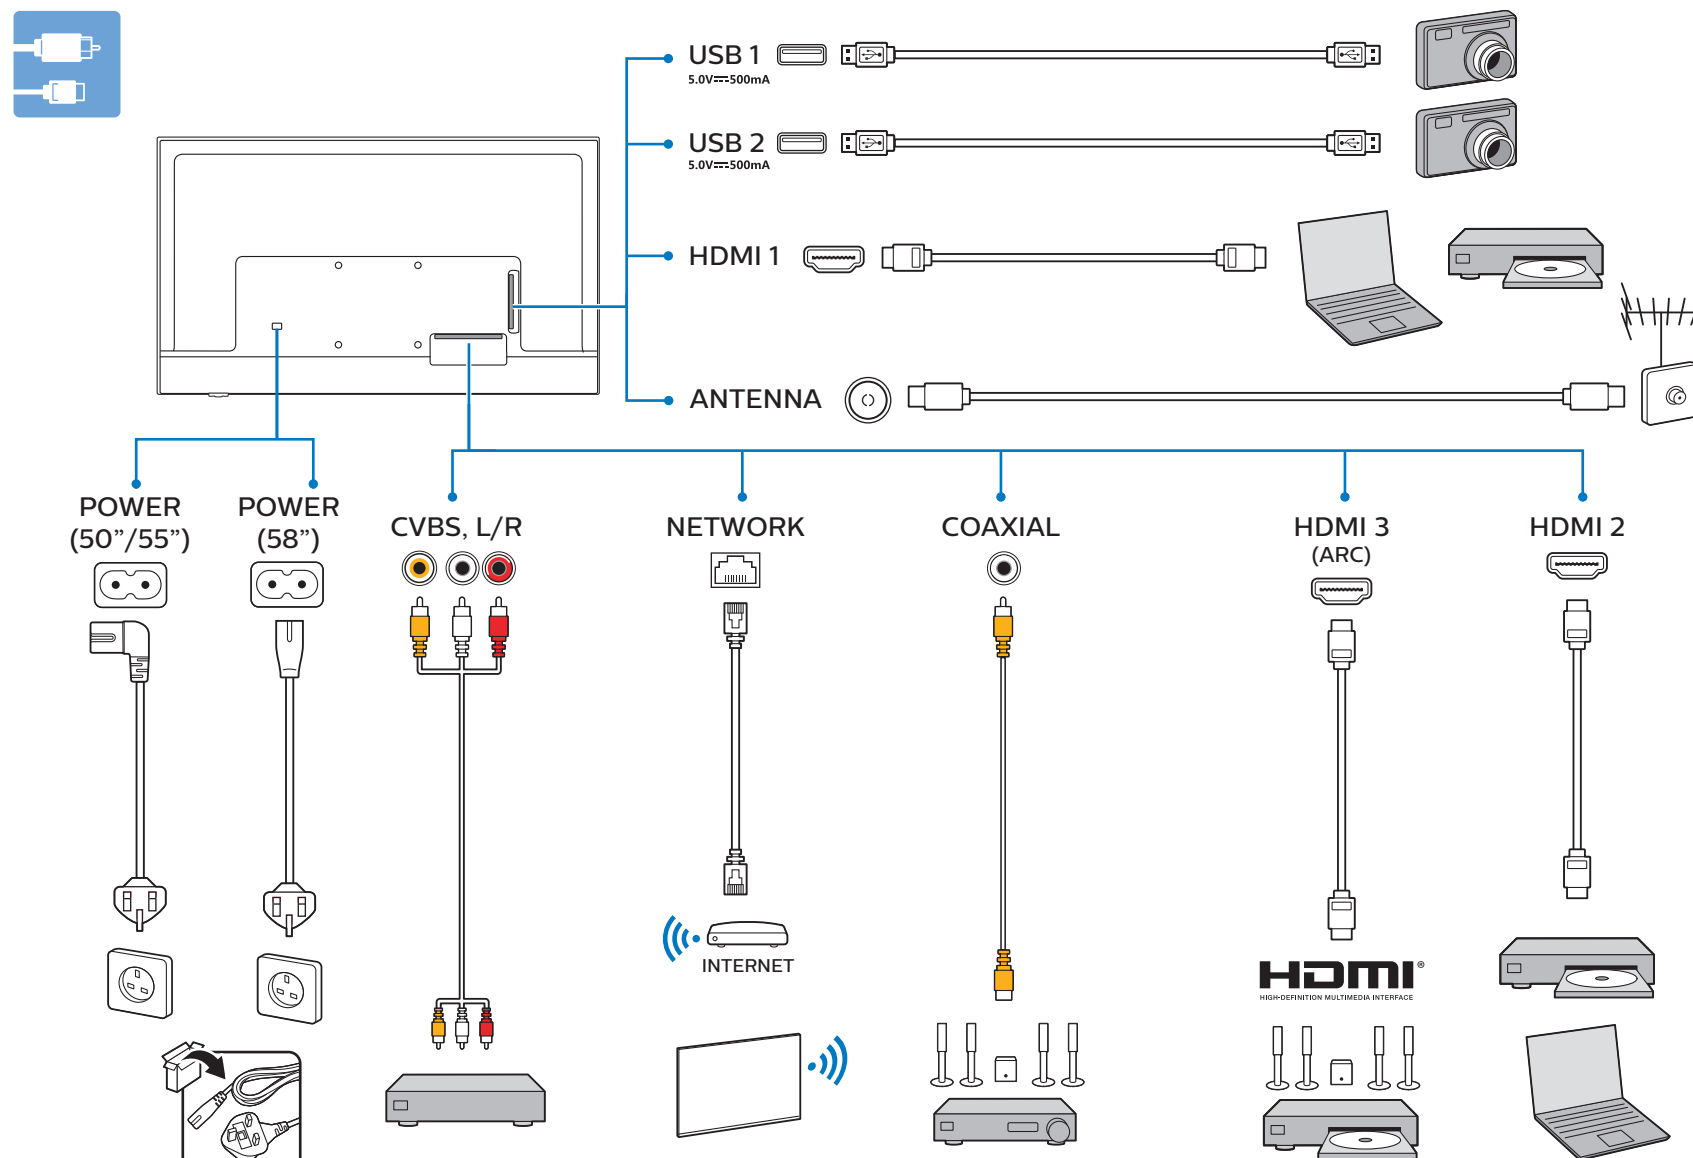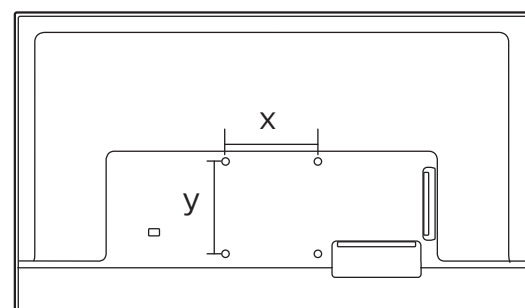

2x
AAA
1.5V

