



What's in the carton


包装内的物品清单

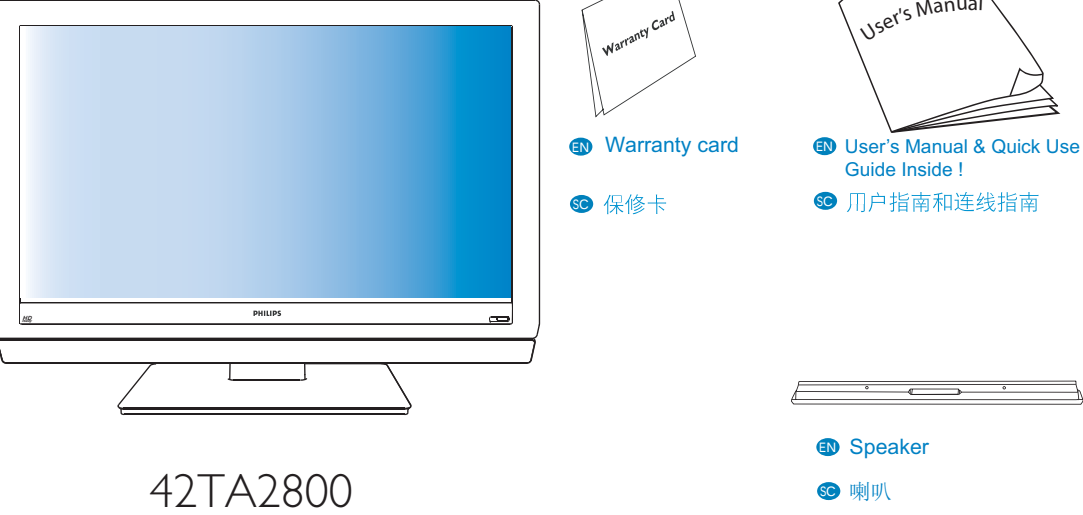


Box 1 / 包装盒1

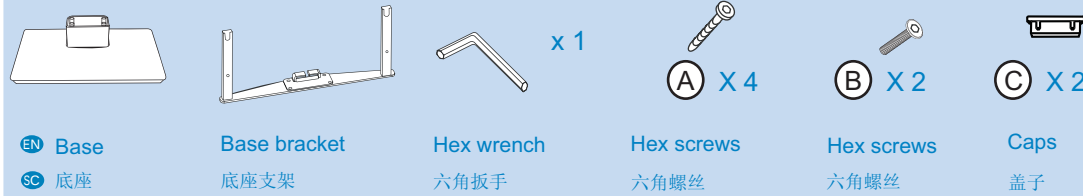

Bag 1 / 包装袋1

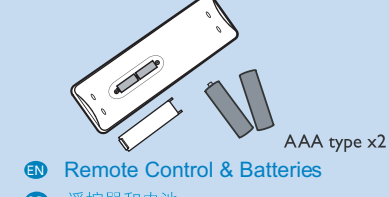


Bag 2 / 包装袋2

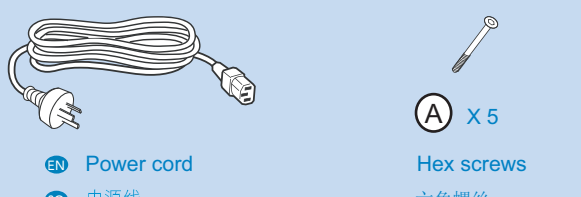


What else you'll need

 
您所需要的物品




7 Remove the cushions.
取下小泡沫垫

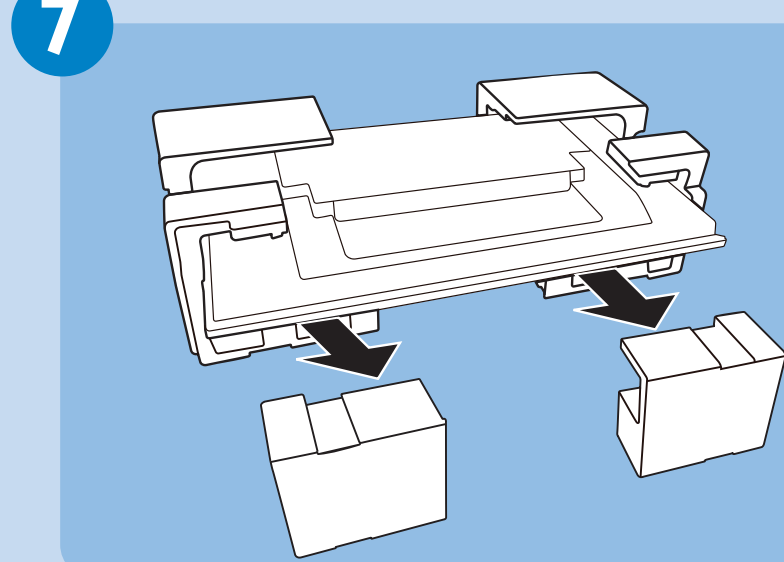


11 Mount the base assembly to the TV.
拧紧底座架至电视机

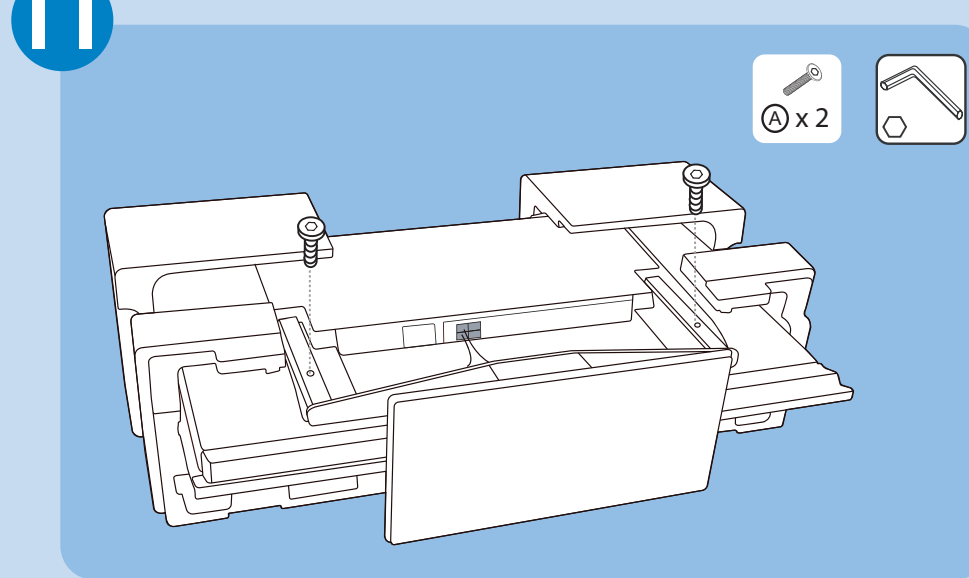


8 Mount the speaker bracket and speaker to the TV.
拧紧喇叭支架及喇叭至电视机

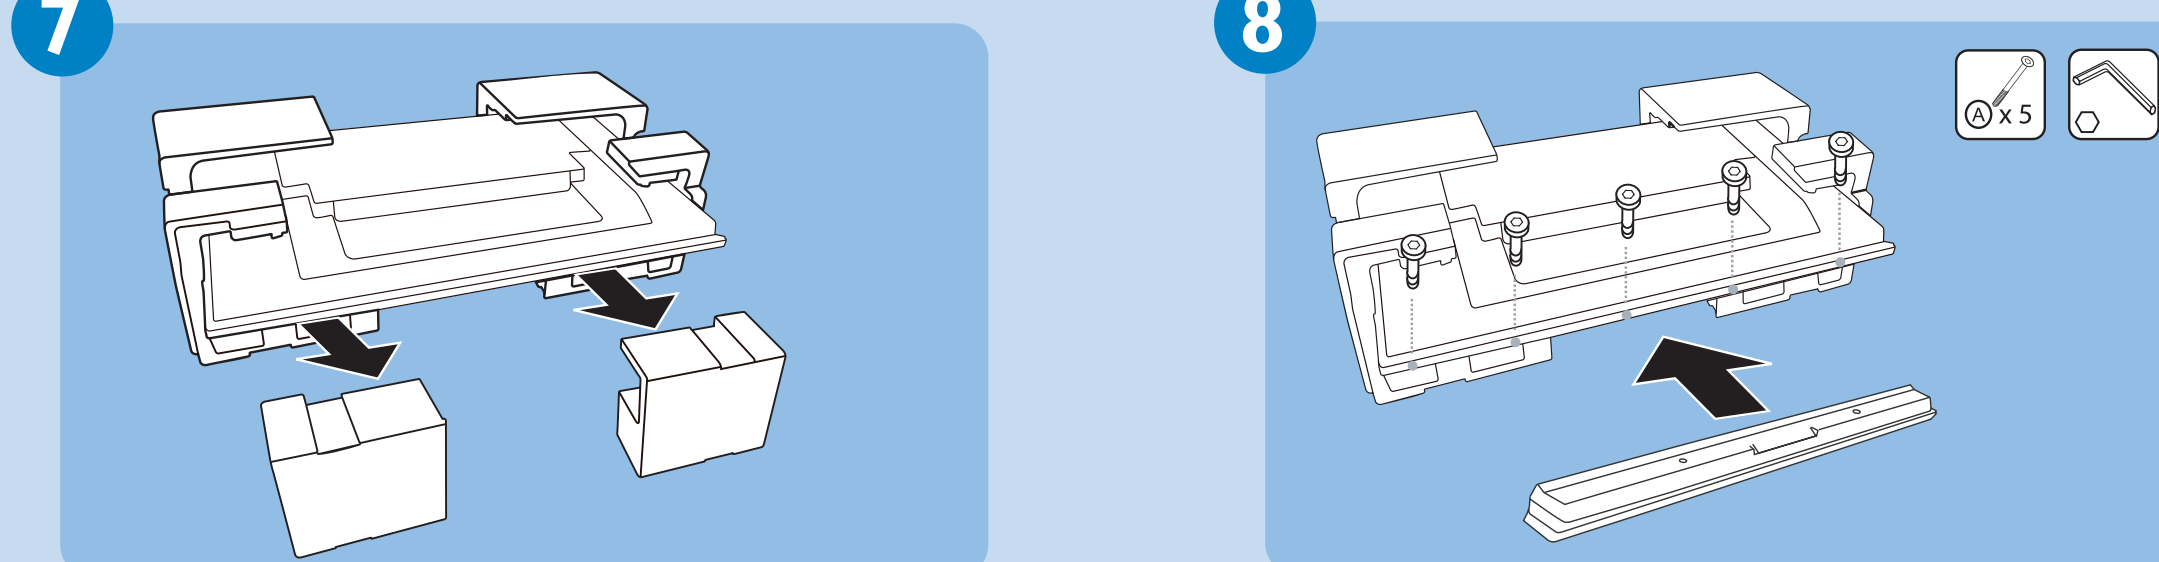


12 Put the caps on the top of the base bracket.
将小盖子覆盖于底座支架顶端

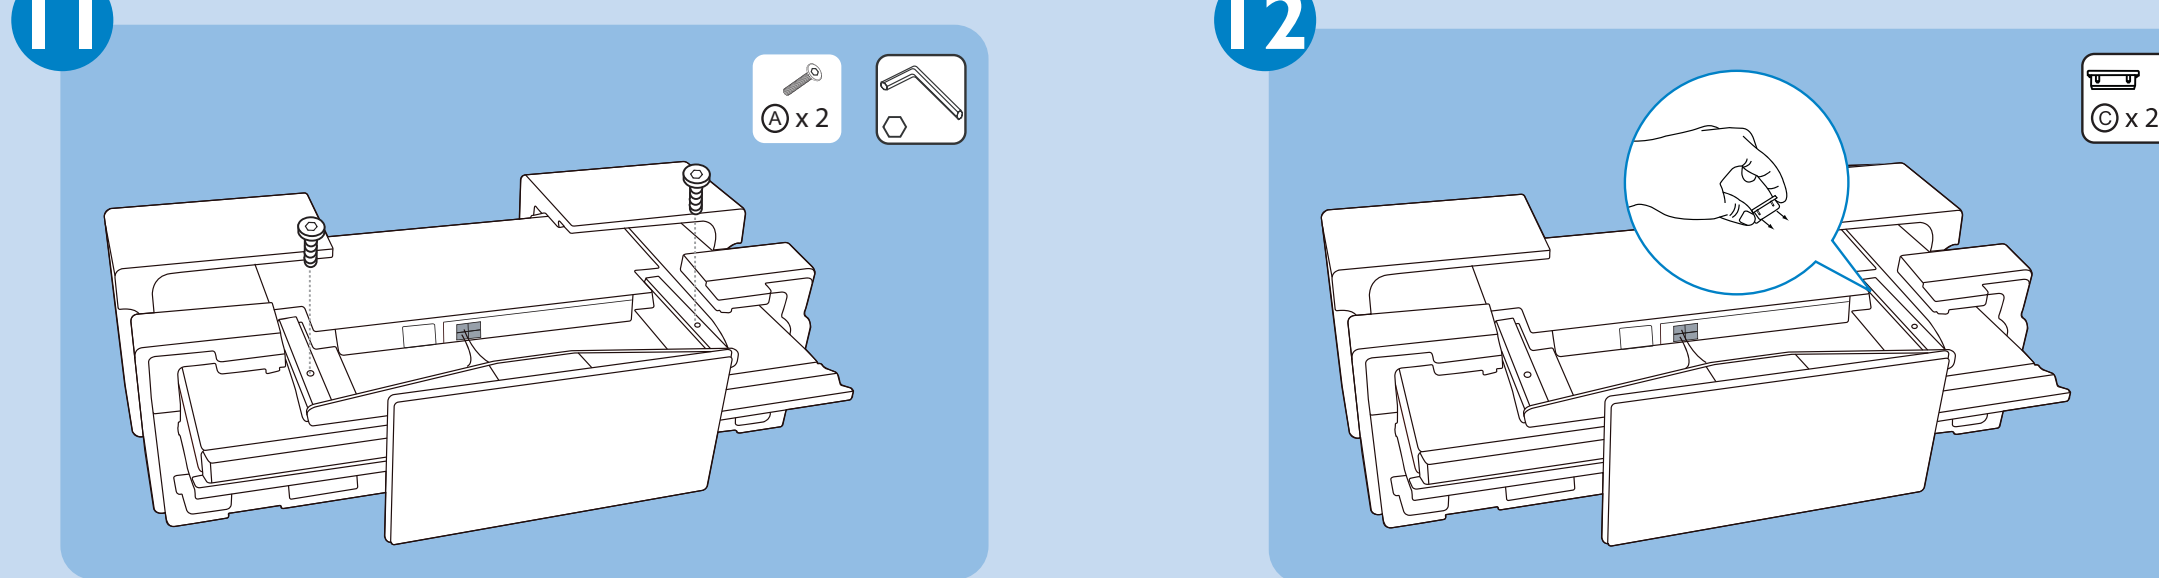


2 Remove the four clips.
取下扣子

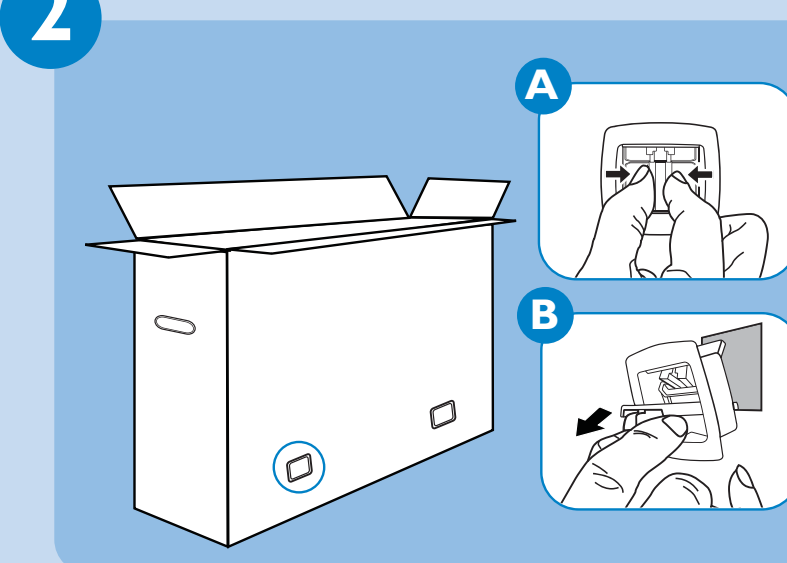


5 Follow these steps to unfold the bottom of carton.
按照下列步骤展开下纸箱

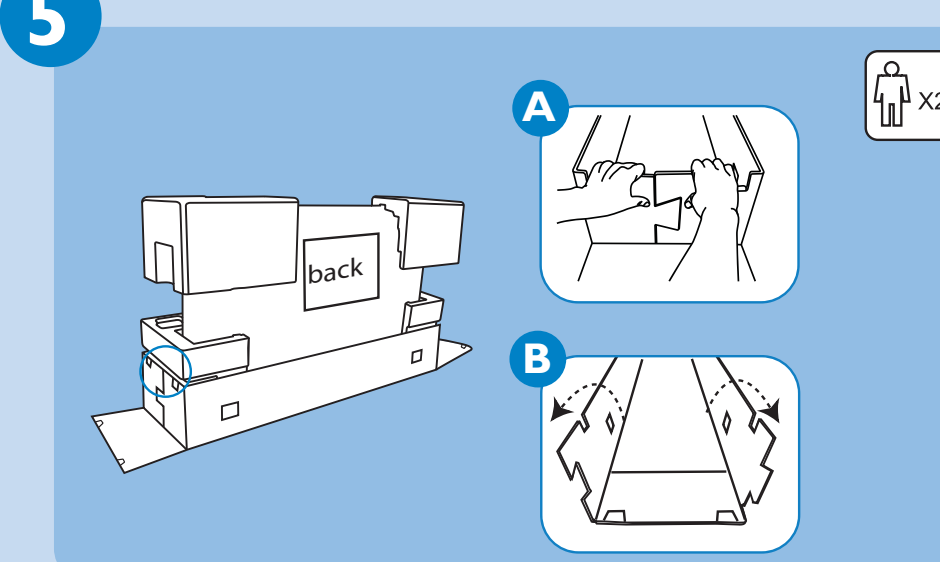


3 Carefully lift up the outside carton.
将上纸箱向上拉起

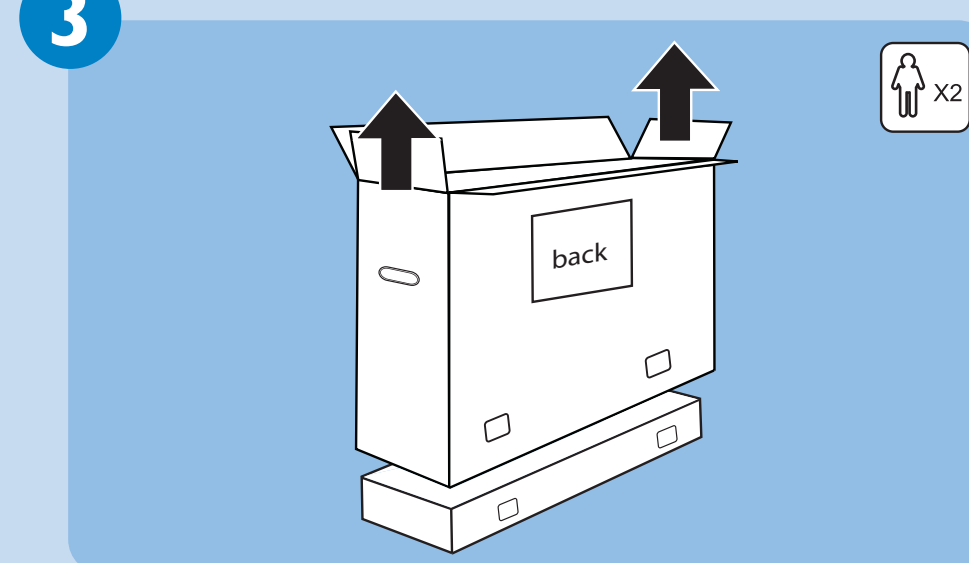


6 Lay the TV face down and cut open the bag.
将电视机平放并且剪开袋子

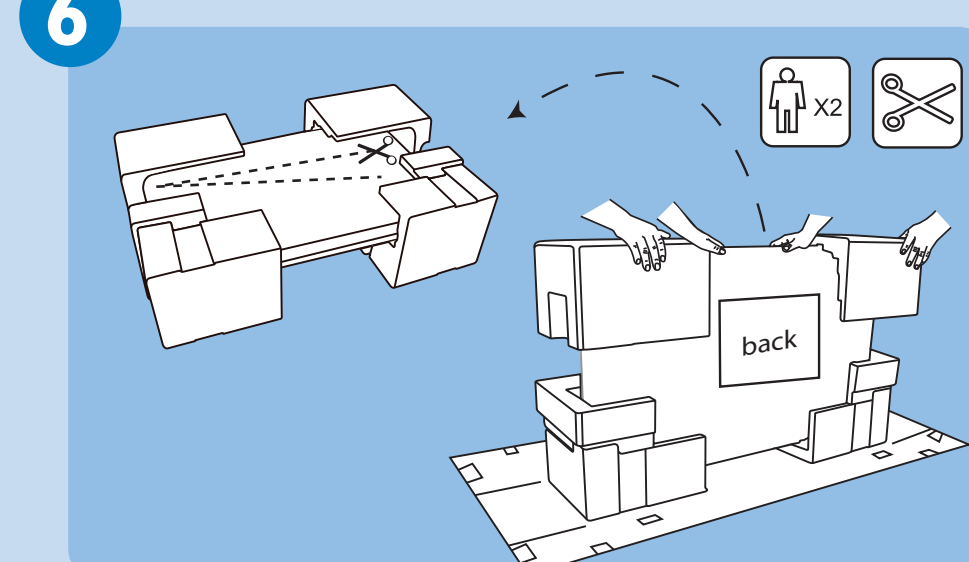


9 Insert the speaker wires into the Audio jacks.
将喇叭线插入音频插孔

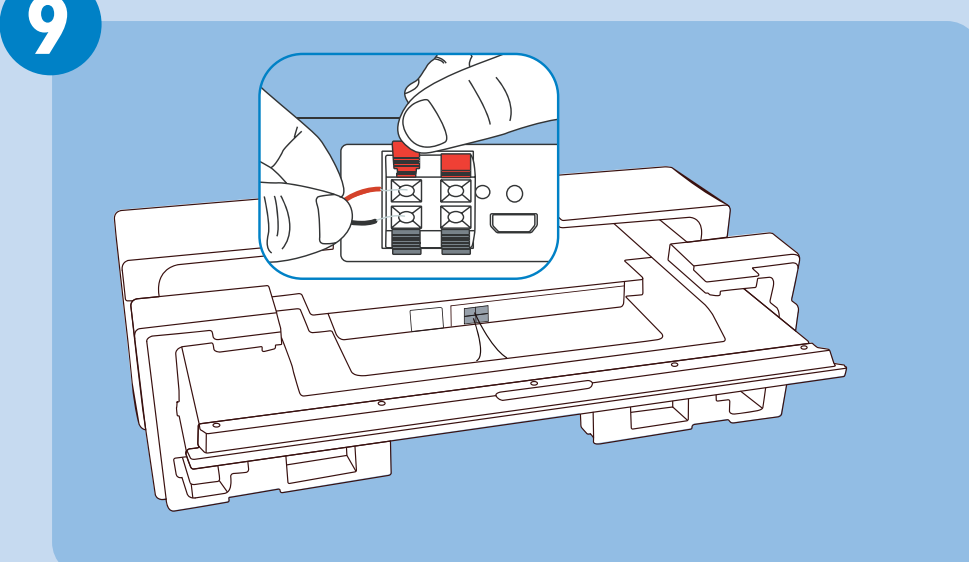


10 Assembly the base bracket and the base.
将底座支架和底座装配起来

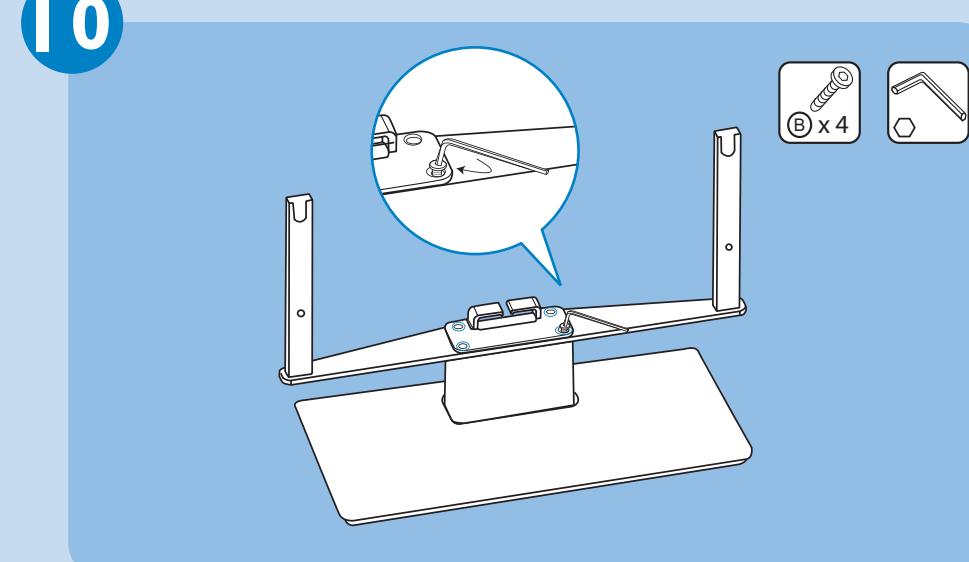

13 Stand the TV up.
将电视机直立起

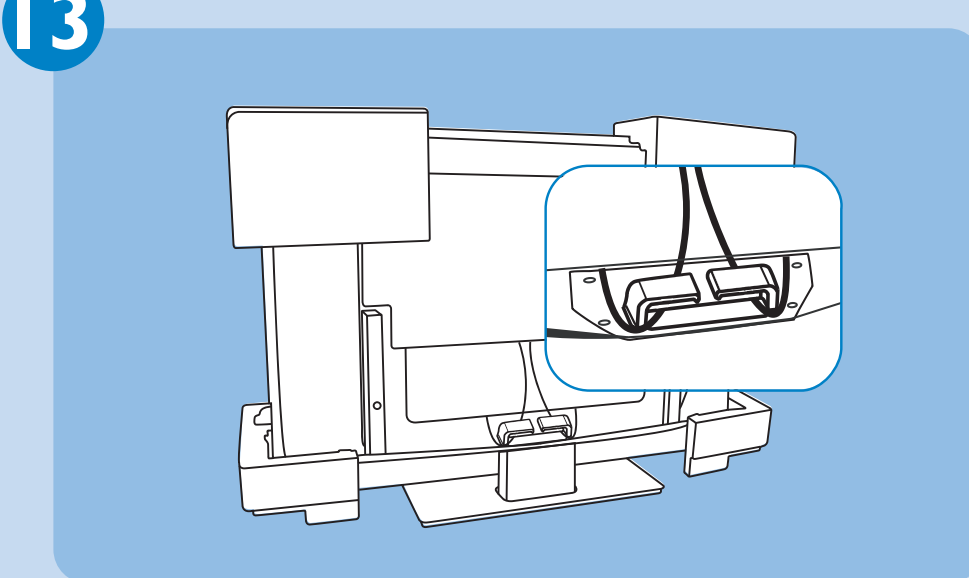


14 Remove the four cushions.
取下四个小泡沫垫

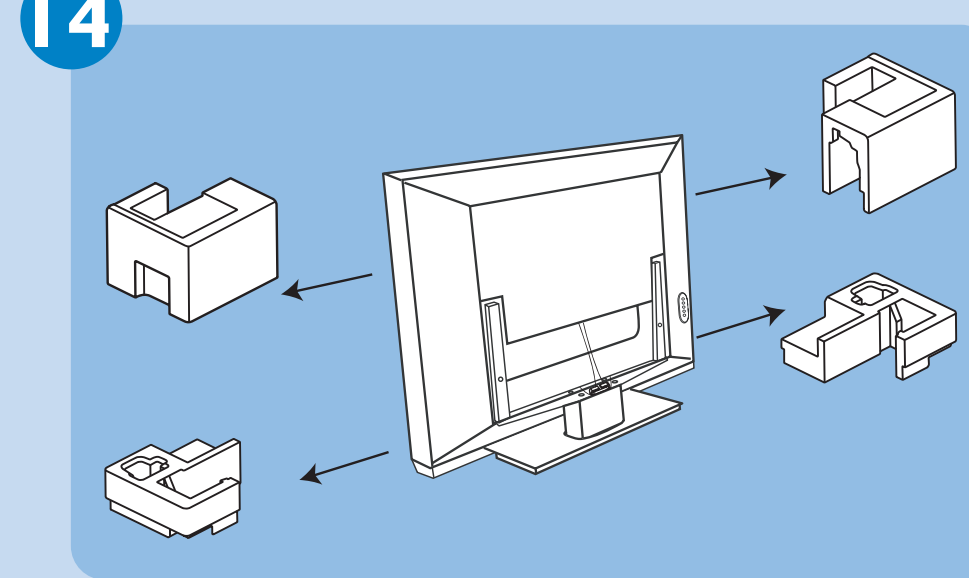


15

- Place the batteries in the remote control
- 将电池放入遥控器中


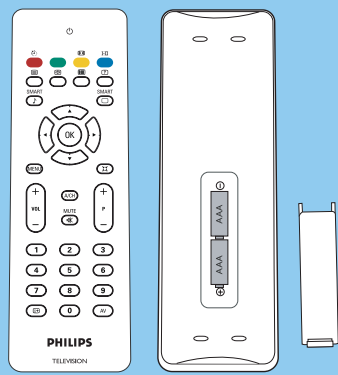


16

- Switch the TV on
- 打开电视机

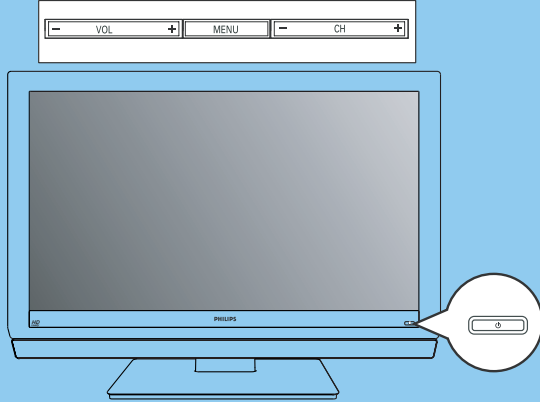


- Rear and side connector
- 后面和侧面的连接插头

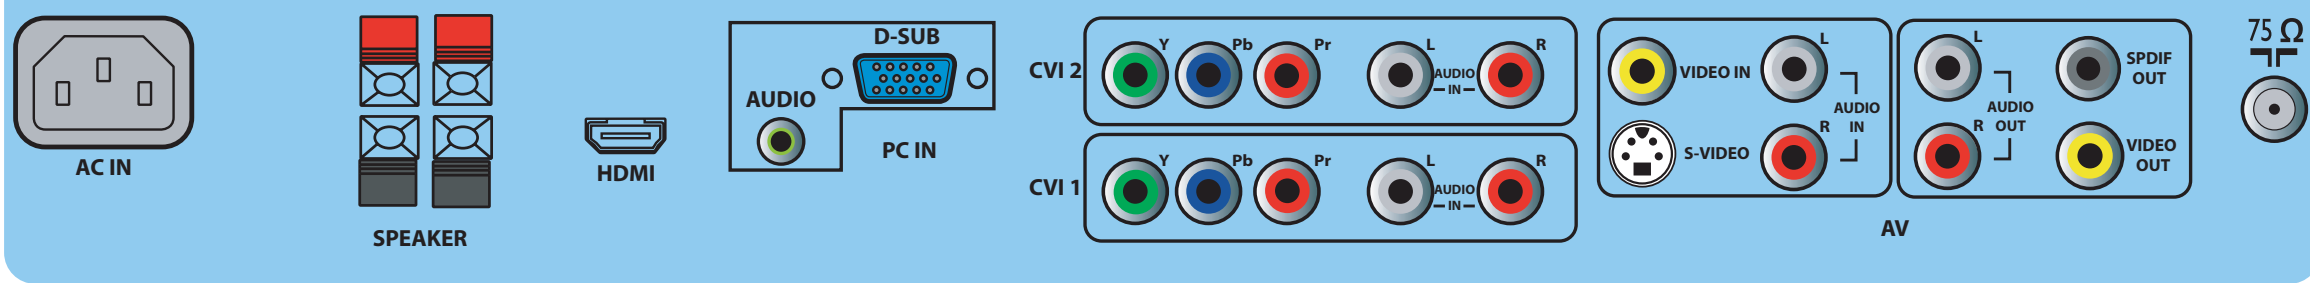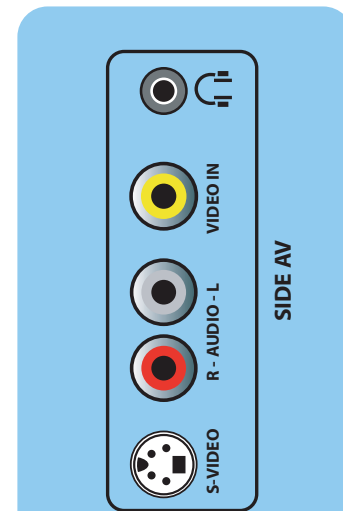

Auto Store / 自动搜寻

- Immediately after unpacking and plugging in your new television, run the auto store function to set up the TV for the antenna or cable channels available in your area. If you do not run the auto store function to set up the channels, your television may not operate properly. (See user's manual page 7.)
- 在打开包装并连通这台新电视的电源后，立即进行自动搜寻功能设置电视，使其记忆您所在的地区可用的天线或有线电视频道。如果不进行自动搜寻功能设置频道，电视可能无法正常工作。（参见用户手册第7页）

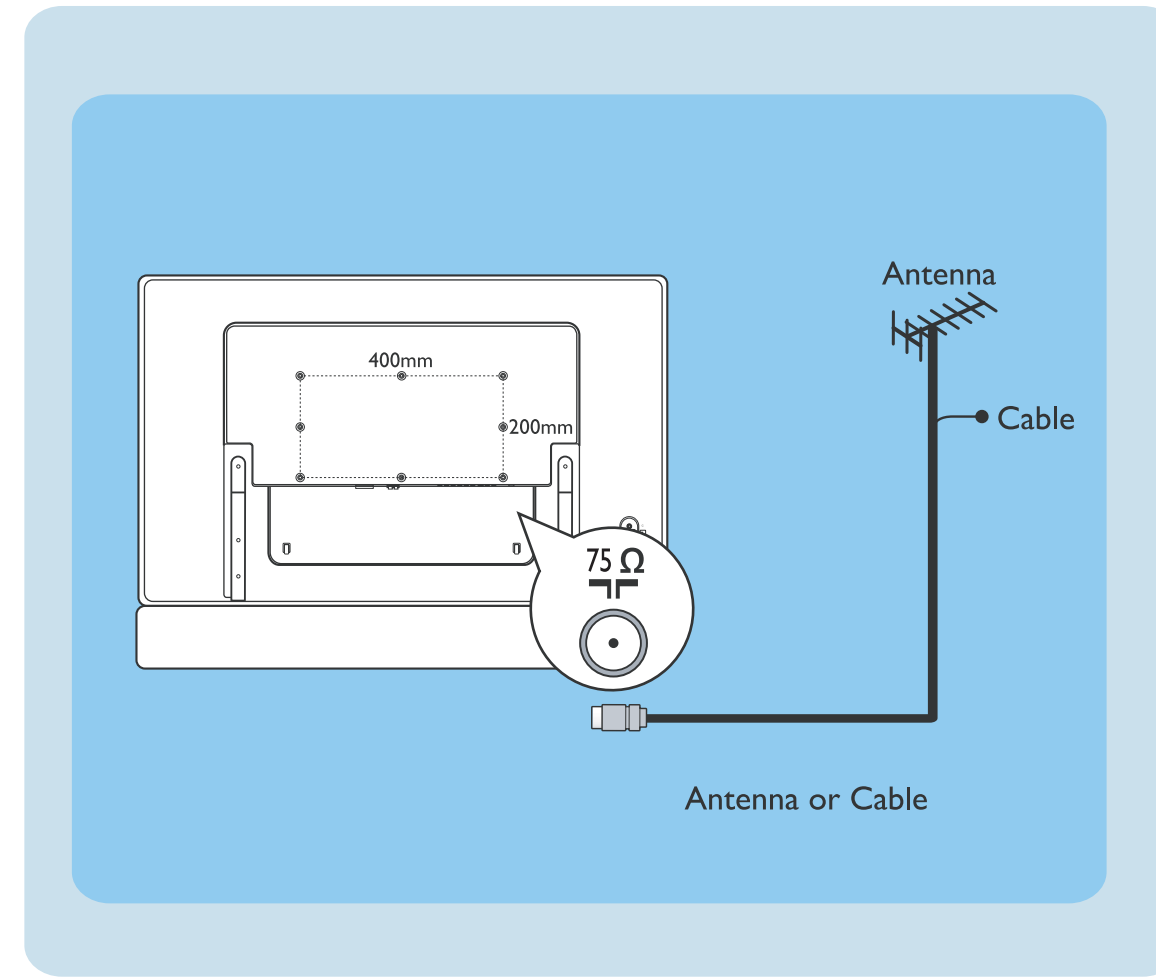

Welcome 欢迎

Read me 阅读我

Z41TN008313 1A



Specifications are subject to change without notice