

Register your product and get support at

[www.philips.com/welcome](http://www.philips.com/welcome)

**32PFL3403**

**37PFL3403**

**42PFL3403**

**47PFL3403**



---

EN USER MANUAL

---

ZH 用户手册

---

AR دليل المستخدم

---

**PHILIPS**

# PHILIPS

***Congratulations on your purchase,  
and welcome to the “family!”***

## **Dear PHILIPS product owner:**

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

Know these  
**safety** symbols



This “bolt of lightning” indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The “exclamation point” calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

## **For Customer Use**


Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# 1. Important safety instructions

## Read before operating equipment

1. Read and keep these instructions.
2. Heed all warnings.
3. Follow all instructions.
4. Do not insert any strange object into the ventilation slots. This might lead to damage of the TV.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings.  
Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product may contain lead or mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).
16. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged;
  - B. Objects have fallen, or liquid has been spilled into the appliance;
  - C. The appliance has been exposed to rain
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance;
  - E. The appliance has been dropped, or the enclosure damaged.
17. Tilt/Stability - All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinet design.
  - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
  - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspiciously fall from the top of the set and cause product damage and/or personal injury.
18. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
19. Power Lines - An outdoor antenna should be located away from power lines.
20. Outdoor Antenna Grounding - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.
21. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
22. Battery Usage CAUTION - To prevent battery leakage that may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, with + and - aligned as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.
23. For ventilation, leave at least 4" to 6" free all around the TV. Do not place the TV on a carpet.
24. The equipment shall not be exposed to dripping or splashing.
25. The equipment shall not be exposed to rain or moisture and objects filled with liquids, such as vases, shall be placed on the apparatus.
26. The apparatus must be connected to a mains socket outlet with a protected earthed connection.
27. The appliance coupler is used as the disconnect device of this apparatus, the disconnect device shall remain readily operable.

2008 © Koninklijke Philips Electronics N.V. All rights reserved. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Philips warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

Philips can't be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

### Pixel characteristics

The LCD panel has a high number of colour pixels. Although it has effective pixels of 99.999% or more, Black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of display (within common industrial standard ) and is not a malfunction. This does not affect the performance of the product.

### Safety symbols

Know these safety symbols:



This “bolt of lightning” indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The “exclamation point” calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

If the TV is mounted on a swivel base or swivel arm, ensure no strain is placed on the power cord when the TV is swivelled. Strain on the power cord can loosen connections. This may cause arcing and result in fire.


Table of contents

<b>1. Important safety instructions</b>	<b>2</b>	<b>7. Connect devices</b>	<b>19</b>
<b>2. Important</b>	<b>5</b>	7.1 Connection overview	19
2.1 Product information	5	7.2 Select connection quality	20
2.2 Screen care	5	7.3 Connect devices	21
2.3 Environmental care	5	<b>8. Glossary</b>	<b>23</b>
2.4 Regulatory notices	5	<b>9. Troubleshooting</b>	<b>24</b>
<b>3. Your TV</b>	<b>6</b>	9.1 Technical specifications	25
3.1 TV overview	6	<b>10. Index</b>	<b>26</b>
3.2 Remote control	6		
<b>4. Get started</b>	<b>7</b>		
4.1 Position the TV	7		
4.2 Wall mount the TV	7		
4.3 Install the remote control batteries	8		
4.4 Connect the antenna or cable	8		
4.5 Switch on the TV	9		
<b>5. Use your TV</b>	<b>10</b>		
5.1 Switch your TV on/off or to standby	10		
5.2 Watch TV	10		
5.3 Watch channels from a cable receiver box	11		
5.4 Watch a DVD	11		
<b>6. Use more of your TV</b>	<b>12</b>		
6.1 Remote control overview	12		
6.2 Use teletext of the remote control	12		
6.3 Use install menu	13		
6.4 Change picture and sound settings	14		
6.5 Use Smart mode	14		
6.6 Set the clock	16		
6.7 Set the sleeptimer	16		
6.8 Reduce the NR	17		
6.9 Adjust the skin tone	17		
6.10 Use auto lock	17		
6.11 Use your TV as a PC monitor	18		
6.12 Select your TV in PC mode	18		

## 2. Important


### 2.1 Product information

The model and serial number are on the rear of the TV and on the packaging.

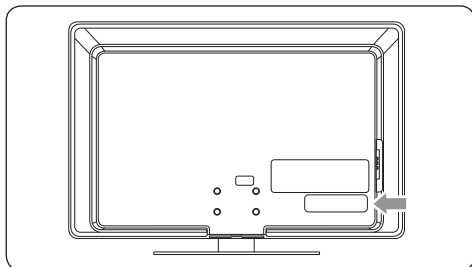

This TV consumes minimal energy in standby mode to minimise environmental impact. The active power consumption is given on the type plate at the rear of the TV.

### 2.2 Screen care

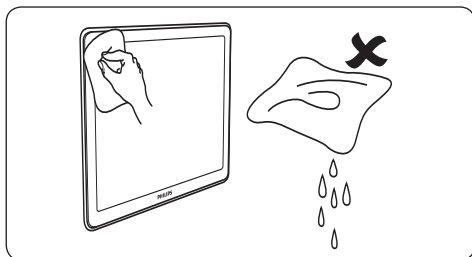

- Turn off and unplug the AC power cord before cleaning the screen.
- Clean the screen with a soft, dry cloth. Do not use substances such as household cleaning agents as these may damage the screen.
- To avoid deformations or color fading, wipe off water droplets as soon as possible.
- Do not touch, push, rub or strike the screen with hard objects as this may damage the screen permanently.
- Where possible, avoid stationary images that remain on-screen for extended periods of time. If you must use stationary images, reduce the screen contrast and brightness to avoid screen damage.

### 2.3 Environmental care



#### End of life directives - Recycling

Philips has paid a lot of attention to producing an environmentally friendly product. Your new TV contains several materials that can be recycled for new uses. At the end of its life, specialized companies can dismantle and recycle this set. This will minimize the amount of materials being disposed of. Please be sure to dispose of this set in accordance with all state and local regulations.

#### Recycling your packaging

The packaging of this product is intended to be recycled. Contact your local authorities for information on how to recycle the packaging.

#### Disposing used batteries

The supplied batteries do not contain mercury or cadmium. Dispose supplied and all other used batteries according to your local regulations.

#### Power consumption

The TV consumes minimal energy in standby mode to minimise environmental impact. Active power consumption is displayed at the back of the TV.

### 2.4 Regulatory notices



#### WARNING


To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture. Objects filled with liquids, such as vases, should not be placed on this apparatus.

## 3. Your TV

This section gives you an overview of commonly-used TV controls and functions.


### 3.1 TV overview

#### Side controls and indicators

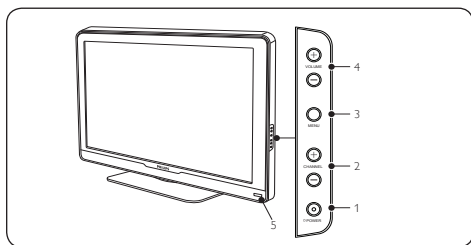


1. **POWER**
2. **CHANNEL +/-**
3. **MENU**
4. **VOLUME +/-**
5. Remote control sensor/ power indicator

#### Side connectors

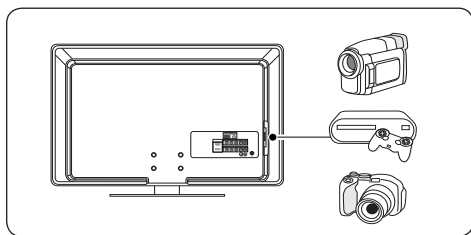

Use the TV side connectors to connect to mobile devices such as a camera or game console. You can also connect to the headphone.

#### Rear connectors

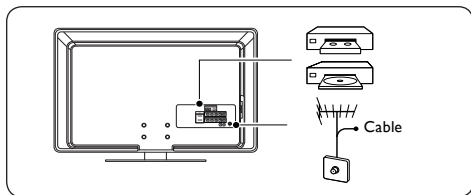


Use the TV rear connectors to connect to the antenna and permanent devices such as a high-definition disc player or DVD player.

## Note

For more information about connections, see *Section 7 Connect devices*.

### 3.2 Remote control

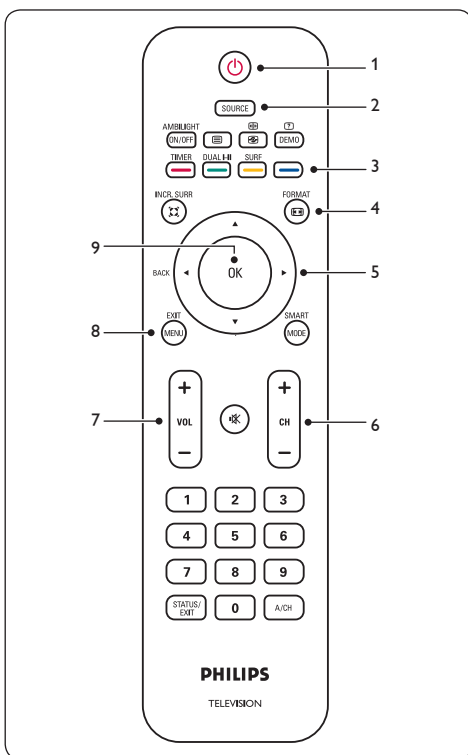

1. Standby / ON
2. SOURCE selection
3. Color buttons
4. FORMAT button
5. Cursor buttons
6. Channel selection
7. Volume selection
8. MENU button
9. OK button

For more information about the remote control, See *Remote control overview section*.

## 4. Get started

This section describes how to position and connect your TV, and how to perform your first-time installation.

### 4.1 Position the TV

#### WARNING

- Do not insert the power plug into the wall socket before all the connections are made.
- Large screen TVs are heavy. Two people are required to carry and handle the TV.

Wherever you decide to position your TV, ensure that you always have easy access to the AC power cord or plug to disconnect the TV from the power.

If the TV is mounted on a swivel base or swivel arm, ensure no strain is placed on the AC power cord when the TV is swivelled. Strain on the AC power cord can loosen connections. This may cause arcing and result in fire.


For ideal viewing conditions, position the TV where light does not fall directly on the screen.

The ideal viewing distance for watching TV is three times its screen size.

#### Kensington security slot

Your TV is equipped with a Kensington Security Slot at the back of the TV.

If you connect an anti-theft Kensington lock (not supplied), position the TV within reach of a permanent object that can be attached to the lock.

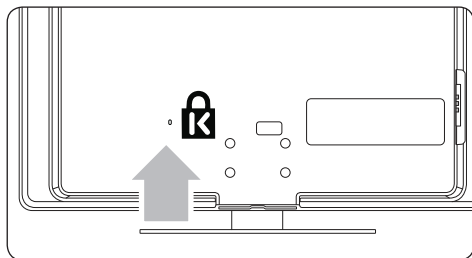

### 4.2 Wall mount the TV

#### Warning

Wall mounting of the TV should only be performed by qualified installers. Koninklijke Philips Electronics N.V. Bears no responsibility for improper mounting that results in accident or injury.

#### Step 1 Purchase a VESA-compatible wall bracket

Depending on the size of your TV screen, purchase one of the following wall brackets:


TV screen size (inches)	VESA-compatible wall bracket type (millimeters)	Screw type
32"	400 x 200mm	Metric 6 x 10mm
37"	400 x 200mm	Metric 6 x 10mm
42"	400 x 200mm	Metric 6 x 10mm
47"	400 x 200mm	Metric 6 x 10mm

#### Step 2 Remove the TV stand


##### Note

These instructions are only applicable to TV models with mounted stands. If your TV stand is not mounted, skip to *Step 3 Connect cables*.

1. Carefully place the TV face down on a flat, stable surface that is covered by soft cloth. The cloth should be thick enough to protect your screen.

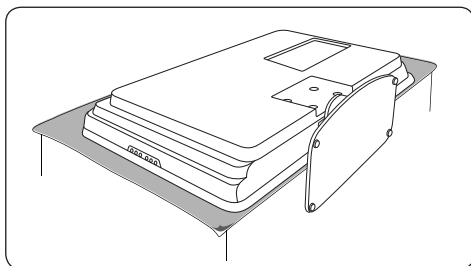


2. Using a cross-head screwdriver (not supplied), unscrew the four bolts that secure the stand to the TV.

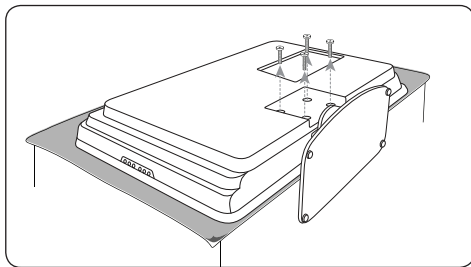



3. Firmly pull the stand from the bottom of the TV. Place both the stand and bolts in a secure location for future reinstallation.

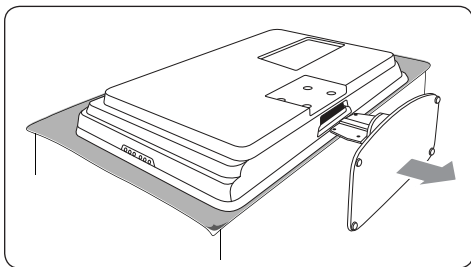


### Step 3 Connect cables

Connect the antenna cable, AC power cord and all other devices to the back of the TV as described in the following sections and in *Section 7 Connect devices*.


### Step 4 Secure the VESA-compatible wall bracket to the TV

**Warning**  
Only use the specified bolts (M6 x 10mm) to secure the VESA-compatible wall bracket to your TV. The specified bolts are designed to match the weight of your TV.

**Note**  
Depending on your VESA-compatible wall bracket, you may need to separate the mounting plate from the wall bracket for easier installation. Refer to your VESA-compatible wall bracket documentation for instructions.

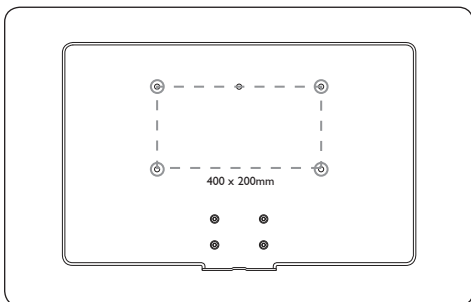


### 4.3 Install the remote control batteries

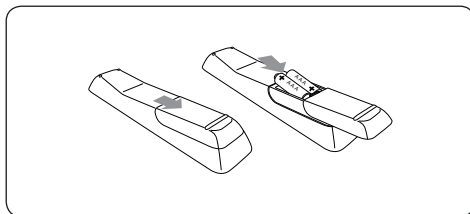

1. Open the battery cover on the back of the remote control.
2. Insert the 2 batteries supplied. Make sure the + and - ends of the batteries line up correctly. (inside of case is marked).
3. Close the cover.


### 4.4 Connect the antenna or cable

#### Connect to an antenna

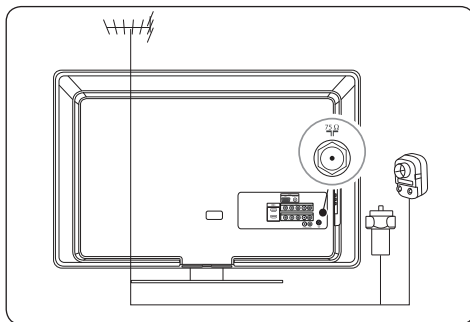

1. Locate the TV ANTENNA connector on the back of the TV.
2. Connect one end of an antenna cable (not supplied) to the TV ANTENNA connectors. Use an adaptor if the antenna cable does not fit.
3. Connect the other end of the antenna cable to your antenna outlet, ensuring that the cable is tightly secured at both ends.


## Connect to a cable receiver box

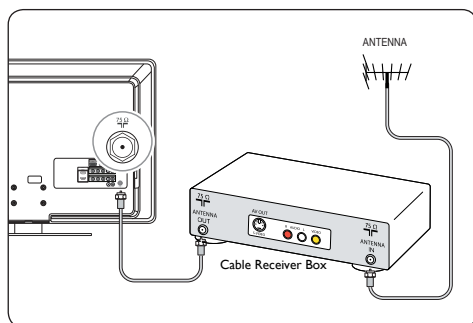

A cable receiver box can be connected to the TV through the following connections:

- ANTENNA (75Ω)
- A/V (Composite Video and Audio)
- S-Video and Audio
- YPbPr (Component Video Input)
- HDMI


## Connect a cable receiver box through component video input or HDMI

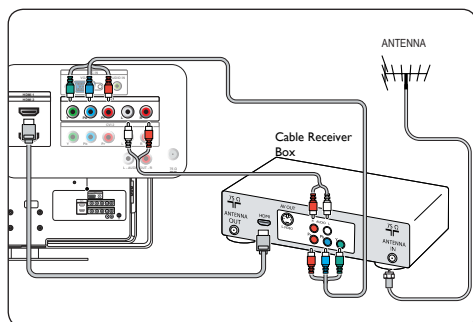

## Connect the AC power cord

**Warning**  
Verify that your voltage corresponds with the voltage printed at the back of the TV. Do not insert the AC power cord if the voltage is different.

### To connect the AC power cord

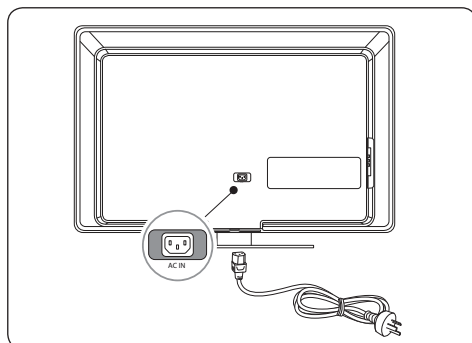


1. Locate the power connector at the back of the TV.

The location of the power connector varies according to TV model.

2. Insert the AC power cord fully into the TV power connector.
3. Connect the AC power cord plug to the power outlet. Ensuring that the cord is tightly secured at both ends.

## 4.5 Switch on the TV

Before you switch on the TV, check that the mains cord is properly connected. Press **POWER** button at the side of the TV, or press power button on the remote control. The TV normally takes 10-15 seconds to start up and the following screen appears the first time you turn on the TV.

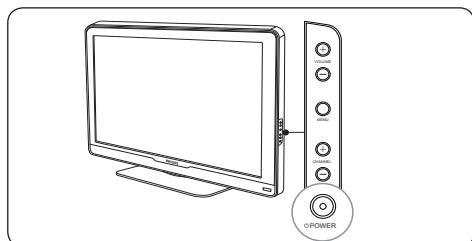





## 5. Use your TV

This section helps you perform basic TV operations.

### 5.1 Switch your TV on/off or to standby

#### To Switch the TV on

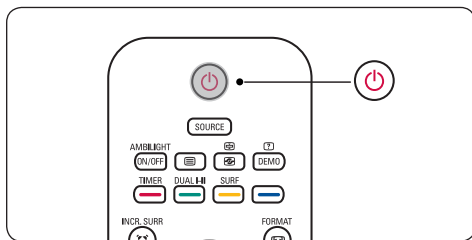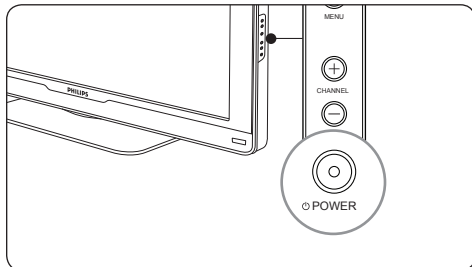

- If the standby indicator is off, press  **POWER** at the side of the TV.
- If the standby indicator is on, press  on the remote control.



#### To Switch to standby

- Press  on the remote control.

#### To switch on from standby without the remote control.

- Press  **POWER** at the side of the TV to switch the TV off.
- Press  **POWER** again to switch the TV on.


#### To switch off

- Press  **POWER** at the side of the TV.

## 5.2 Watch TV

### Switch channels

- Press a number (1 to 9) or press **CH +/-** on your remote control.
- Press **A/CH** to return to the previously viewed TV channel.

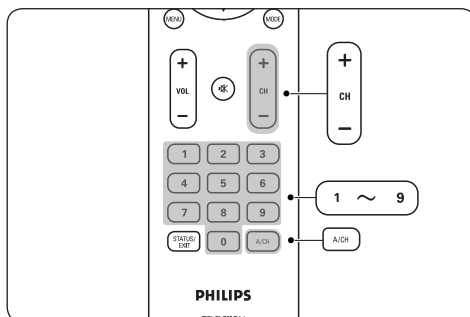


#### Note

You can also switch channels by pressing **CHANNEL +/-** at the side of the TV.

### Adjust volume

- Press **VOL +/-** on your remote control.
- Press **MUTE** on your remote control to mute the sound. Press **MUTE** again or press **VOL +/-** to restore the sound.

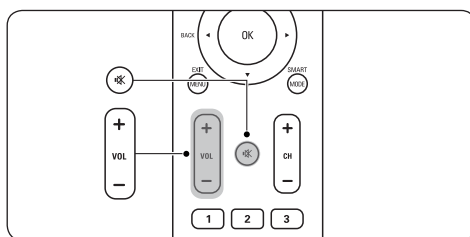

#### Note


You can also switch volume by pressing **VOLUME +/-** at the side of the TV.

### 5.3 Watch channels from a cable receiver box

1. Switch on the cable receiver box.  
The picture from your cable receiver box might appear automatically on your screen.
2. Use the remote control of your cable receiver box to select channels.

#### If the picture does not appear

1. Press **SOURCE** repeatedly to select the connected cable receiver box and wait a few seconds for the picture to appear.

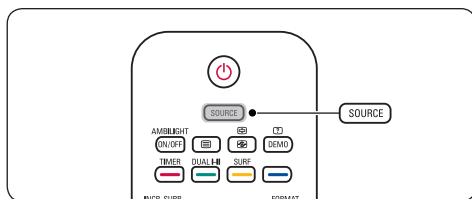

2. Press **OK**.
3. Use the remote control of your cable receiver box to select channels.

### 5.4 Watch a DVD

1. Insert a DVD disc in your player.
2. Press **Play** > on the remote control of your player.  
The picture from the player might appear automatically on your screen.


#### If the picture does not appear

1. Press **SOURCE** repeatedly to select the correct source and wait a few seconds for the picture to appear.
2. Press **OK**.

## 6. Use more of your TV

This section describes the advanced features of your TV.

### 6.1 Remote control overview

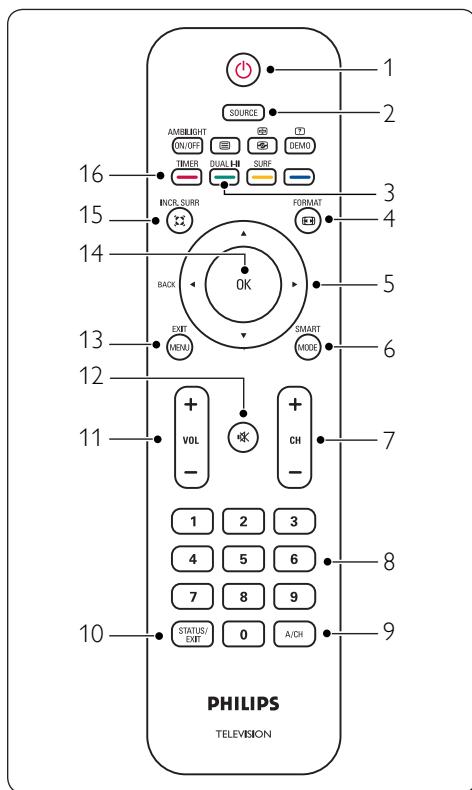

1. **POWER**  
Switches the TV on from standby or back to standby.
2. **SOURCE**  
Selects connected devices.
3. **DUALI-II**  
Selects Mono, Stereo, Dual I, Dual II, Nicam Mono, Nicam Stereo, Nicam Dual I, Nicam Dual II.

**Note**  
The sound mode selections depend on TV program and broadcast TV channel of that region.

4. **FORMAT**  
Selects a picture format. See *Change Picture format* section.
5. **CURSOR BUTTONS** ▲ ▼ ◀ ▶  
To navigate through the menus.
6. **SMART MODE**  
Selects a picture setting.
7. **CH +/-**  
Switches to the next or previous channel.
8. **NUMBER BUTTONS**  
Selects a channel, page or setting.
9. **A/CH**  
Returns to the previously-viewed channel.
10. **STATUS/EXIT**  
Displays programme information, if available.
11. **VOL +/-**  
Increases or decreases volume.
12. **MUTE**  
Mutes or restores sound.
13. **MENU**  
Toggles the menu on or off.
14. **OK**  
Press to activate a setting.
15. **INCR. SURR**  
Adds greater depth and dimension to the TV sound.
16. **TIMER**  
Sets the TV to turn itself off within a certain time.

### 6.2 Use teletext of the remote control


1. Teletext on/off
2. Teletext hold  
Freezes the teletext page.
3. Teletext reveal/conceal  
Toggles between conceal and reveal mode.
4. Teletext enlarge  
Enlarges context to two times larger.
5. These four color buttons allow you to access the item or the page indicated by corresponding color in teletext.

**Note**  
Teletext is only available in some of the Asia Pacific TV systems.


### 6.3 Use install menu

This section describe how to set the language and store the channel of the TV.

1. Press **MENU** on the remote control to display the main menu.

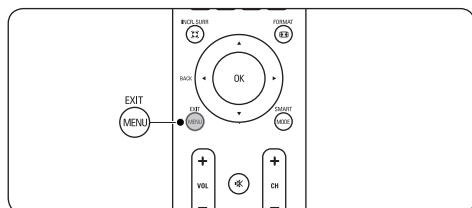

2. Press **▲** or **▼** to select **Install** and press **▶** to enter it.
3. Press **▲** or **▼** to highlight the item you want to adjust and press **▶** to confirm the change.
4. Press **MENU** to exit.

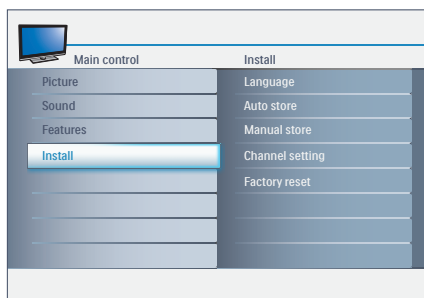

#### Summary of install settings

- **Language** - Select a language of your interface.
- **Auto store** - Automatically sets up the TV for the broadcast or cable channels available in your area.

#### Note

Immediately after unpacking and plugging in your new television, run the auto store function to set up the TV for the broadcast or cable channels available in your area. If you do not run the auto store function to set up the channels, your television may not operate properly. After you have run auto store, check out the results. Press **CH +/-** on the remote control and see which channels you can select. Remember, an antenna or cable TV signal must

first be connected to your TV.

#### • Manual store -

- **Manual store:** Activates auto search channel frequency or press number keys to show your desired channel frequency.
- **Prog. no:** Use **▲** or **▼** to adjust the channel number in the manual store menu.
- **Finetune:** Manually fine tunes analogue channels when reception is poor.
- **Store:** Stores or sets the setting of manual store menu.

#### • Channel setting -

- **Channel edit:** Sets up a favorite list of your own with preferred TV channels.
- **Channel swap:** Exchange the channel. Toggle between **From**, **To**, and **Exchange**.
- **Name edit:** Assigns or changes a channel name to a channel for which a name has not yet been used.
  1. Press **▲** or **▼** to edit name and press **▶** to move to the next character.
  2. Press **◀** to confirm the first character and press **▶** to confirm the last character.
  3. Press **▶** to confirm the name.
- **Channel sort:** Sorts or groups channels.
- **Factory reset** - Allows you to reset most of the picture and sound settings to their default factory levels. Select **No** or **Yes**.

#### Note


If you reset the TV to the factory settings, all your present setting on picture, sound, and other feature settings will be erased and replaced by the manufacture's default settings. However, your auto lock access code will not be erased.

## 6.4 Change picture and sound settings

### Change picture settings

This section describes how to adjust your picture settings.

1. Press **MENU** on the remote control.

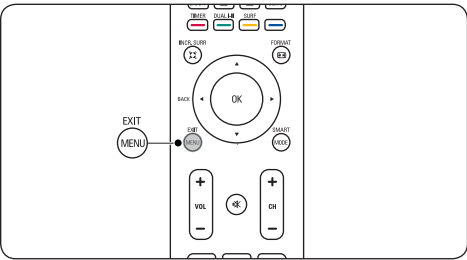

2. Press ▼ or ► to select the **Picture** menu.
3. Press ▲ or ▼ to select the one of the picture settings, and press ► to enter the setting.
4. Press ▲ or ▼ to adjust the setting, and press **OK** to confirm the change.
5. Press **Menu** to exit.



### Summary of picture settings

The following picture settings can be configured. Depending on the format of the picture source, some picture settings might not be available.


- **Smart mode** - Displays a list of predefined picture and sound setting.
- **Contrast** - Sets the level of white in the picture.
- **Brightness** - Sets the brightness of the picture.
- **Color** - Sets the level of saturation.
- **Sharpness** - Sets the sharpness of fine details.
- **Tint** - Adjusts the color balance between red and green.
- **Color temp** - Sets the color temperature to normal, warm or cool.
- **Picture format** - Changes the format of the picture.

### 6.5 Use Smart mode

1. Press **SMART MODE on the remote control** to set your TV to a predefined picture and sound setting.
2. Press ▲ or ▼ to select one of the following settings:
  - **Personal** - The customized settings you defined by using the **Picture** menu.
  - **Vivid** - Vivid picture settings and clear sound for high action.
  - **Standard** - For normal TV viewing.
  - **Movie** - Brilliant picture settings for a cinematic experience.
  - **Game** - Optimized for PCs, games consoles and play stations.
  - **Power saver** - Eco friendly settings for lower power consumption.

## Change picture format


1. Press **FORMAT** on the remote control to enter the **Picture format** menu.

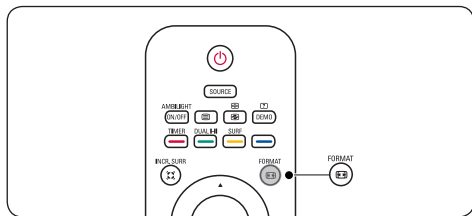

2. Press **▲** or **▼** to select a picture format.


- **Super zoom**

Removes the black bars on the side of 4:3 broadcasts with minimal distortion.

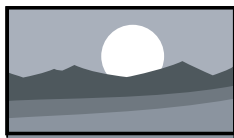


- **4:3**

Displays the classic 4:3 format.

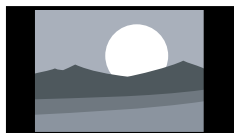


- **Movie expand 14:9**

Scales the classic 4:3 format to 14:9.

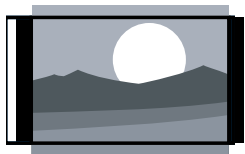

- **Movie expand 16:9**

Scales the classic 4:3 format to 16:9.

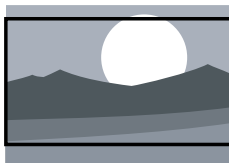


- **16:9 subtitle**

Display 4:3 pictures using the full surface of the screen leaving the subtitles visible.



- **Wide screen**

Stretches the classic 4:3 format to 16:9.

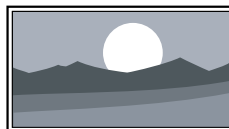

- **Note**


- Any adjustment of brightness, color, contrast of sharpness will be stored into personal at *smart mode section*.
- For 720p/1080i/1080p, the default picture format will be Wide screen at HD and HDMI modes. And the picture format function will not be accessible.
- For PC mode, the default picture format will be Full screen and picture format function can be accessible 4:3 and Full screen.



## Adjust sound settings

This section describes how to adjust sound settings.

1. Press **MENU** on the remote control and press ▼ to select **Sound**.

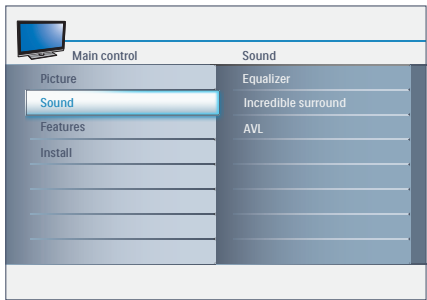

2. Press ► to enter the list.
3. Press ▲ or ▼ to select one of the following settings:


### Summary of sound settings

- **Equalizer** - Changes the audio frequencies with different central frequencies to create a completely new and different sound depending on your favorite.
- **Incredible surround** - Allows you to select the modes for more spatial or surround sound reproduction dependent on the broadcasted signals or signals from external inputs received. Select **On** or **Off**.
- **AVL (Automatic volume leveling)** - Reduces sudden volume changes, for example, during commercials or when switching from one channel to another. Select **On** or **Off**.

## 6.6 Set the clock

This section describes how to set the time.

1. Press **MENU** on the remote control and select **Features > Clock**.

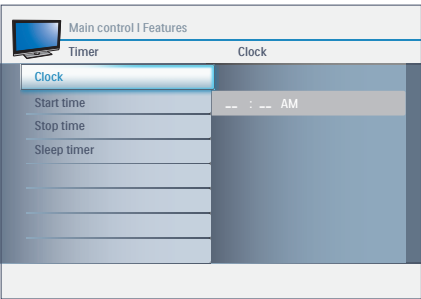


2. Press ► to enter the list.
3. Press ▲ or ▼ to set the time. (hour/minute/AM or PM)
4. Press **OK** to confirm.

## 6.7 Set the sleep timer

Sleeptimer switches the TV to standby after a defined period of time.

1. Press **MENU** on the remote control and select **Features > Sleep timer**.

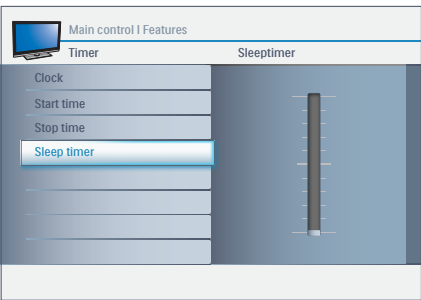


2. Press ► to enter the **Sleeptimer** bar.
3. Press ▲ or ▼ to set the sleep time from zero to 180 minutes. If set to zero minute, the Sleep timer is switched off.
4. Press **OK** to activate the Sleep timer or press sleep button on the remote control.

## 6.8 Reduce the NR

This section describes how to filter out and reduce the image noise and improves picture quality when receiving weak video signals.

1. Press **MENU** on the remote control and select **Features > NR**.

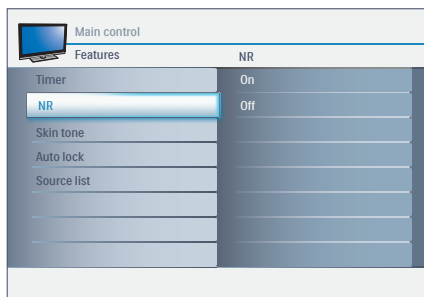


2. Press ► to enter the list.
3. Press ▲ or ▼ to select on or off.
4. Press **MENU** to exit.

## 6.9 Adjust the skin tone

This section describes how to adjust the complexion.

1. Press **MENU** on the remote control and select **Features > Skin tone**.

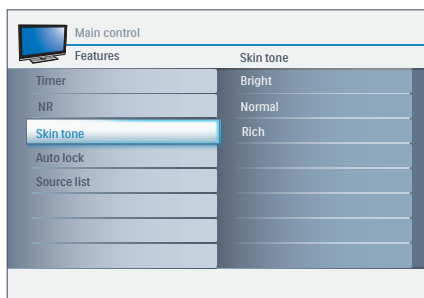


2. Press ► to enter the list.
3. Press ▲ or ▼ to select bright, normal or rich.
4. Press **MENU** to exit.

## 6.10 Use auto lock

Lock TV channels and prevent your children from watching unsuitable content of programmes.

### Set or change your PIN

1. Press **MENU** on the remote control and select **Features > Auto lock**.

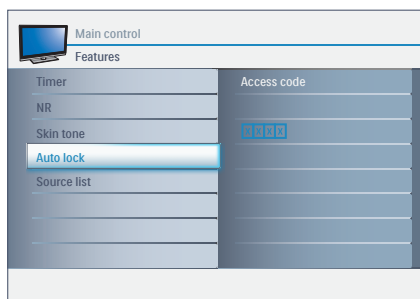


2. Press ► to enter.
3. Enter a 4-digit PIN with the number buttons on the remote control.
  - If you have a PIN, enter your current PIN.
  - If you do not have a PIN, enter the default code **0000**.
  - If you have lost your PIN, enter master code **0711**.
4. Press **MENU** to exit.

### To lock program

After your personal access code has been set, you are ready to select the channels or inputs you want to block out or censor.

- 1. Press **MENU** on the remote control and select **Features > Auto lock > Lock program**.

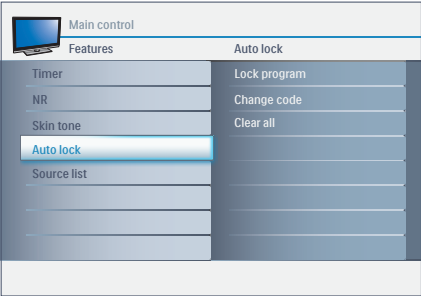

- 2. Press **▶** to enter.
- 3. Use the number buttons to enter the channel which you are going to block or press **▲** or **▼** to block the current channel.
- 4. Press **MENU** to exit.

#### Note

- 1. You can block additional channels by using the number buttons to jump to another channel.
- 2. Remember that 0000 is the default auto lock code. If your access code has been changed by someone other than you (a child, for example) or you have forgotten the code, you can always get in by inputting the default code.

### 6.11 Use your TV as a PC monitor

Using a VGA cable connects a PC to your TV as a PC monitor.



#### Caution

Before you connect your PC, set the PC monitor refresh rate to 60Hz.

#### 6.11.1. Supported screen resolutions

The following screen resolutions are supported in PC mode:

Resolution	Refresh rate
640 × 480	60Hz
800 × 600	60Hz
1024 × 768	60Hz
1280 × 720	60Hz
1280 × 768	60Hz
1360 × 768	60Hz
1280 × 1024	60Hz



#### Tip

1360 × 768 is recommended resolution.

### 6.12 Select your TV in PC mode

- 1. Press **MENU** on the remote control and select **Features > Source list**.
- 2. Select **PC** and press **OK** to confirm your choice.
- 3. If necessary, adjust the picture settings as described in *Change picture settings* section.
- 4. Press **MENU** to exit.




#### Tip

Set the picture format to Full screen or 4:3 in PC mode.

## 7. Connect devices

### 7.1 Connection overview

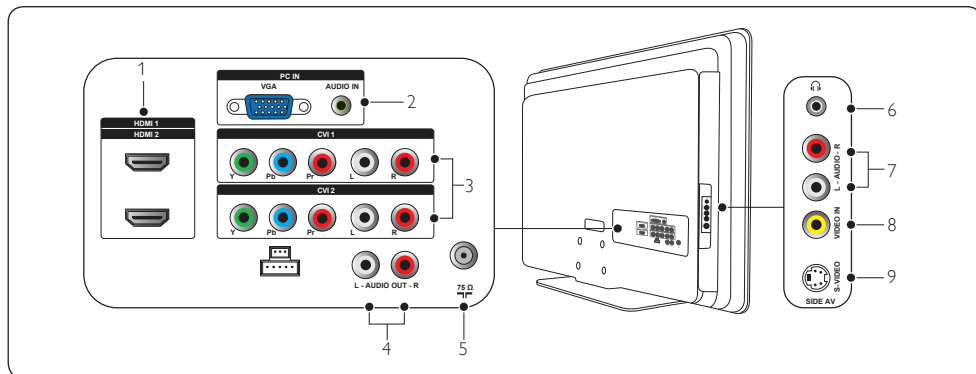

#### Rear connectors

1. **HDMI 1/HDMI 2**  
HDMI input connectors for DVD players, digital receivers, game consoles and other high-definition devices.
2. **PC IN**  
VGA, Audio connectors for PC.
3. **CVI 1/CVI 2**  
Component video input (Y Pb Pr) and Audio L/R connectors for DVD, digital receiver or game console, etc.
4. **AUDIO OUT L/R**  
Sound output cinch connectors for home theatre or other audio systems.
5. **Antenna input / 75Ω**

#### Side connectors


6. **Headphones**  
Stereo Mini Jack.
7. **AUDIO L/R**  
Audio L/R input connectors for composite and S-Video devices.
8. **VIDEO IN**  
Video input cinch connector for composite devices.
9. **S-VIDEO**  
S-Video input connector for S-Video devices.

## 7.2 Select connection quality

This section describes how you can enhance your audio visual experience by connecting your devices with the best possible connectors.

### 7.2.1. HDMI - Highest quality ★★★★★

HDMI produces the best audio visual quality possible. Both audio and video signals are combined in one HDMI cable, providing an uncompressed, digital interface between your TV and HDMI devices. You must use HDMI to experience full high-definition video.

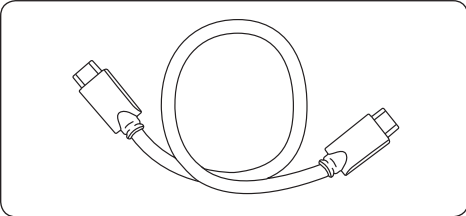


#### ✱ Tip


If the device only with a DVI connector, use a DVI-HDMI adaptor to connect your device to a HDMI connector at the back of the TV. You must connect a separate audio cable from the device to the AUDIO L/R at SIDE AV.

### 7.2.2. Component (Y Pb Pr) - High quality ★★★

Component (Y Pb Pr) video provides better picture quality than S-Video or composite video connections. Though component video supports high-definition signals, picture quality is lower than HDMI and is analogue. Also, connect a Audio L/R cable to the red and white Audio L/R input connectors at CVI 1/ CVI 2.

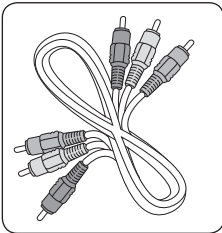


Component video cable  
-Red, Green, Blue

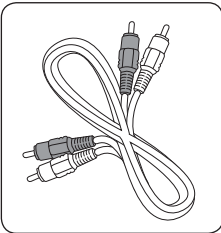


Audio L/R cable  
-Red, White

### 7.2.3. S-Video - Good quality ★★

An analogue connection, S-Video provides better picture quality than composite video. When connecting your device with S-Video, plug the S-Video cable to the S-Video connector on the side of the TV. You must connect a separate Audio L/R cable from the device to the red and white Audio L/R connectors on the side of the TV.

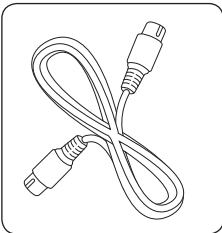


S-Video

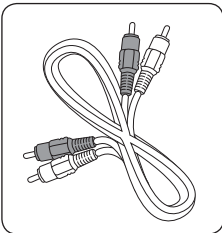

Audio L/R cable  
-Red, White

### 7.2.4. Composite - Basic quality ★

Composite video provides basic analogue connectivity, usually combining a (yellow) video cinch cable with (red and white) Audio L/R cinch cable. Match the cable colors when connecting to the composite Video and Audio L/R input connectors on the side of the TV.

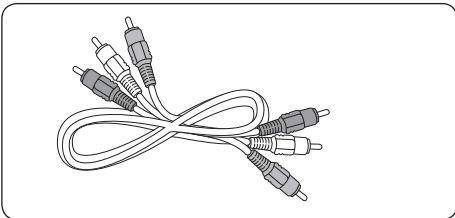

Composite audio/video cable  
-Yellow, Red, White

### 7.3 Connect devices

This section describes how to connect a selection of devices with different connectors. Note that different types of connectors may be used to connect a device to your TV. The following sections describe examples only, other configurations are possible.

When connecting composite or component cables, match the cable colors to the connectors on the TV.


#### ⚠ Caution

Disconnect the AC power cord before connecting devices.


#### 📌 Note

Different types of connectors may be used to connect a device to your TV depending on availability and your needs.


### Connect a cable receiver box with Audio/Video output

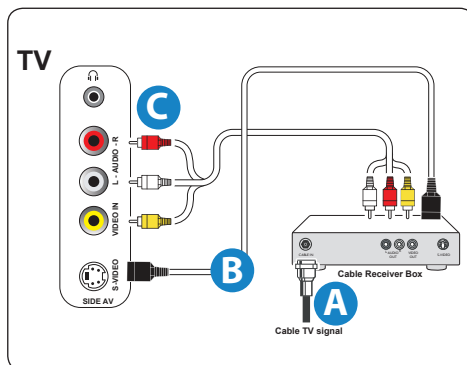


### Connect a cable receiver box with RF In/Outputs antenna TV

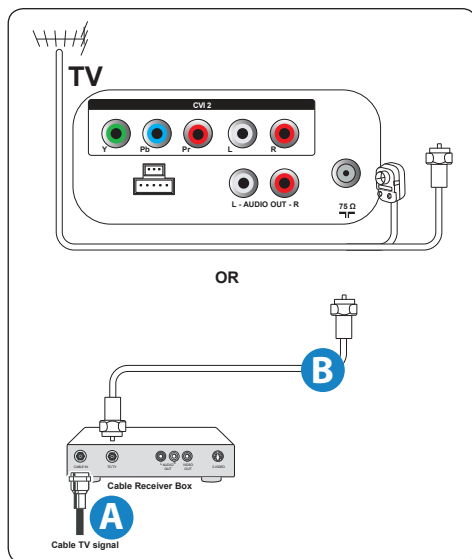


### Connect VCR, DVD player, or other devices with RCA connectors

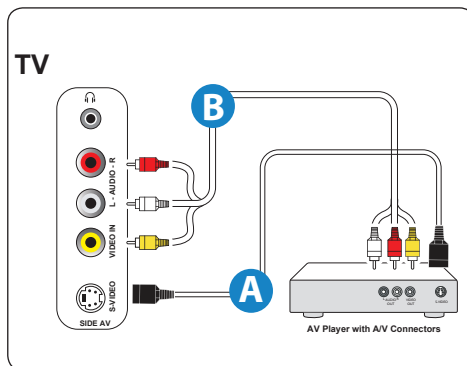


Connect DVD player or other video devices with component video connectors

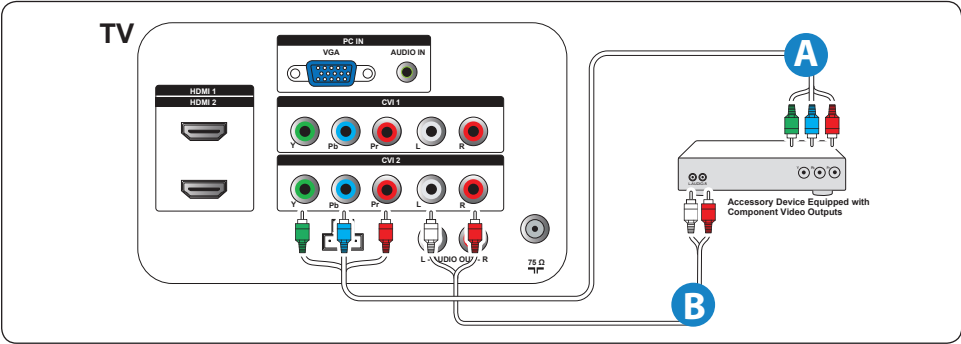


Connect DVD player with a HDMI connector

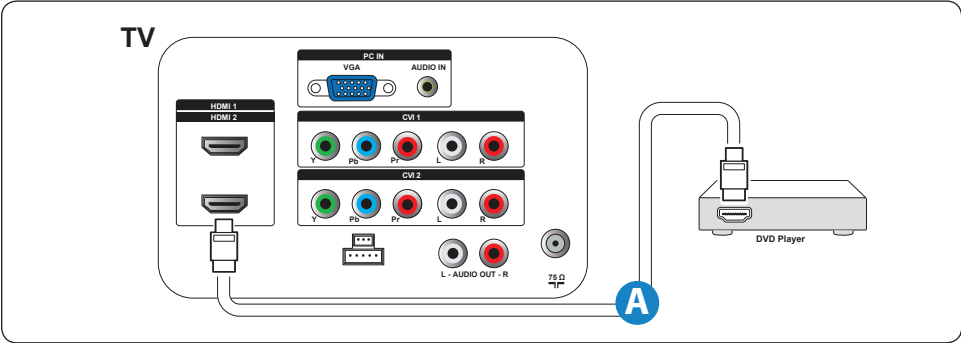

Connect PC (monitor) with a VGA connector

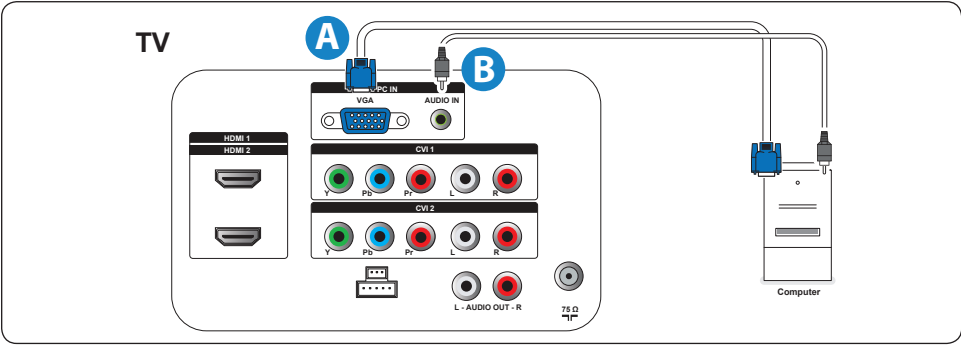


## 8. Glossary

Aspect Ratio	The ratio between the width and height of the TV picture on the screen. In a normal TV set the aspect ratio is 4 to 3 (4:3). The new aspect ratio in HDTV is 16:9 which resembles the aspect ratio in a movie theatre (Widescreen). New TV systems support both 4:3 and 16:9 aspect ratio and can automatically switch between them.
Audio Video (A/V)	A term often used when discussing a channel on a TV receiver or on video equipment, which has been especially designed to accept VCR audio-video signals. This channel automatically activates special circuitry within the TV set to prevent picture distortion and skewing. It is also used for audio-video processors, which handle both types of signals.
CVBS	Composite Video Baseband Signal. In broadcast television this refers to the video signal, including the color information and syncs.
Component Video Input (Y Pb Pr)	Component Video Input is a type of connection that uses a cinch-type connector to allow cable receiver boxes or analog DVD players to connect a signal to the TV. By offering the cinch-type input (YPbPr) the primary colors, red, green and blue are connected from a cable receiver box directly into the TV allowing for the signal to display on the screen.
HDTV	The generally agreed upon definition of HDTV is approximately twice the vertical and horizontal picture resolution of today's NTSC TV, which essentially makes the picture twice as sharp. HDTV also has a screen ratio of 16:9 as compared with most of today's TV screens, which have a screen ratio of 4:3. HDTV offers reduced motion artifacts (i.e. ghosting, dot crawl), and offers 5.1 independent channels of CD-quality stereo surround sound, (also referred to as AC-3).
Progressive Scan	In Progressive Scanning all the horizontal scan lines are scanned on to the screen at one time. The Digital TV and HDTV Standards accept both Interlaced Scan and Progressive Scan broadcast and display methods.
Resolution	Resolution: A measurement of the finest (smallest) detail that is visible in a video image. TV Resolutions may be expressed as number of pixels in an image; or more commonly, As Total Number of (horizontally scanned) Lines used to create the image. Standard Digital TV Resolutions: SDTV: 576i - The picture is 704x576 pixels, 576p - The picture is 720x576 pixels. HDTV: 720p - The picture is 1280x720 pixels, 1080i - The picture is 1920x1080 pixels. 1080p - The picture is 1920 x 1080 pixels.
SPDIF	SPDIF (Sony and Philips Digital Interconnect Format) is highly recommended for high quality digital sound output.   <b>Note</b> SPDIF only supports at HDMI source.



## 9. Troubleshooting

Symptoms	Possible cause	What should you do
No power or indicator light.	The TV is not connected to the power.	1. Press <b>POWER</b> at the side of the TV, or press  on the remote control.
		2. Ensure the AC power cord is connected tightly to the TV power connector and to the power socket outlet.
		3. Remove the AC power cord from the power socket outlet, wait 60 seconds and reconnect the AC power cord.
		4. Connect the TV to a different power socket outlet.
Error message on the screen with HDMI connection.	HDCP authentication fail.	1. Ensure that your HDMI cable is certified.
		2. Press <b>SOURCE</b> button on the remote control to switch to another source and then switch back to the HDMI source.
		3. Reset the accessory device and the TV. Turn on the TV Select the HDMI channel Turn on the accessory device
		4. While the TV and the accessory device are powered on, unplug either end of the HDMI cable and then reinsert the cable.
No sound is detected from the PC.	Audio cable is not connected.	1. Connect an audio cable to the PC <b>AUDIO IN</b> port on the TV.
		2. Press <b>SOURCE</b> button on the remote control, and select the <b>PC</b> source.
TV does not respond to the remote control.	Batteries are installed incorrectly, or low battery power.	1. Ensure the indicator light on the TV blinks when the remote control buttons are pressed.
		2. Ensure that you are using the remote control supplied with the TV.
		3. Ensure that the batteries of the remote control are inserted according to the illustration on the remote control and that the batteries do not need to be replaced.
		4. Remove the AC power cord from the power socket outlet, wait 60 seconds and reconnect the AC power cord.
The picture is distorted. It is stretched out, has short, fat, black bars on the side or top.	Broadcast video format.	1. Press the <b>FORMAT</b> button on the remote control to select the best picture format.
		2. For some accessory devices, the picture format has to be set in the accessory device.
The picture is mostly red and green, or the picture is missing red when the TV is connected to an accessory device via component cables.	Insecure/incorrect connection.	1. Ensure all the connections are made according to the color code.
		2. Push the component cables all the way into the YPbPr sockets on the TV.
No sound on the TV loudspeaker.	Volume level is set to zero.	1. Increase the volume.
	Sound is muted.	2. Press <b>MUTE</b> button on the remote control.
	Headphones are connected.	3. Ensure the headphones are not plugged into the TV.
	Audio cable is not connected.	4. For AV connection, ensure that the Audio L/R cable is connected as described in <i>Connect devices</i> section. If you are using a component cable, ensure that you have not crossed the red audio cable with the red video cable.
	Accessory device audio output setting is incorrect.	5. For HDMI connections, some accessory devices have an HDMI audio output setting that must be turned on for HDMI to HDMI connections.
Bad picture quality with a coaxial connection.	Standard definition channels are not as clear as high definition channels.	1. Connect the devices via component or HDMI cables.
No picture or sound.	Incorrect channel	1. Ensure you have selected the correct channel.
	Incomplete channel installation.	1. If the TV receives channels via an AV connection, set the TV to the correct source input.
		2. If the TV is connected directly to the wall via a coaxial connection, perform the <b>Auto store</b> again.

## 9.1 Technical specifications

Model no.	32PFL3403	37PFL3403	42PFL3403	47PFL3403
PICTURE/DISPLAY				
Aspect Ratio	16:9			
Resolution	1366 x 768p			
Brightness	500 cd/m2 (typ.)			
Response Time (GtG)	8 ms (typ.)	5 ms (typ.)	5 ms (typ.)	8 ms (typ.)
Viewing Angles (V/H)	178 by 178 (typ.)			
SOUND ENHANCEMENT				
Sound Output (RMS Watts)	5W x 2	10W x 2		
Sound Mode	Mono, Stereo, Incredible surround			
EASE OF USE				
Video Formats	Super zoom, 4:3, Movie expand 14:9, Movie expand 16:9, 16:9 subtitle, Widescreen			
Smart Mode	Personal, Vivid, Standard, Movie, Game, Power saver			
CONNECTIONS				
Rear Connectors	CVI 1/CVI 2: Component video input + Audio L/R (support 480i/p, 576i/p, 720p, 1080i/p)			
	HDMI 1/HDMI 2 (Ver 1.3a HDMI, support video: 480i/p, 576i/p, 720p, 1080i/p)			
	AUDIO L/R output			
	PC IN:VGA, PC Audio IN			
Side Connectors	Headphone x 1			
	Composite video input + Audio L/R			
	S-Video			
WEIGHT & DIMENSIONS				
Gross Weight	16.7 kg	22.6 kg	25.2 kg	37.1 kg
Net Weight	14.4 kg	19.8 kg	22 kg	33.4 kg
Box dimension (L x W x H)	1025 x 250 x 662mm	1156 x 266 x 739mm	1256 x 270 x 795mm	1378 x 280 x 866mm
Product dimension (H x W x D)	593 x 809 x 220mm	666 x 929 x 262mm	721 x 1033 x 262mm	793 x 1150 x 310mm
POWER				
Power Consumption	150W	180W	220W	300W
Standby Power Consumption	≤ 0.3 W			
Mains Power	100-240V, 60-50Hz			

10. Index

A

- AC power cord 9
- Antenna 8
- Auto lock 17

B

- Batteries 8
- Brightness 14

C

- Cable 8
- Care
  - Environment 5
  - Screen 5
- Channel
  - Install 13
- Clock 16
- Color temp 14
- Contrast 14

L

- lock program 18

N

- NR 17

O

- Overview
  - Connection 19
  - Remote control 12
  - TV 6

P

- PC mode 18
- Picture format 15
- PIN code 17
- Position the TV 7

R

- Rear connectors 19

- Recycling 5
- Remote control 6

S

- Screen resolutions 18
- Sharpness 14
- Side connectors 19
- Skin tone 17
- Sleeptimer 16
- Smart mode 14
- Switch on the TV 9

T

- Technical specifications 25
- Tint 14
- Troubleshooting 24

V

- Volume 10

W

- Wall mount 7
- Watch TV 10

