



4

- EN Place the batteries in the remote control
- 将电池放入遥控器中

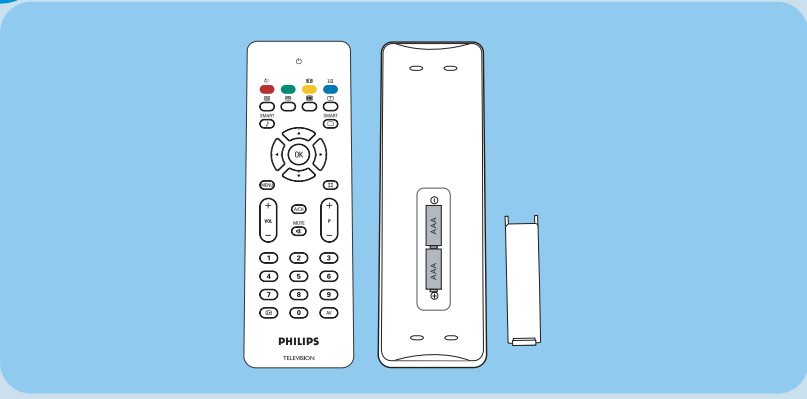


5

- EN Switch the TV on
- 打开电视机

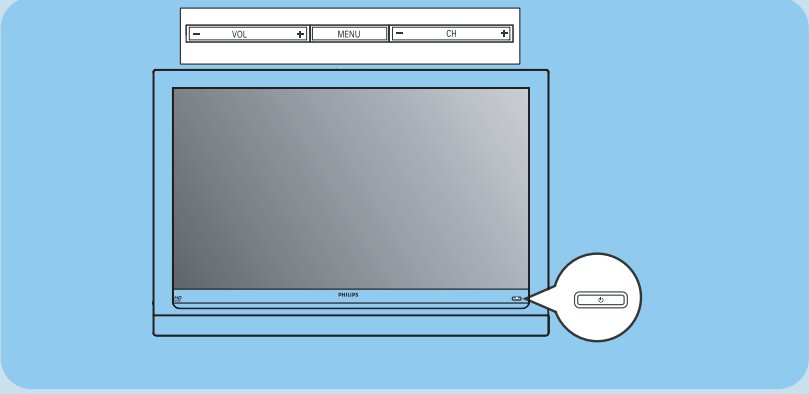

- Rear and side connector
- 后面和侧面的连接插头

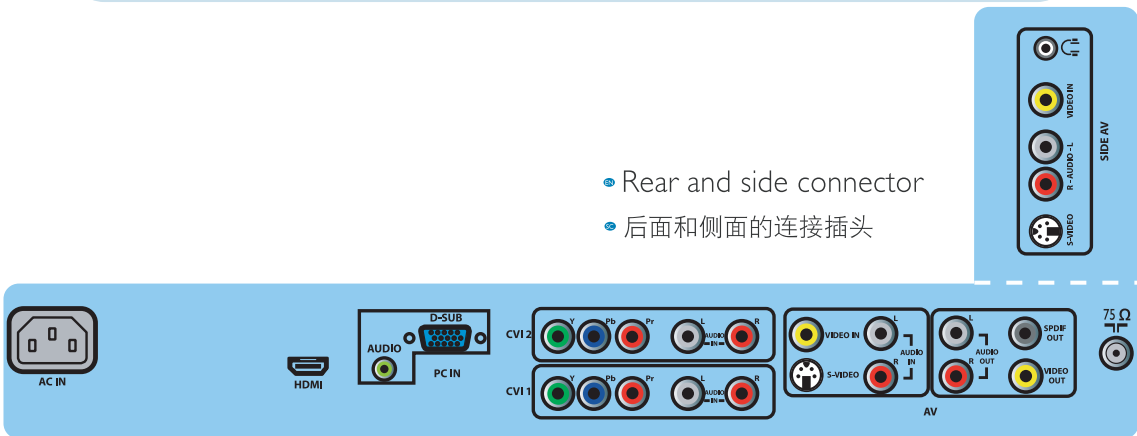


Welcome
欢迎

Read me
阅读我

Auto Store / 自动搜寻

- EN Immediately after unpacking and plugging in your new television, run the auto store function to set up the TV for the antenna or cable channels available in your area. If you do not run the auto store function to set up the channels, your television may not operate properly. (See user's manual page 7.)
- 在打开包装并连通这台新电视的电源后，立即进行自动搜寻功能设置电视，使其记忆您所在的地区可用的天线或有线电视频道。如果不进行自动搜寻功能设置频道，电视可能无法正常工作。（参见用户手册第7页）

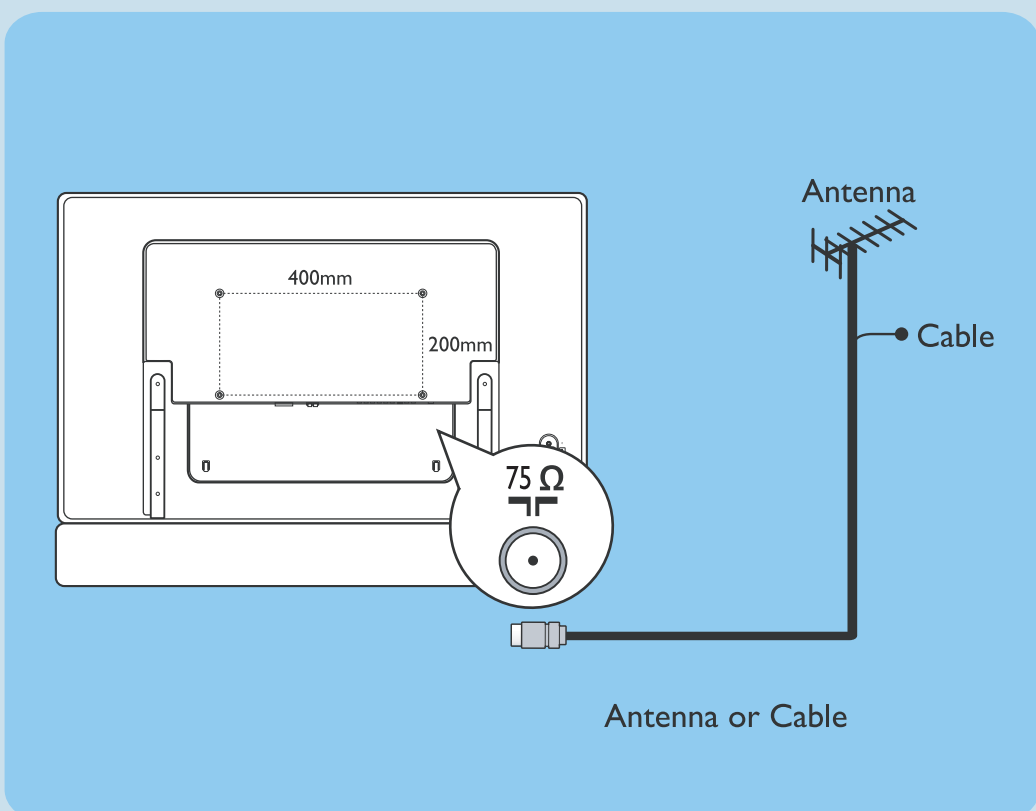

Z4ITN009813 1A

Printed in China




www.philips.com

Specifications are subject to change without notice

EN What's in the carton

SC 包装内的物品清单

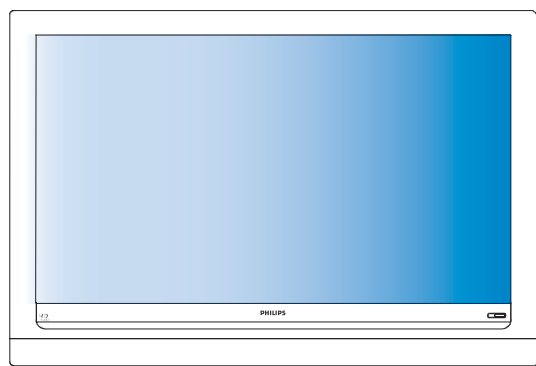


42TA2800S



EN Warranty card


SC 保修卡

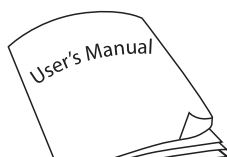

EN User's Manual & Quick Use Guide Inside!

SC 用户指南和连线指南


Bag 1 / 包装袋1

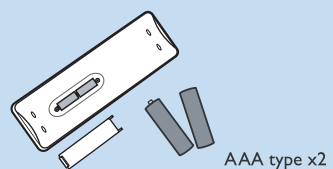

EN Remote Control & Batteries

SC 遥控器和电池

Bag 2 / 包装袋2

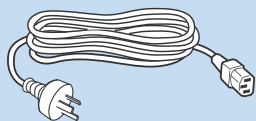


EN Power cord

SC 电源线

EN What else you'll need

 
SC 您所需要的物品



AC



 X2




1

EN Open the carton and remove both accessory.

SC 打开纸箱将附件包取出

front

前面

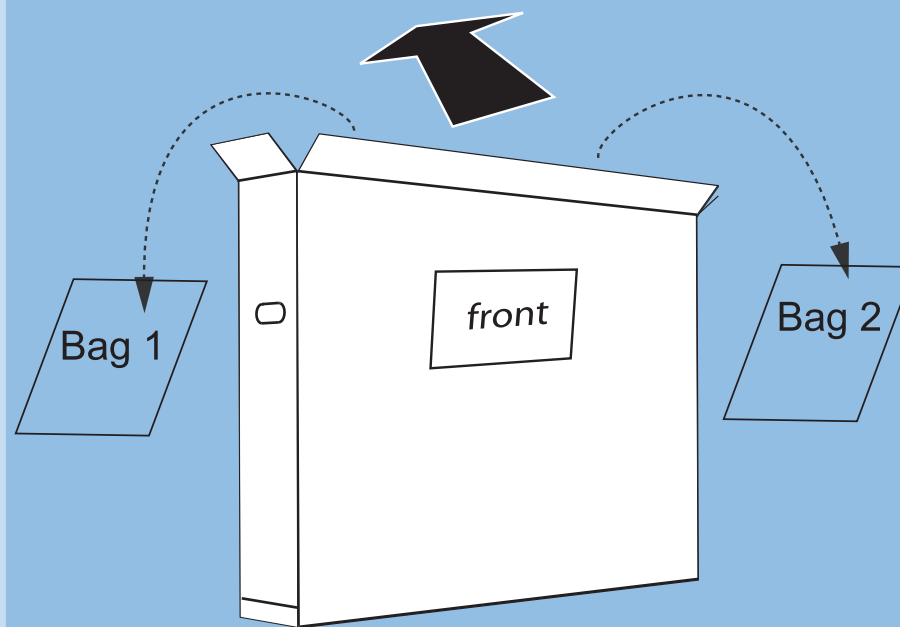


2

EN Carefully lift up the TV

SC 抬出机器



X2

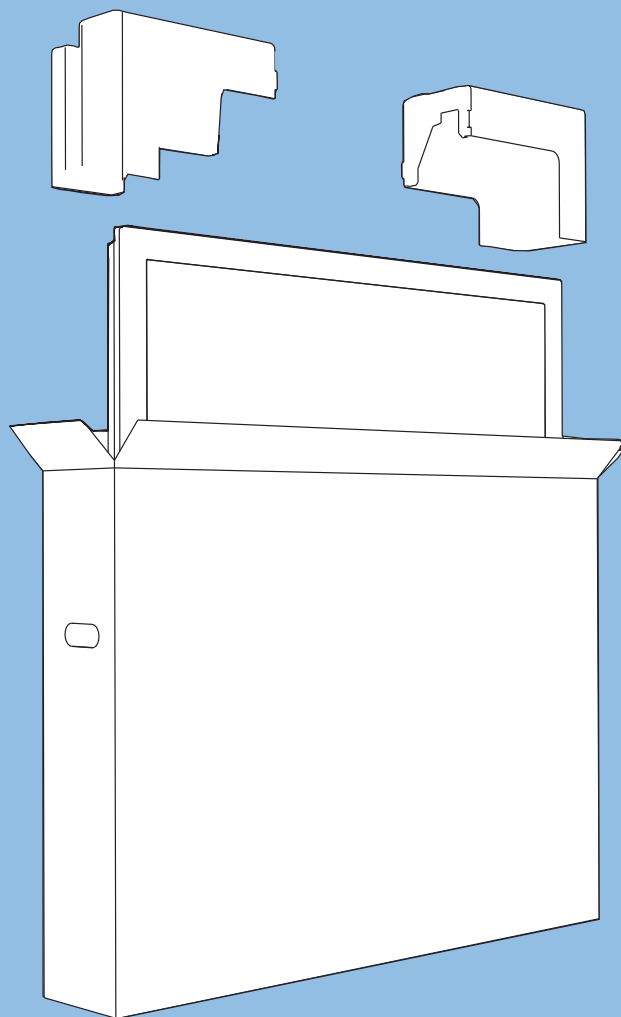

3

EN Lay the TV face down and cut open the bag.

SC 将电视机平放并且剪开袋子



X2

