





# PHILIPS

50PUD6654/43 55PUD6654/44  
55PUD6654/43 58PUD6654/44  
58PUD6654/43 50PUD6654/54  
50PUD6654/44 58PUD6654/54


## Guía Rápida

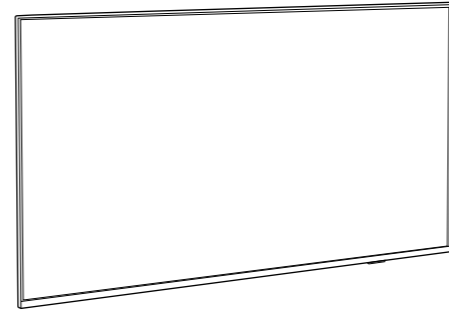


x4

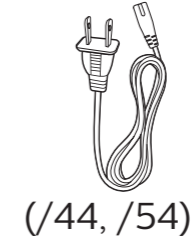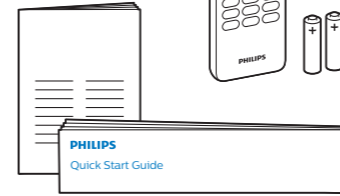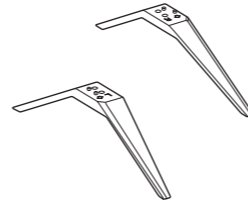

(/44, /54)

 

(/43)




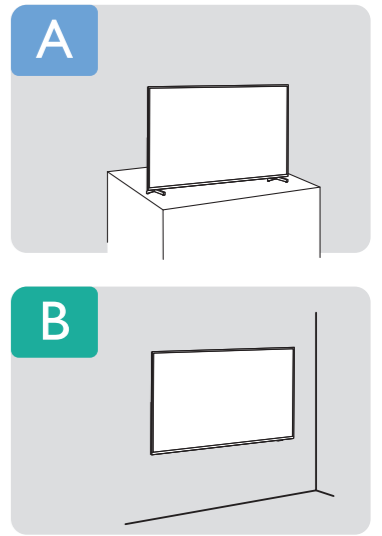


A

1

2

3

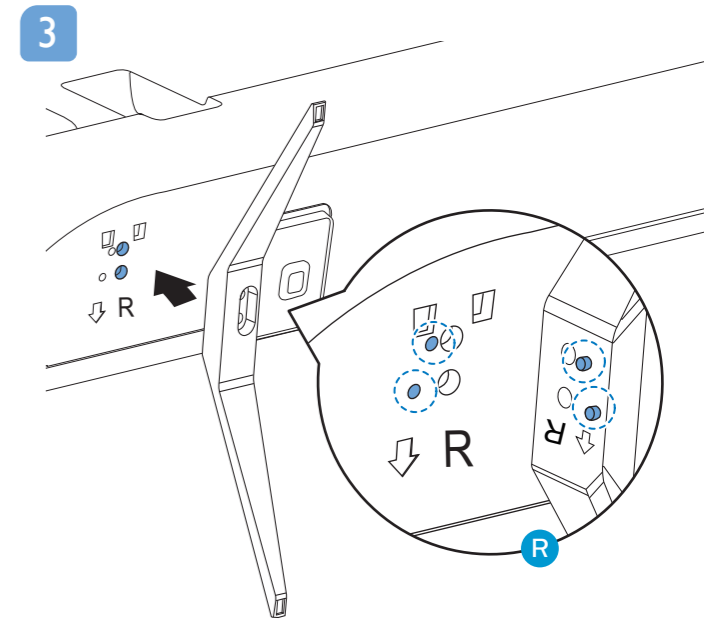
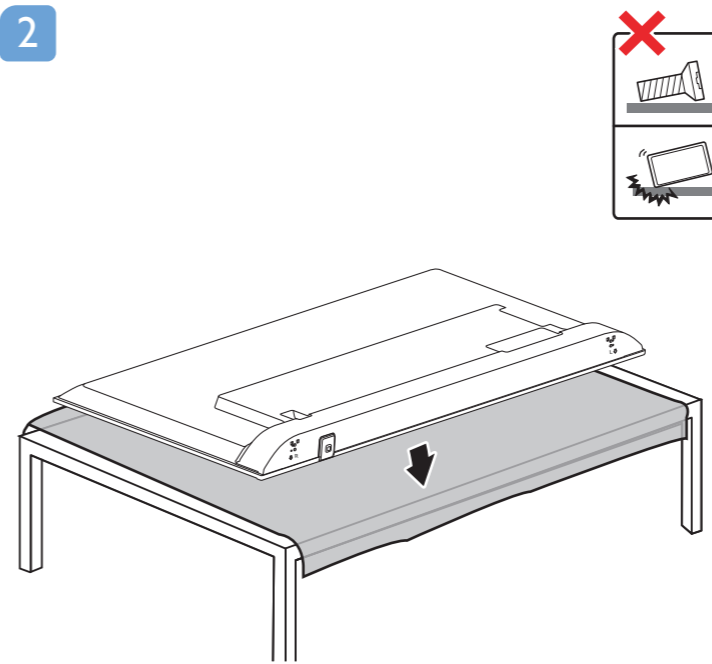
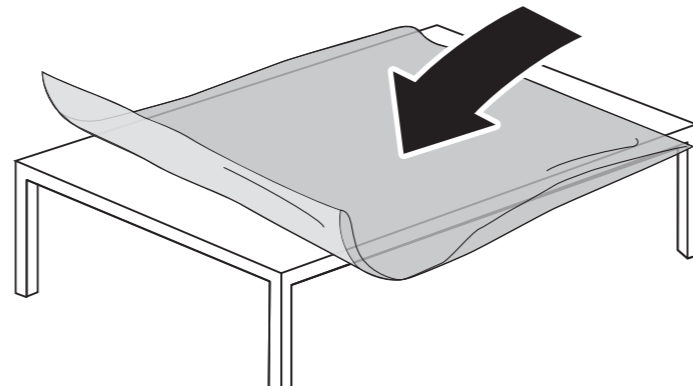
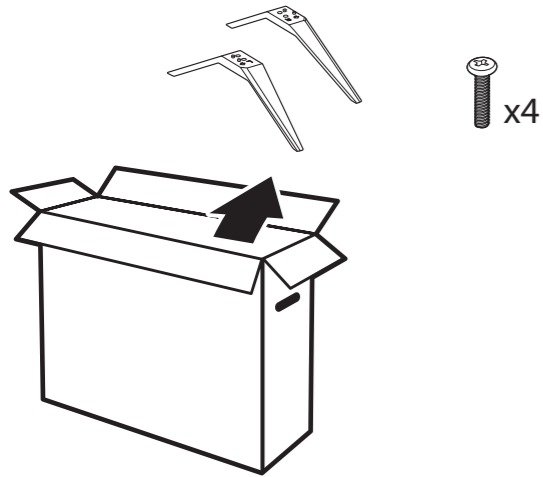


4

5

6

7

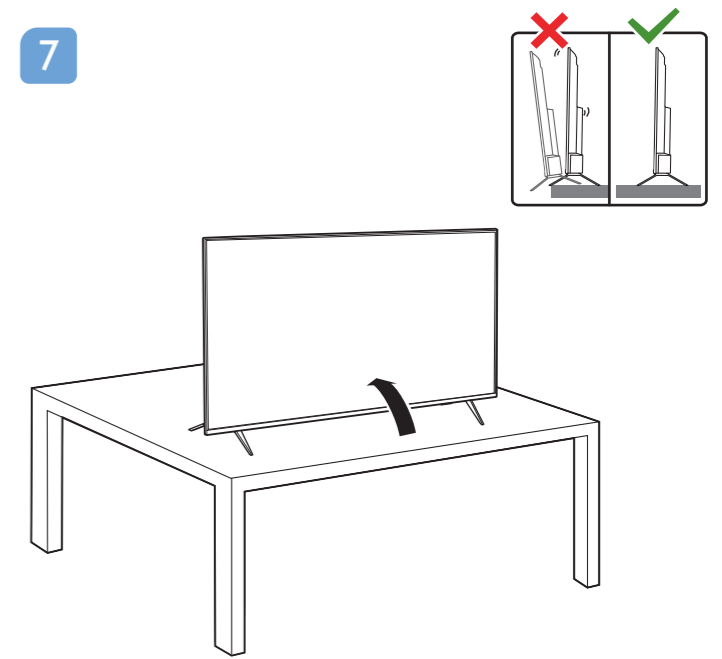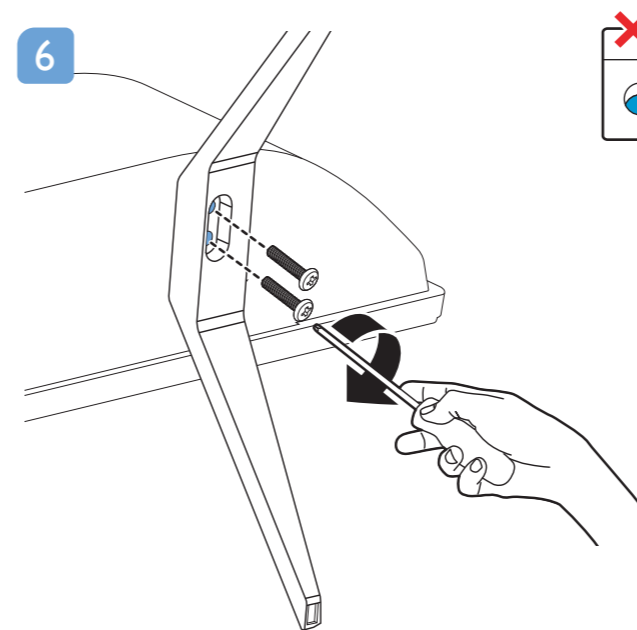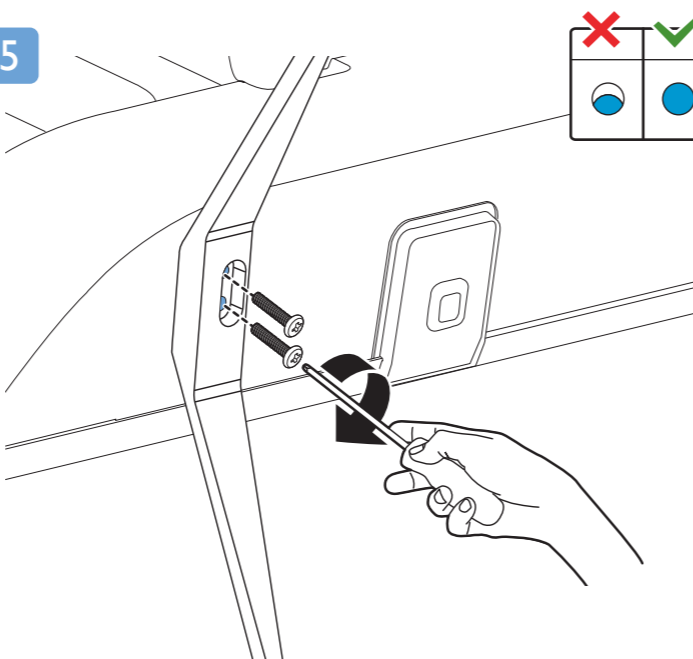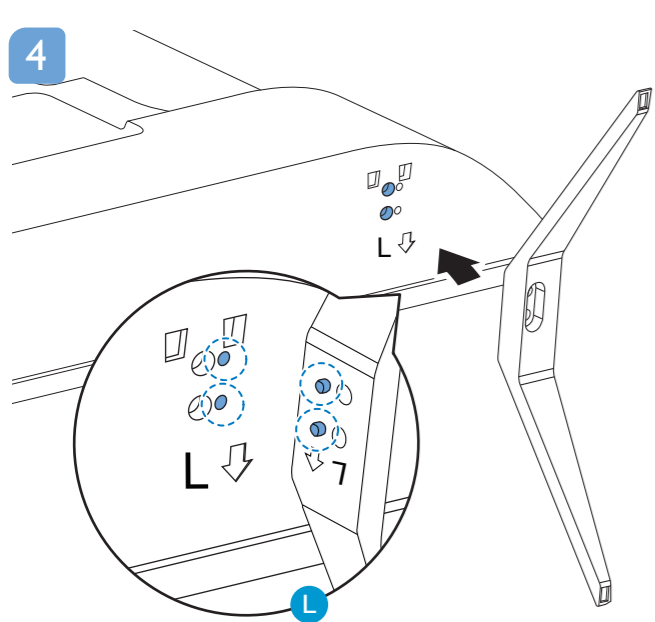





English Read the safety instructions.

Español Lea la información de seguridad.



Registre su producto y obtenga asistencia en [www.philips.com/TVsupport](http://www.philips.com/TVsupport)

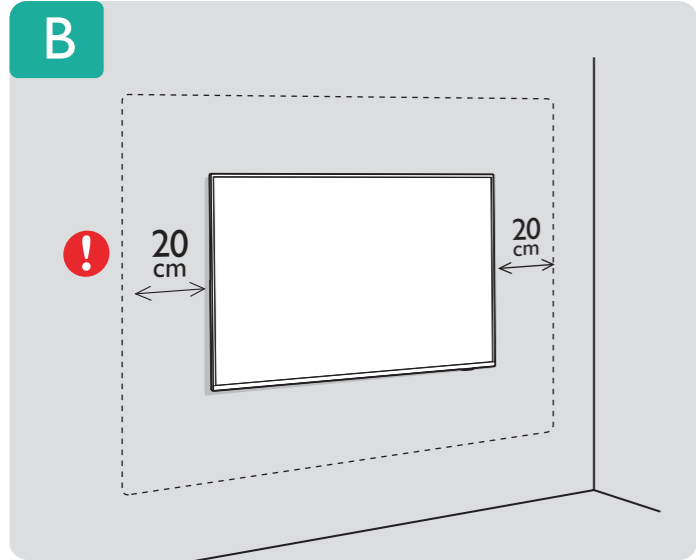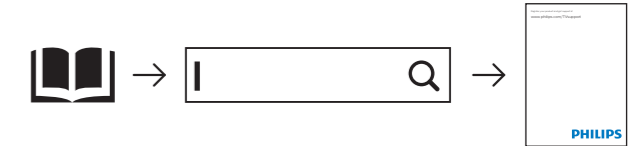

VESA (x, y)

- 50" 200x200mm M6 126 cm
- 55" 200x200mm M6 139 cm
- 58" 300x200mm M6 146 cm

